ORDER NO. MD0503064C2

Service Manual

CD Stereo System

COMPACT
disc
DIGITAL AUDIO

SA-AK630E / SA-AK630EB / SA-AK630EG

Colour
(S)... Silver Type

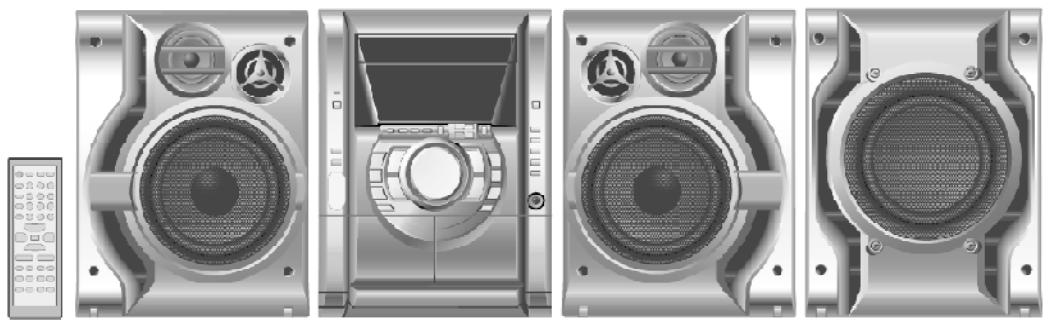
Remote Control
SB-AK630
SA-AK630
SB-AK630
SB-WAK630

■ AMPLIFIER SECTION

RMS output power	
THD 10%, both channels driven	
1 kHz	
(Low channel)	75 W per channel (5 Ω)
10 kHz	
(High channel)	70 W per channel (5 Ω)
80 Hz	
(Subwoofer channel)	160 W (8 Ω)
Total power output	450 W

■ FM/AM TUNER, TERMINALS SECTION

Preset station	FM 15 stations AM 15 stations
Frequency Modulation (FM)	
Frequency range	87.50 - 108.00 MHz (50 kHz steps)
Sensitivity	1.8 μV (IHF)
S/N 26 dB	1.5 μV
Antenna terminal(s)	75 Ω (unbalanced)
Amplitude Modulation (AM)	
Frequency range	522 - 1629 kHz (9 kHz steps)
Sensitivity	
S/N 20 dB (at 999 kHz)	560 μV/m
Audio performance (Amplifier)	
Input sensitivity/Input impedance	
Aux	250 mV,14.7 kΩ
Phone jack	
Terminal	Stereo, 3.5 mm jack

■ CASSETTE DECK SECTION

Track system	4 track, 2 channel
Heads	
Record/playback	Solid permalloy head
Erasure	Double gap ferrite head
Motor	DC servo motor
Recording system	AC bias 100 kHz
Erasing system	AC erase 100 kHz
Tape speed	4.8 cm/s
Overall frequency response (+3 dB, -6 dB at DECK OUT)	
NORMAL	35 Hz - 14 kHz
S/N ratio	50 dB (A weighted)
Wow and flutter	0.18 % (WRMS)
Fast forward and rewind time	Approx. 120 seconds with C-60 cassette tape

■ DISC SECTION

Discs played [8 cm or 12 cm]

(1) CD-Audio (CD-DA)

(2) CD-R/RW (CD-DA, MP3 formatted discs)

(3) MP3	
Bit rate	
MP3	32 kbps - 320 kbps
Sampling frequency	
MP3	32 kHz, 44.1 kHz, 48 kHz
CD	44.1 kHz
Decoding	16 bit linear
Digital filter	8 fs
D/A converter	MASH (1 bit DAC)
Pickup	
Wavelength	780 nm
Beam Source	Semiconductor laser
Audio output (Disc)	
Number of channels	2 (Stereo) (FL,FR)

■ GENERAL

Power Supply	
For E & EG only	AC 230 V, 50Hz
For EB only	AC 230 -240 V, 50Hz
Power consumption	260 W
Power consumption in standby mode	0.7 W
Dimensions (W x H x D)	250 x 330 x 341 mm
Mass	7.1 kg
Operating temperature range	+5 to +35°C
Operating humidity range	5 to 90% RH (no condensation)

■ SYSTEM

SC-AK630 (E)	Music center: SA-AK630 (E) Speaker: SB-AK630 (GC) Subwoofer: SB-WAK630 (GC)
SC-AK630 (EB)	Music center: SA-AK630 (EB) Speaker: SB-AK630 (GC) Subwoofer: SB-WAK630 (GC)
SC-AK630 (EG)	Music center: SA-AK630 (EG) Speaker: SB-AK630 (GC) Subwoofer: SB-WAK630 (GC)

Notes:

1. Specifications are subject to change without notice. Mass and dimensions are approximate.
2. Total harmonic distortion is measured by the digital spectrum analyzer.

© 2005 Matsushita Electric Industrial Co. Ltd.. All rights reserved.
Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic

1. Caution for AC Mains Lead

(For "EB" area code model only.)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.
A 5-ampere fuse is fitted in this plug.
Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.
Check for the ASTA mark or the BSI mark on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.
If you lose the fuse cover, the plug must not be used until a replacement cover is obtained.
A replacement fuse cover can be purchased from your local dealer.

CAUTION!
IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OFF SAFELY.
THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown below.
If in any doubt please consult a qualified electrician.

IMPORTANT
The wires in this mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue.

The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL ⏚ OR COLOURED GREEN OR GREEN/YELLOW.

THIS PLUG IS NOT WATERPROOF—KEEP DRY.

Before use
Remove the connector cover.

How to replace the fuse
The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.
Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

Figure A

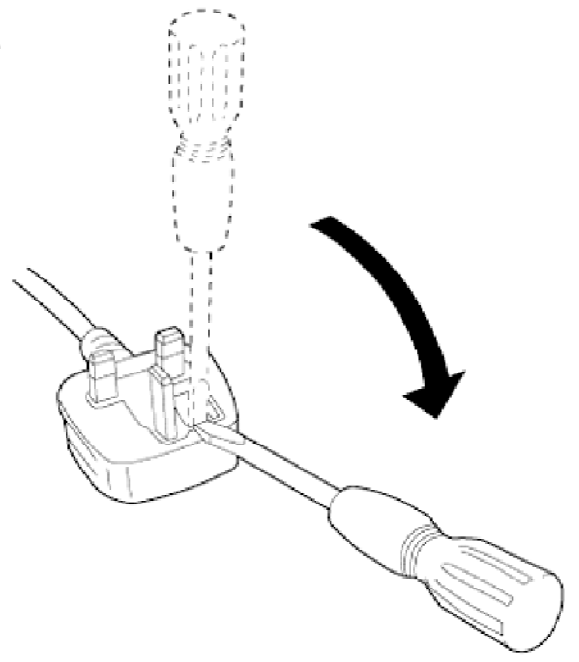

Figure B

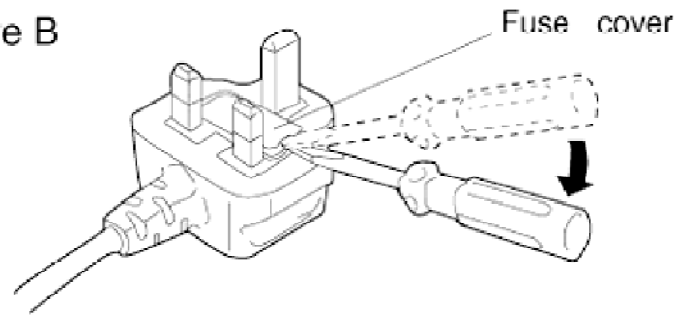

2. Replace the fuse and close or attach the fuse cover.

Figure A

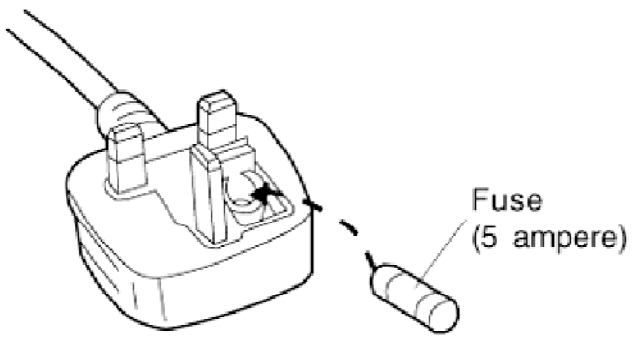

Figure B

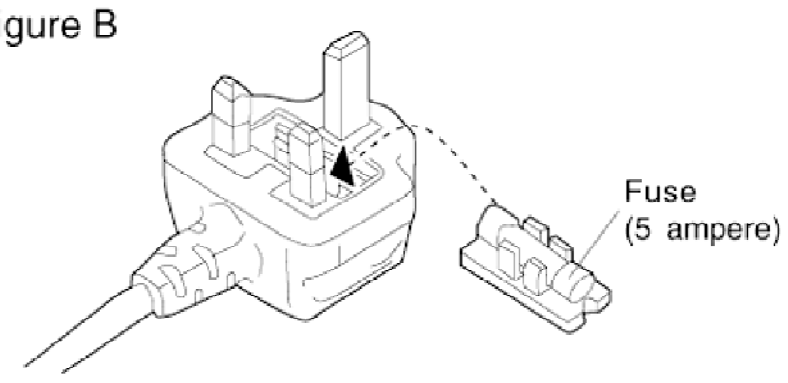

2. Before Repair and Adjustment

Disconnect AC power, discharge Power Supply Capacitors C5820 and C5840 through a 10 Ω, 5W resistor to ground.
DO NOT SHORT-CIRCUIT DIRECTLY (with a screwdriver blade, for instance), as this may destroy solid state devices.
After repairs are completed, restore power gradually using a variac, to avoid overcurrent.
Current consumption at AC 230V, 50 Hz in NO SIGNAL mode (volume min at CD mode) should be ~ 350mA (E/EG only).
Current consumption at AC 230-240V, 50 Hz in NO SIGNAL mode (volume min at CD mode)

should be ~ 350mA (EB only).

3. Protection Circuitry

The protection circuitry may have operated if either of the following conditions are noticed:

- No sound is heard when the power is turned on.

- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are
"shorted", or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.
If this occurs, follow the procedure outlines below:

1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again after one minute.

Note :
When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

4. Prevention of Electro Static Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electro static discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminium foil, to prevent electrostatic charge build up or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder remover device. Some solder removal devices not classified as "anti-static (ESD protected)"

can generate electrical charge to damage ES devices.

5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminium foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

   Caution

   Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize body motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are imporant for safety. These parts are marked by ⚠ in the schematic diagrams, Exploded Views and replacement parts list. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.

5. Handling the Lead-free Solder

5.1. About lead free solder (PbF)

Distinction of PbF P.C.B.:

P.C.B.s (manufactured) using lead free solder will have a PbF stamp on the P.C.B.

Caution:

- Pb free solder has a higher melting point than standard solder; Typically the melting point is 50 - 70°F (30 - 40°C) higher. Please use a high temperature soldering iron. In case of soldering iron with temperature control, please set it to 700 ± 20°F (370 ± 10°C).
- Pb free solder will tend to splash when heated too high (about 1100°F/600°C).

- When soldering or unsoldering, please completely remove all of the solder on the pins or solder area, and be sure to heat the soldering points with the Pb free solder until it melts enough.

6. Handling Precautions For Traverse Deck

The laser diode in the traverse deck (optical pickup) may break down due to potential difference caused by static electricity of clothes or human body.
So, be careful of electrostatic breakdown during repair of the traverse deck (optical pickup).

- Handling of traverse deck (optical pickup)

1. **Do not subject the traverse deck (optical pickup) to static electricity as it is extremely sensitive to electrical shock.**
2. **To prevent the breakdown of the laser diode, an antistatic shorting pin is inserted into the flexible board (FFC board).**
3. **Take care not to apply excessive stress to the flexible board (FFC board). When removing or connecting the short pin, finish the job in as short time as possible.**
4. **Do not turn the variable resistor (laser power adjustment). It has already been adjusted.**

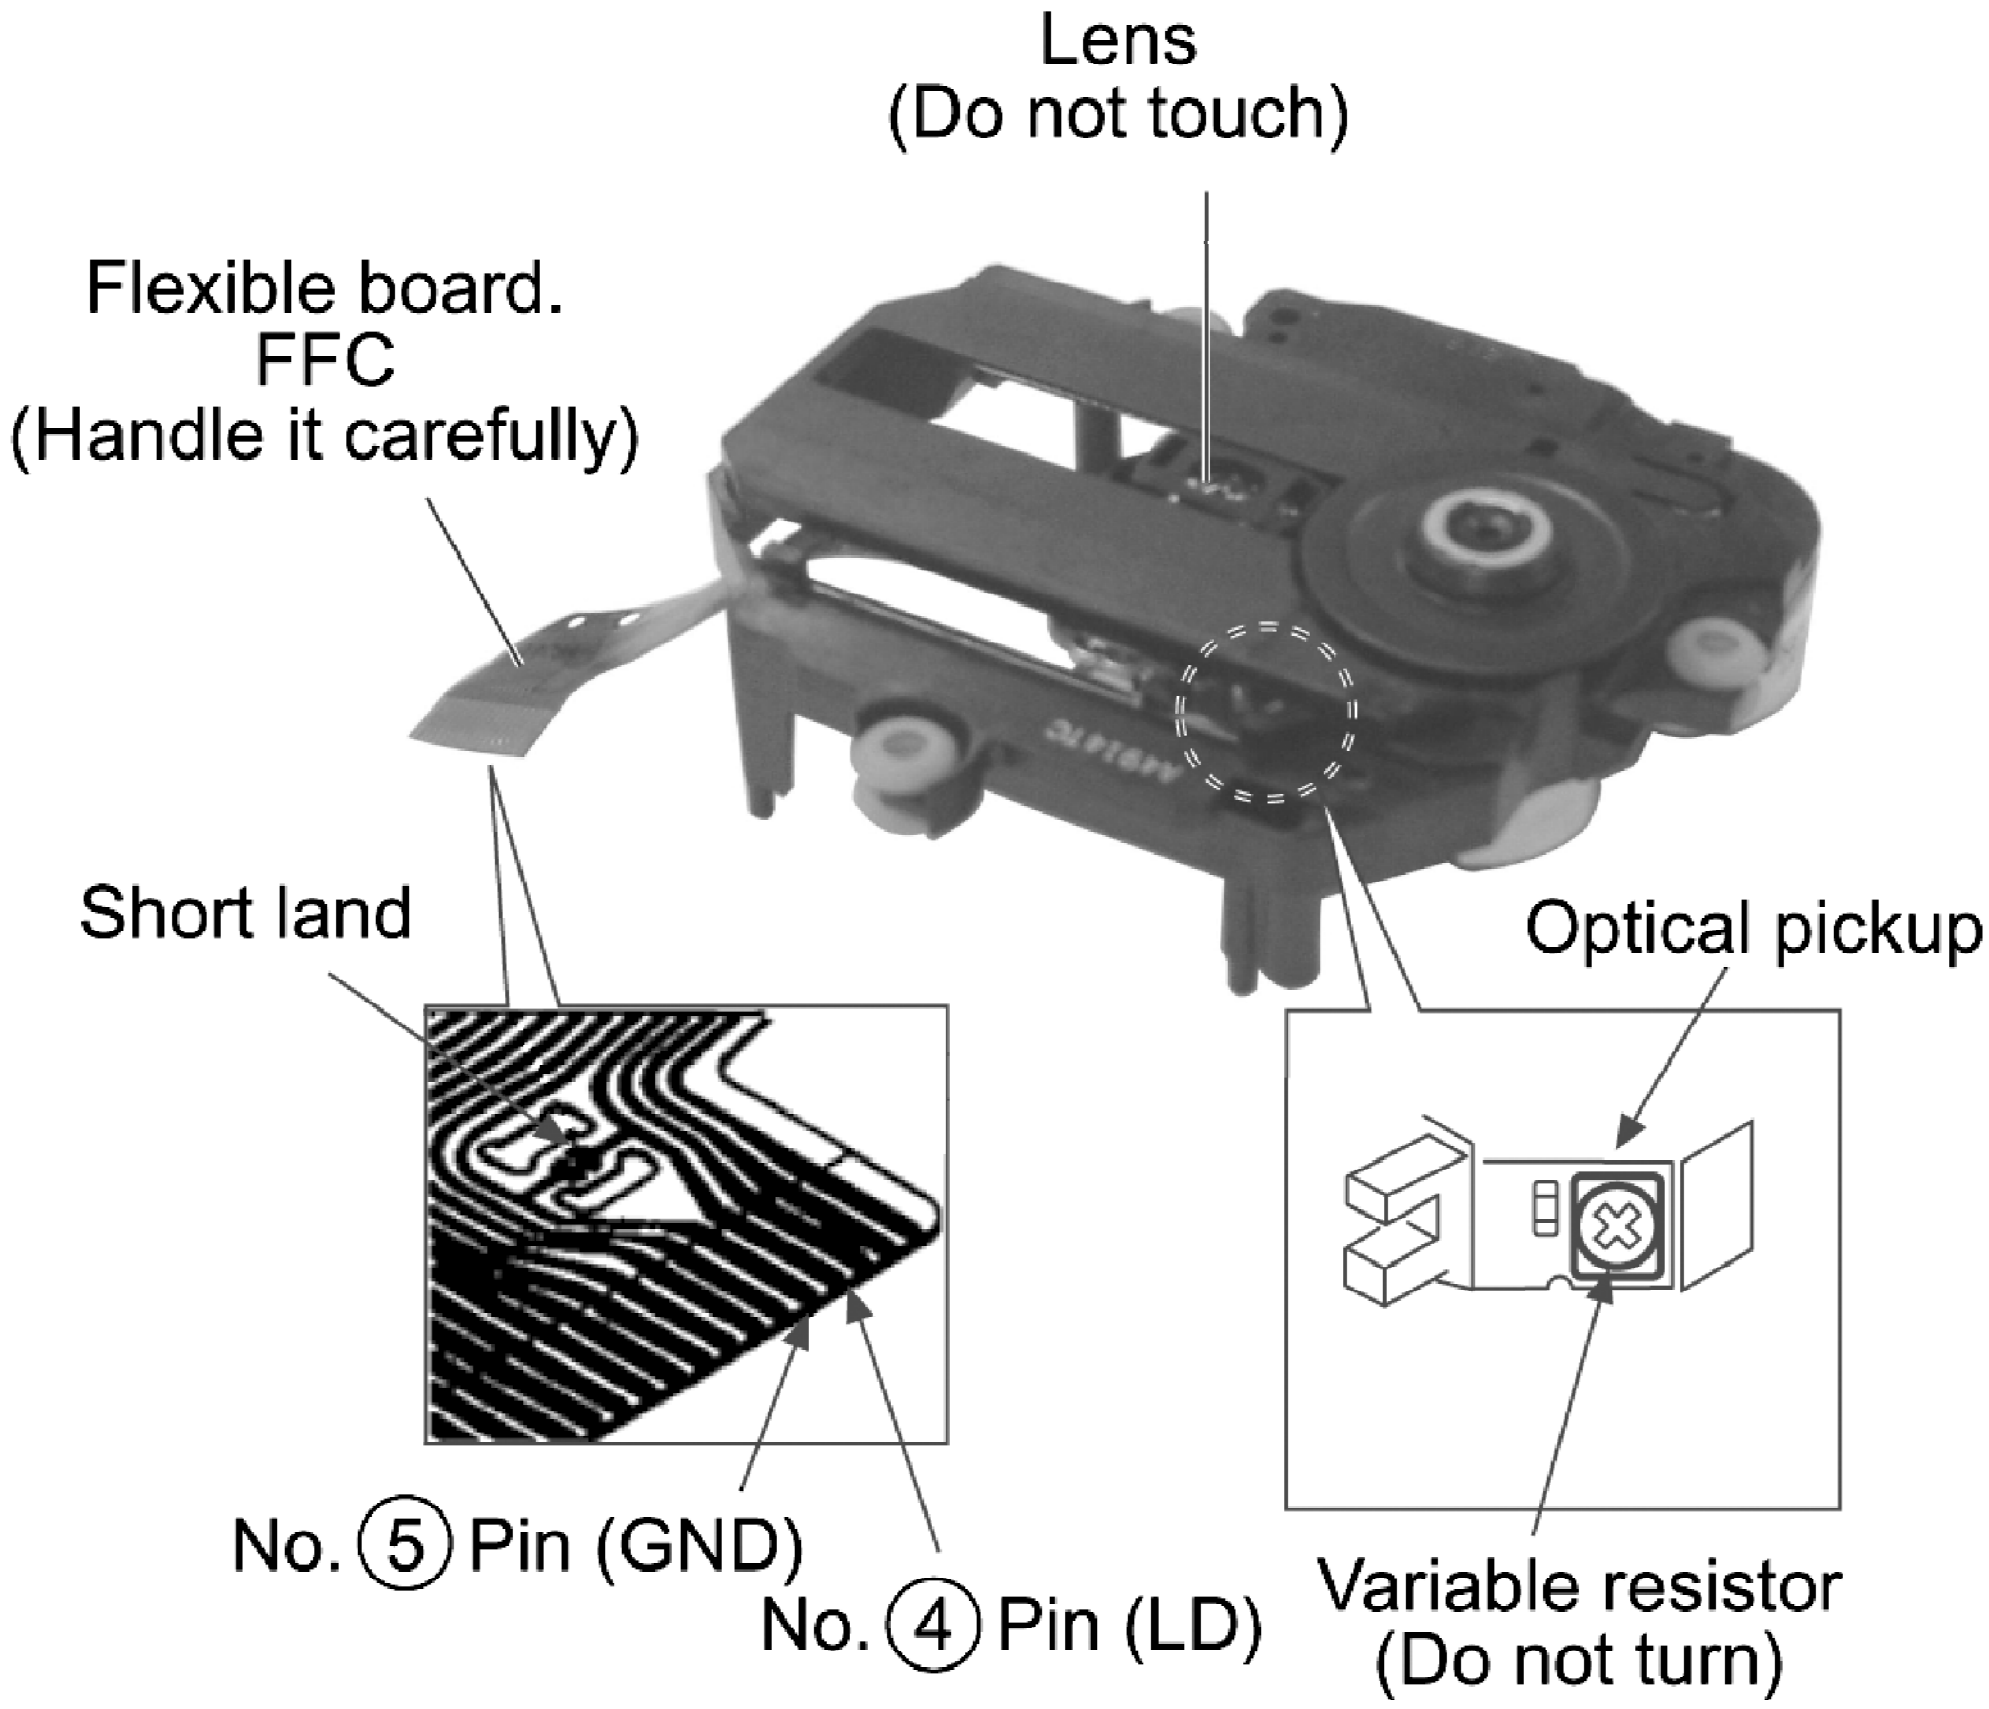
Lens
(Do not touch)
Flexible board.
FFC
(Handle it carefully)
Short land
Optical pickup
No. ⑤ Pin (GND)
No. ④ Pin (LD)
Variable resistor
(Do not turn)

Grounding for electrostatic breakdown prevention

1. **Human body grounding**
   Use the anti-static wrist strap to discharge the static electricity from your body.
2. **Work table grounding**
   Put a conductive material (sheet) or steel sheet on the area where the traverse deck (optical pickup) is place, and ground the sheet.

Caution :

The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the traverse deck (optical pickup).

Caution when replacing the Traverse Deck

The traverse deck has a short point shorted with solder to protect the laser diode against electrostatics breakdown. Be sure to remove the solder from the short point before making connections.

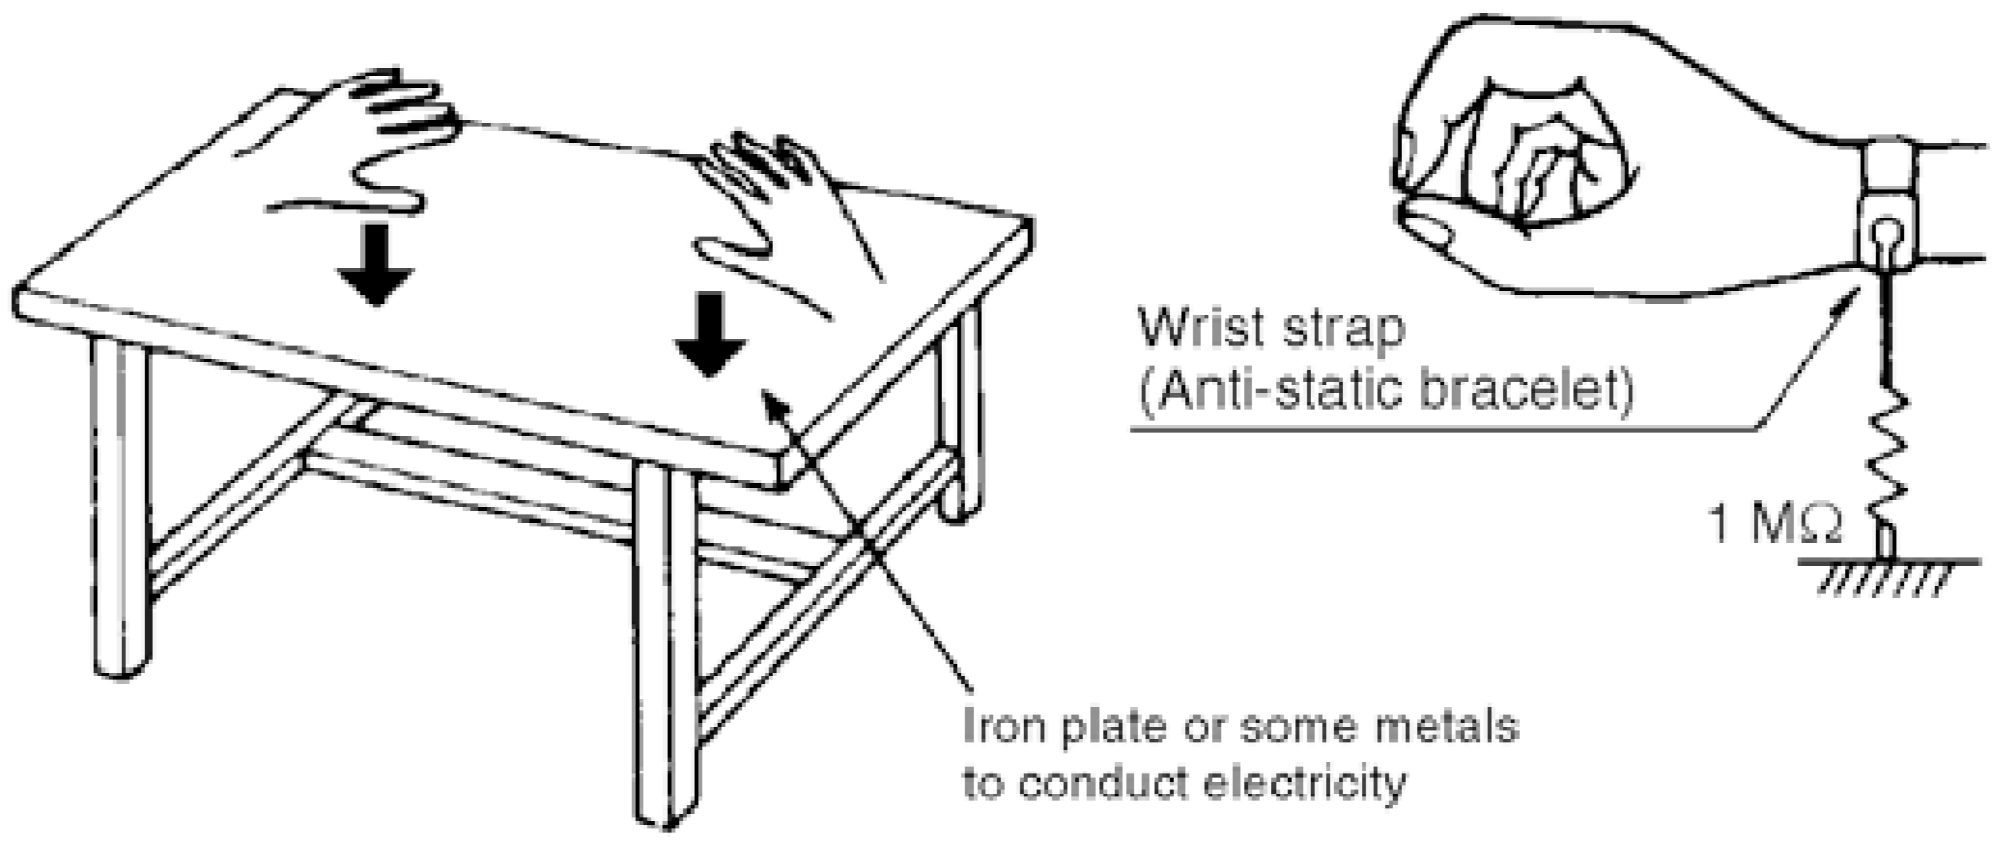

7. Precaution of Laser Diode

Caution :

This product utilizes a laser diode with the unit turned "ON", invisible laser radiation is emitted from the pick up lens. / Wavelength : 780 nm / Maximum output radiation power from pick up : 100 μ W/VDE / Laser radiation from pick up unit is safety level, but be sure the followings:

1. **Do not disassemble the optical pick up unit, since radiation from exposed laser diode is dangerous.**
2. **Do not adjust the variable resistor on the pick up unit. It was already adjusted.**
3. **Do not look at the focus lens using optical instruments.**

4. **Recommend not to look at pick up lens for a long time.**

ACHTUNG :

Dieses Produkt enthält eine Laserdiode. Im eingeschalteten Zustand wird unsichtbare Laserstrahlung von der Lasereinheit abgestrahlt. / Wellenlänge : 780nm / Maximale Strahlungsleistung der Lasereinheit :100 μ W/VDE / Die Strahlung an der Lasereinheit ist ungefährlich, wenn folgende Punkte beachtet werden:

1. **Die Lasereinheit nicht zerlegen, da die Strahlung an der freigelegten Laserdiode gefährlich ist.**
2. **Den werkseitig justierten Einstellregler der Lasereinhit nicht verstellen.**
3. **Nicht mit optischen Instrumenten in die Fokussierlinse blicken.**
4. **Nicht über längere Zeit in die Fokussierlinse blicken.**

ADVARSEL: I dette a apparat anvendes laser.

CAUTION!

THIS PRODUCT UTILIZES A LASER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN TH SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

■ Use of caution label

(Back of product)

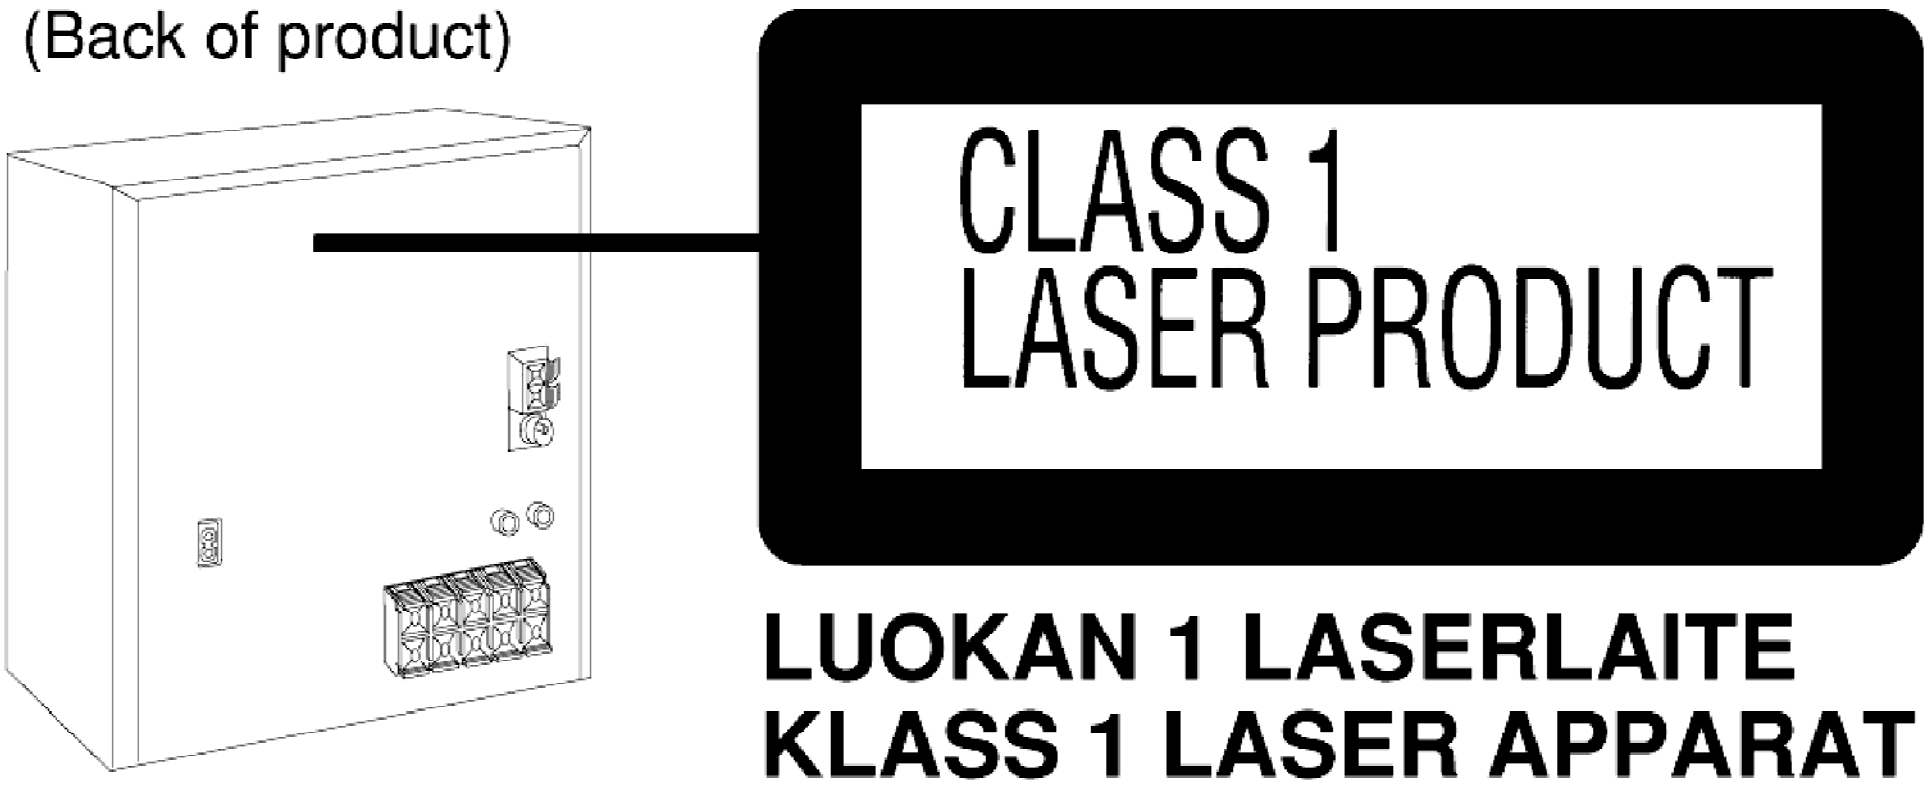

CLASS 1
LASER PRODUCT

LUOKAN 1 LASERLAITE
KLASS 1 LASER APPARAT

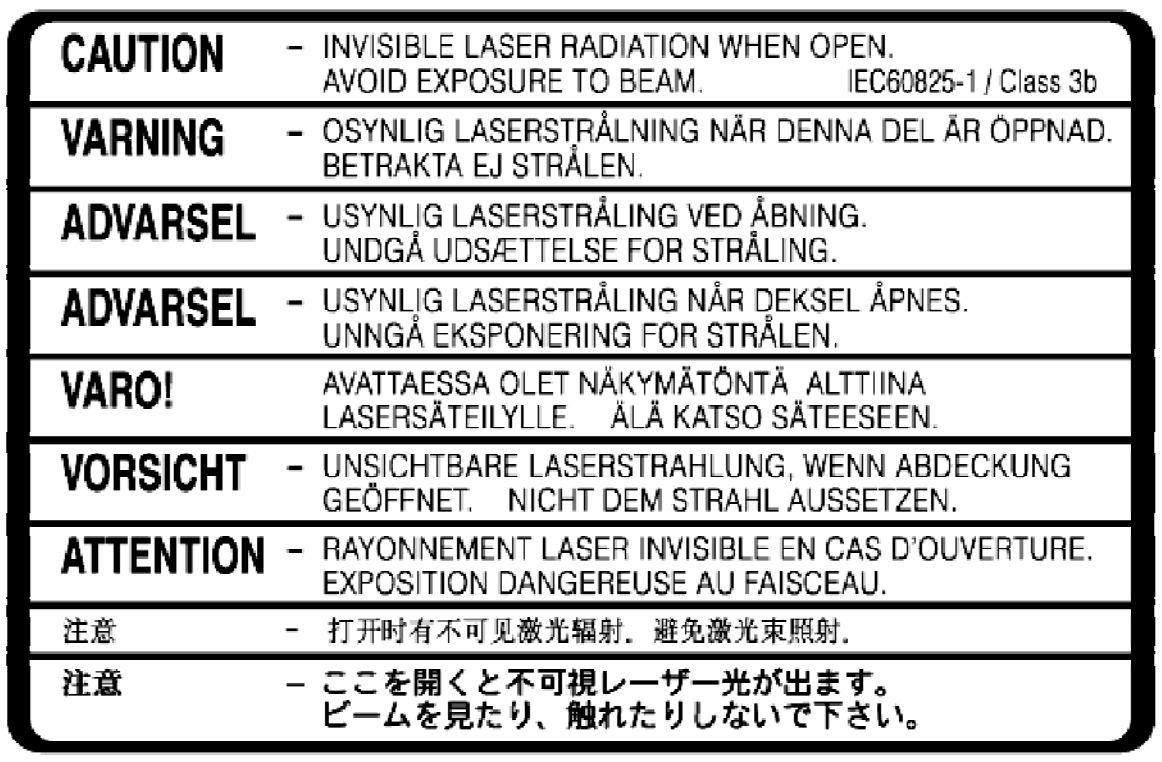

CAUTION	–	INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. IEC60825-1 / Class 3b
VARNING	–	OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRAKTA EJ STRÅLEN.
ADVARSEL	–	USYNLIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSÆTTELSE FOR STRÅLING.
ADVARSEL	–	USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES. UNNGÅ EKSPONERING FOR STRÅLEN.
VARO!		AVATTAESSA OLET NÄKYMÄTÖNTÄ ALTTIINA LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
VORSICHT	–	UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.
ATTENTION	–	RAYONNEMENT LASER INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU.
注意	–	打开时有不可见激光辐射．避免激光束照射．
注意	–	ここを開くと不可視レーザー光が出ます。 ビームを見たり、触れたりしないで下さい。

Inside of product

8. Accessories

Remote Control

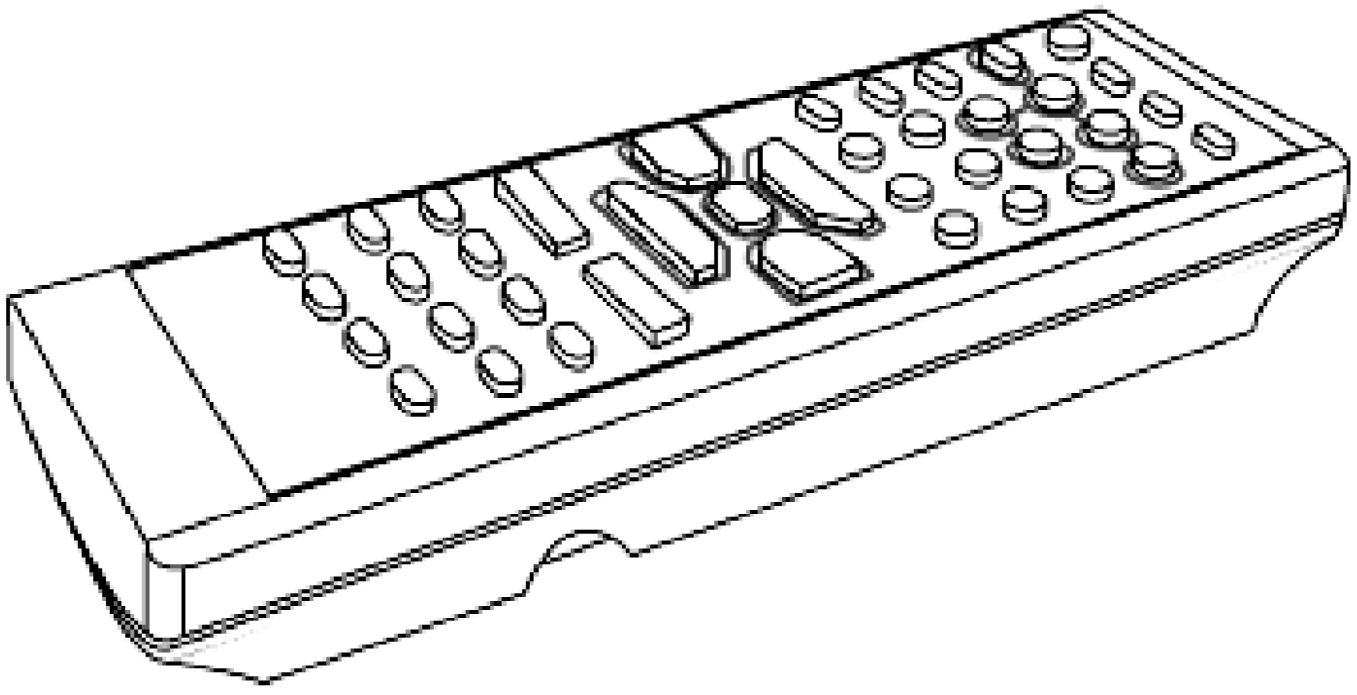

FM Antenna

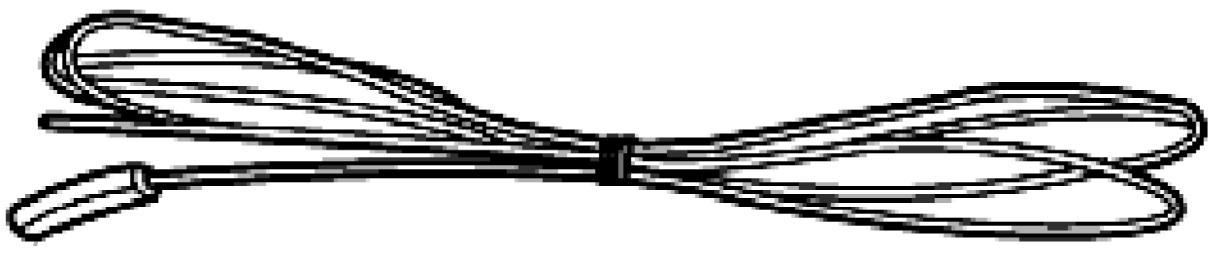

AC Cord (For E & EG only)

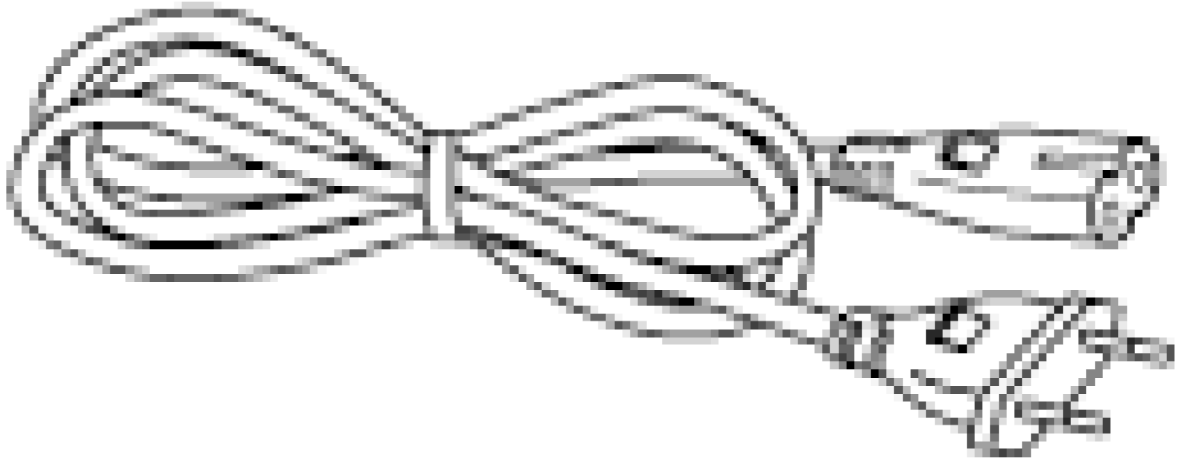

AC Cord (For EB ony)

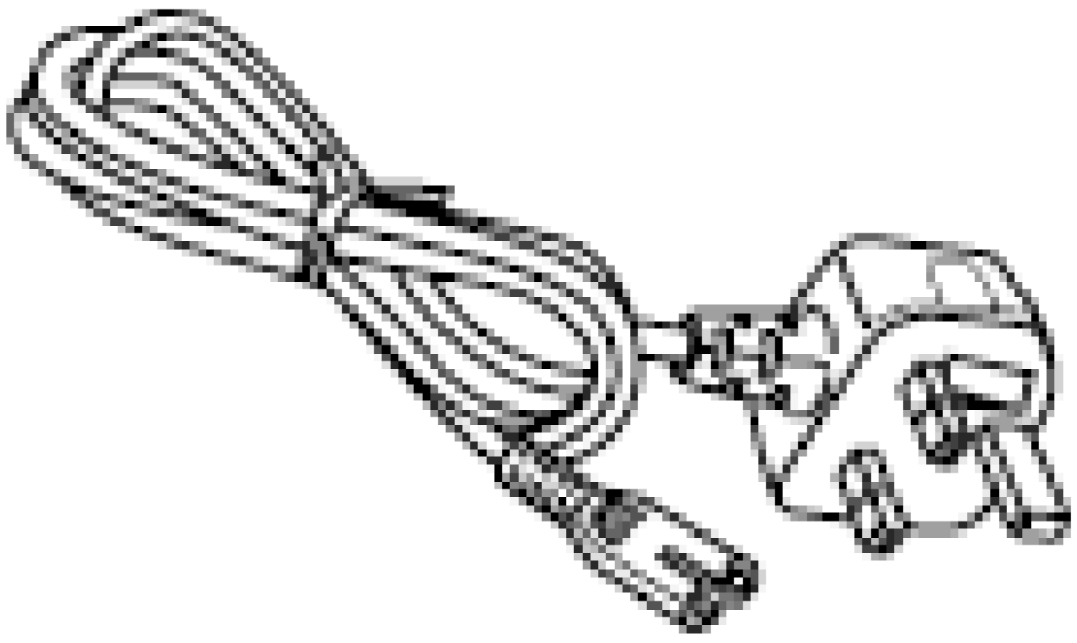

AM Loop Antenna

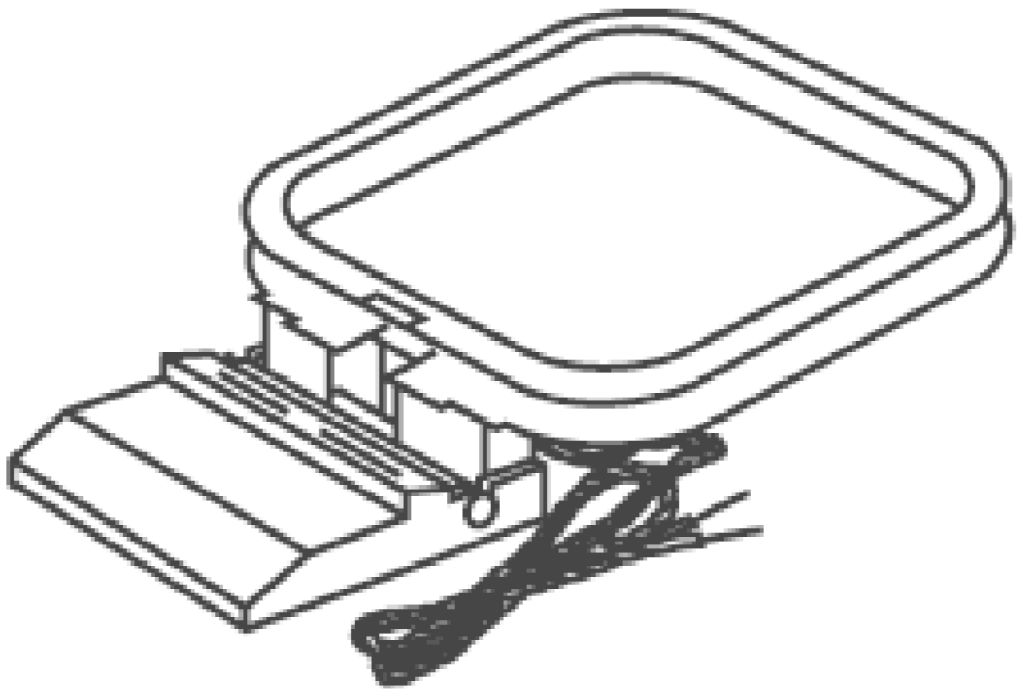

Antenna Plug Adapter (For EB only)

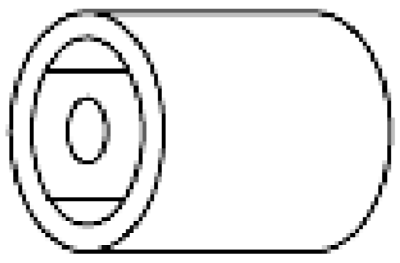

9. Operation Procedures

10. Disassembly and Assembly of Main Component

“ATTENTION SERVICER”
Some chassis components may have sharp edges. Be careful when disassembling and servicing.

1. This section describes procedures for checking the operation of the major printed circuit boards and replacing the main

components.

2. **For reassembly after operation checks or replacement, reverse the respective procedures. / Special reassembly procedures are described only when required.**
3. **Select items from the following index when checks or replacement are required.**
4. **Refer to the Parts No. on the page of "Parts Location and Replacement Parts List" (Section 23), if necessary.**

10.1. Disassembly flow chart

The following chart is the procedure for disassembling the casing and inside parts for internal inspection when carrying out the servicing.

To assemble the unit, reverse the steps shown in the chart as below.

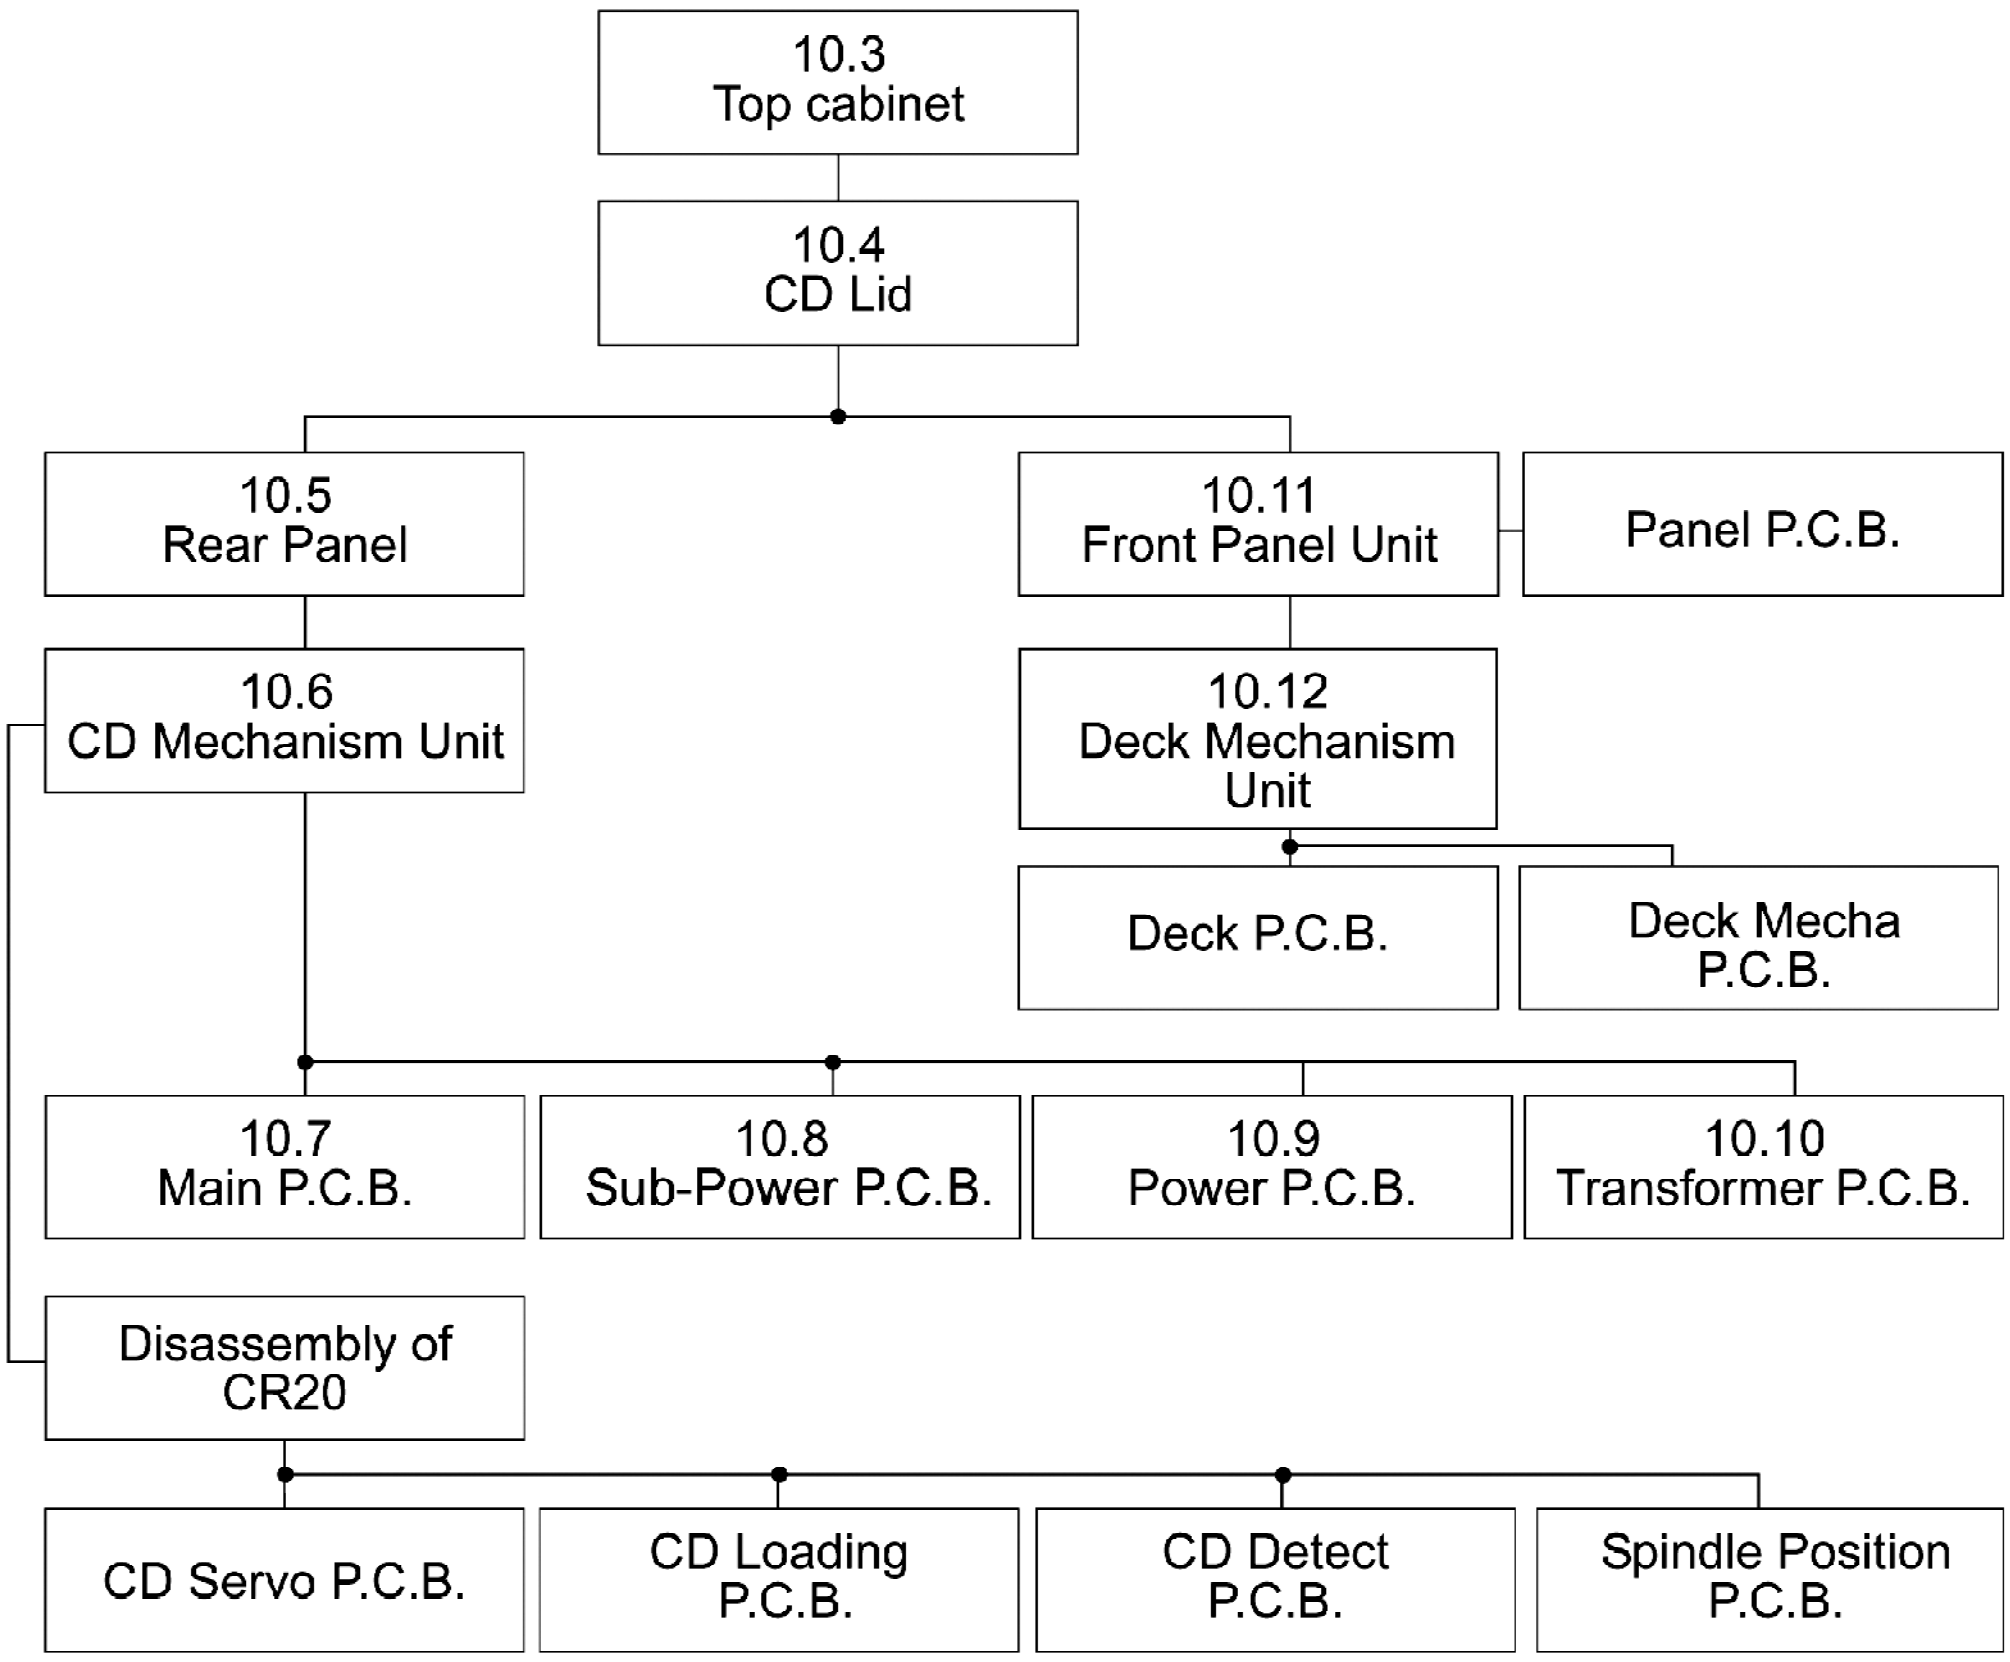
10.3
Top cabinet
10.4
CD Lid
10.5
Rear Panel
10.11
Front Panel Unit
Panel P.C.B.
10.6
CD Mechanism Unit
10.12
Deck Mechanism Unit
Deck P.C.B.
Deck Mecha P.C.B.
10.7
Main P.C.B.
10.8
Sub-Power P.C.B.
10.9
Power P.C.B.
10.10
Transformer P.C.B.
Disassembly of CR20
CD Servo P.C.B.
CD Loading P.C.B.
CD Detect P.C.B.
Spindle Position P.C.B.

10.2. Gear for servicing (jig) Information

1. **This unit has a gear which is used for checking items (Open/Close of disc tray, up/down operation of traverse unit by manually) when servicing.**
2. **For preparation of gear (for servicing), perform the procedures as**

follows.

3. In case of re-servicing the same set, the “gear for servicing” may has been taken off because it has been used. The “gear for servicing” must be stored.

- Remove the gear provided with mecha cover as shown below.

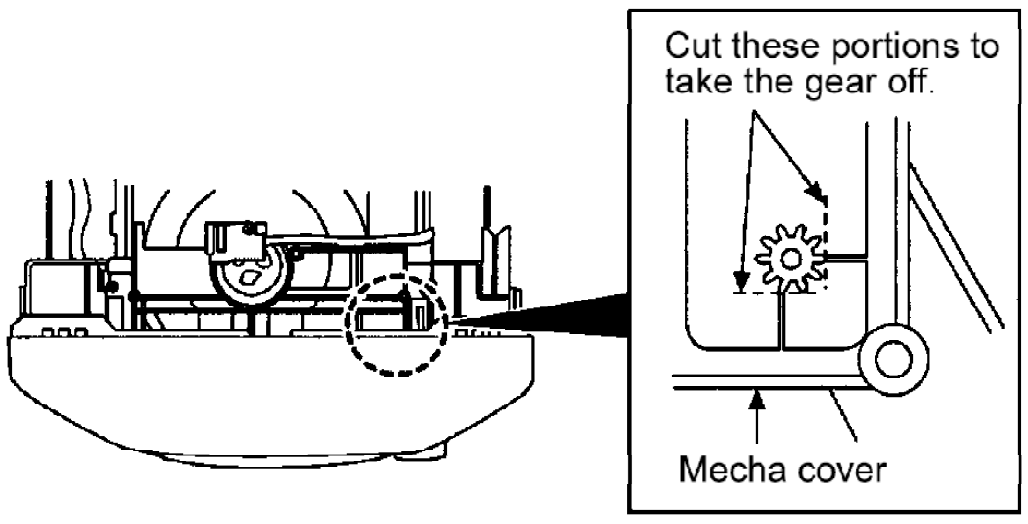
Cut these portions to take the gear off.
Mecha cover

- Insert the hexagonal screwdriver (2mm) into the gear, and then project the tip of screwdriver for 1~ 2 mm in length.

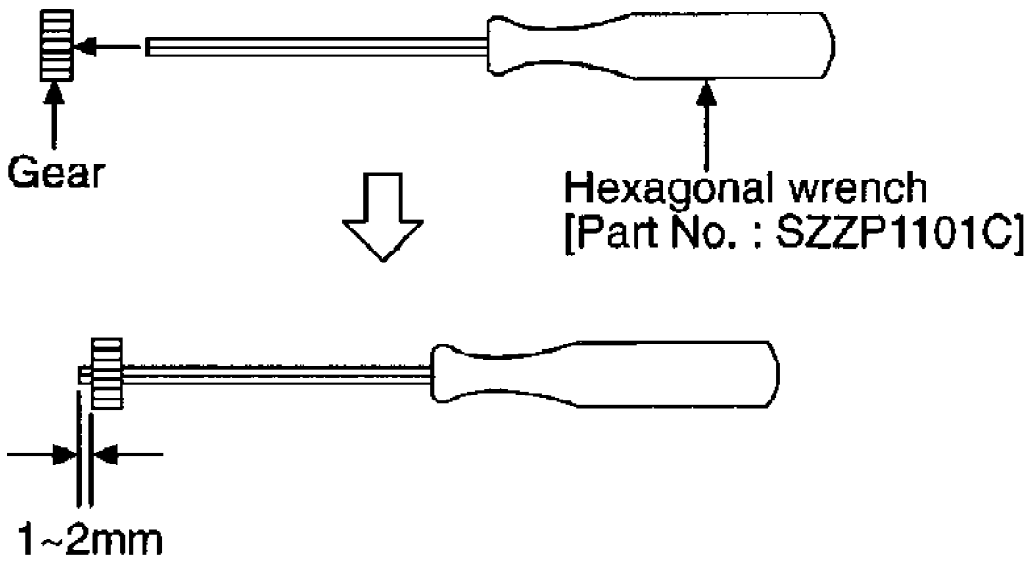
Gear
Hexagonal wrench
[Part No. : SZZP1101C]
1~2mm

(Preparation of gear as jig is completed.)

10.3. Disassembly of Top Cabinet

Step 1 Remove 2 screws at each side and 5 screws at rear panel.

Step 2 Lift up both sides of the top cabinet, push the top cabinet towards the rear and remove the top cabinet.

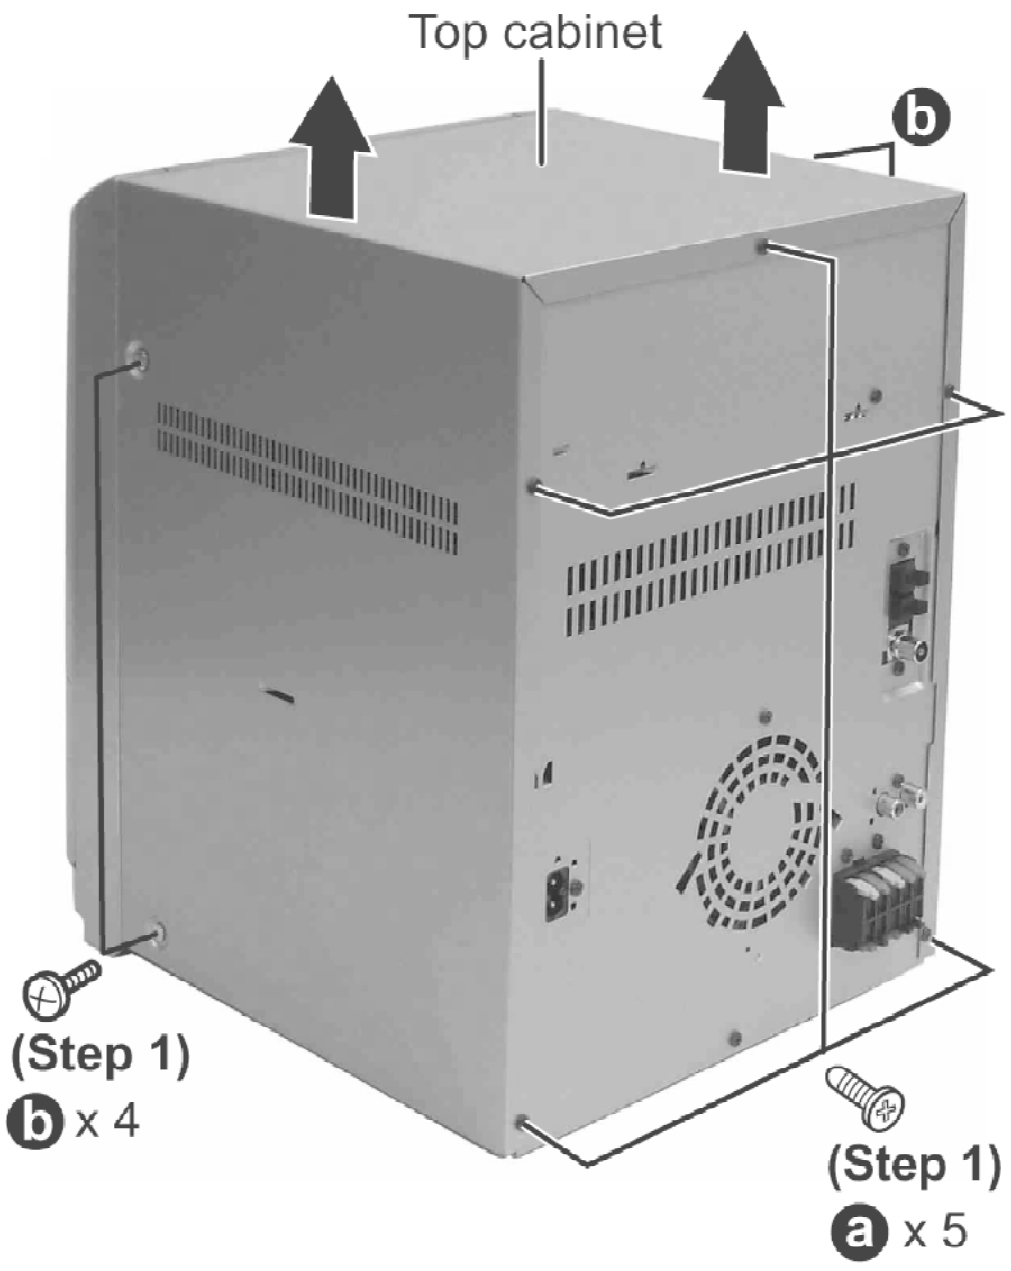
Top cabinet
b
(Step 1)
b x 4
(Step 1)
a x 5

10.4. Disassembly of CD Lid

(The CD changer unit can be removed after the CD Lid is removed)

- Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet

- Opening the disc tray automatically (Using Power Supply)

Step 1 Connect the AC power cord.

Step 2 Press the POWER button to power up the main unit.

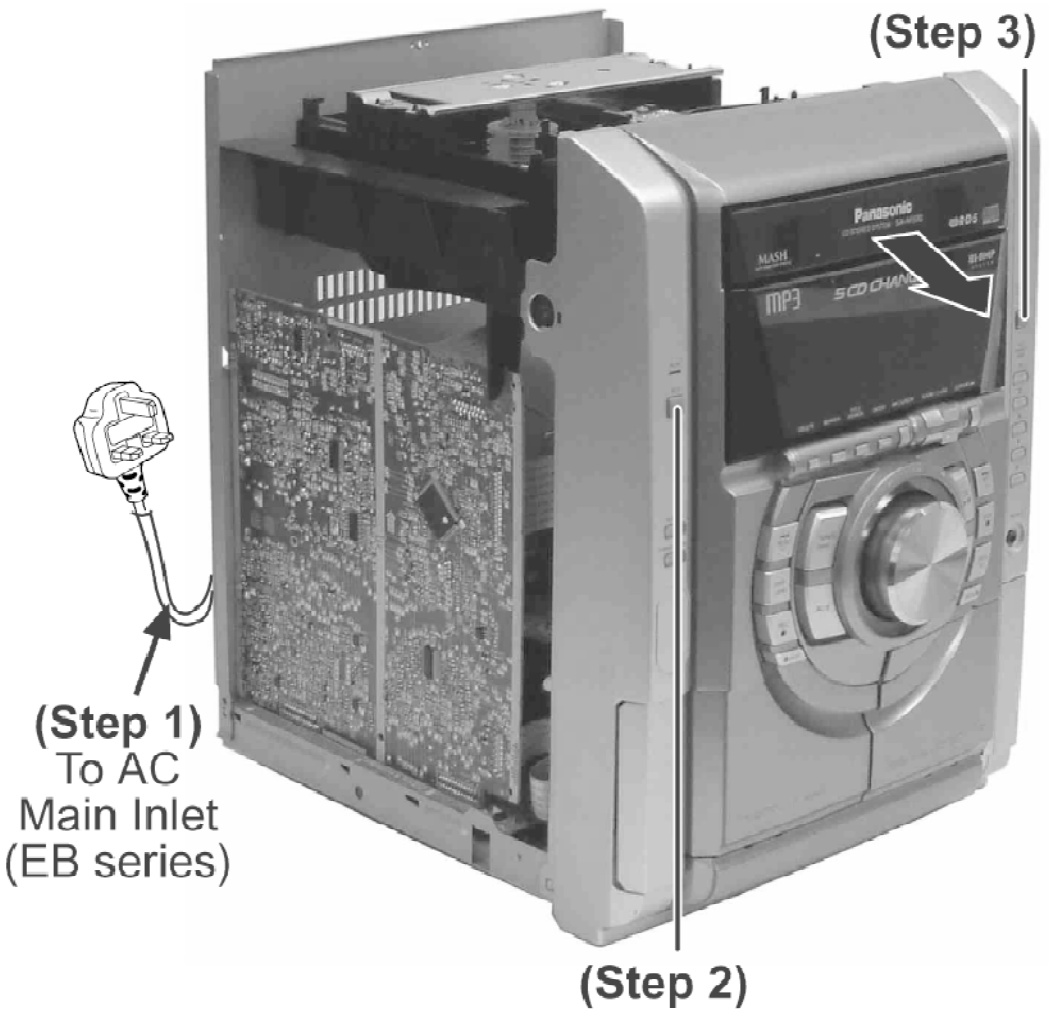
(Step 3)
(Step 1)
To AC
Main Inlet
(EB series)
(Step 2)

Step 3 Press the OPEN/CLOSE button, the disc tray will open automatically.

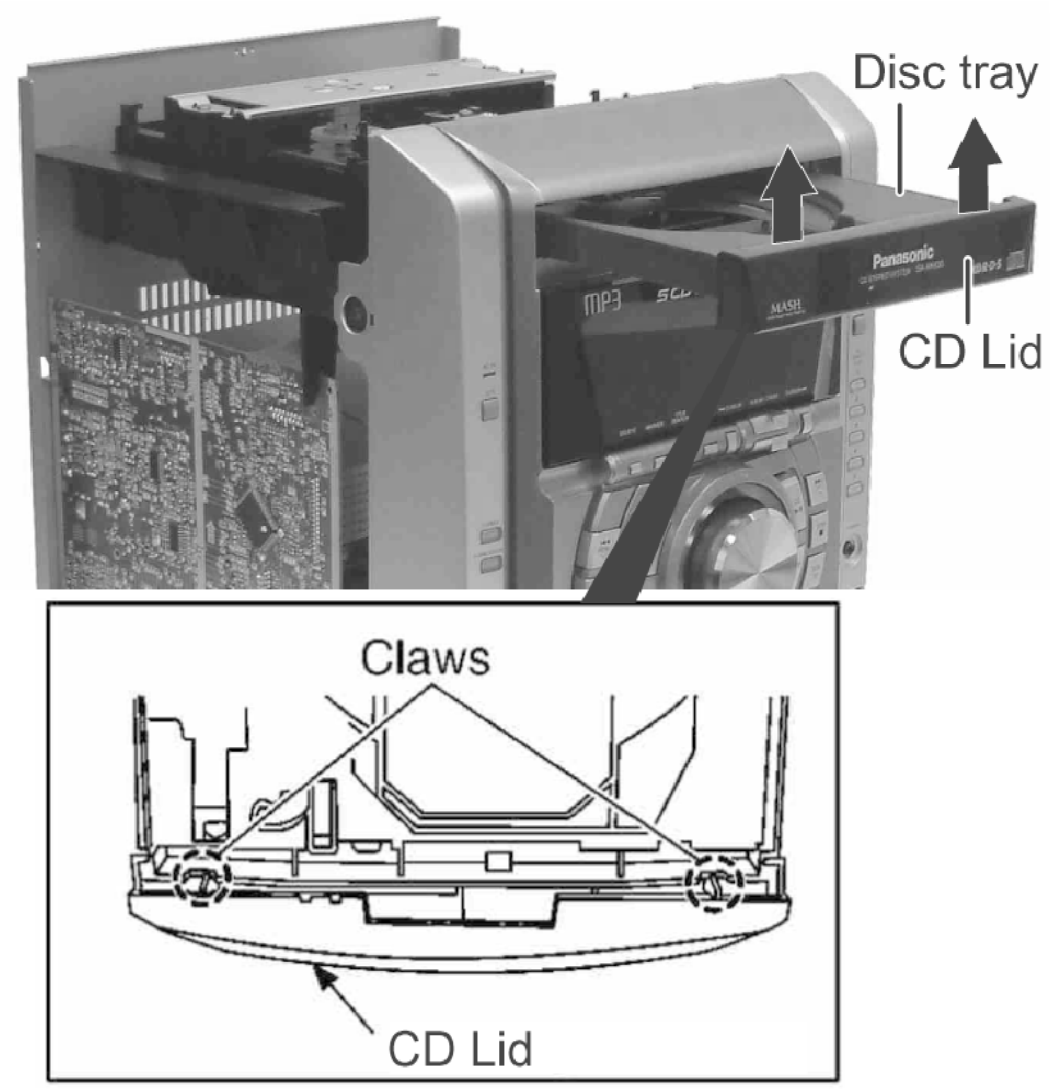
Disc tray
CD Lid
Claws
CD Lid

Step 4 Release the 2 claws, and then remove the CD Lid.

Step 5 Press the OPEN/CLOSE button, the disc tray will close.

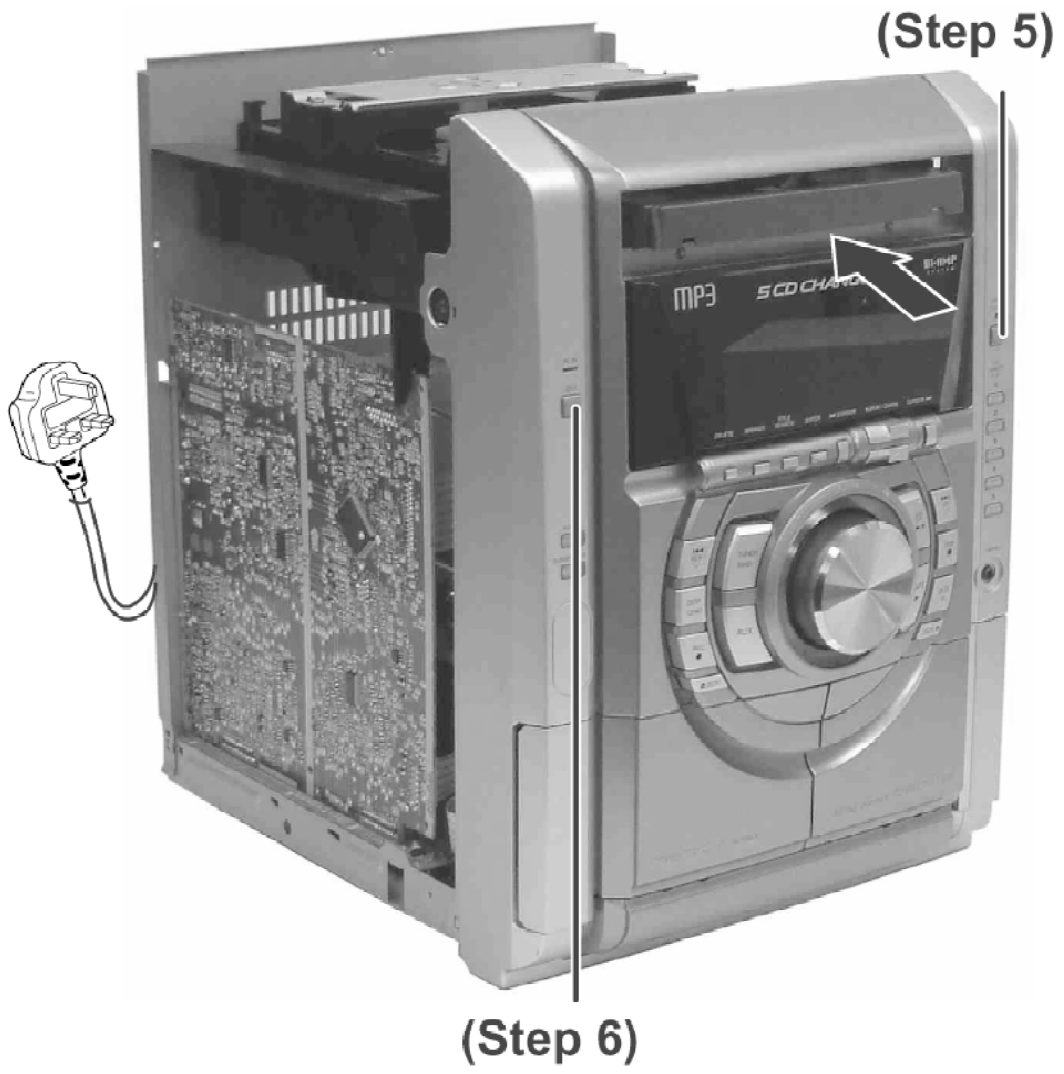
(Step 5)
(Step 6)

Step 6 Press the POWER button to turn the power off.

- [Opening the disc tray manually (Using service tools)]

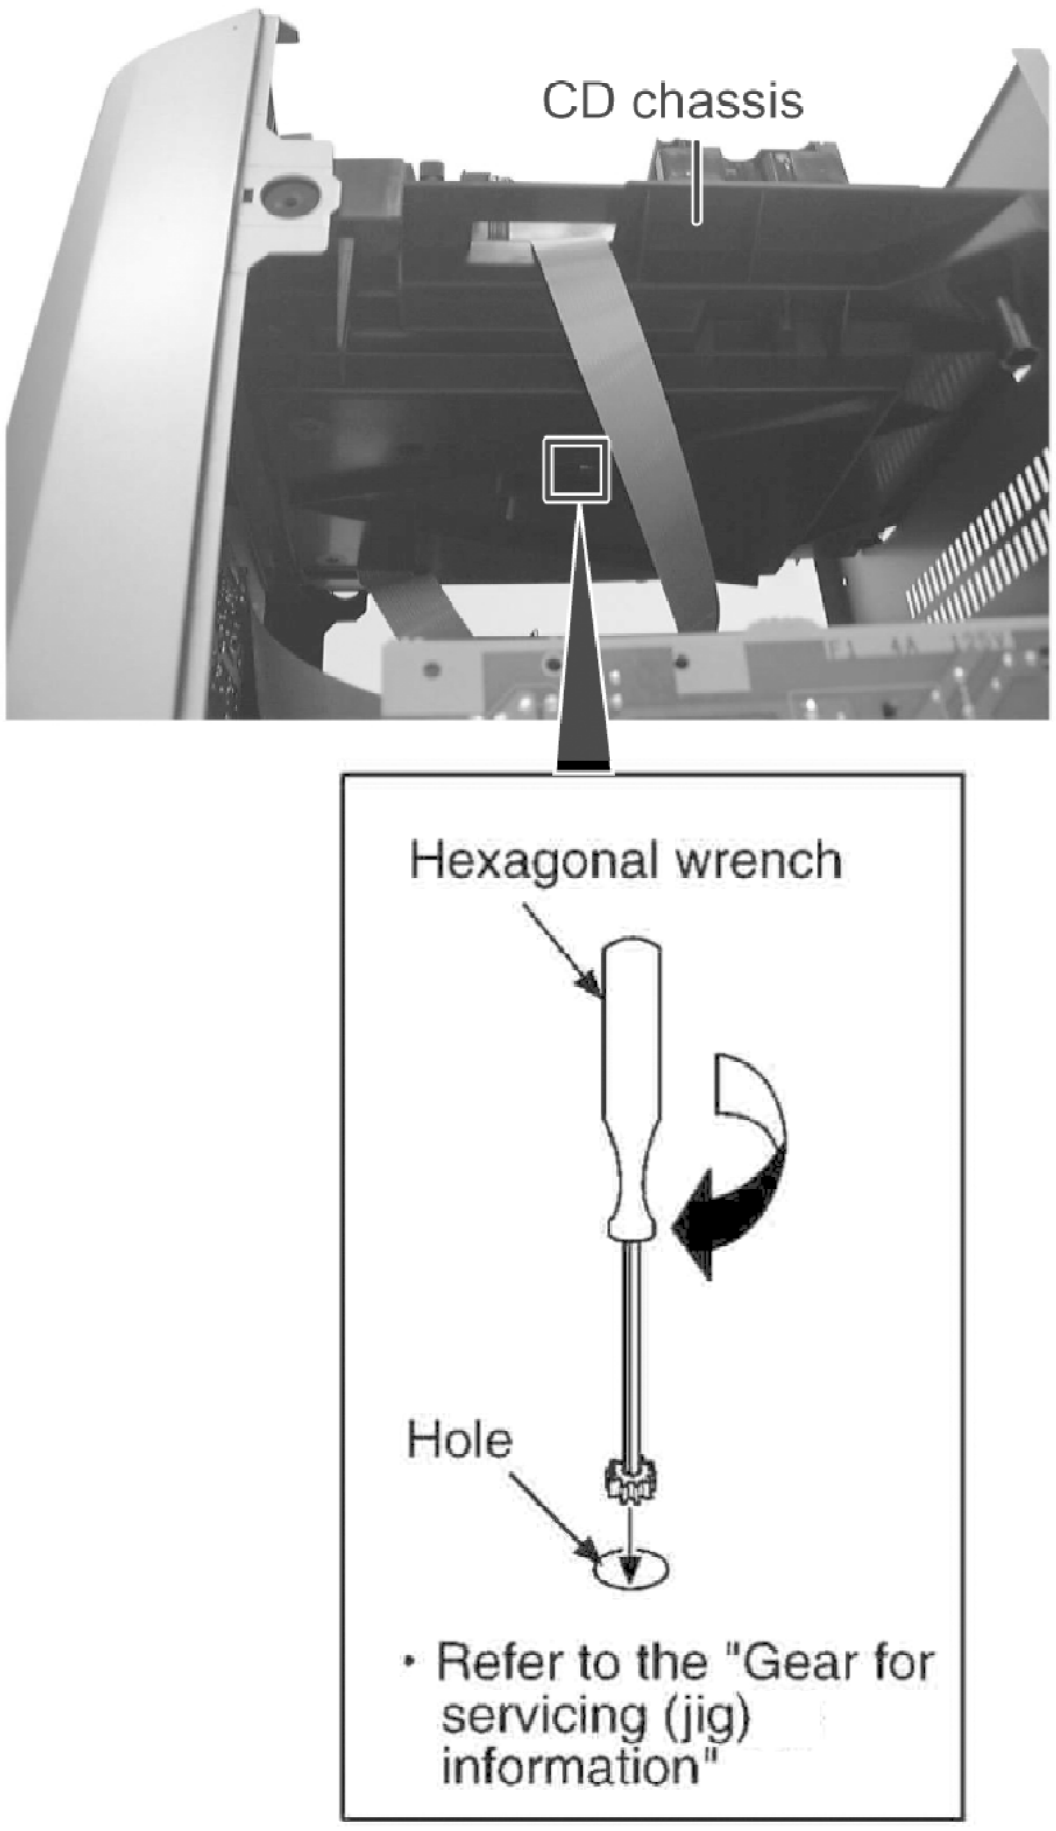
CD chassis
Hexagonal wrench
Hole
• Refer to the "Gear for servicing (jig) information"

Step 1 Insert the gear tool into the hole on the underside of CD chassis and then rotate in the direction of arrow. The disc tray will be opened.

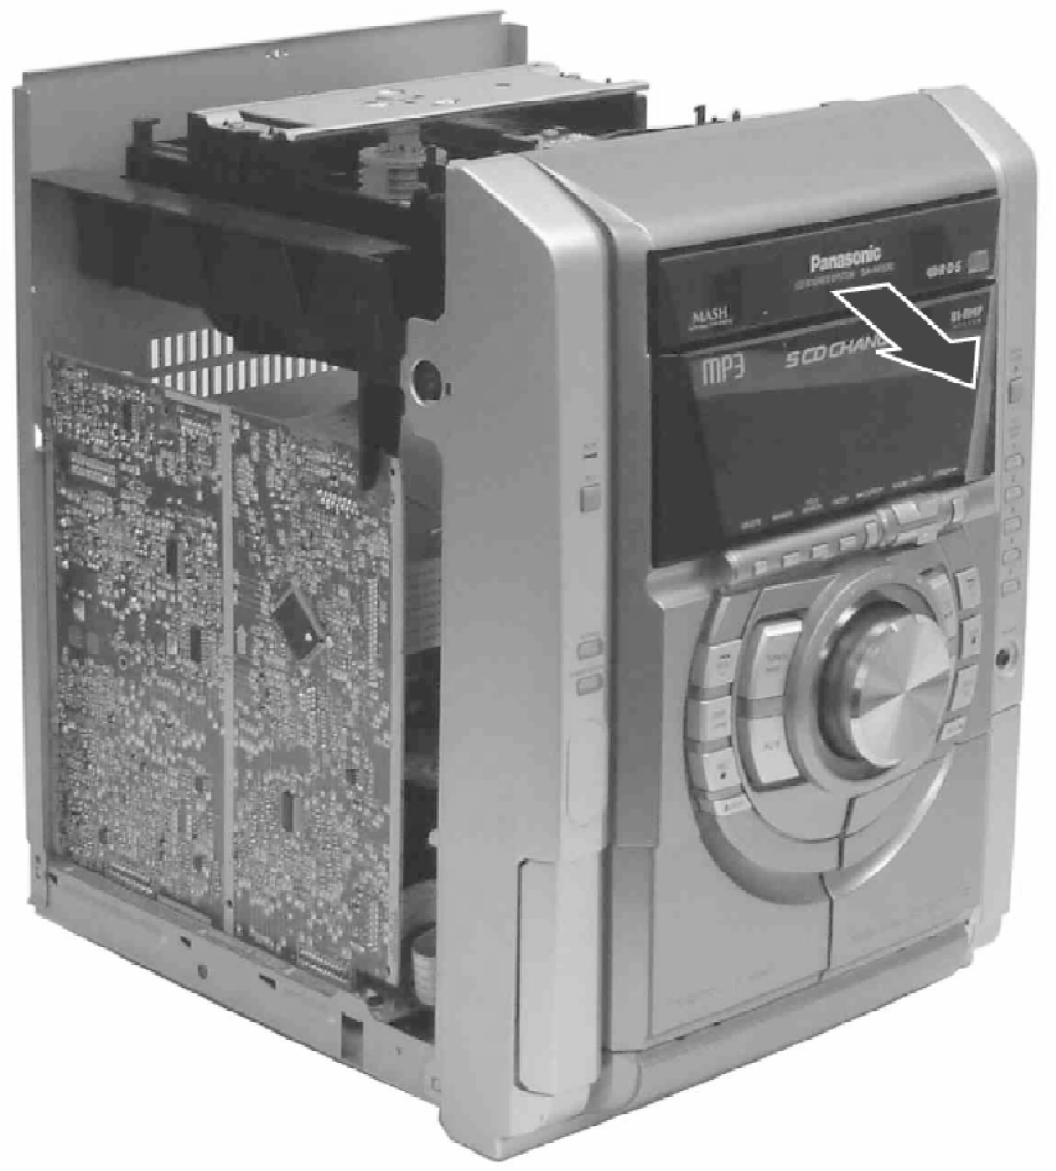
Panasonic
MP3
5 CD CHANGER

Step 2 Release the 2 claws, and then remove the CD lid cover.

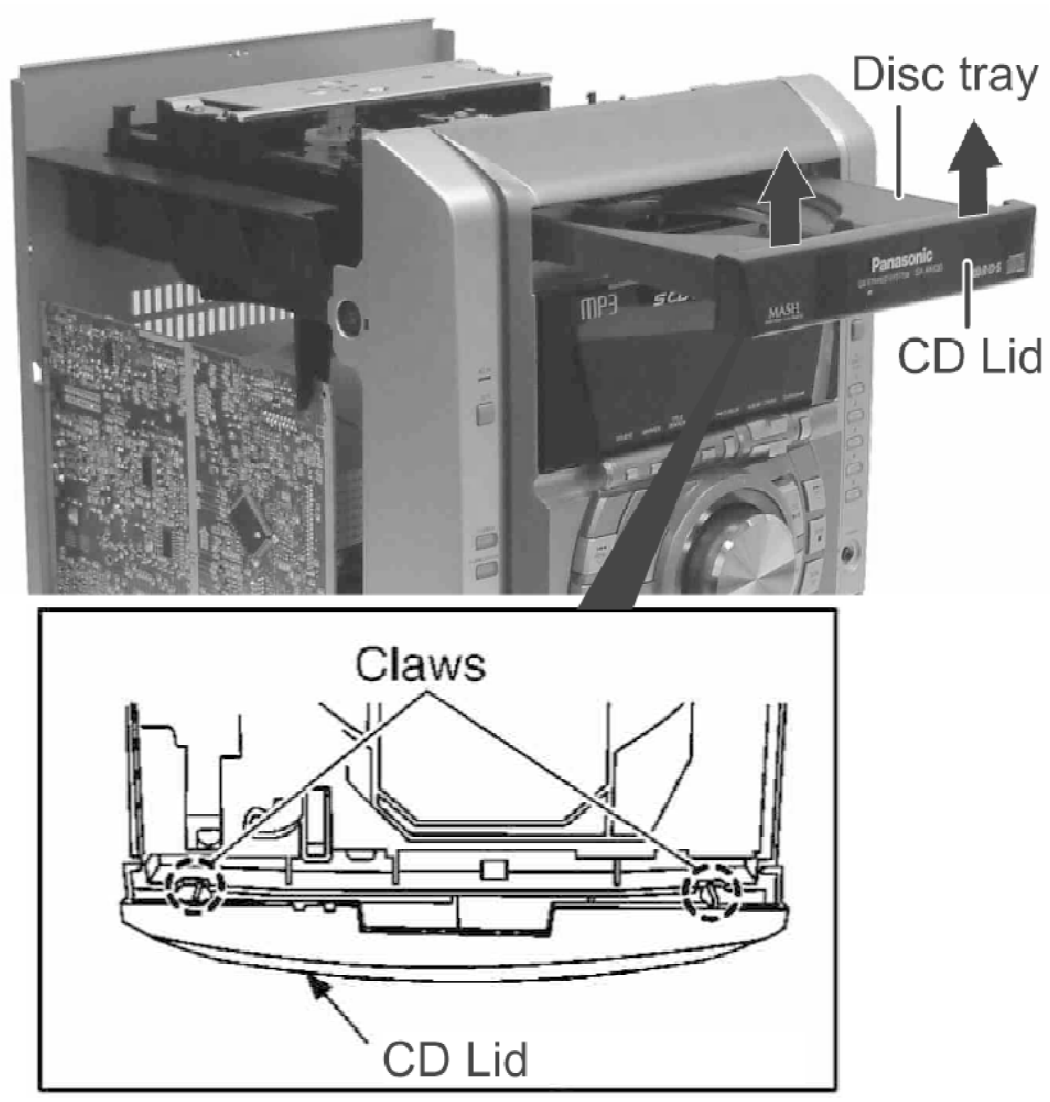

Step 3 Repeat Step 2 but rotate the gear tools in anti-clockwise direction.

Step 4 The disc tray will be closed.

10.5. Disassembly of Rear Panel

- Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet

Step 1 Remove 7 screws and disconnect wire CN2810 (Fan) at rear cabinet as shown.

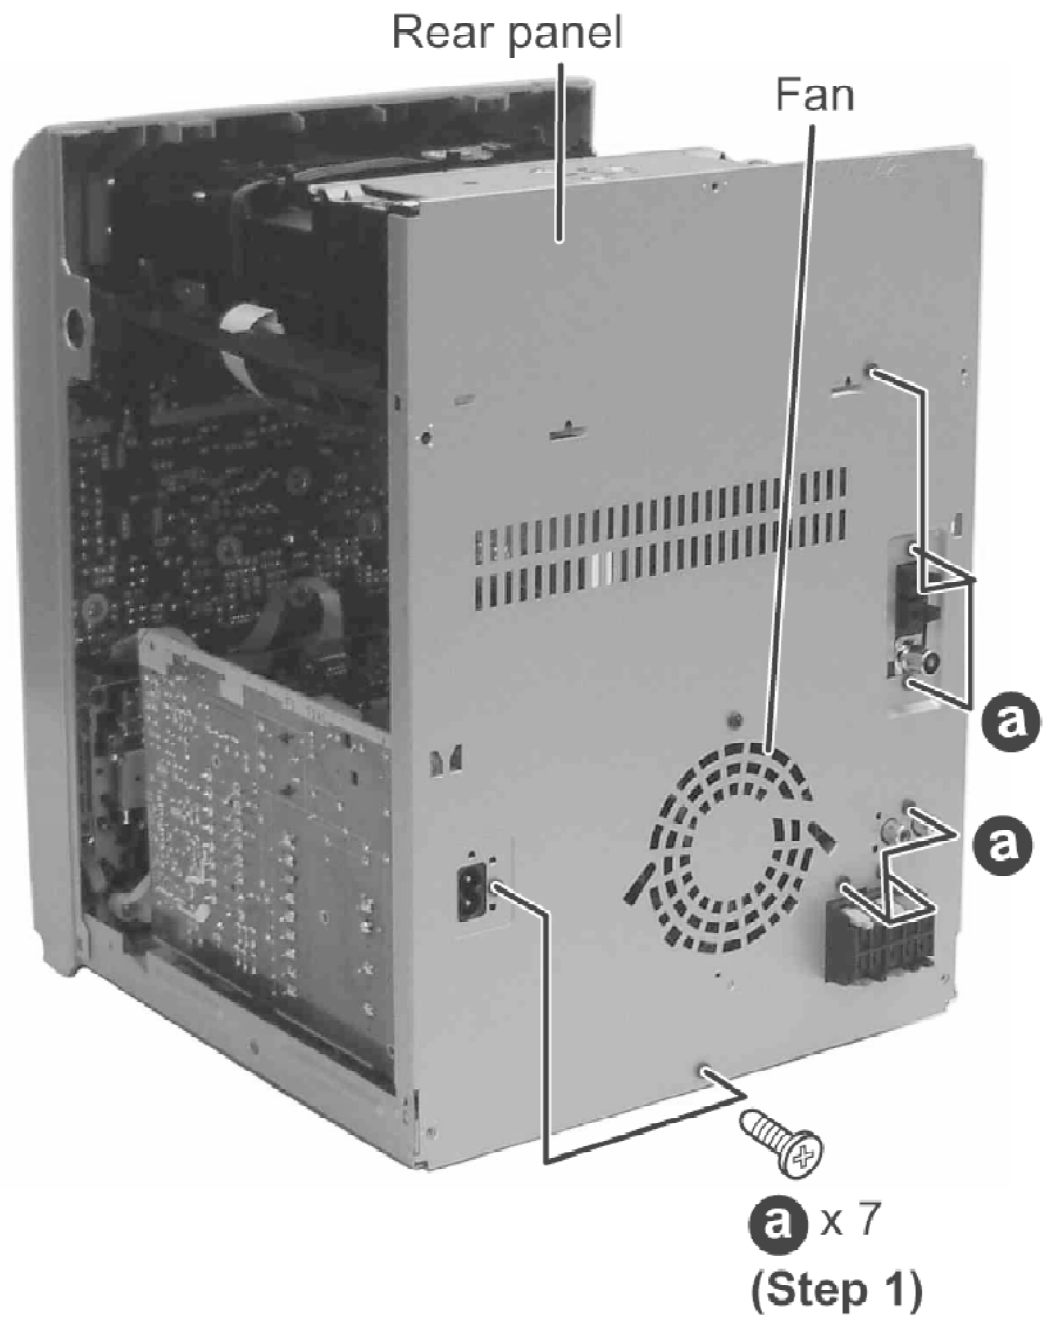
Rear panel
Fan
a
a
a x 7
(Step 1)

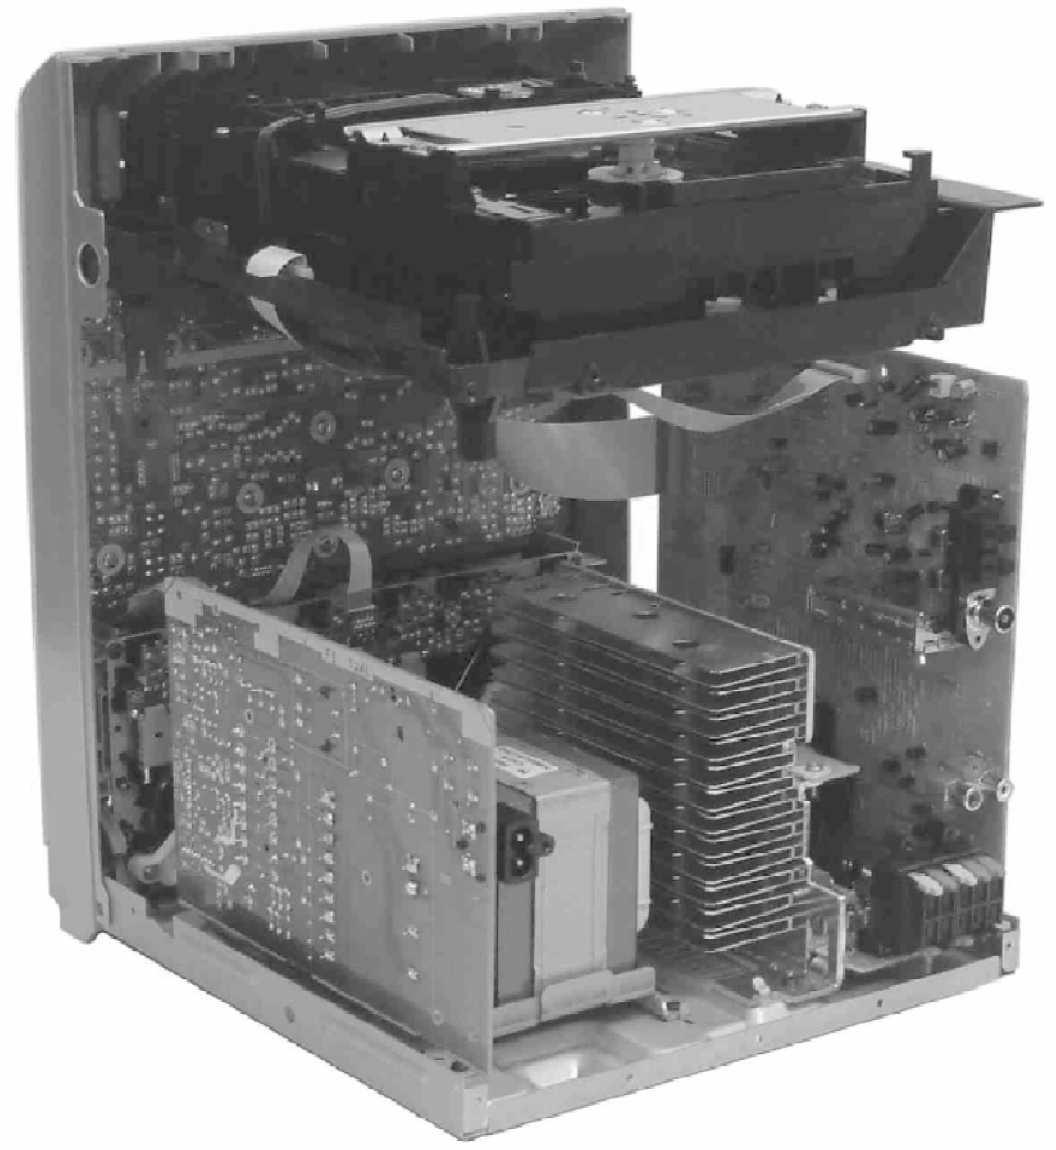

10.6. Disassembly of CD Mechanism Unit

- Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet

Step 1 Remove one screw at rear panel.

Step 2 Detach the FFC wires (CN2801 & CN2805).

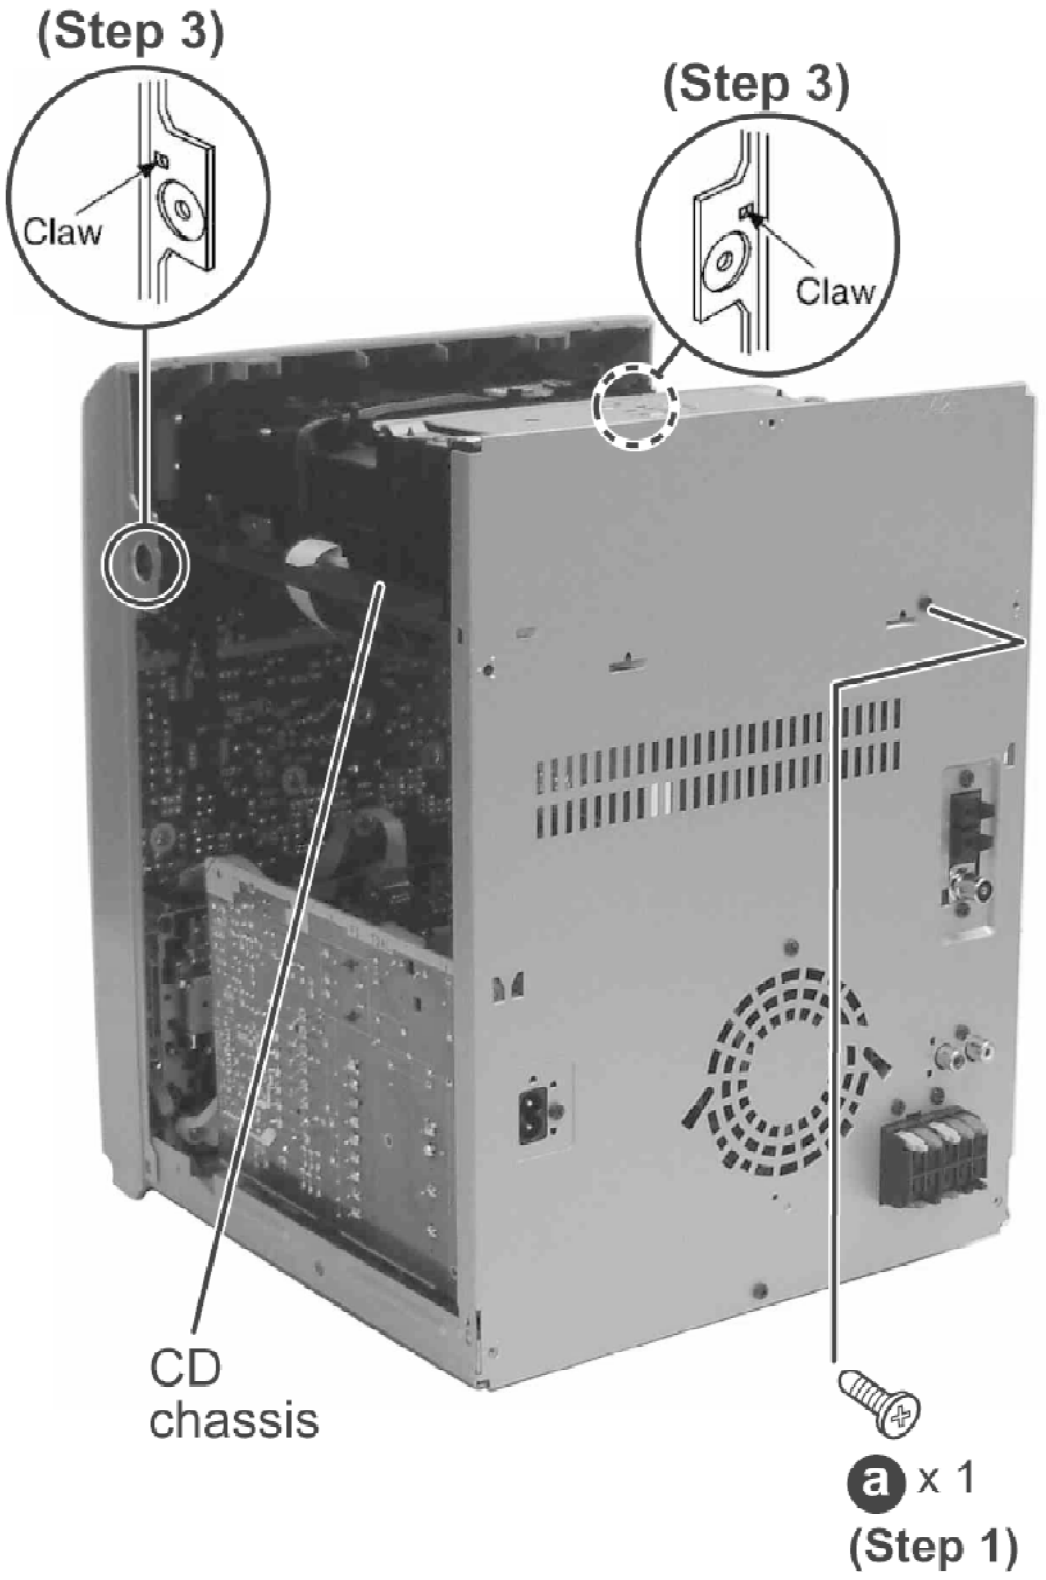
(Step 3)
Claw
(Step 3)
Claw
CD chassis
a x 1
(Step 1)

Step 3 Release the claws of both ends, and then lift up the CD Mechanism Unit.

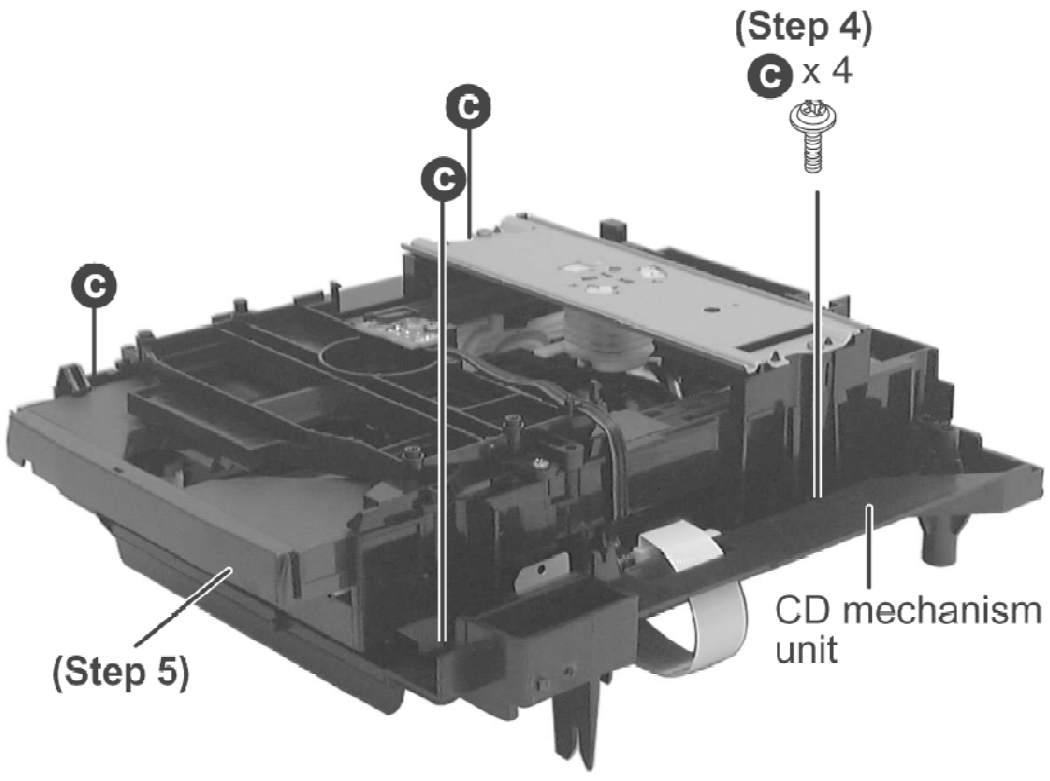
(Step 4)
c x 4
c
c
c
CD mechanism unit
(Step 5)

Step 4 Remove 4 screws.

Step 5 Remove the CD chassis.

Step 6 Lay the CD mechanism unit as shown.

- For disassembly of CD mechanism unit, please refer to Section 10.13 of this manual.

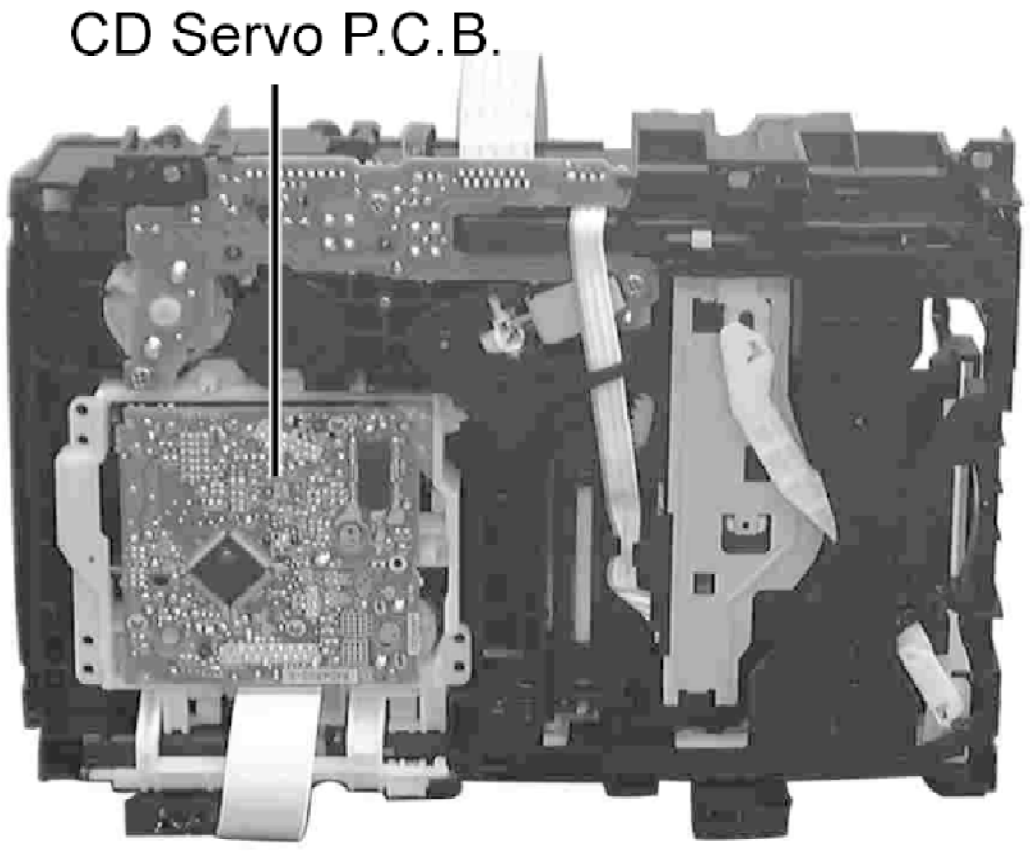

10.7. Disassembly of Main P.C.B.

- Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet

- Follow the (Step 1) - (Step 6) of Item 10.4 - Disassembly of CD Lid

- Follow the (Step 1) of Item 10.5 - Disassembly of Rear Panel

- Follow the (Step 1) - (Step 3) of Item 10.6 - Disassembly of CD Mechanism Unit

Step 1 Disconnect FFC wires CN2803 & CN2806 from Main P.C.B.

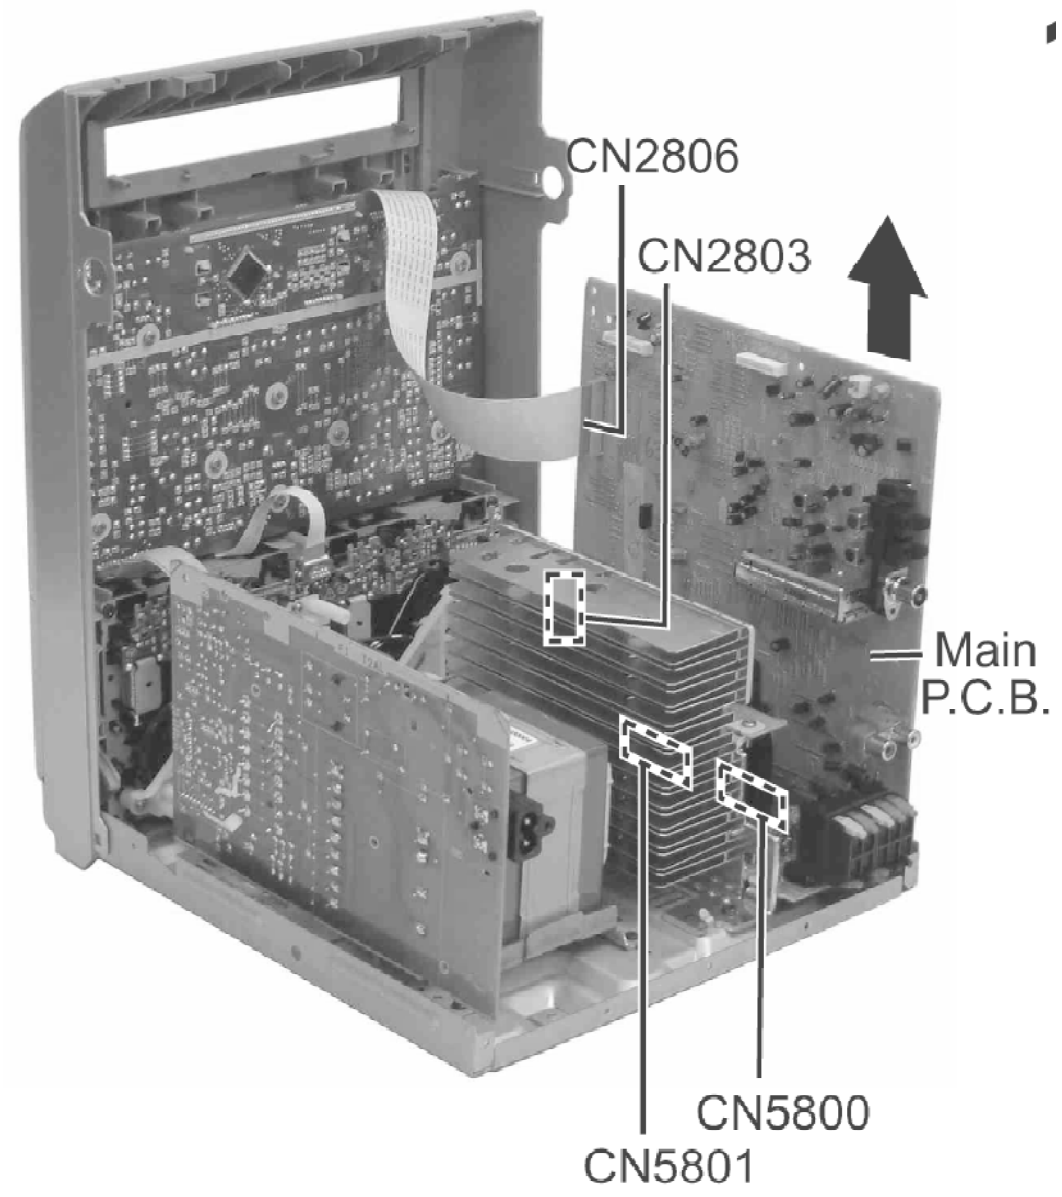

Step 2 Lift up Main P.C.B. by disconnecting connectors CN5800 & CN5801 as arrow shown above.

10.8. Disassembly of Sub-Power P.C.B.

- Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet

- Follow the (Step 1) - (Step 6) of Item 10.4 - Disassembly of CD Lid

- Follow the (Step 1) of Item 10.5 - Disassembly of Rear Panel

- Follow the (Step 1) - (Step 3) of Item 10.6 - Disassembly of CD Mechanism Unit

- Follow the (Step 1) - (Step 2) of Item 10.7 - Disassembly of Main P.C.B.

Step 1 Remove the 2 screws fixed at Sub Power P.C.B..

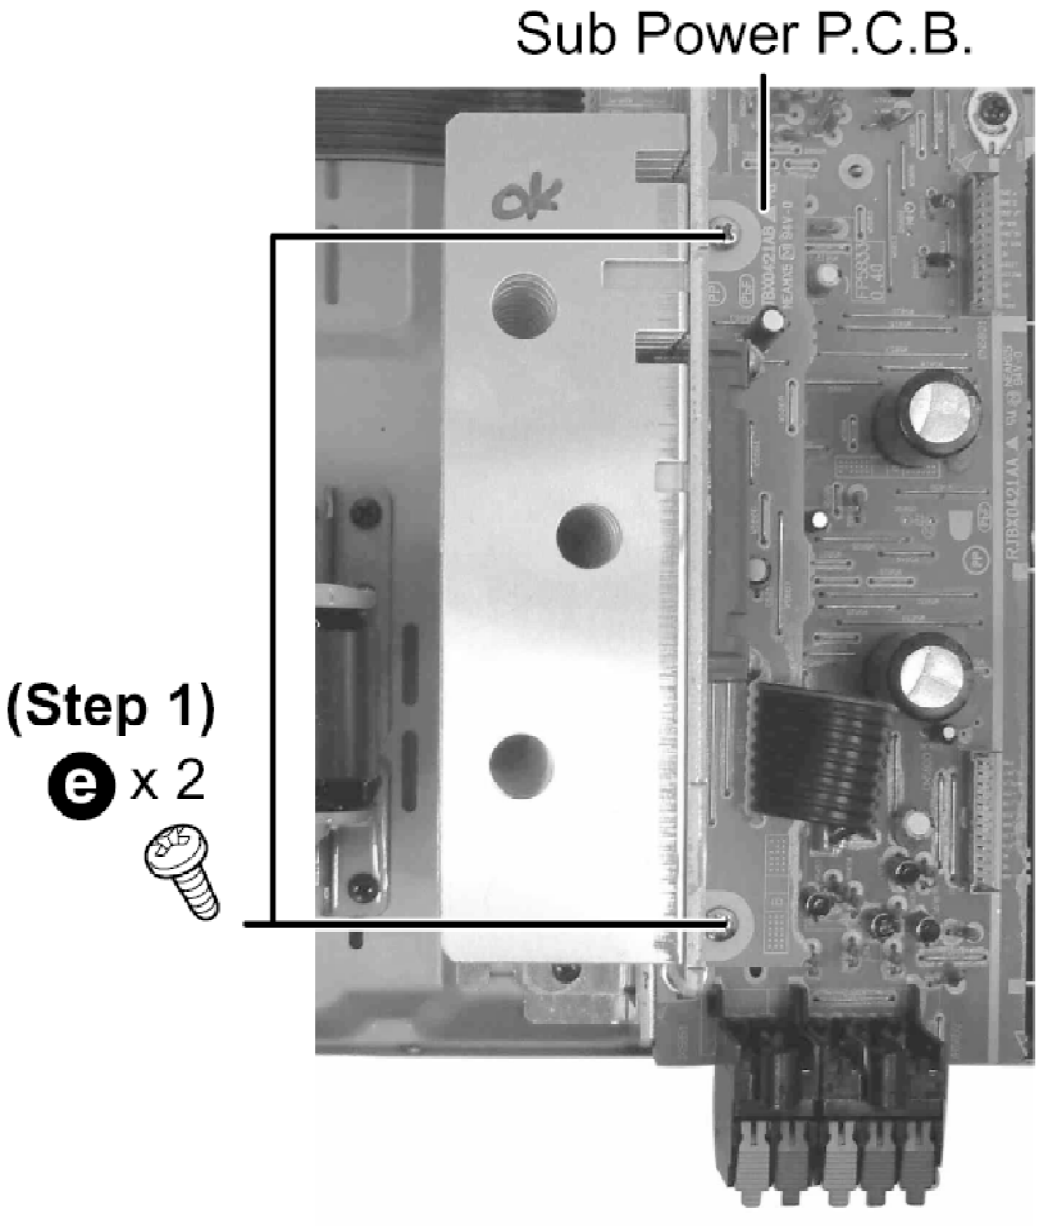
Sub Power P.C.B.
(Step 1)
e x 2

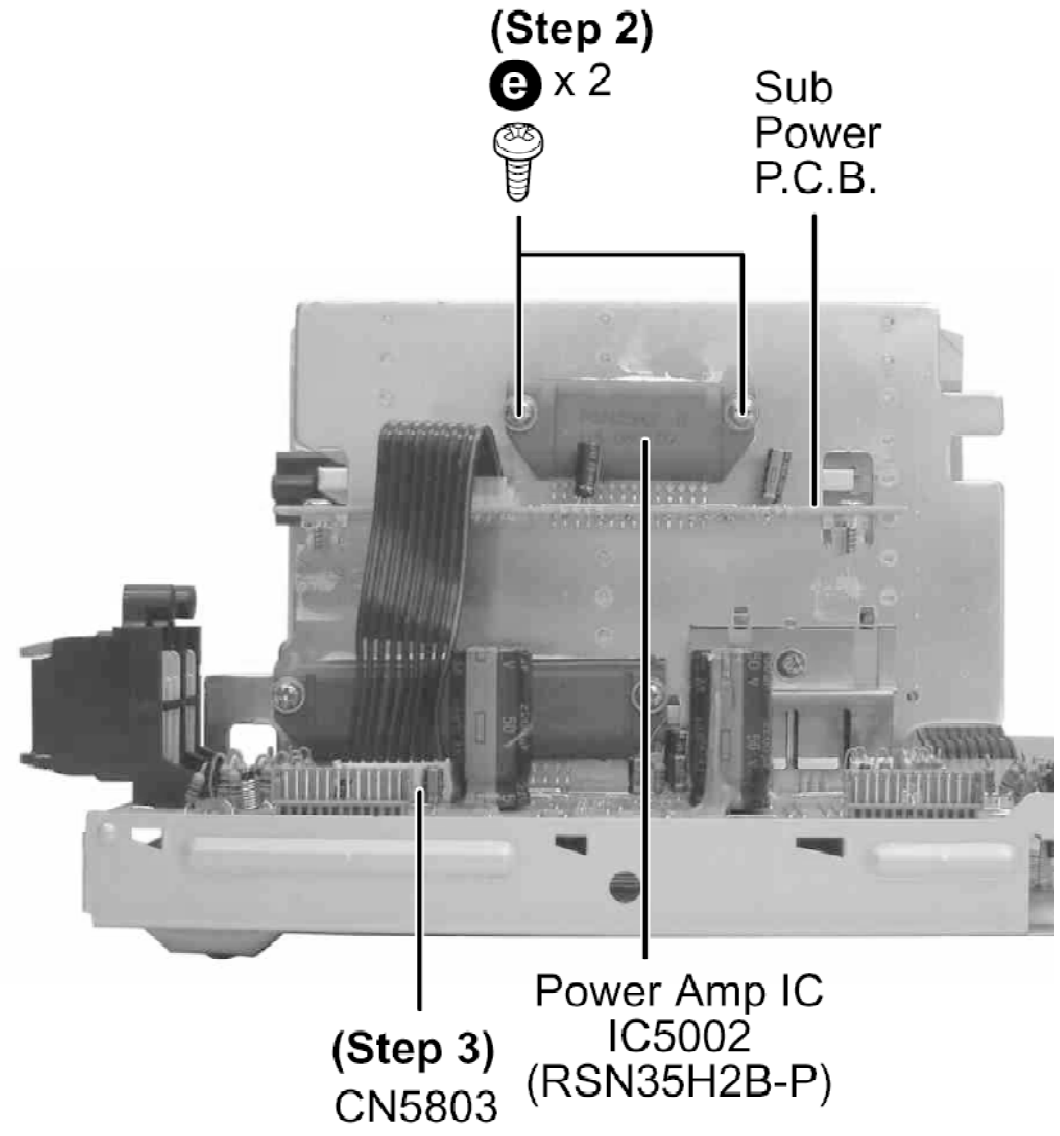
(Step 2)
e x 2
Sub
Power
P.C.B.
(Step 3)
CN5803
Power Amp IC
IC5002
(RSN35H2B-P)

Step 2 Remove 2 screws at Power Amplifier IC.

Step 3 Disconnect connector CN5803

Step 4 Lift up the Sub Power P.C.B. to remove it.

- Replacement of Power Amplifier IC

Step 1 Desolder the terminals of Power Amplifier IC and replace the component.

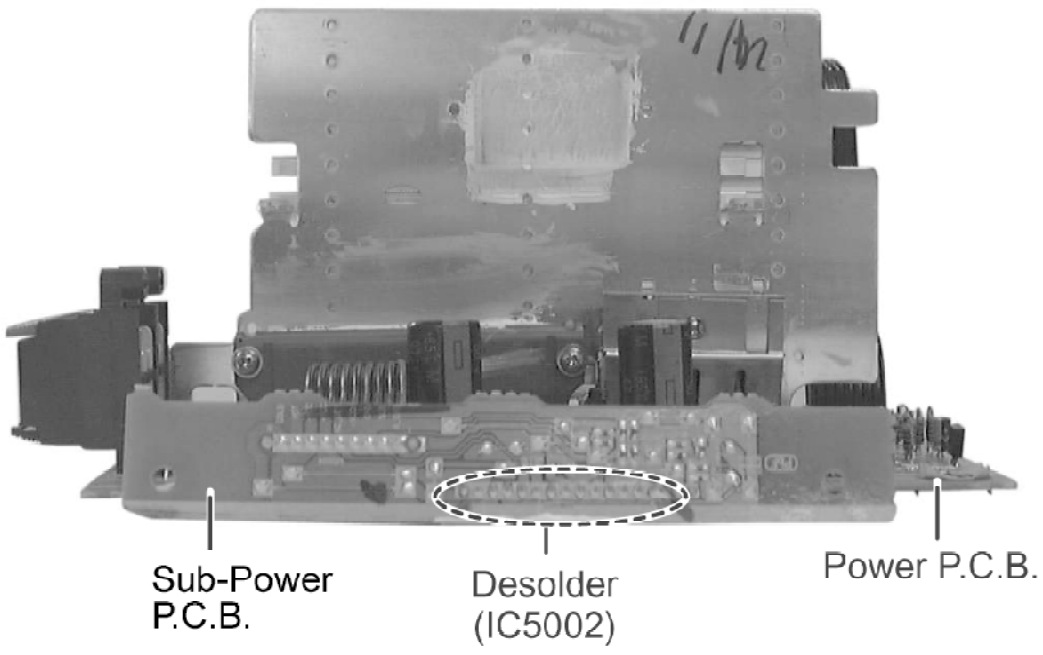

10.9. Disassembly of Power P.C.B.

- Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet

- Follow the (Step 1) - (Step 6) of Item 10.4 - Disassembly of CD Lid

- Follow the (Step 1) of Item 10.5 - Disassembly of Rear Panel

- Follow the (Step 1) - (Step 3) of Item 10.6 - Disassembly of CD Mechanism Unit

- Follow the (Step 1) - (Step 2) of Item 10.7 - Disassembly of Main P.C.B.

Step 1 Remove the 2 screws fixed at heat sink.

Step 2 Remove1 screw fixed at Power P.C.B..

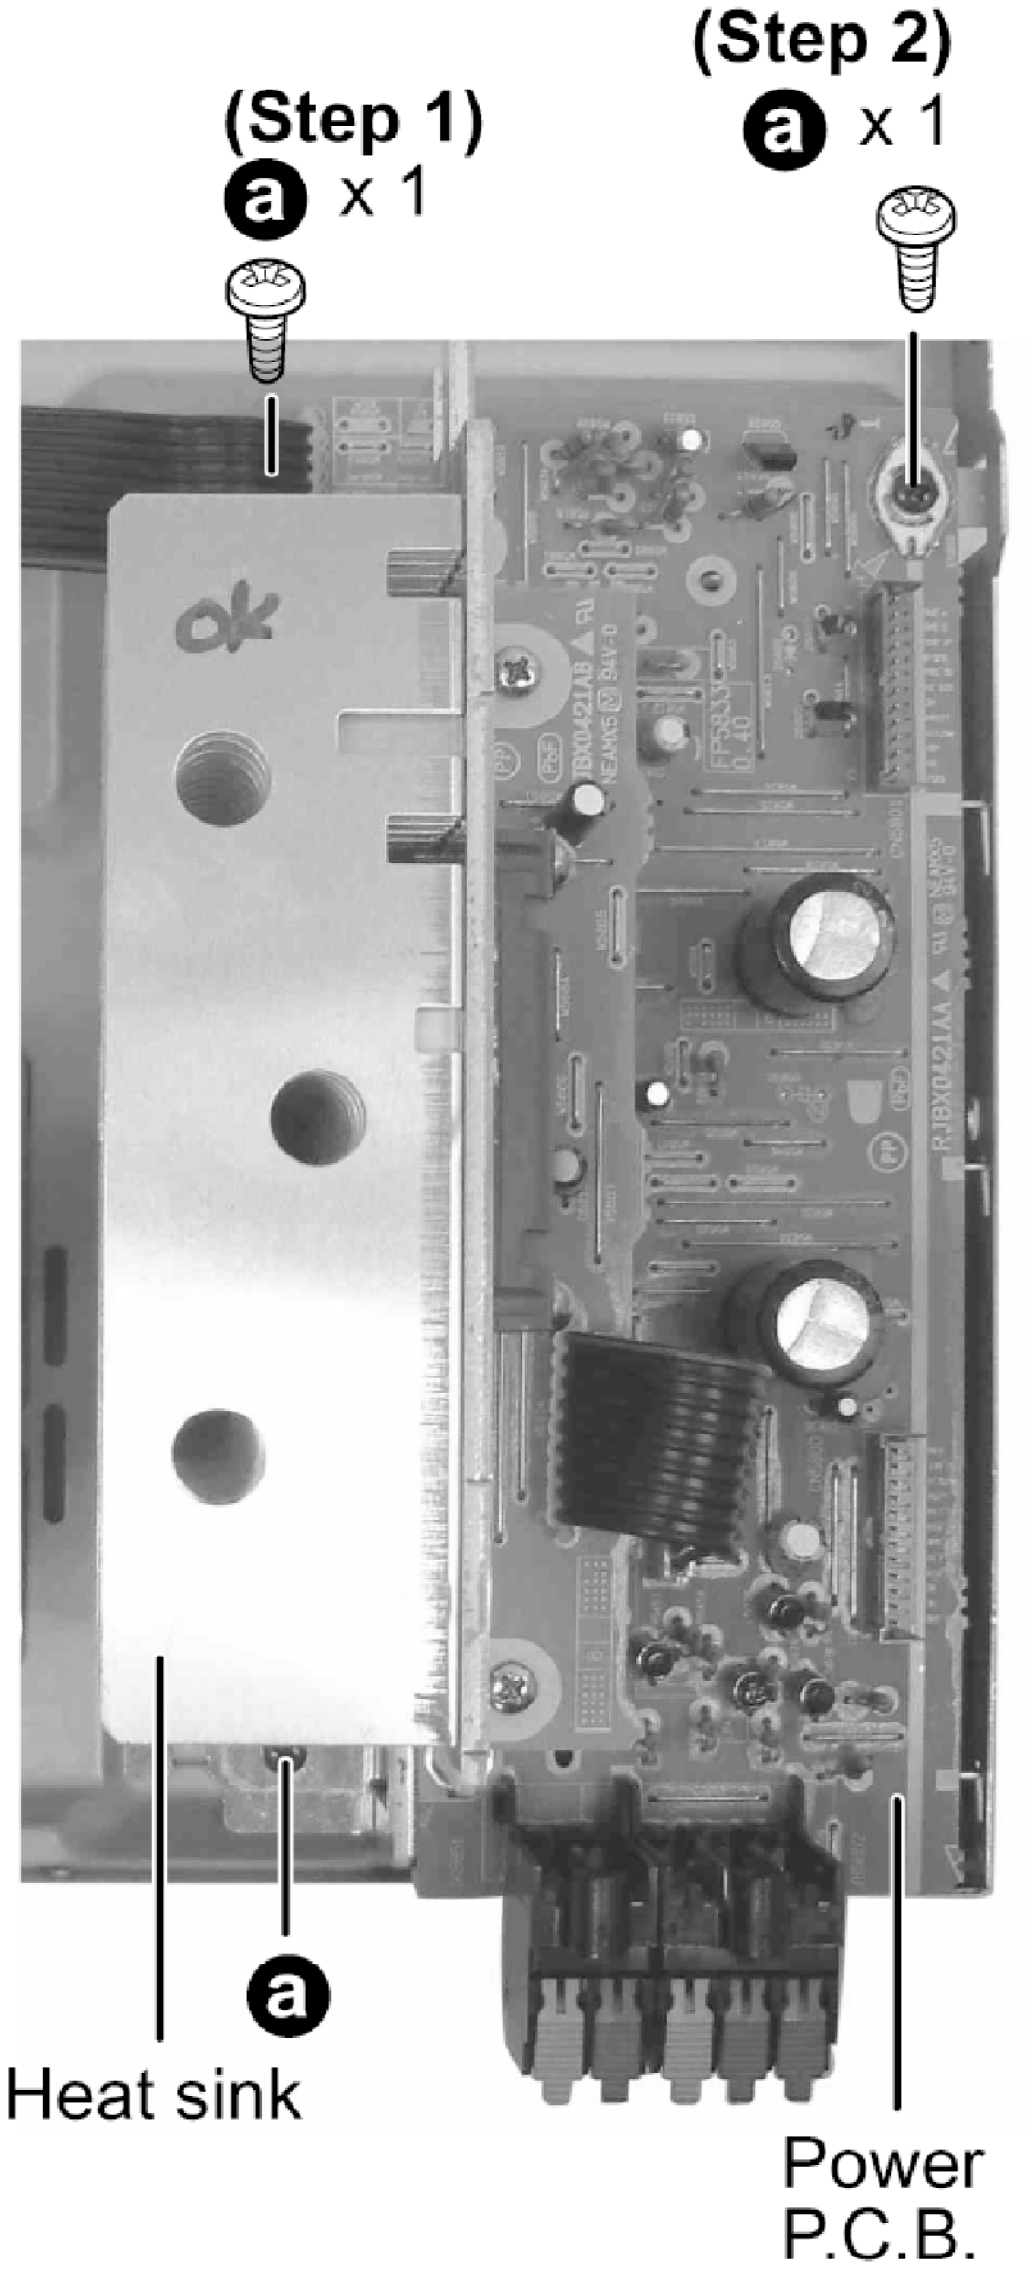
(Step 1)
a x 1
(Step 2)
a x 1
a
Heat sink
Power P.C.B.

Note:
Insulate the Power P.C.B. with insulation material to avoid short circuit.

- Replacement of the Power Amplifier IC/ Voltage Regulator

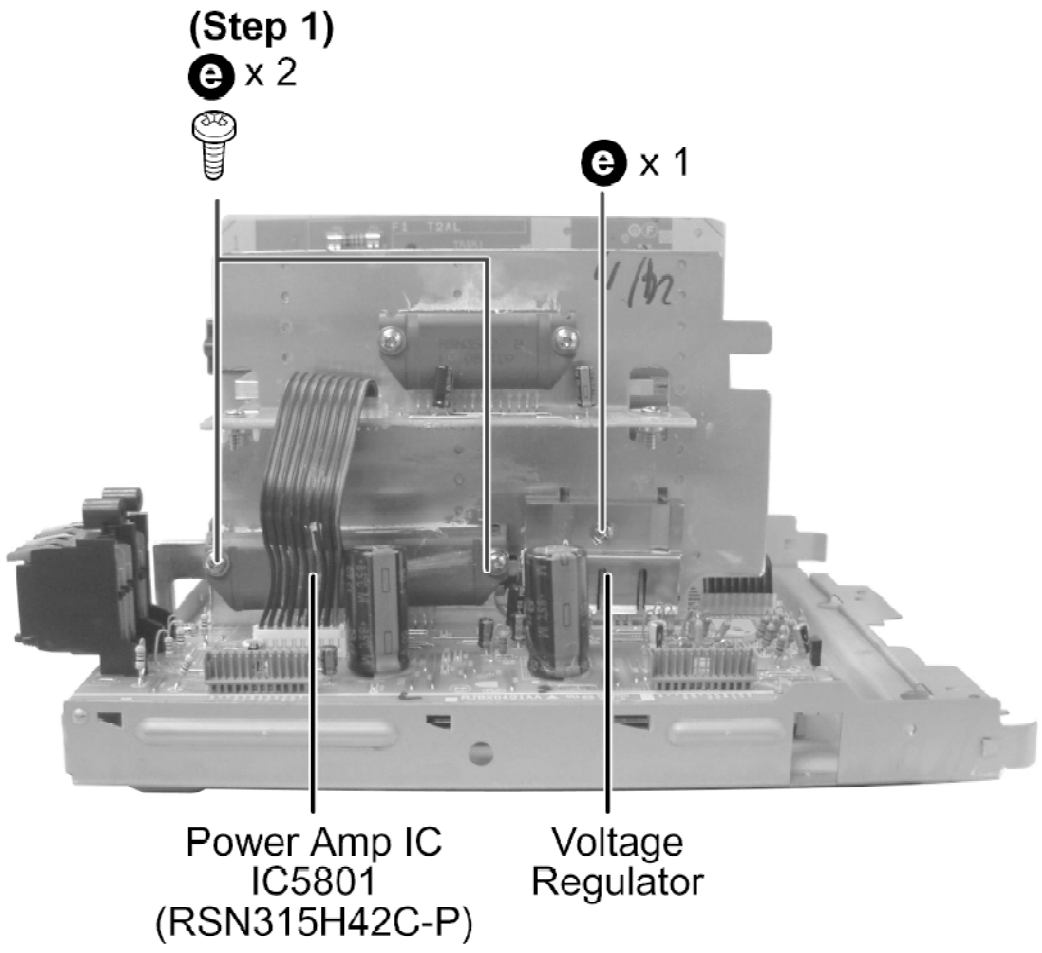
(Step 1)
e x 2
e x 1
Power Amp IC
IC5801
(RSN315H42C-P)
Voltage
Regulator

Step 1 Remove 2 screws fixed to the Power Amplifier IC and 1 screw to Voltage Regulator.

Step 2 Break the joint with a metal cutter as shown below.

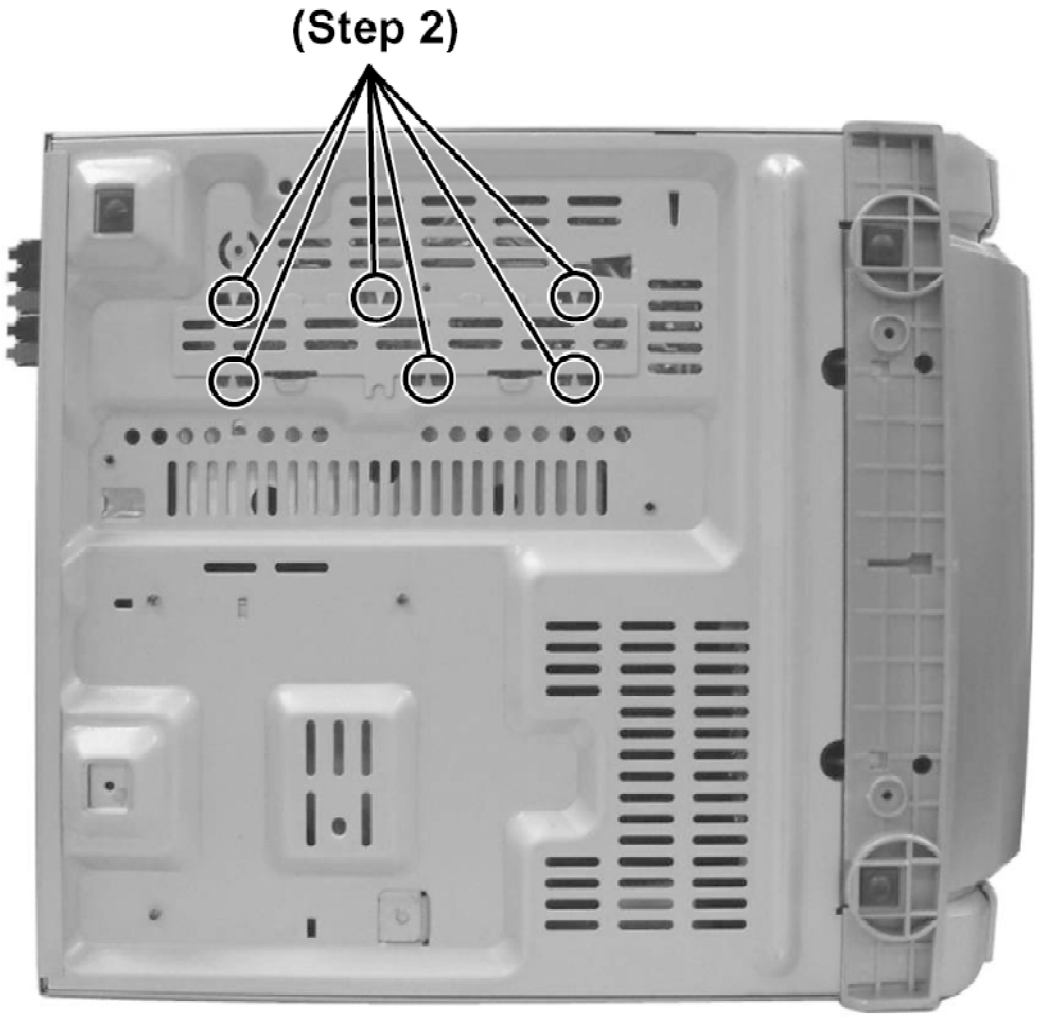

Step 3 Unsolder the terminals of Power Amp IC, transistor and replace the components.

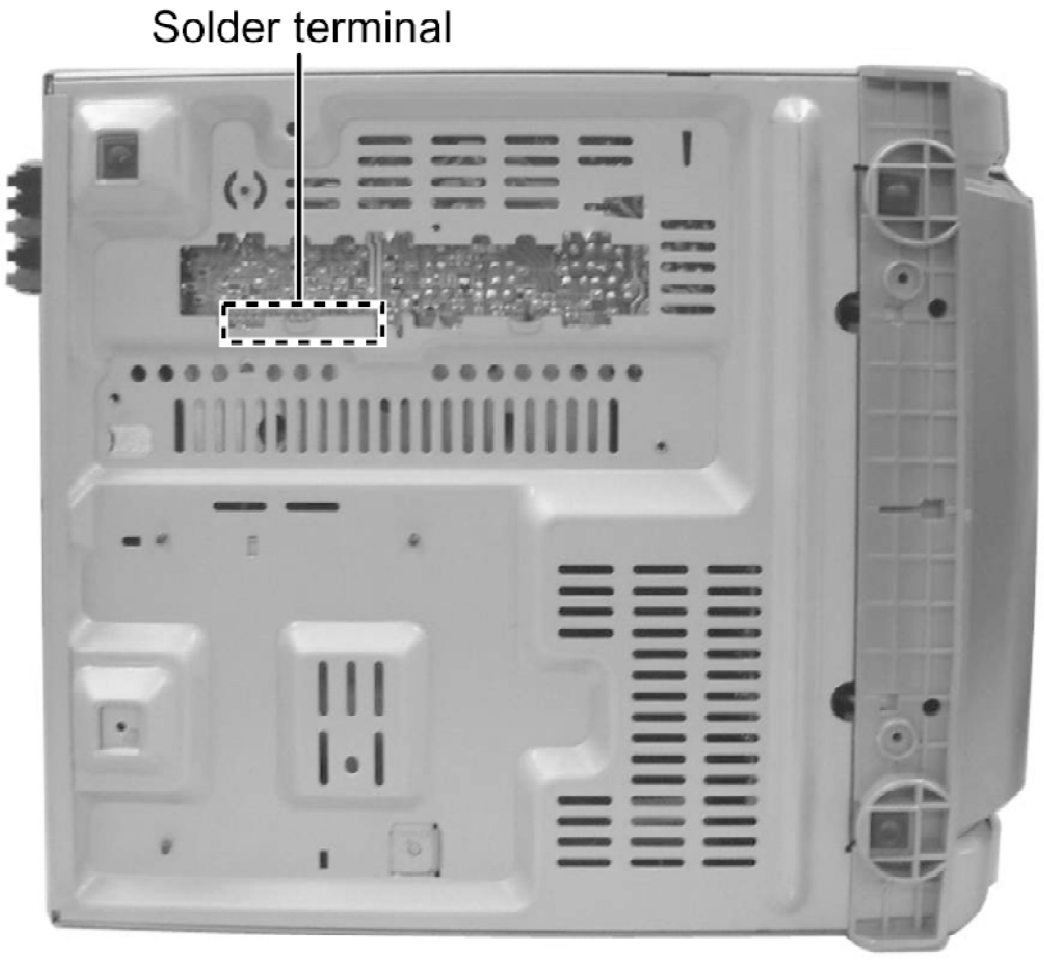
Solder terminal

Step 4 Fix back the cut portion with a screw as shown.

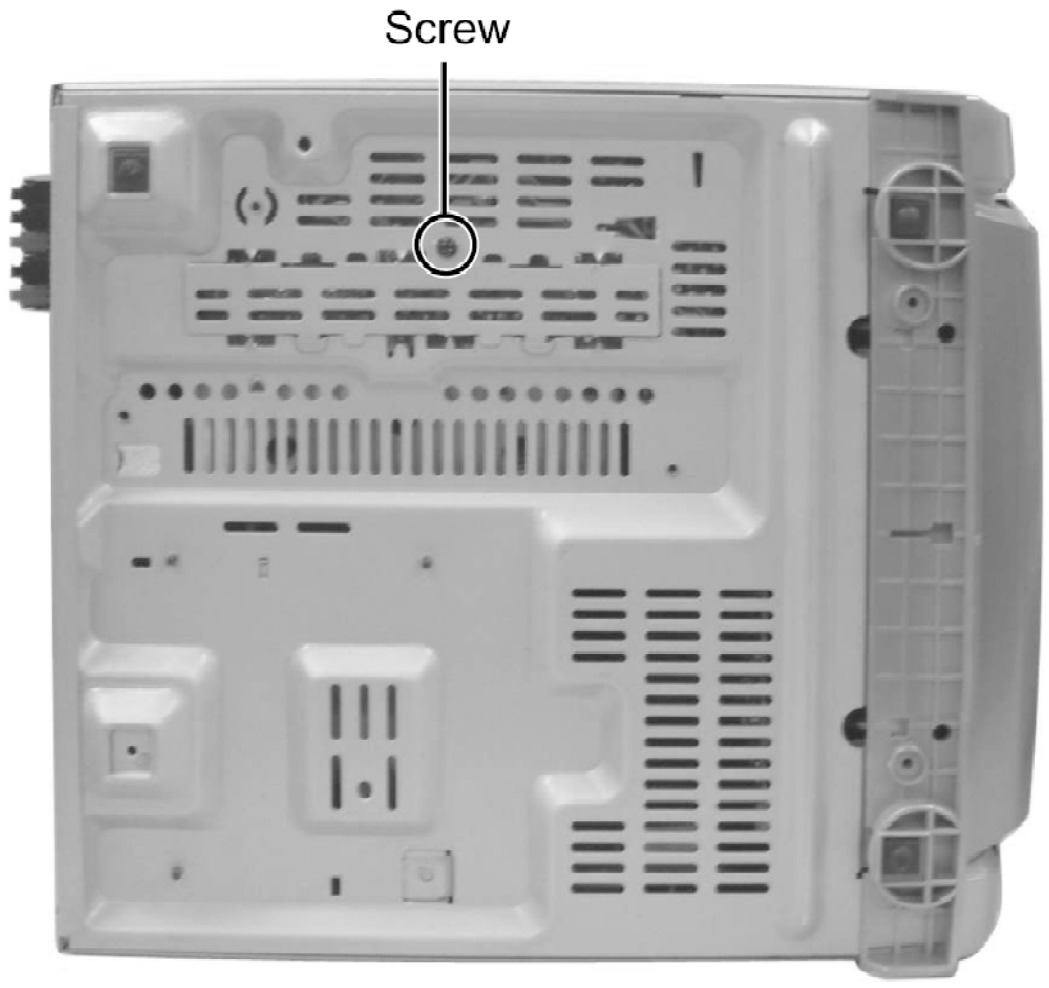

10.10. Disassembly of Transformer P.C.B.

- Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet
- Follow the (Step 1) - (Step 6) of Item 10.4 - Disassembly of CD Lid
- Follow the (Step 1) of Item 10.5 - Disassembly of Rear Panel
- Follow the (Step 1) - (Step 3) of Item 10.6 - Disassembly of CD Mechanism Unit

Step 1 Remove 3 screws, disconnect connector CN5950.

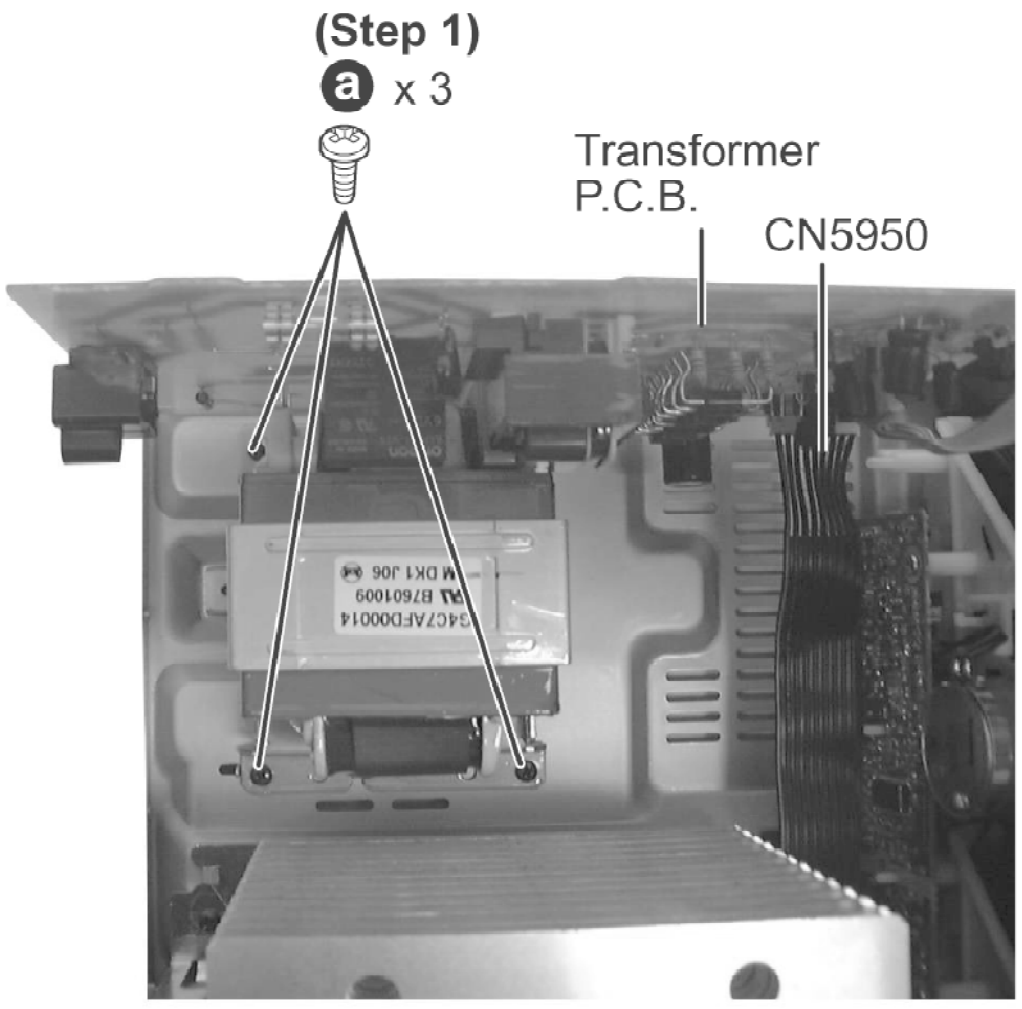

10.11. Disassembly of Front Panel Unit

- Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet
- Follow the (Step 1) - (Step 6) of Item 10.4 - Disassembly of CD Lid
- Follow the (Step 1) of Item 10.5 - Disassembly of Rear Panel
- Follow the (Step 1) - (Step 3) of Item 10.6 - Disassembly of CD Mechanism Unit

Step 1 Lay the unit as shown below.

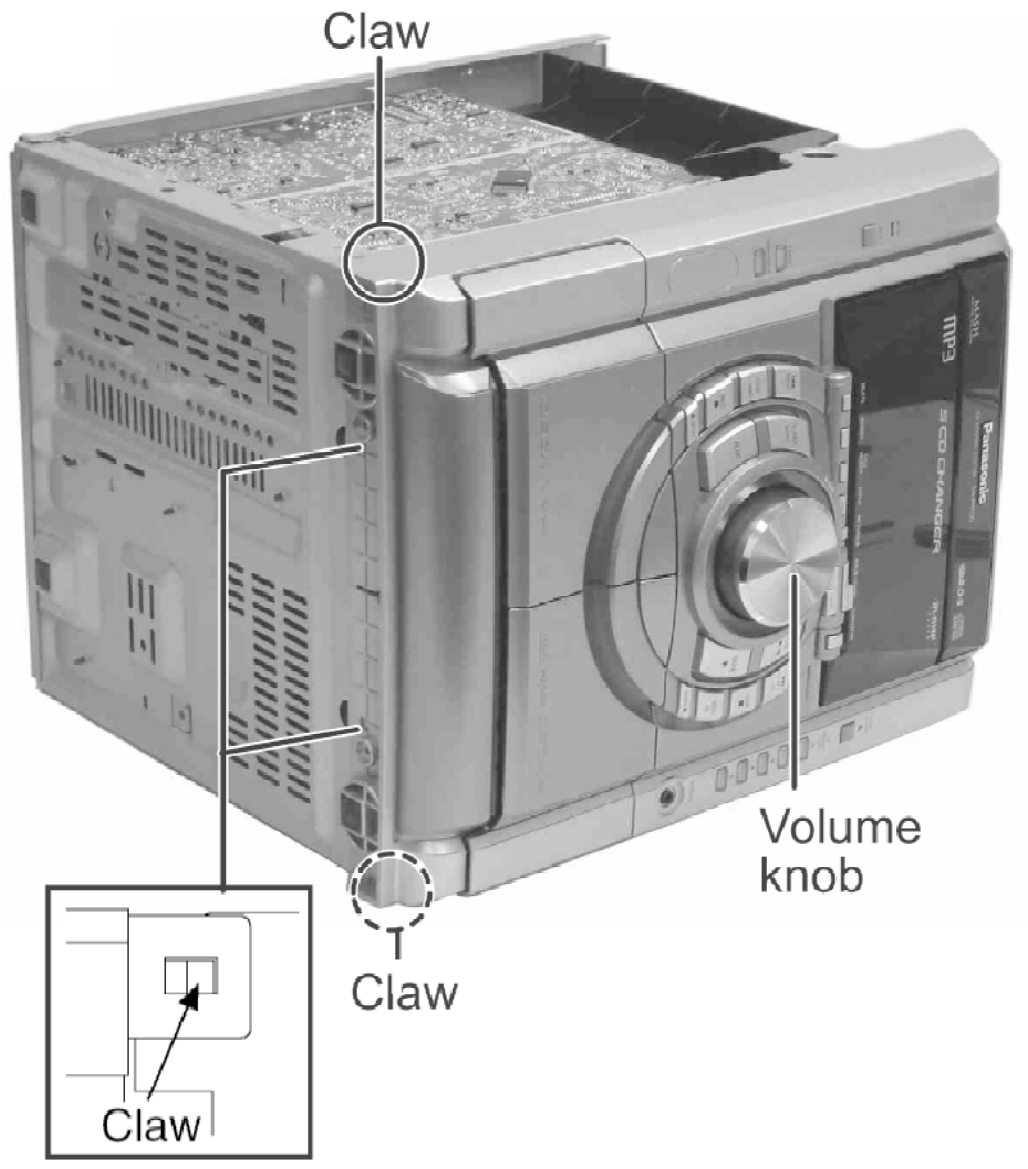
Claw
Volume
knob
Claw
Claw

Step 2 Release 2 claws at bottom and 2 claws each side, draw the front panel ass'y forward.

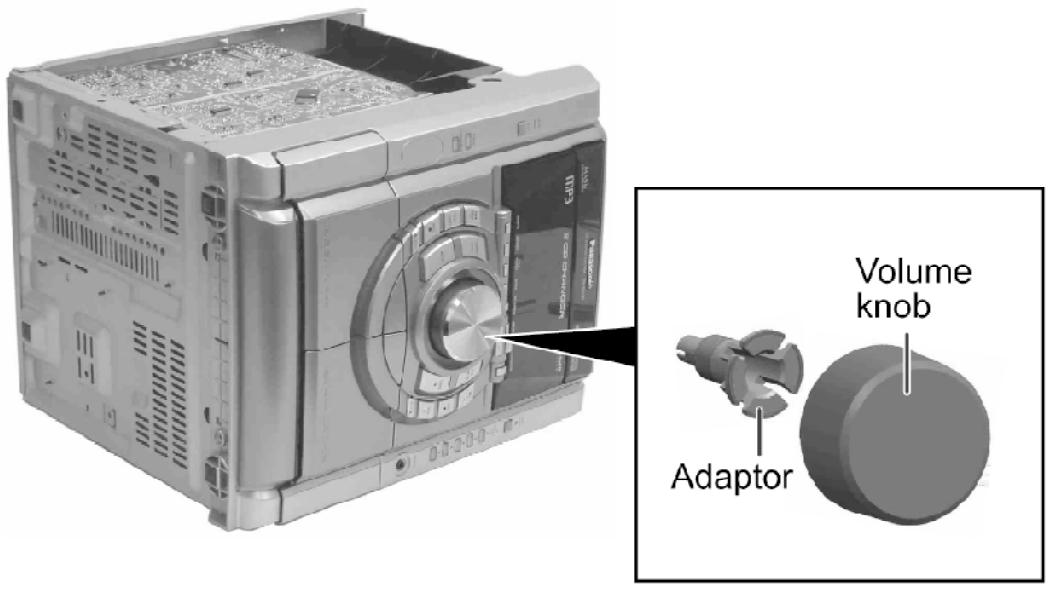
Volume
knob
Adaptor

Step 3 Remove volume knob and adaptor.

- Disassembly of Panel P.C.B.

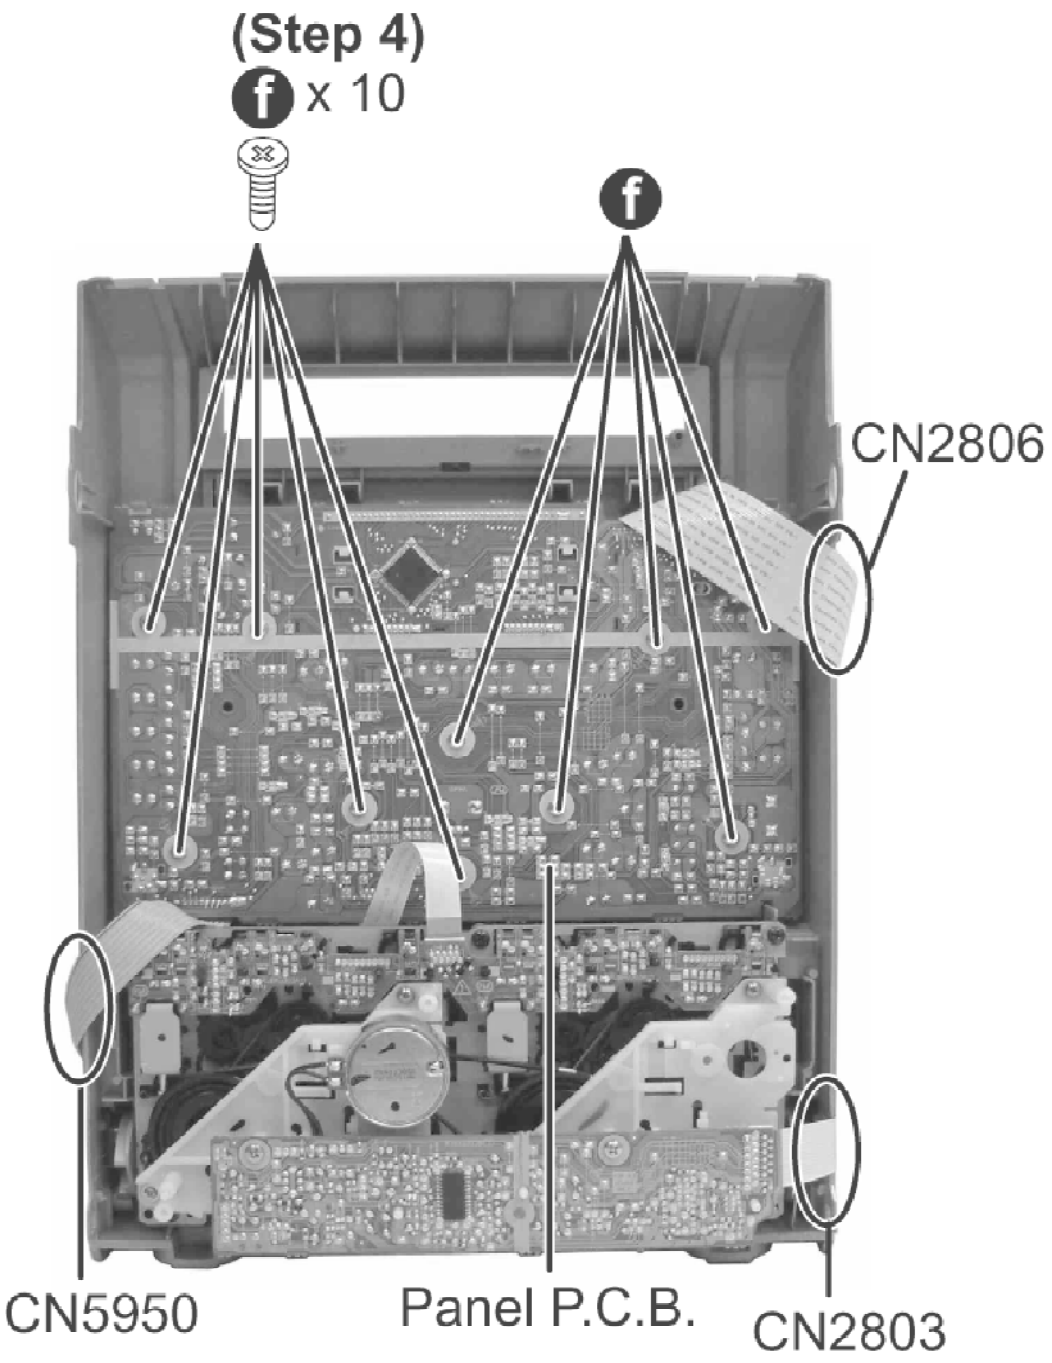

Step 4 Remove 10 screws.

Step 5 Disconnect connectors (CN2806, CN2803 and CN5950).

10.12. Disassembly of Deck Mechanism Unit

- **Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet**
- **Follow the (Step 1) - (Step 6) of Item 10.4 - Disassembly of CD Lid**
- **Follow the (Step 1) - (Step 3) of Item 10.6 - Disassembly of CD Mechanism Unit**
- **Follow the (Step 1) - (Step 3) of Item 10.11 - Disassembly of Front Panel Unit**

Step 1 Detach FFC wire (CN971).

Step 2 Disconnect FFC flat cable from the connector (CN1001).

Step 3 Remove the 5 screws.

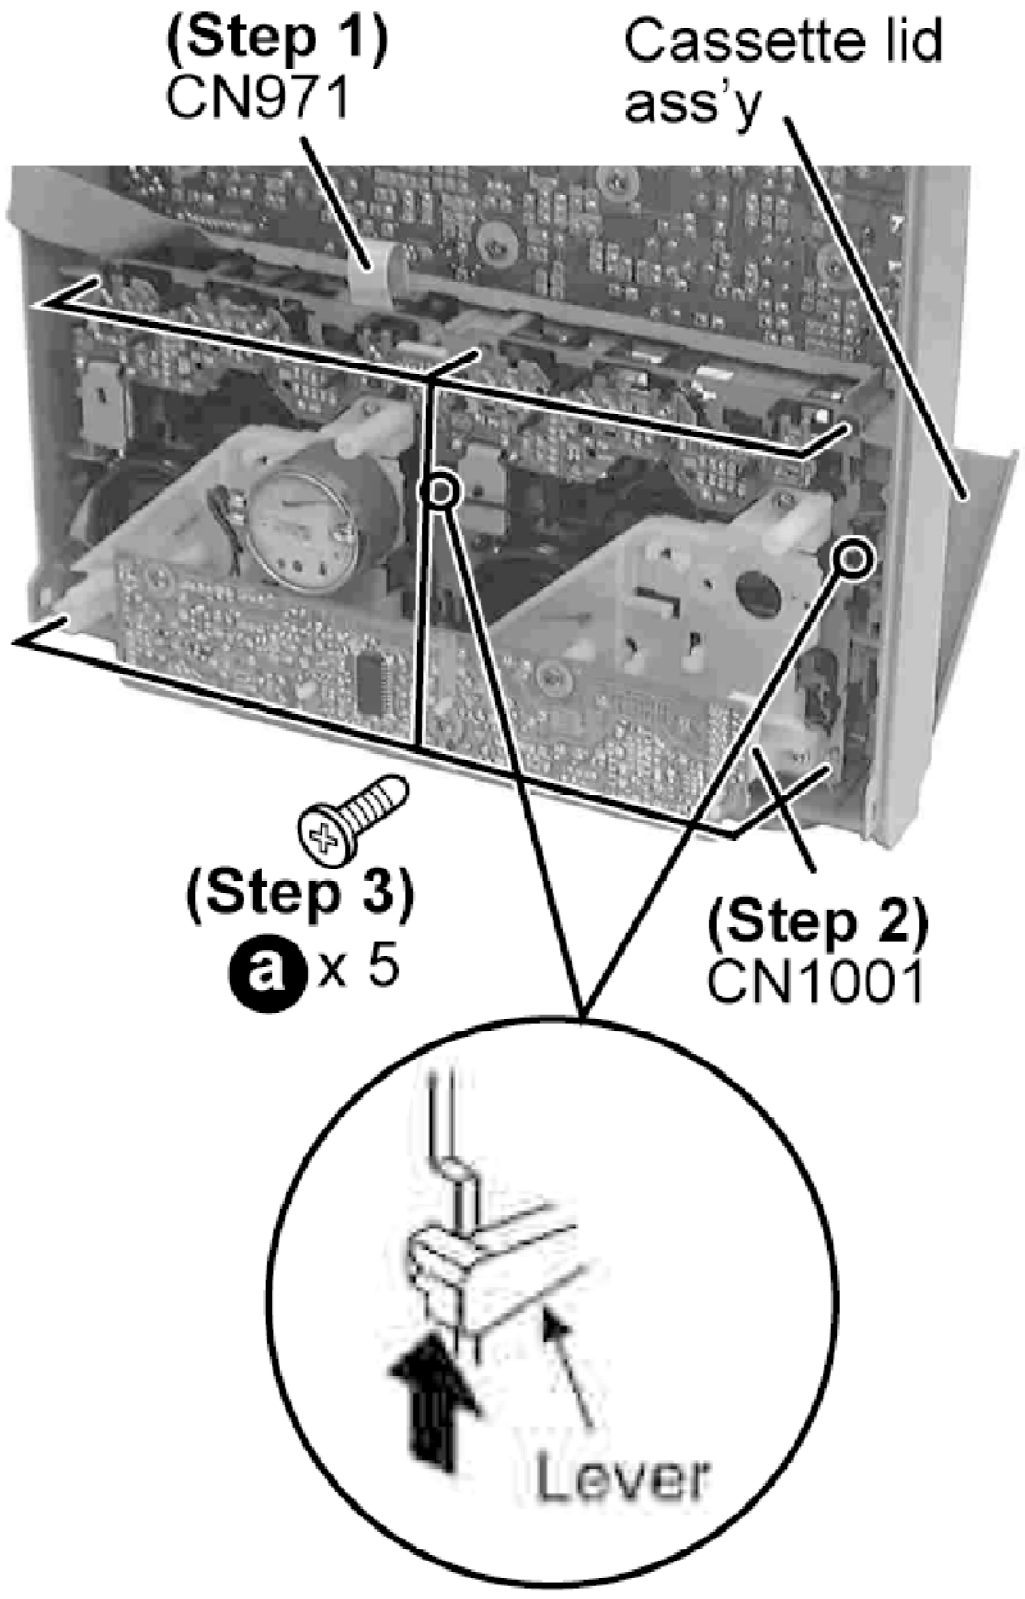
(Step 1)
CN971
Cassette lid ass'y
(Step 3)
a x 5
(Step 2)
CN1001
Lever

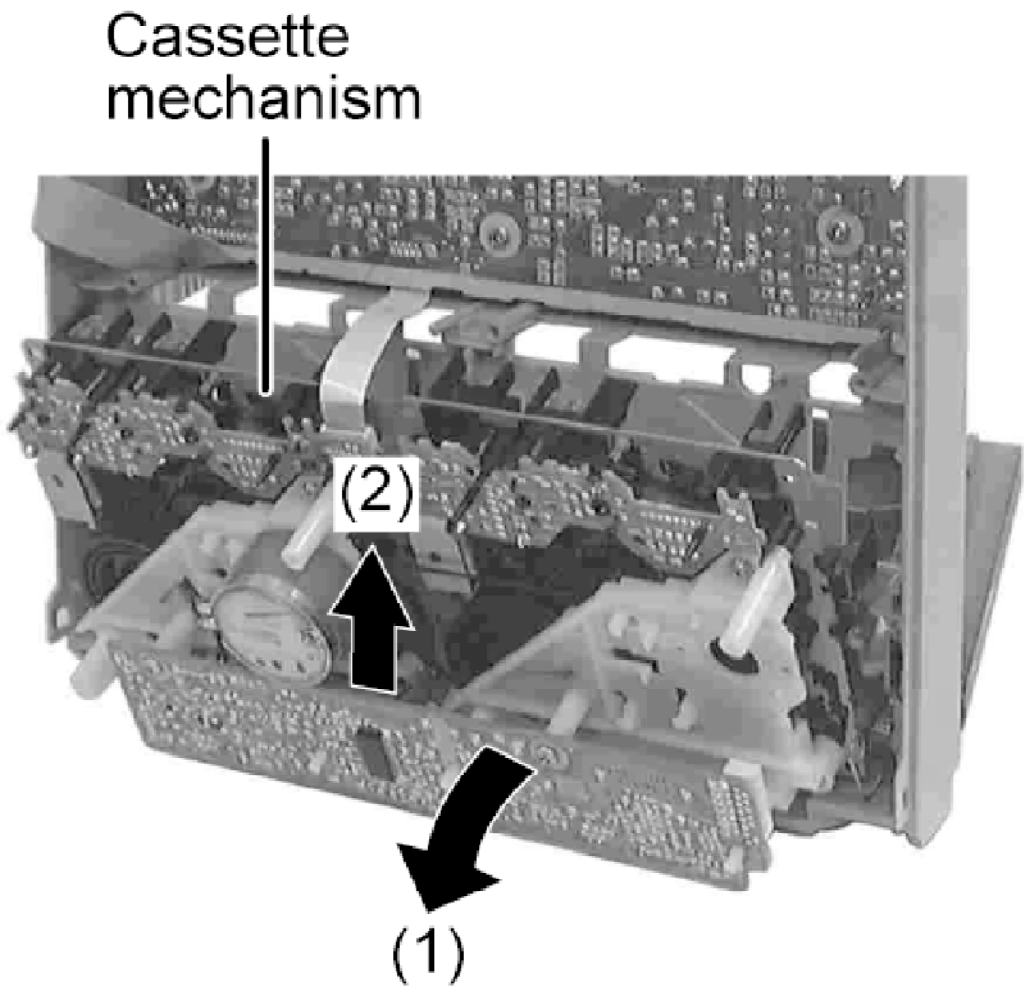
Cassette mechanism
(2)
(1)

Step 4 Push the lever upward, and then open the cassette lid ass'y (For DECK1 and DECK2).

Step 5 Tilt the cassette mechanism unit in the direction of arrow (1), and then remove it in the direction of arrow (2).

- For replacement of Deck Mechanism P.C.B.

Step 6 Remove 3 screws.

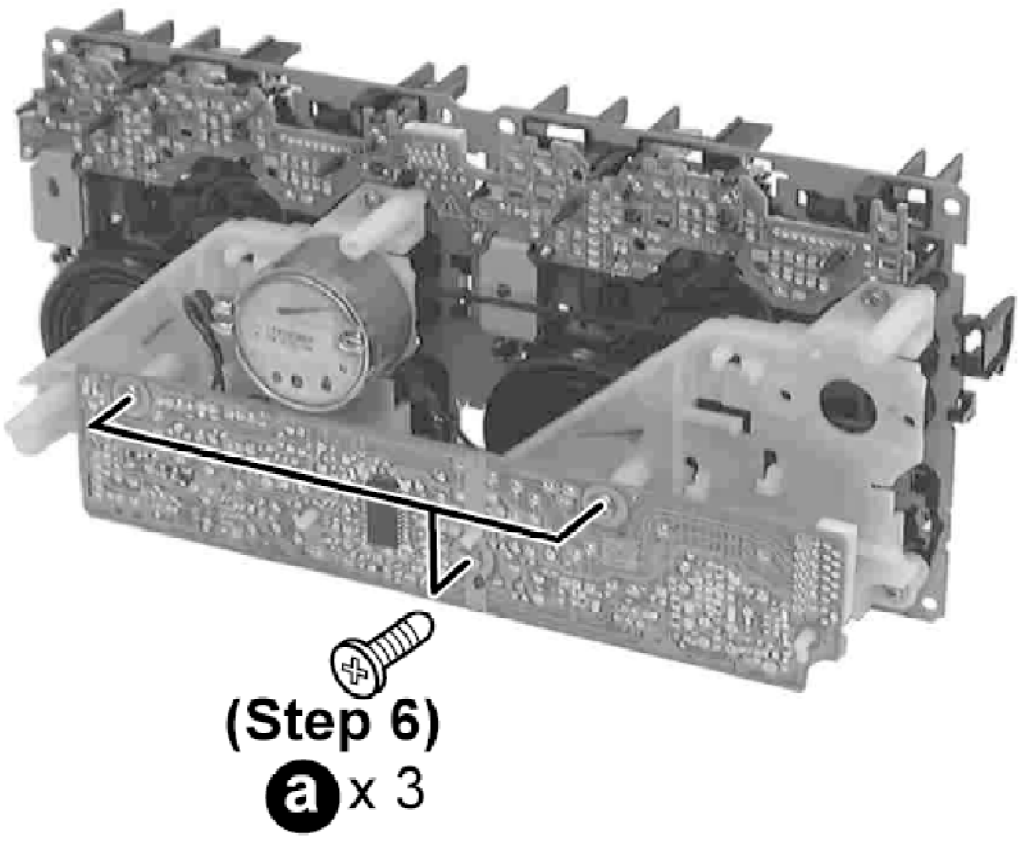

Step 7 Unsolder the motor terminals.

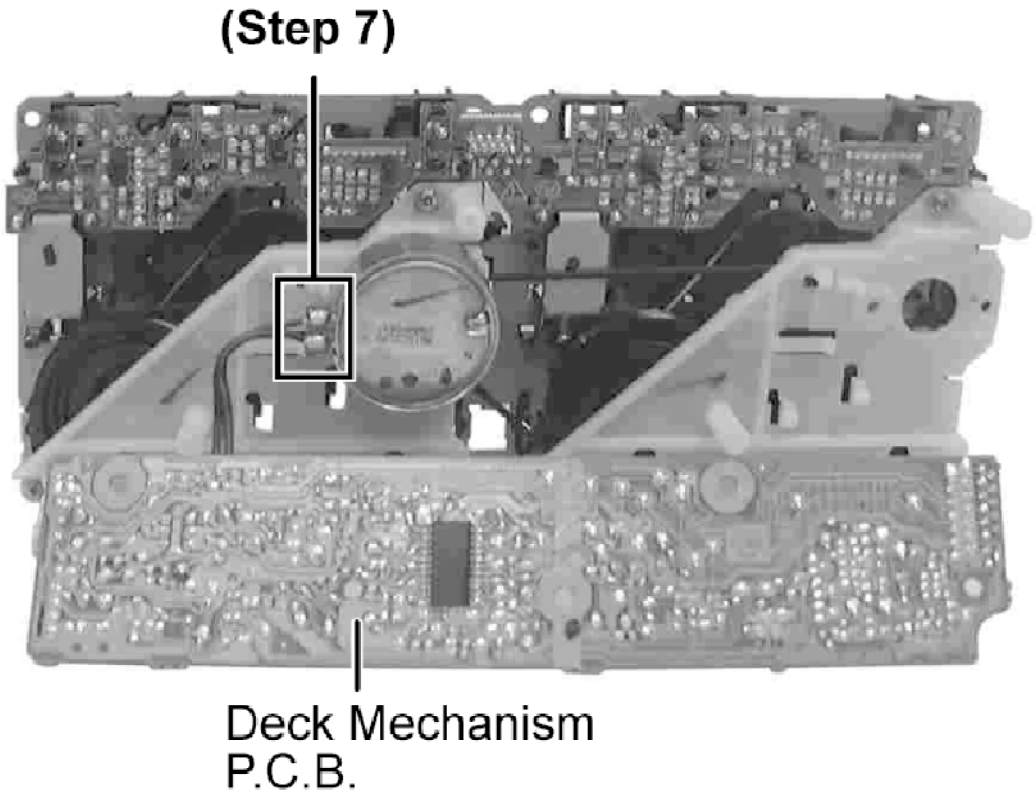

Step 8 Remove Deck Mechanism P.C.B.

10.13. CD Mechanism Main Component Replacement Procedures

- **Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet**
- **Follow the (Step 1) - (Step 6) of Item 10.4 - Disassembly of CD Lid**
- **Follow the (Step 1) - (Step 6) of Item 10.6 - Disassembly of CD Mechanism Unit**

10.13.1. Replacement of the Traverse Deck

Step 1 Remove the CD changer unit.

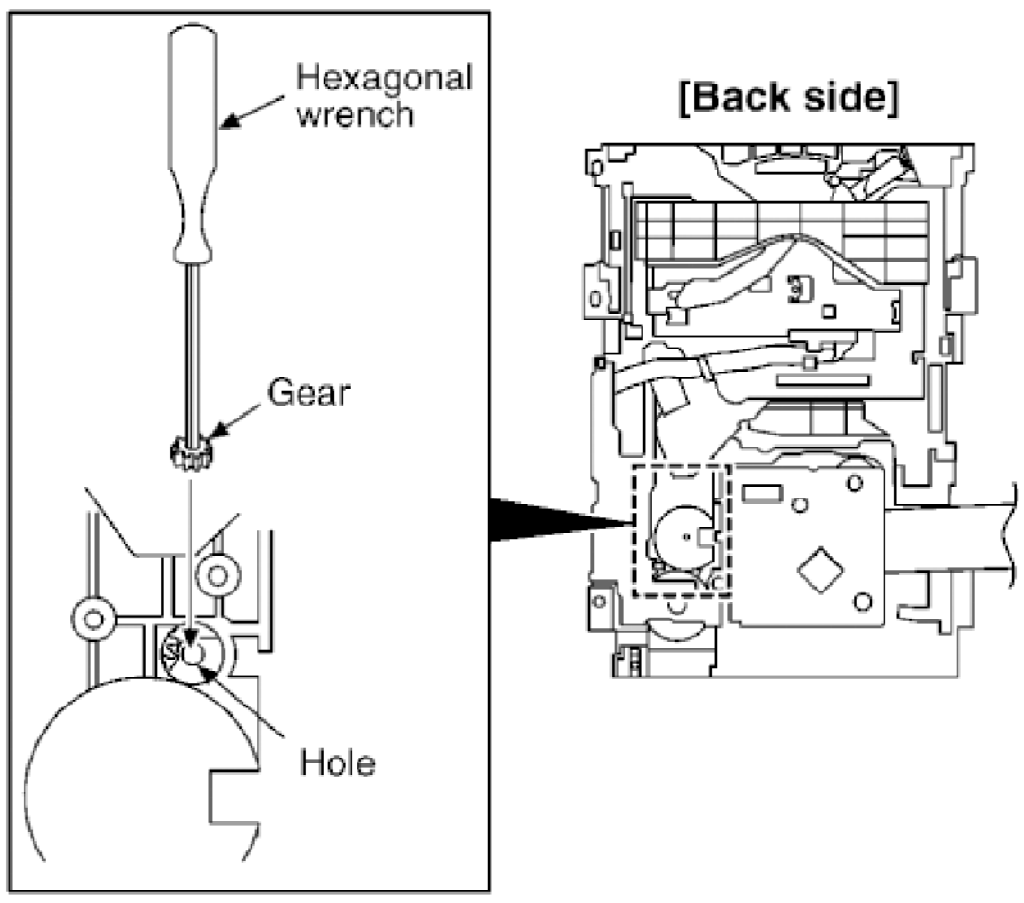
Hexagonal wrench
Gear
Hole
[Back side]

Step 2 Insert the gear with hexagonal wrench into the hole.

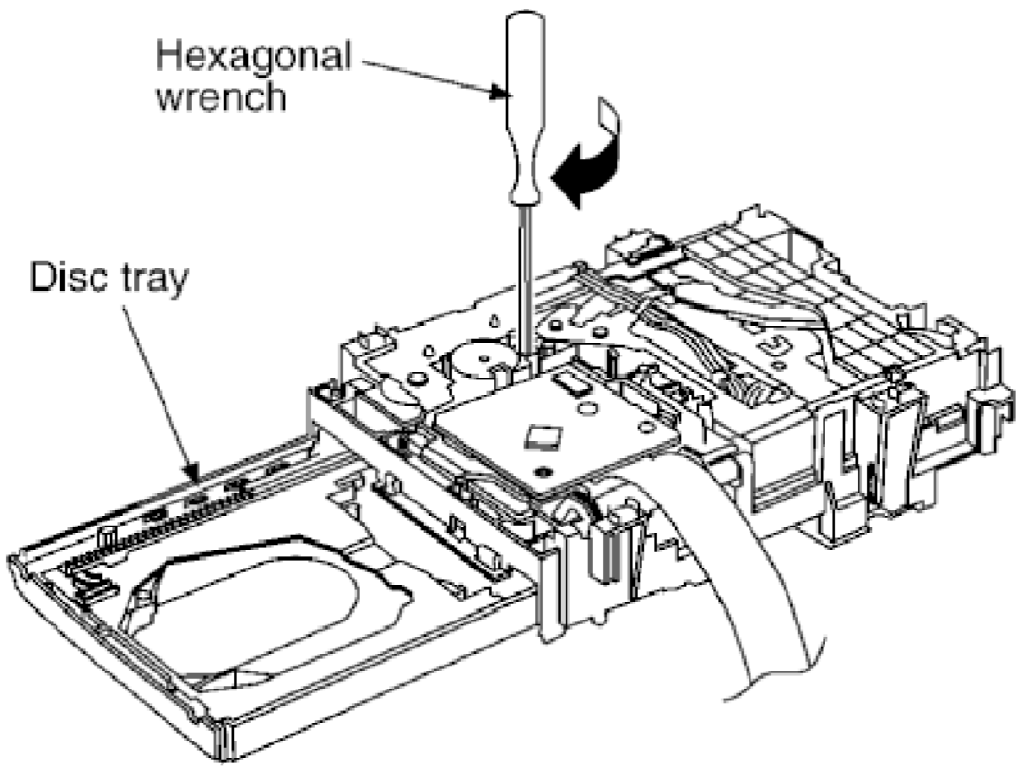
Hexagonal wrench
Disc tray

Step 3 Rotate the hexagonal wrench in the direction of arrow (clockwise), and then open the disc tray fully.

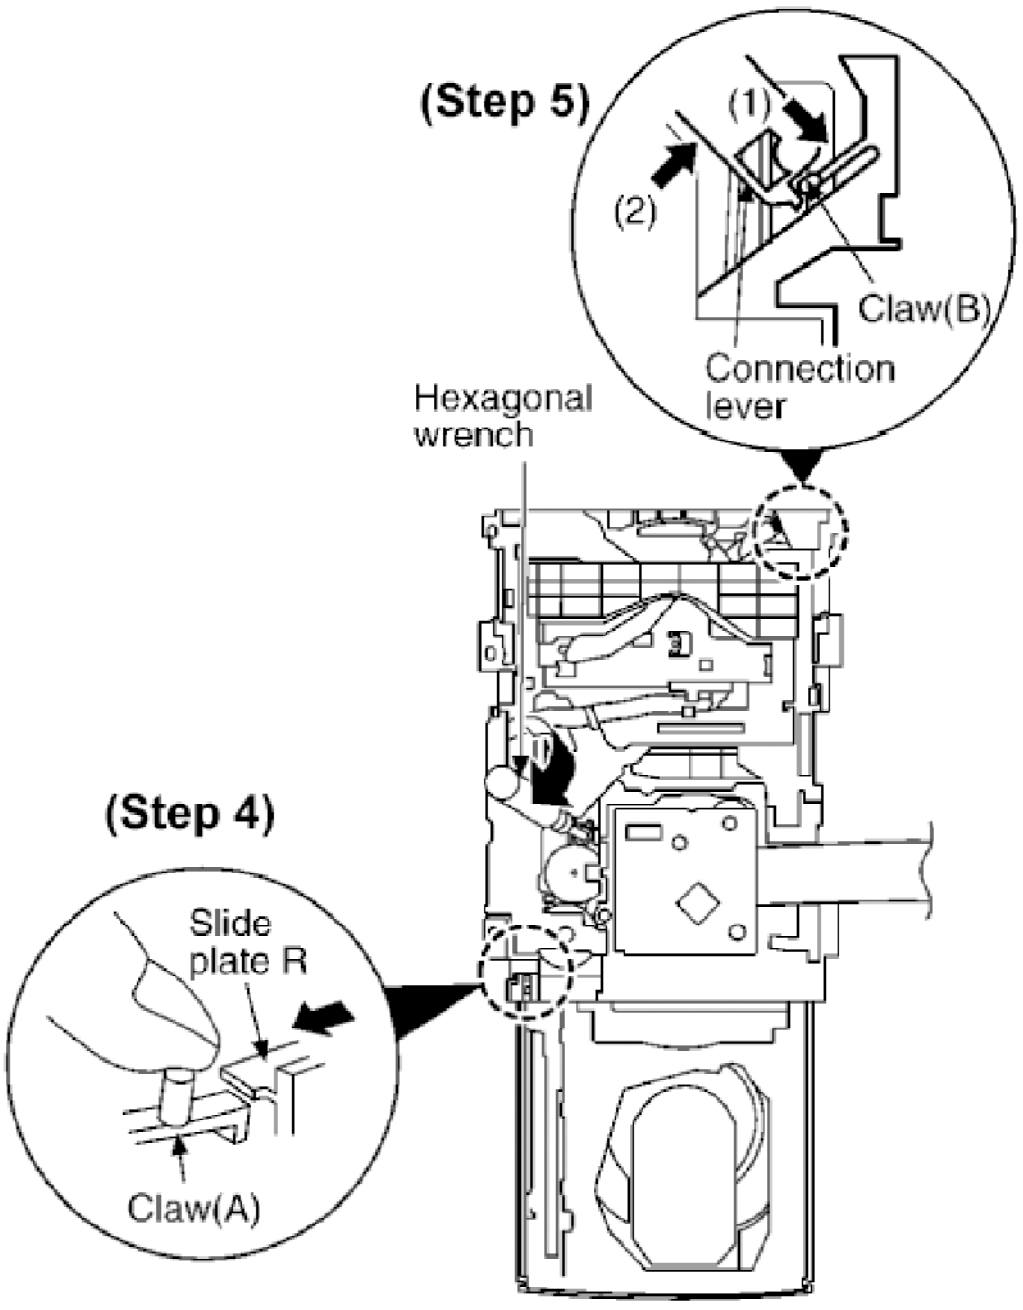
(Step 5)
(1)
(2)
Claw(B)
Connection lever
Hexagonal wrench
(Step 4)
Slide plate R
Claw(A)

Step 4 With pressing the claw (A), rotate the hexagonal wrench clockwise. (The slide plate R moves for a little amount.)

Step 5 Pressing the claw (B) in the direction of arrow (1), the connection lever moves in the direction of arrow (2).

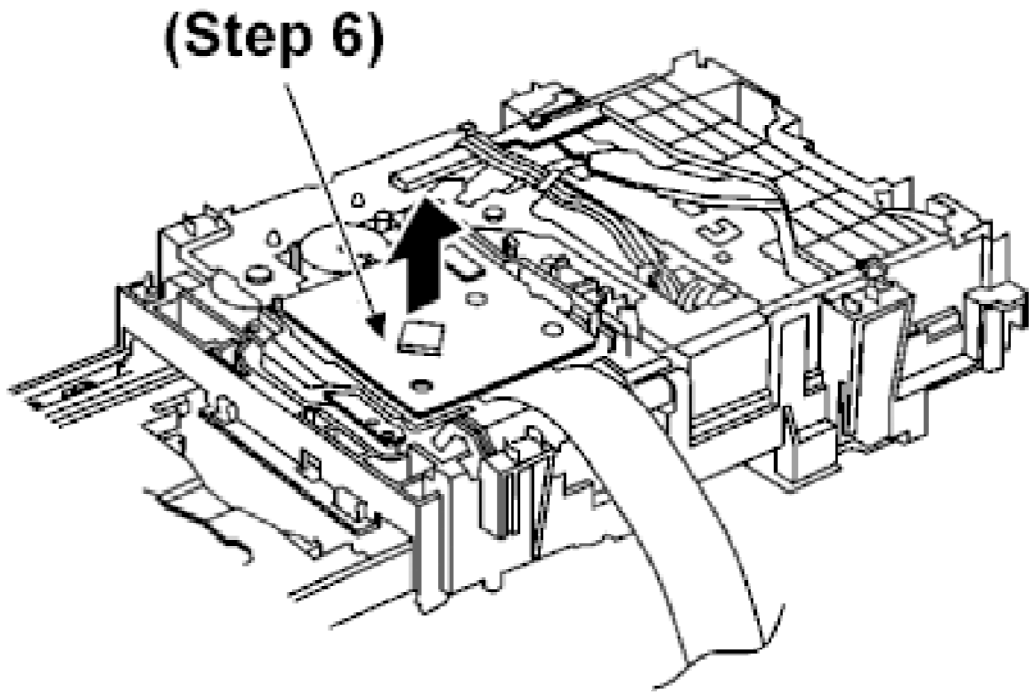

Step 6 Lift up the traverse deck ass'y.

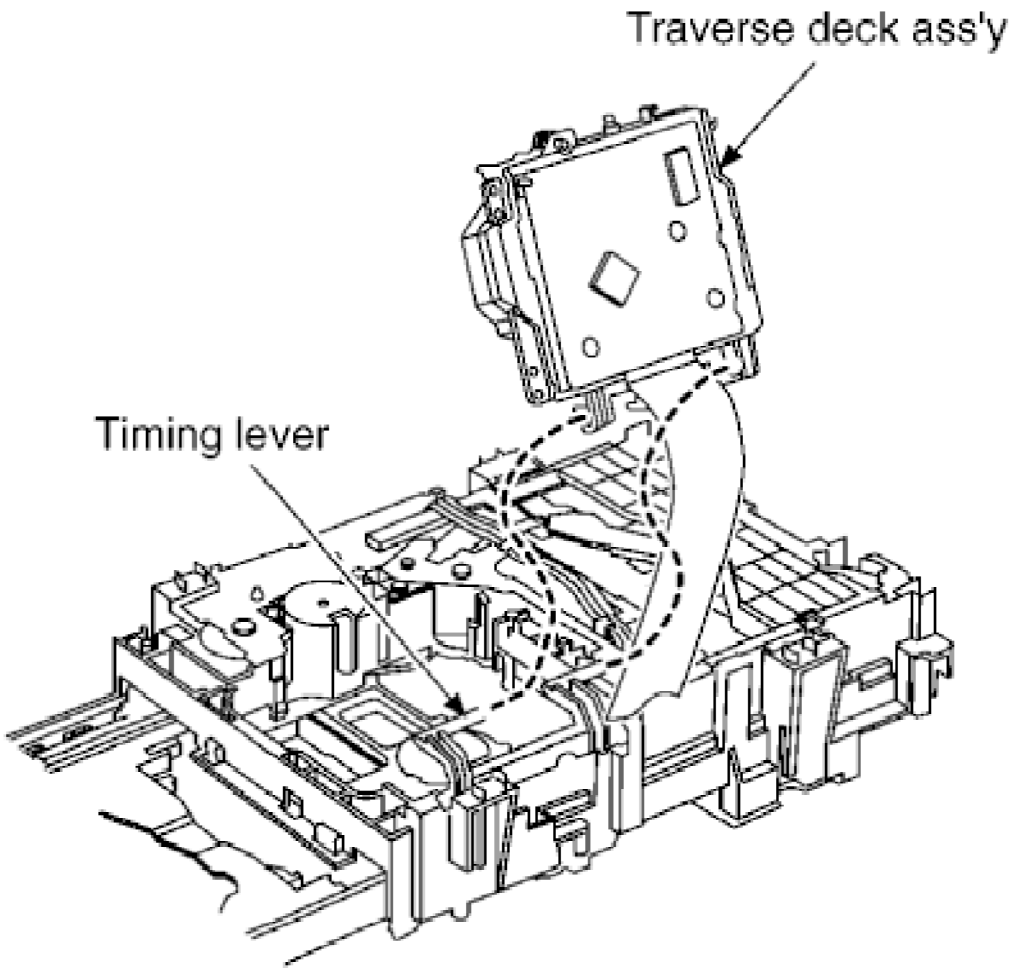
Traverse deck ass'y
Timing lever

Step 7 Remove the traverse deck ass'y from the timing lever.
Caution:
When removing or inserting the traverse deck avoid touching the OPU lens and pressing onto the turntable.

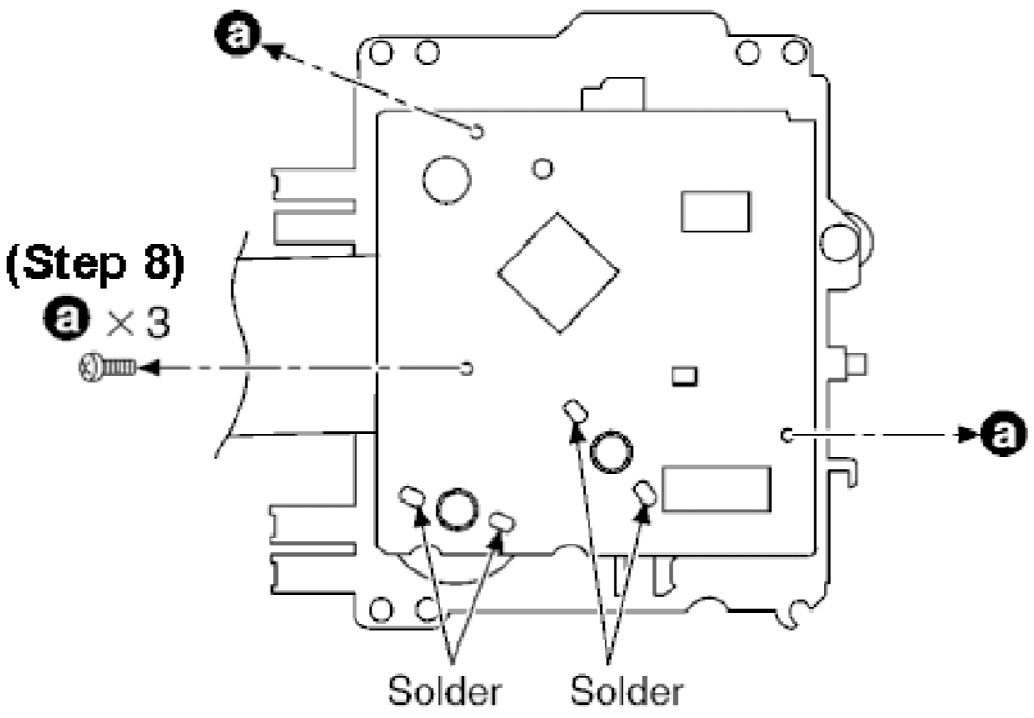
a
(Step 8)
a ×3
a
Solder
Solder

Step 8 Remove 3 screws.
Step 9 Unsolder the motor terminals (4 points).

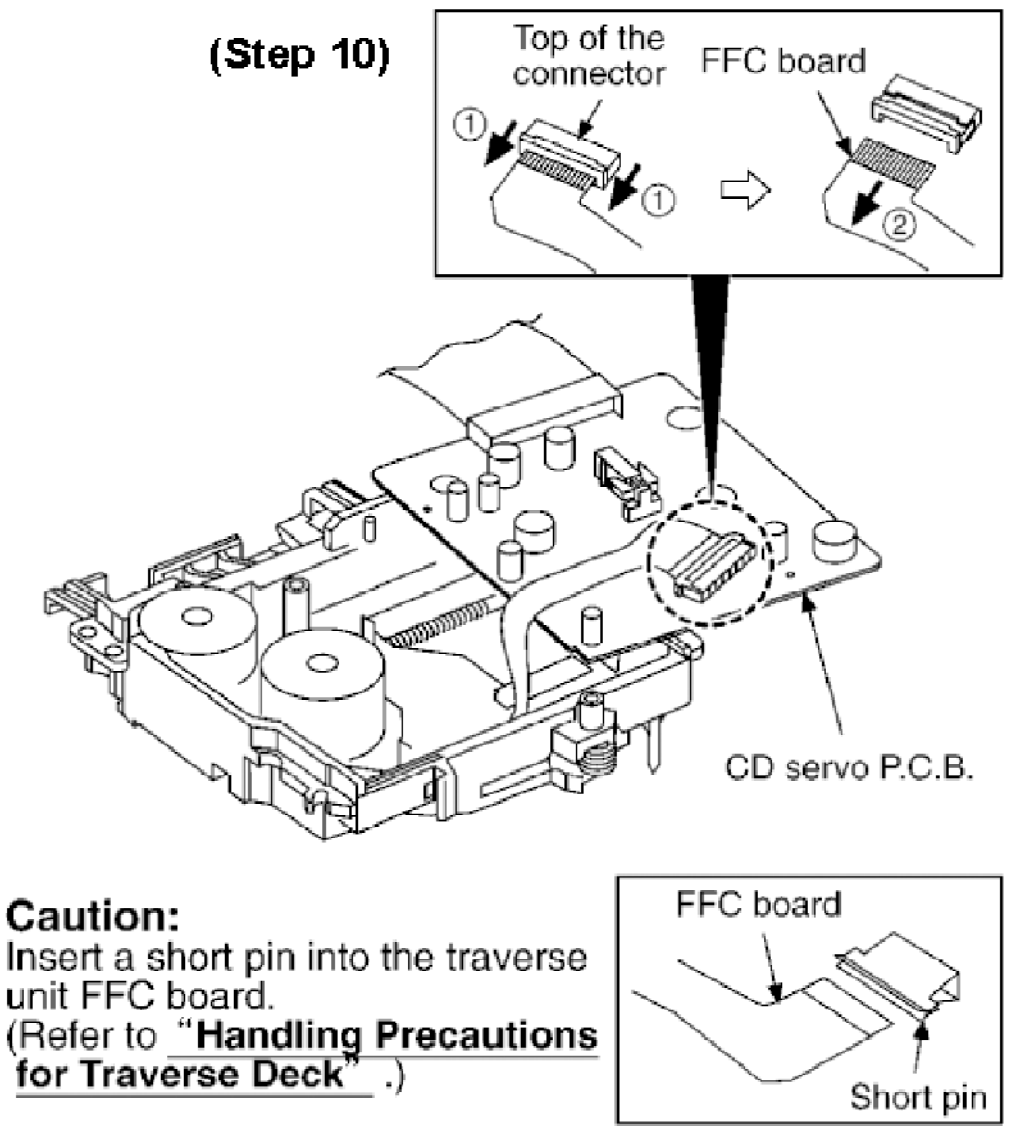
(Step 10)
Top of the connector
FFC board
①
①
②
CD servo P.C.B.
FFC board
Short pin

Caution:
Insert a short pin into the traverse unit FFC board.
(Refer to "**Handling Precautions for Traverse Deck**".)

Step 10 Remove the FFC board from the connector, and then remove the CD Servo P.C.B.

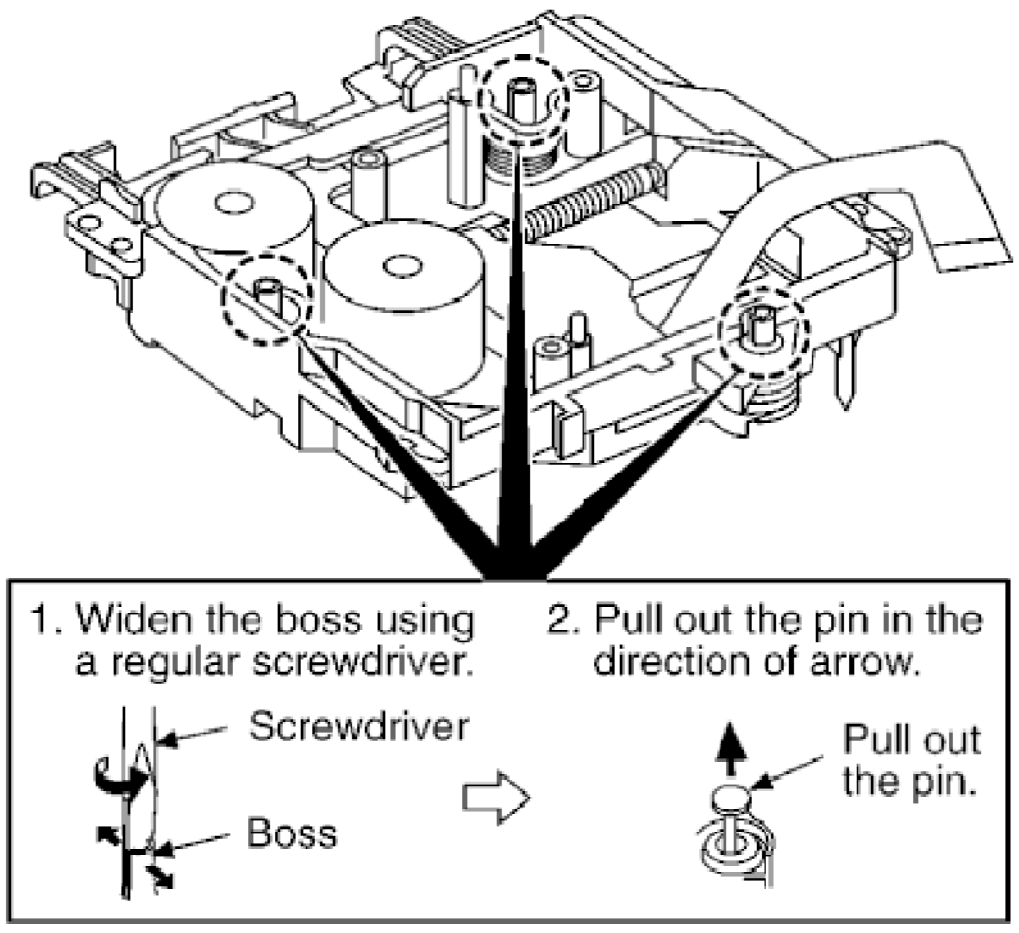
1. Widen the boss using a regular screwdriver.
2. Pull out the pin in the direction of arrow.

Screwdriver
Boss
Pull out the pin.

Step 11 Remove the pin.

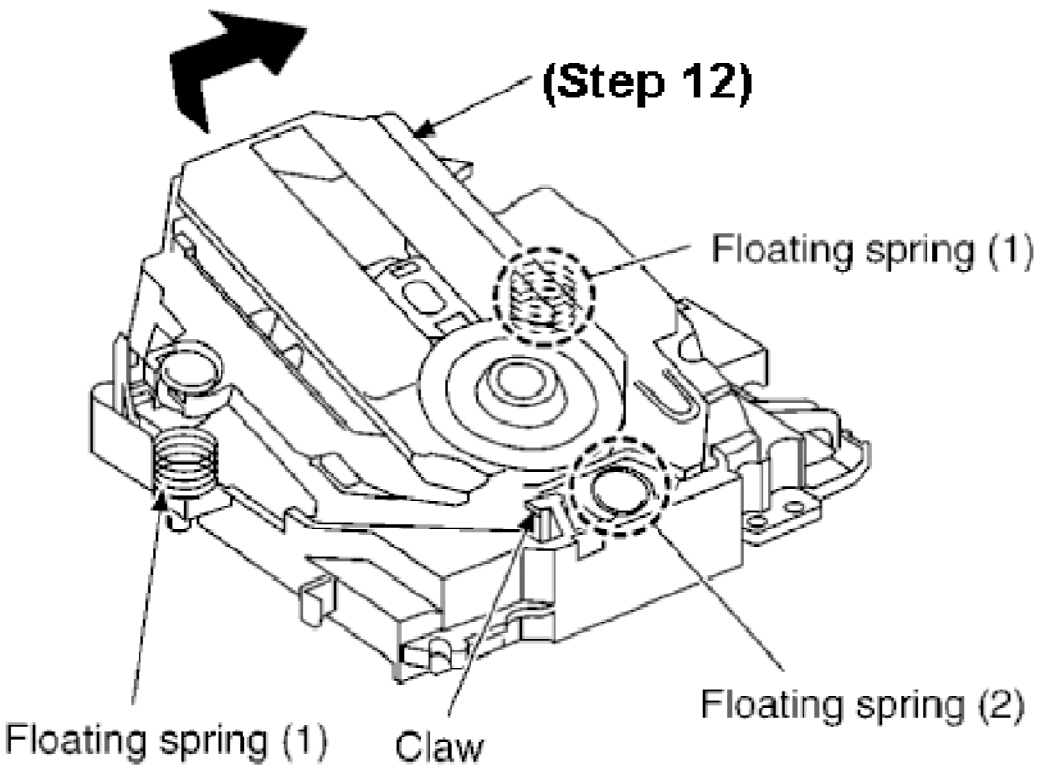
(Step 12)
Floating spring (1)
Floating spring (1)
Claw
Floating spring (2)

Step 12 Release the claw, and then remove the traverse deck ass'y.

Note:

Be careful not to lose the 3 floating spring because those will also be removed on removal of the traverse deck ass'y.

- Installation of the CD Servo P.C.B. after replacement

Step 1 Connect the FFC board.
Step 2 Install the CD servo P.C.B. in the traverse deck ass'y.
Step 3 Remove 3 screws.
Step 4 Solder.

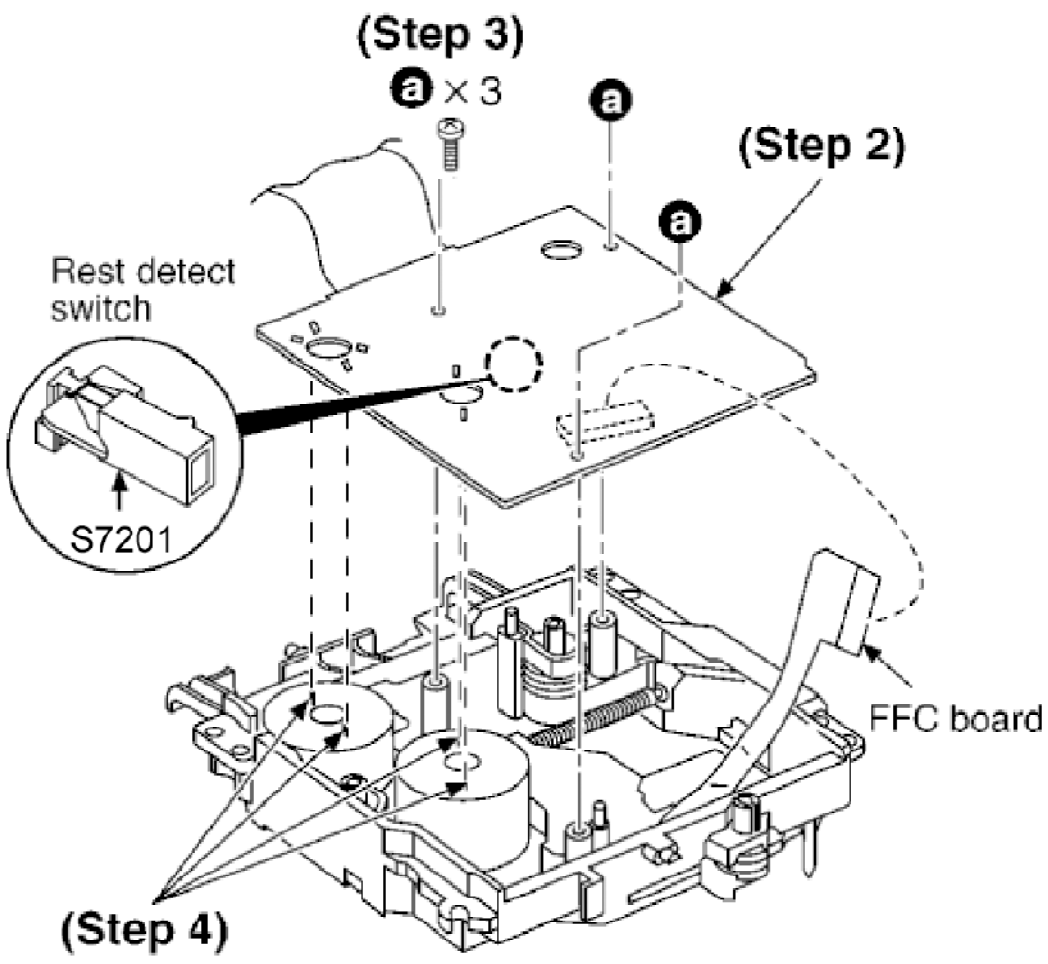
(Step 3)
ⓐ × 3
ⓐ
(Step 2)
ⓐ
Rest detect switch
S7201
FFC board
(Step 4)

- Note for installation of the CD servo P.C.B.

Before installing the CD servo P.C.B., move the optical pickup toward the outer edge from the mark "◀".
[Otherwise, the rest detect switch (S7201) mounted on the CD servo P.C.B. may be damaged.]

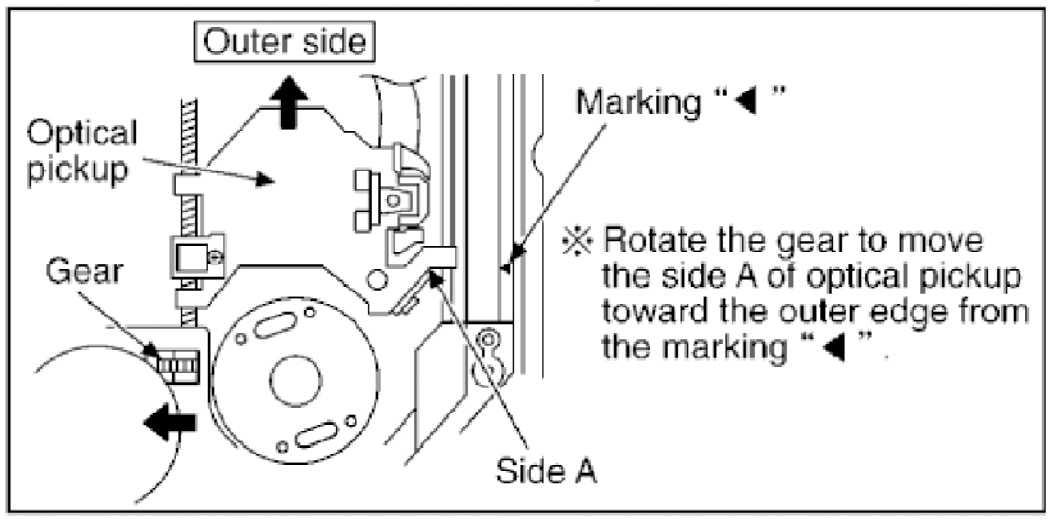
Outer side
Optical pickup
Gear
Marking "◀"
Side A

※ Rotate the gear to move the side A of optical pickup toward the outer edge from the marking "◀".

- Installation for traverse deck ass'y

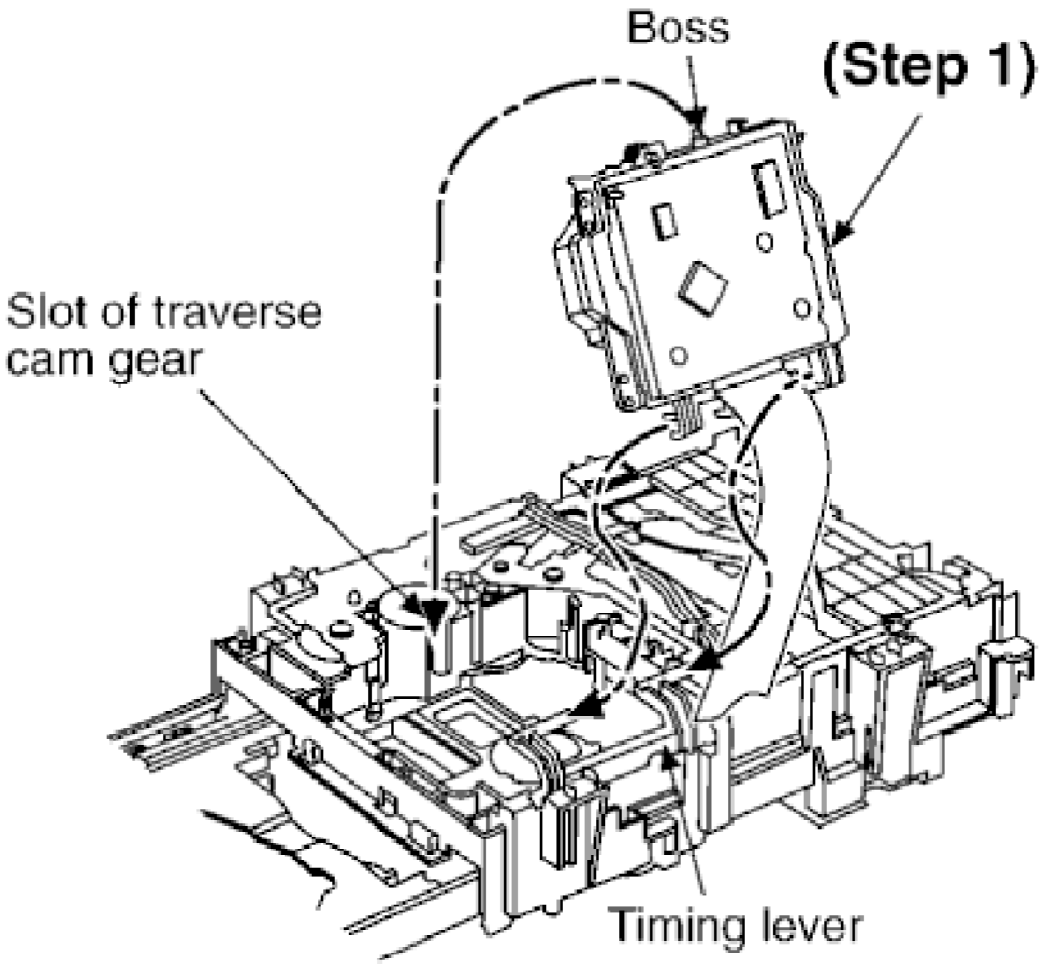
Boss
(Step 1)
Slot of traverse cam gear
Timing lever

Step 1 Install the traverse deck ass'y to the timing lever.
Step 2 Align the boss of traverse deck ass'y with the slot of traverse cam gear.

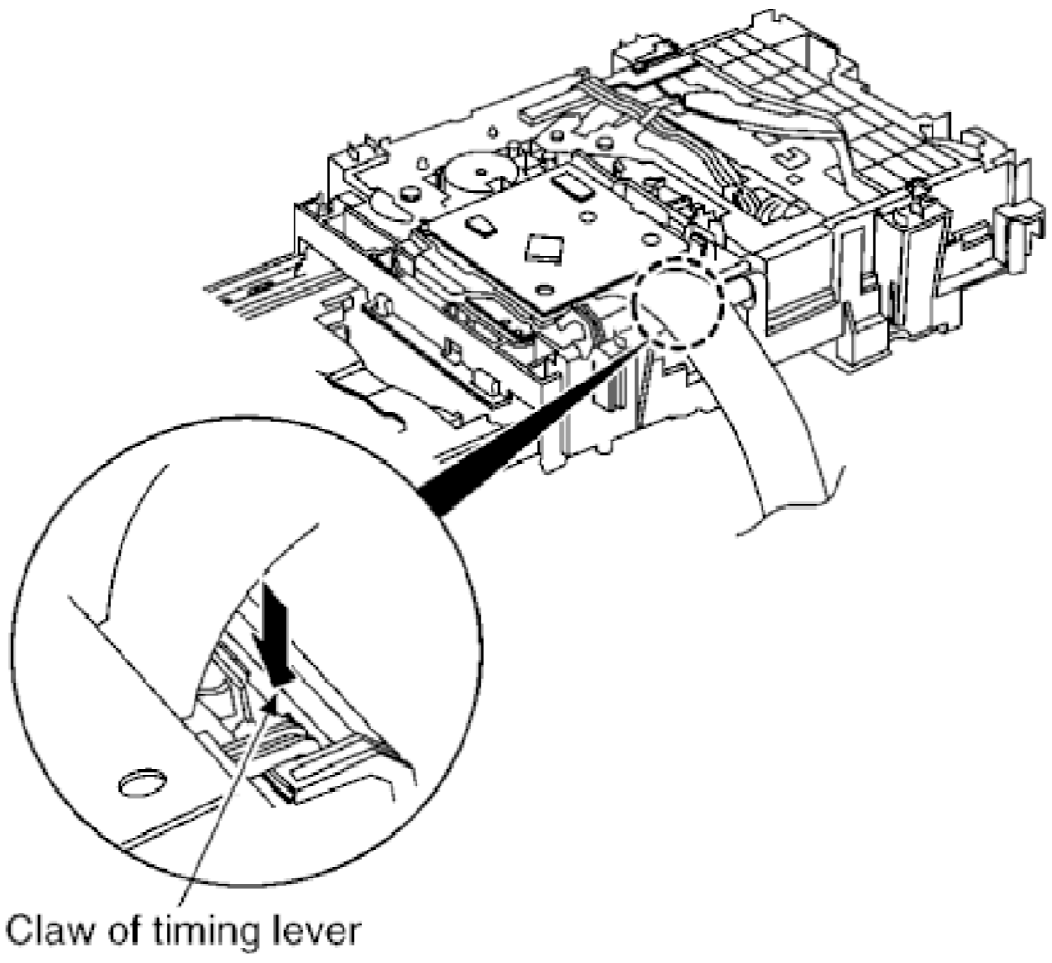
Claw of timing lever

Step 3 Force the claw of timing lever.

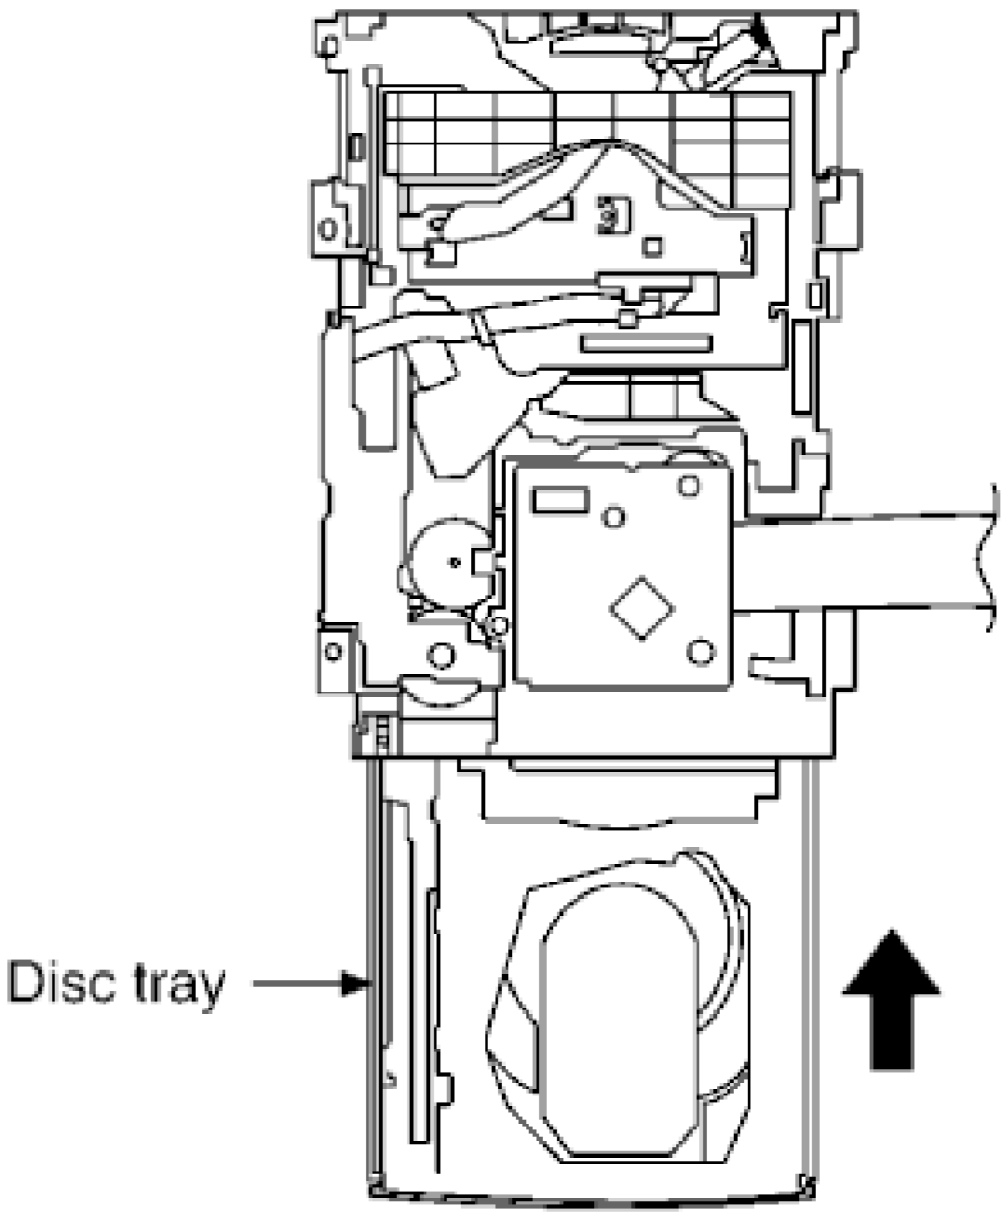

Step 4 Force the disc tray fully.

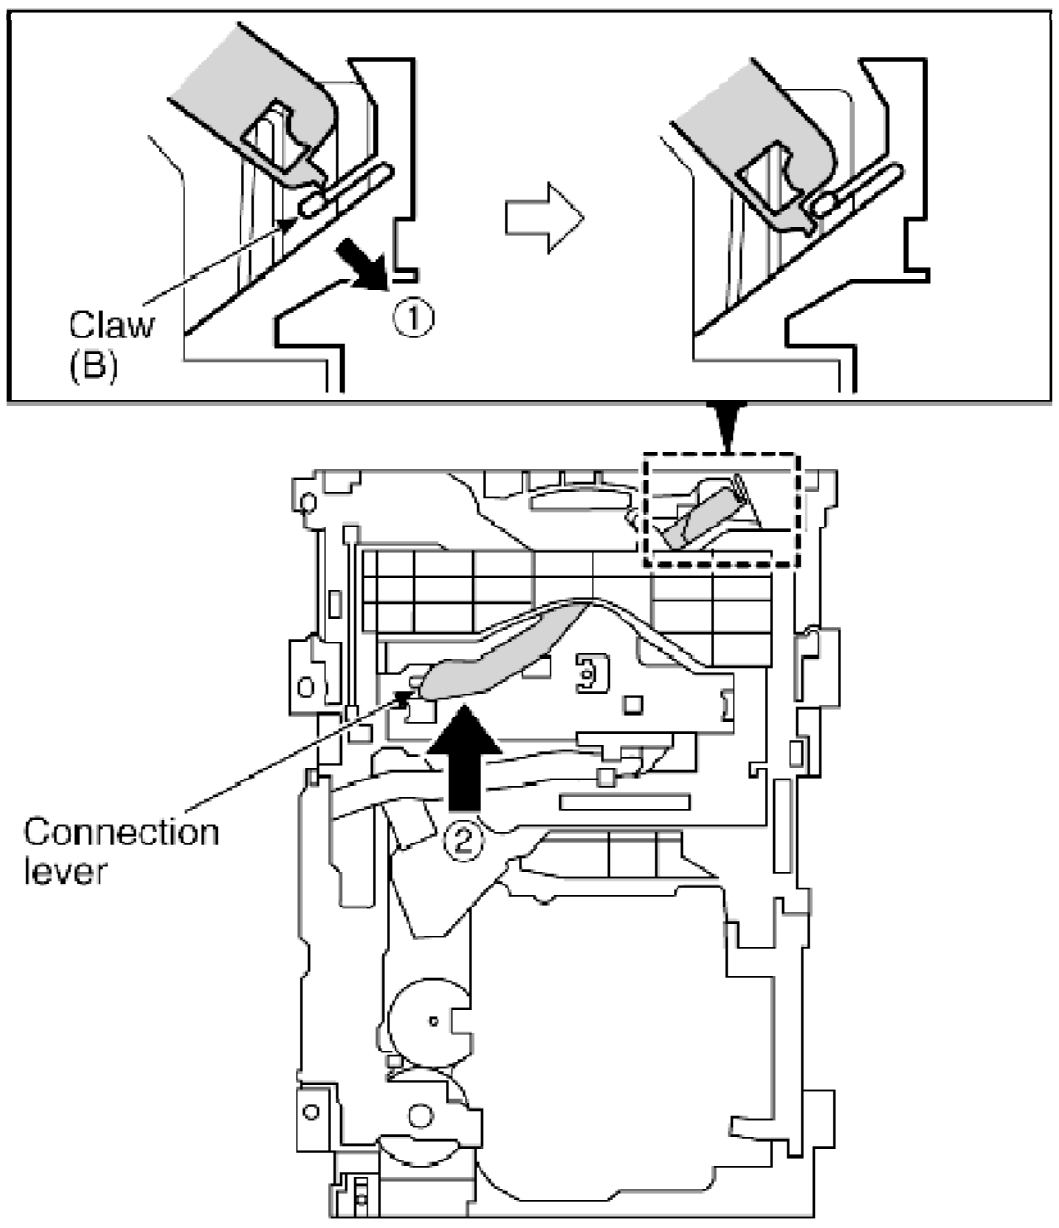
Claw
(B)
①
Connection
lever
②

Step 5 With pressing the claw (B) in the direction of arrow (1), force the connection lever in the direction of arrow (2).

10.13.2. Replacement for the Disc Tray

Step 1 Remove 4 screws.

Step 2 Remove the upper plate.

Step 3 Remove 3 screws.

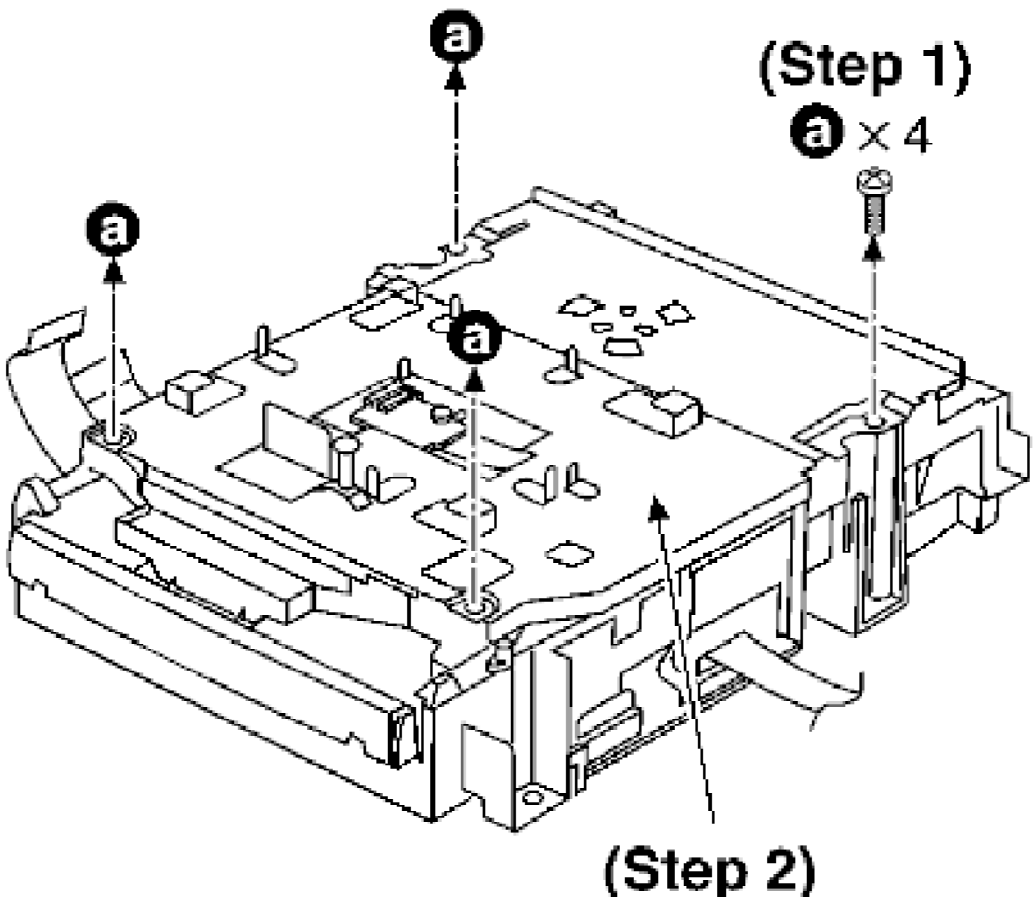
a
(Step 1)
a × 4
a
a
(Step 2)

Step 4 With lifting the claw in the direction of (1), draw the CD Detect P.C.B. in the direction of arrow (2).

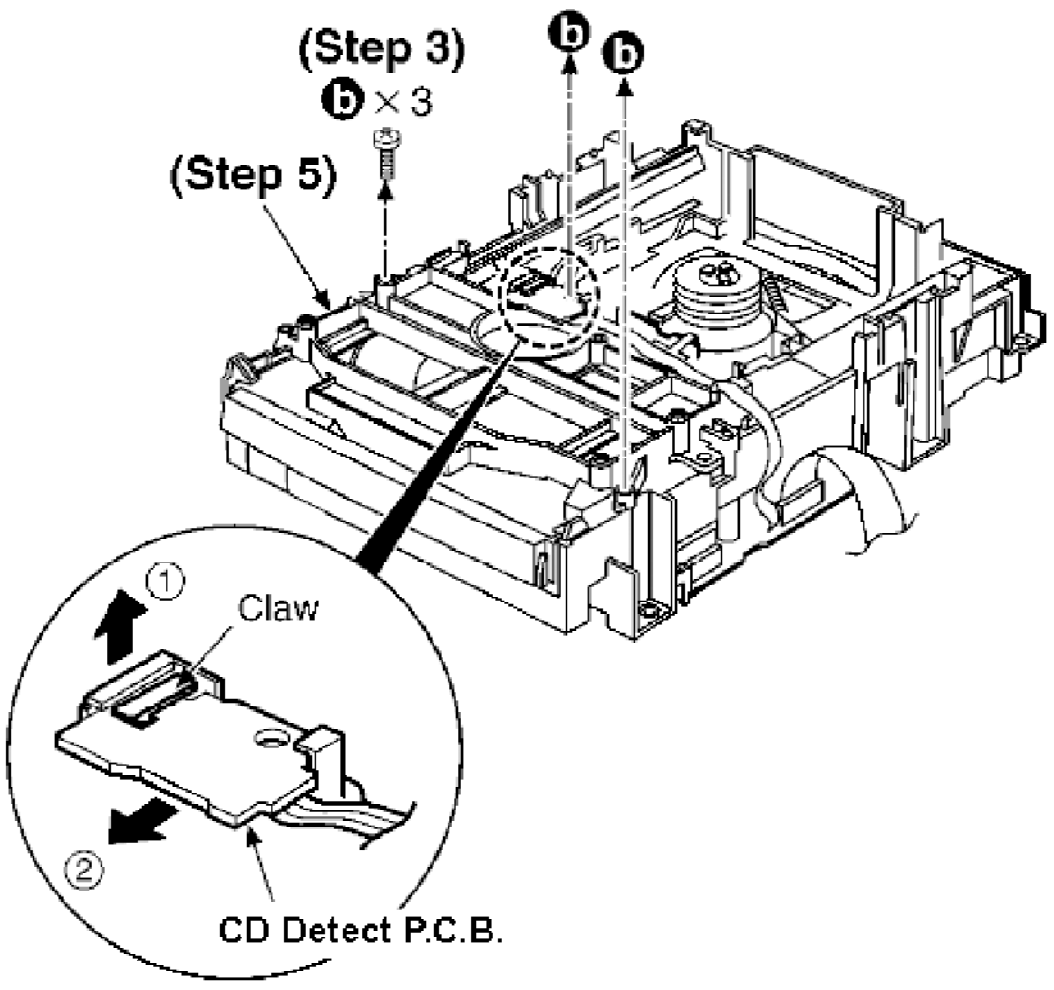
(Step 3)
ⓑ × 3
ⓑ
ⓑ
(Step 5)
①
Claw
②
CD Detect P.C.B.

Step 5 Remove the mechanism cover.

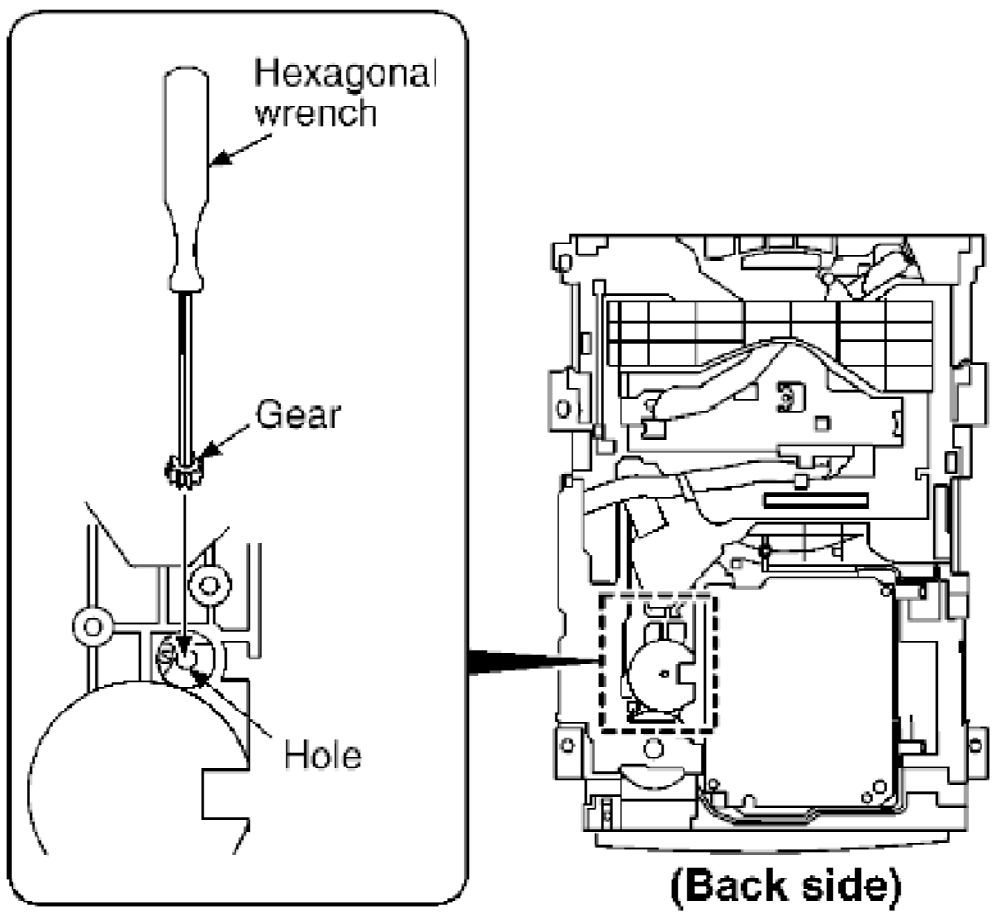
Hexagonal wrench
Gear
Hole
(Back side)

Step 6 Insert the gear with hexagonal wrench into the hole.

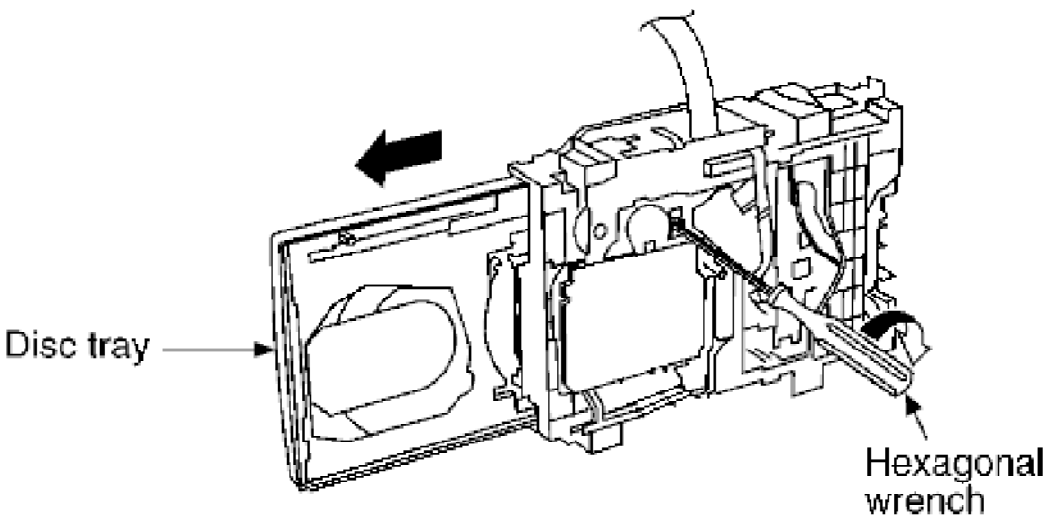
Disc tray
Hexagonal wrench

Step 7 Rotate the hexagonal wrench in the direction of arrow, and then open the disc tray fully.

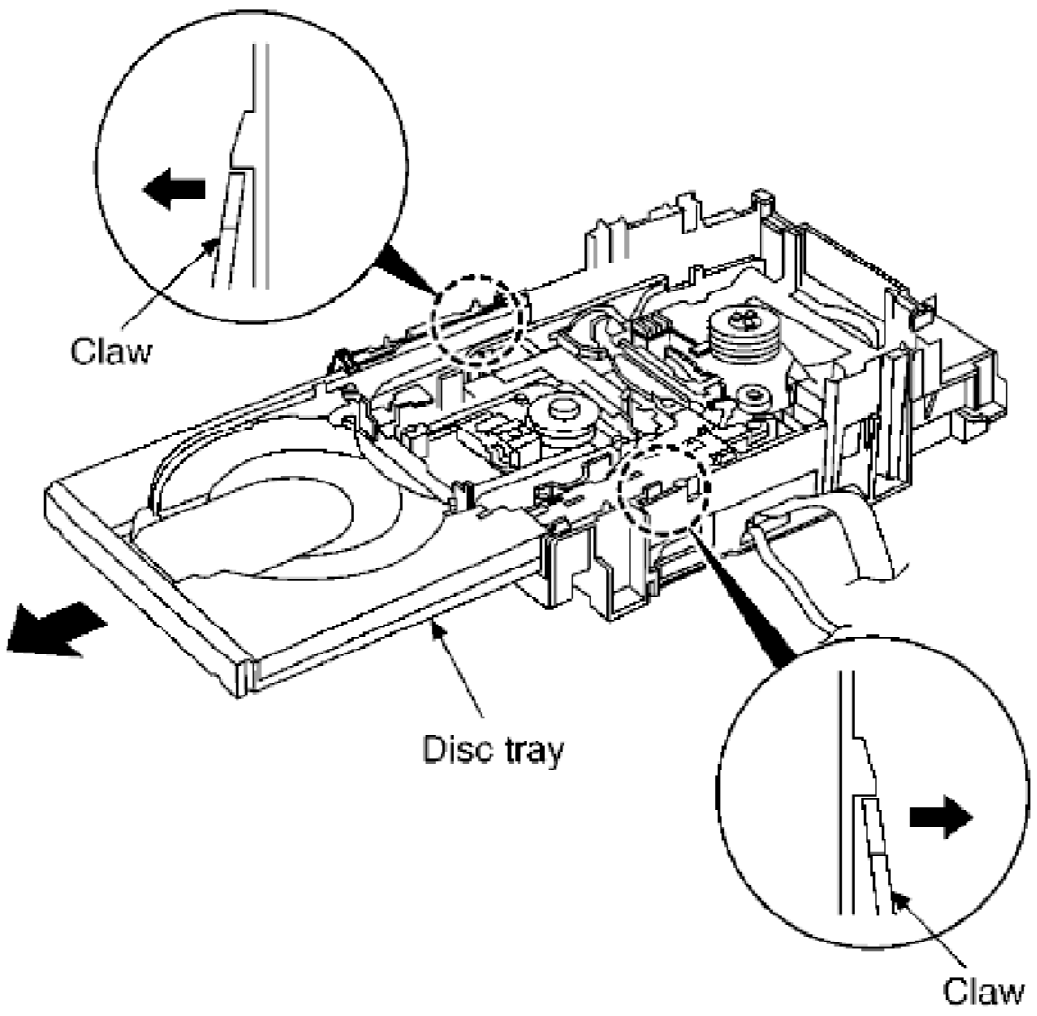
Claw
Disc tray
Claw

Step 8 Release the both claws, and then draw the disc tray.

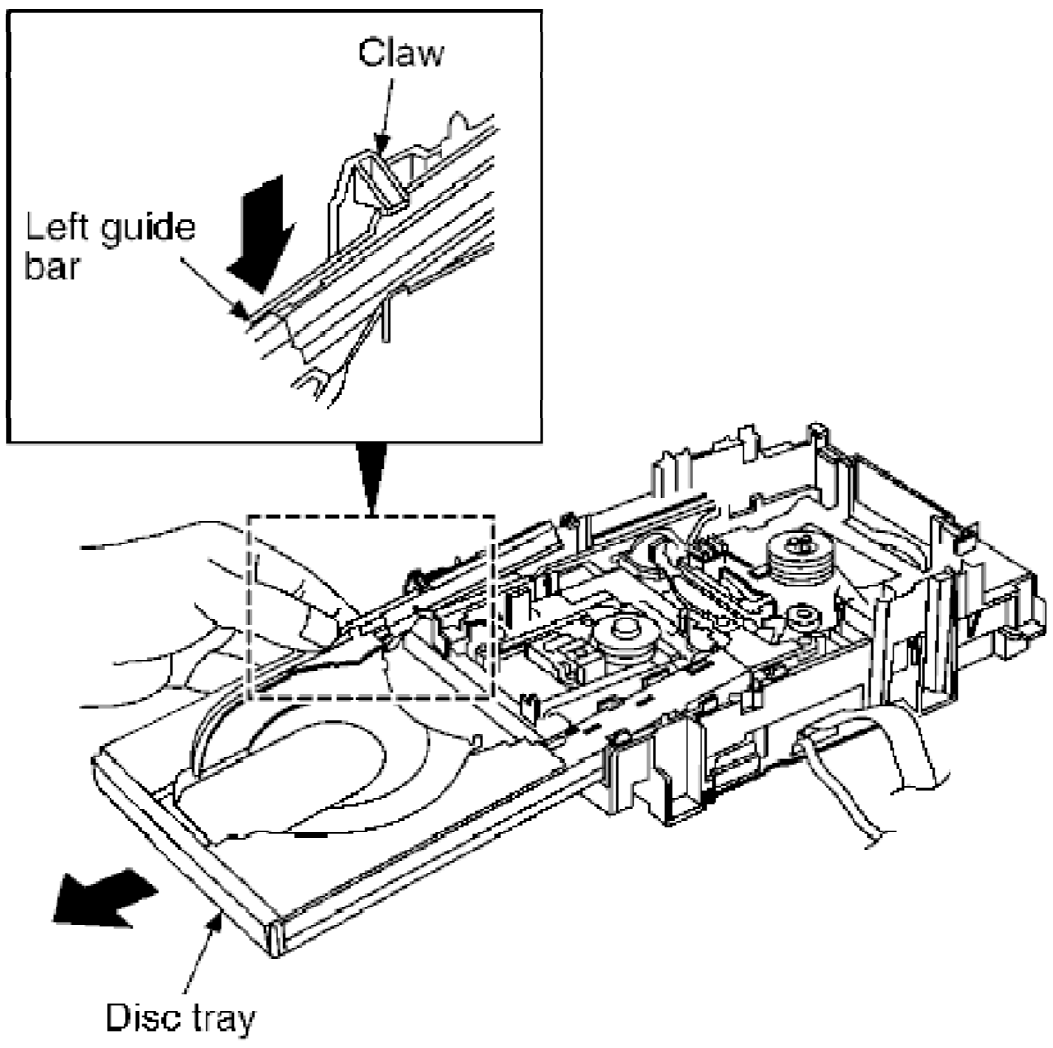
Claw
Left guide bar
Disc tray

Step 9 With forcing the left guide bar manually because the left guide bar interfers with claw, draw the disc tray.

[Installation of the disc tray after replacement]

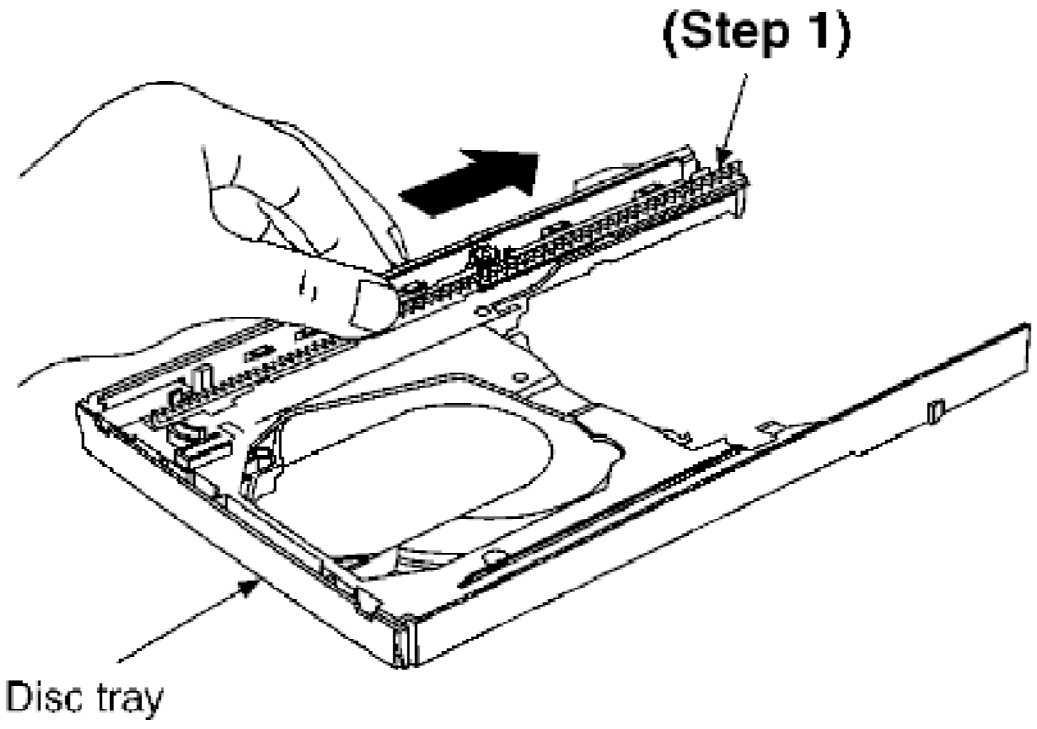
(Step 1)
Disc tray

Step 1 Slide the drive rack fully in the direction of arrow.

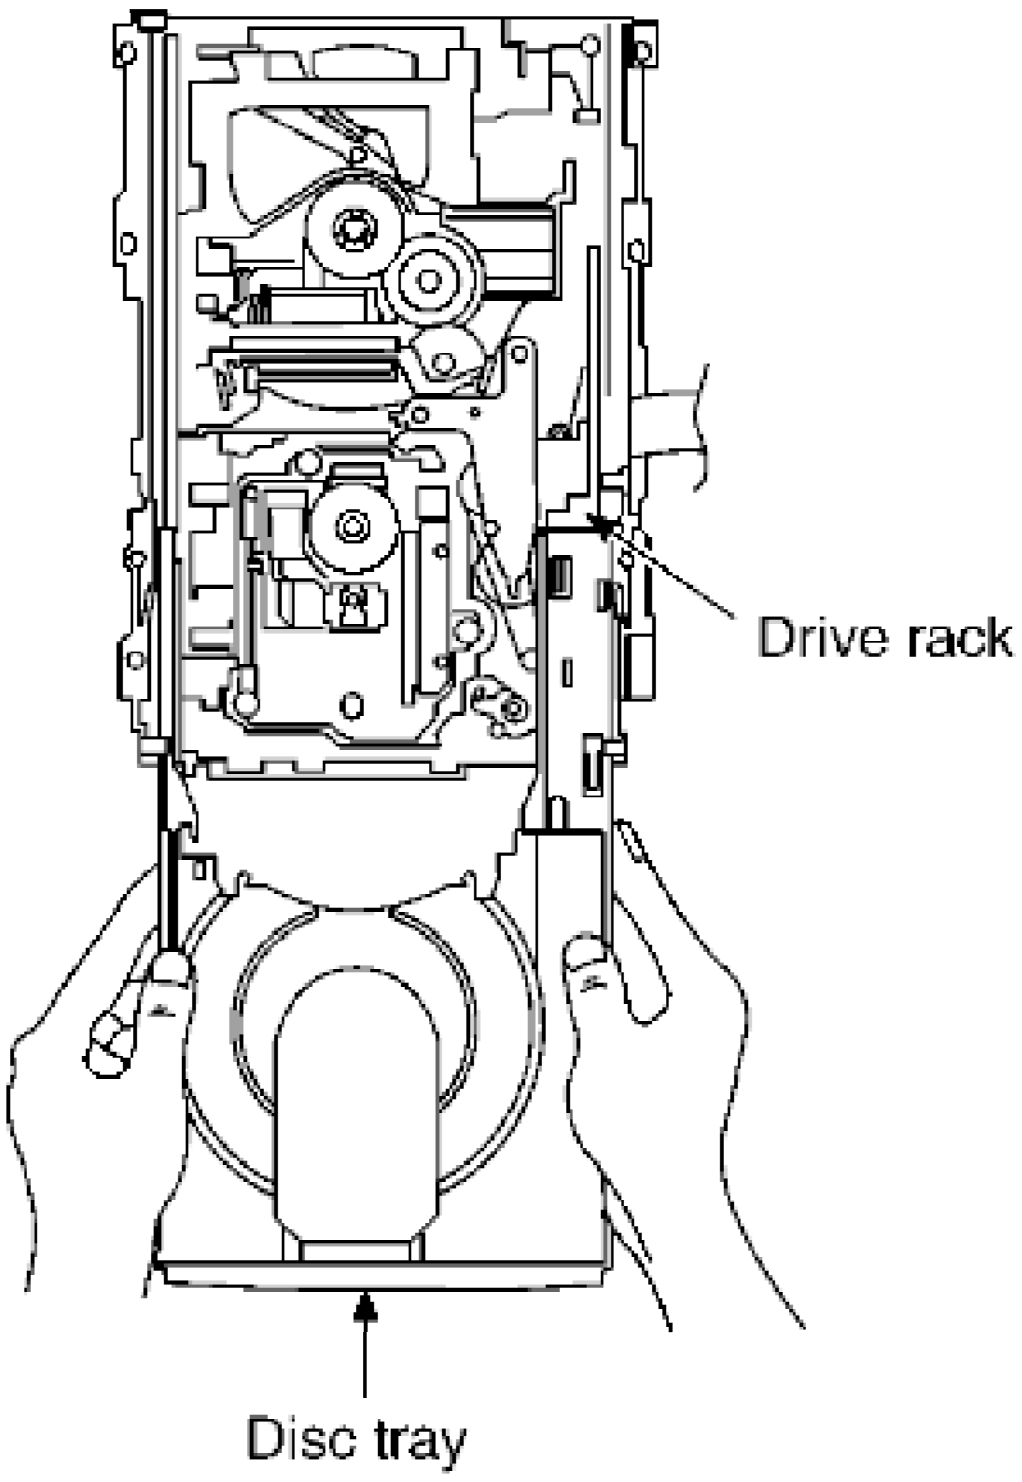
Drive rack
Disc tray

Step 2 Holding the drive rack not to move, install the disc tray.
Step 3 Align the drive rack with the drive gear.

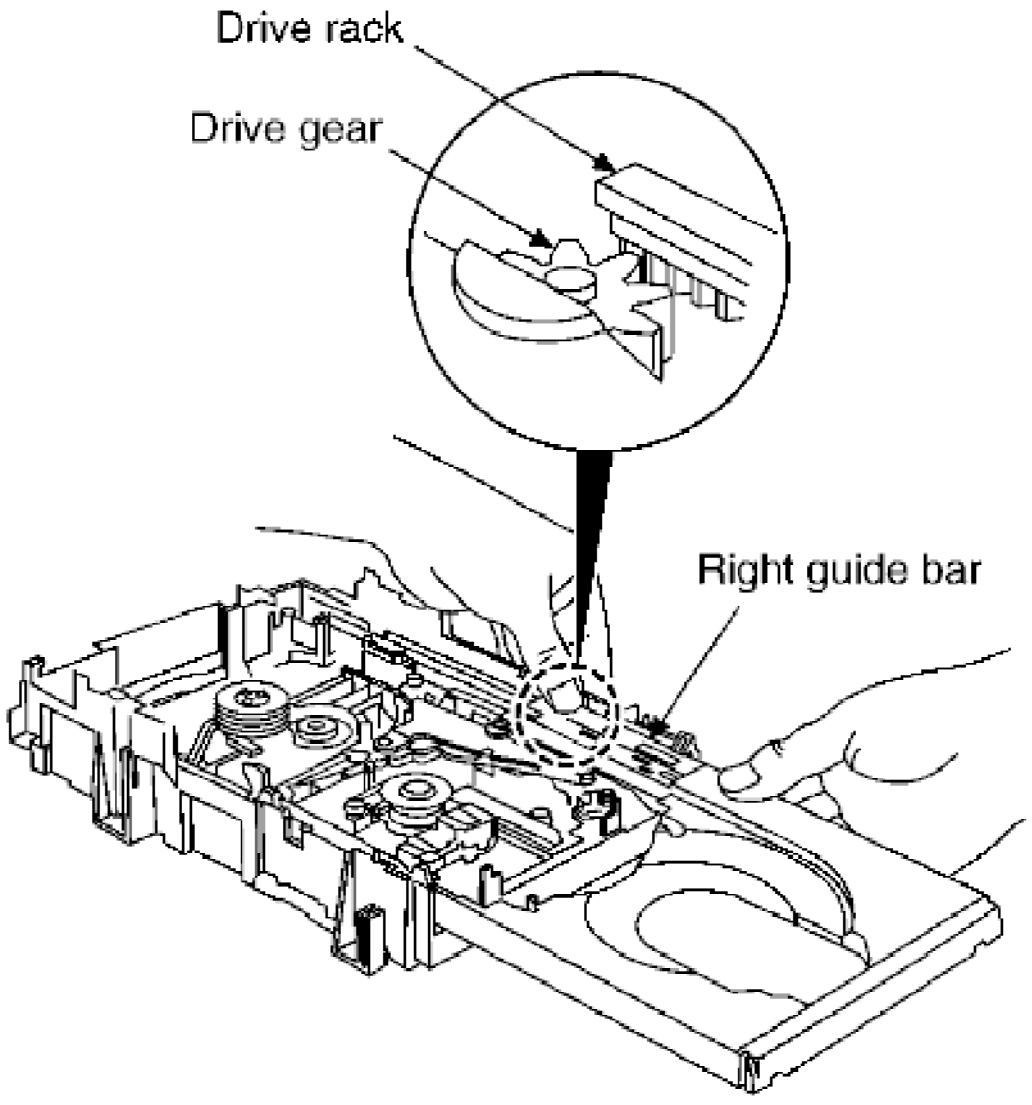
Drive rack
Drive gear
Right guide bar

NOTE:
Force the right guide bar of tray base manually not to move upwards.

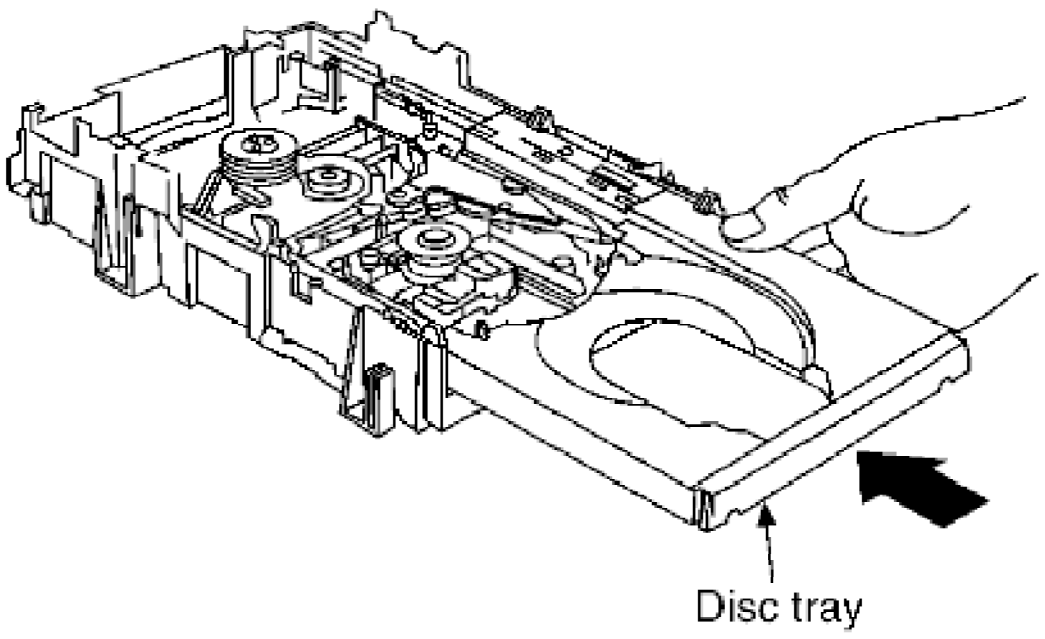

Step 4 Holding the disc tray manually, push the disc tray in the direction of the arrow.

10.13.3. Disassembly and reassembly for mechanism base drive unit

Step 1 Remove 3 screws.

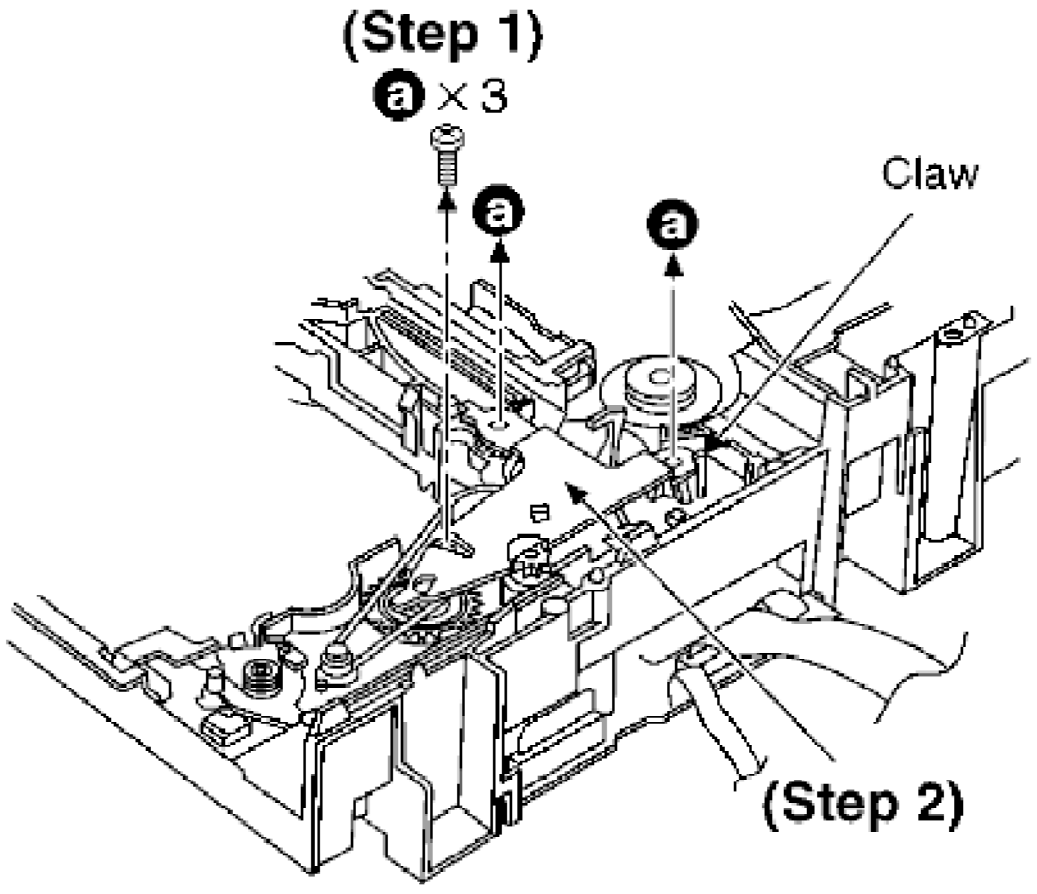
(Step 1)
a × 3
a
a
Claw
(Step 2)

Step 2 Release the claw, and then remove the gear holder.

Step 3 Remove the belt and change gear spring.

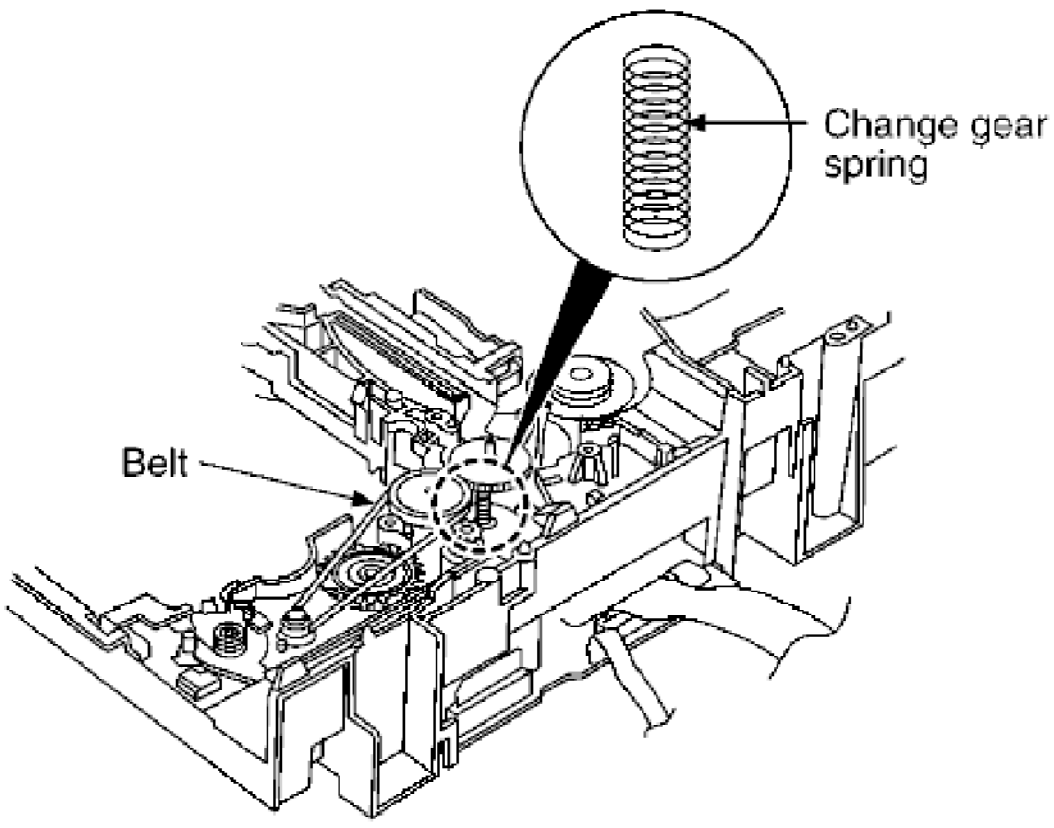
Change gear spring
Belt

NOTE:

Take care not to lose the change gear spring.

Step 4 Remove the pulley gear, change gear and UP/DOWN gear.

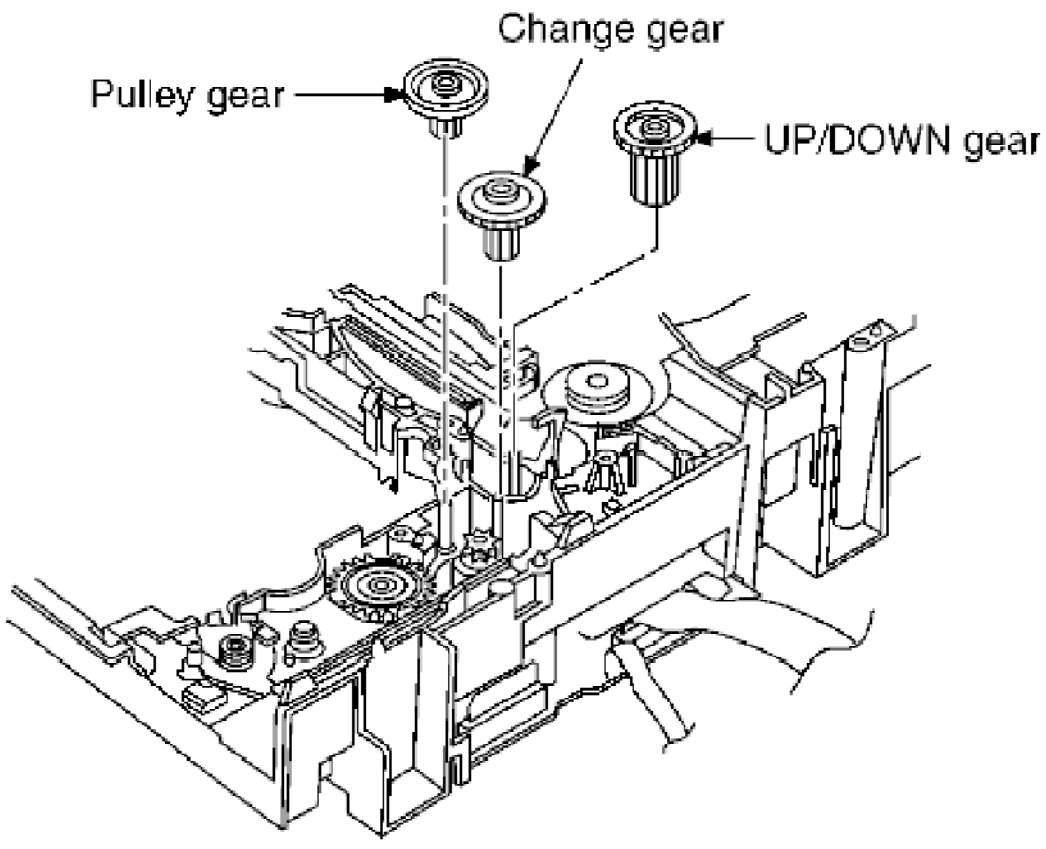
Change gear
Pulley gear
UP/DOWN gear

Step 5 Release the 2 claws, and then remove the bottom SW P.C.B..

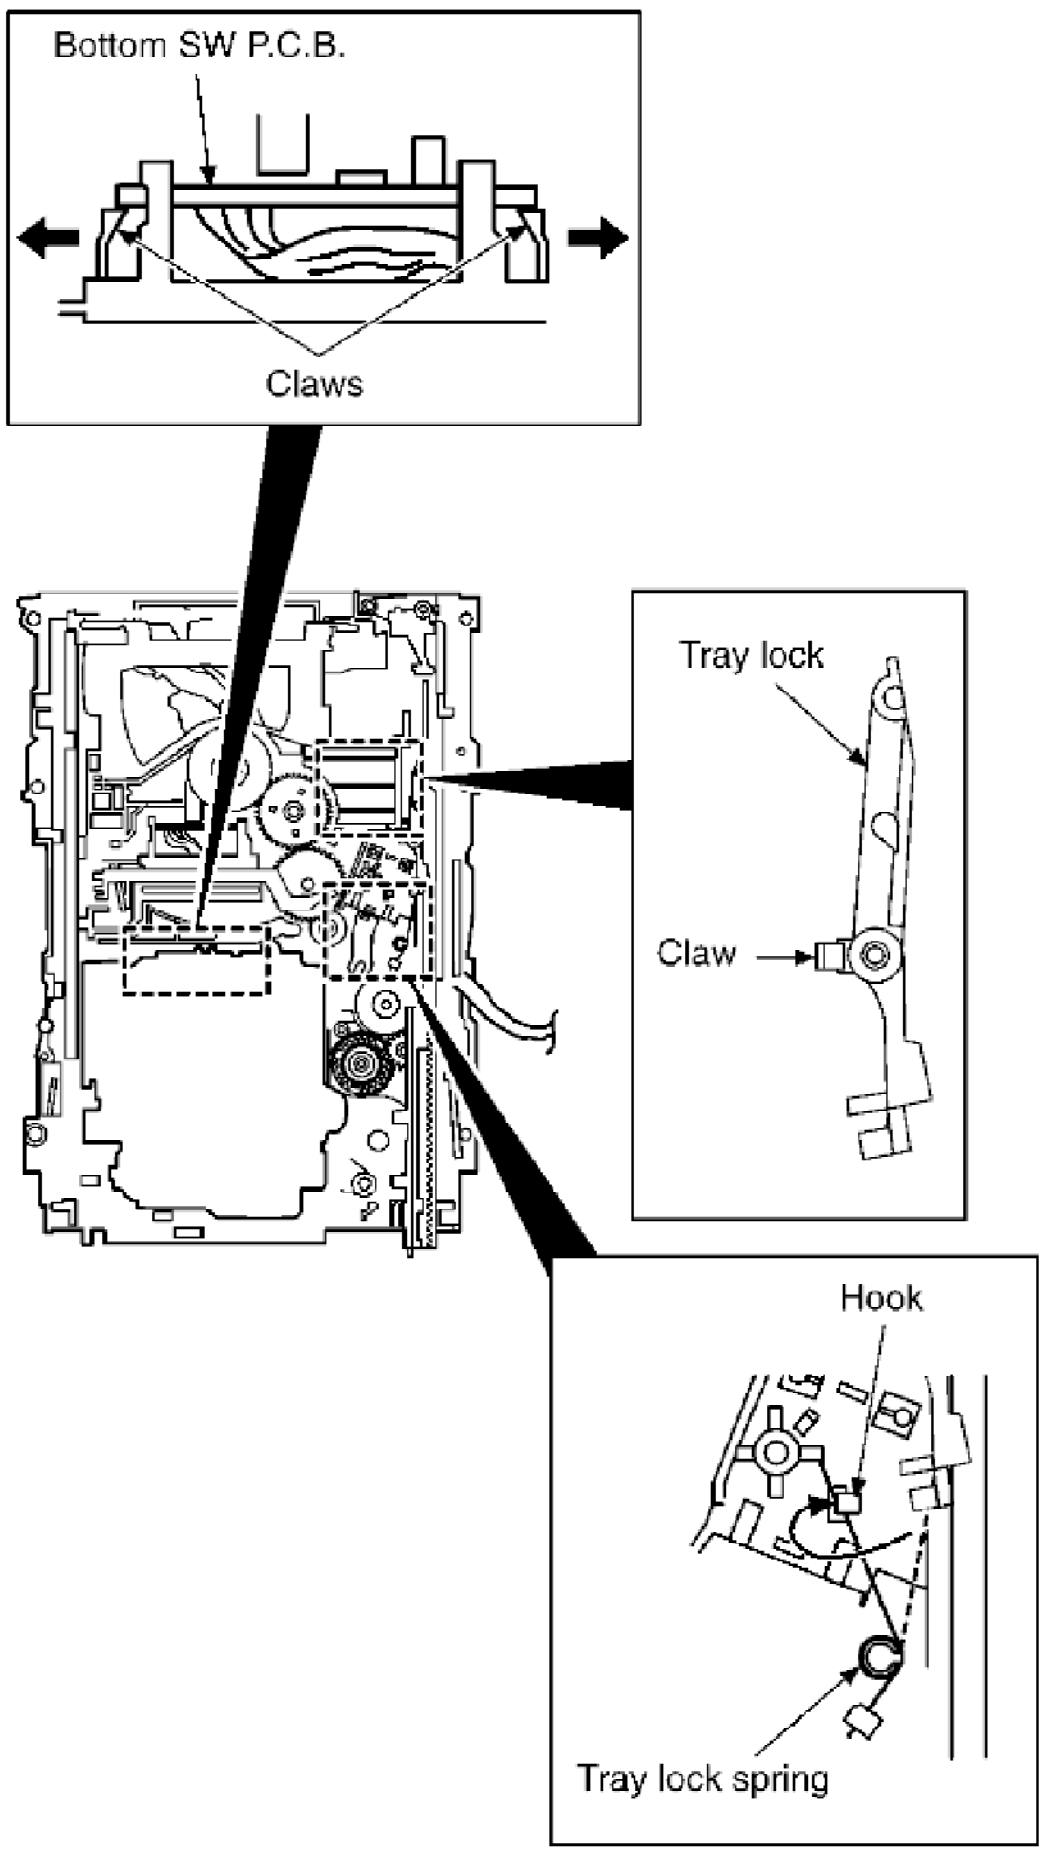
Bottom SW P.C.B.
Claws
Tray lock
Claw
Hook
Tray lock spring

Step 6 Install the tray lock spring to hook temporary.
Step 7 Release the claw, and then remove the tray lock.
Step 8 Release the claw, and then remove the rear lock.

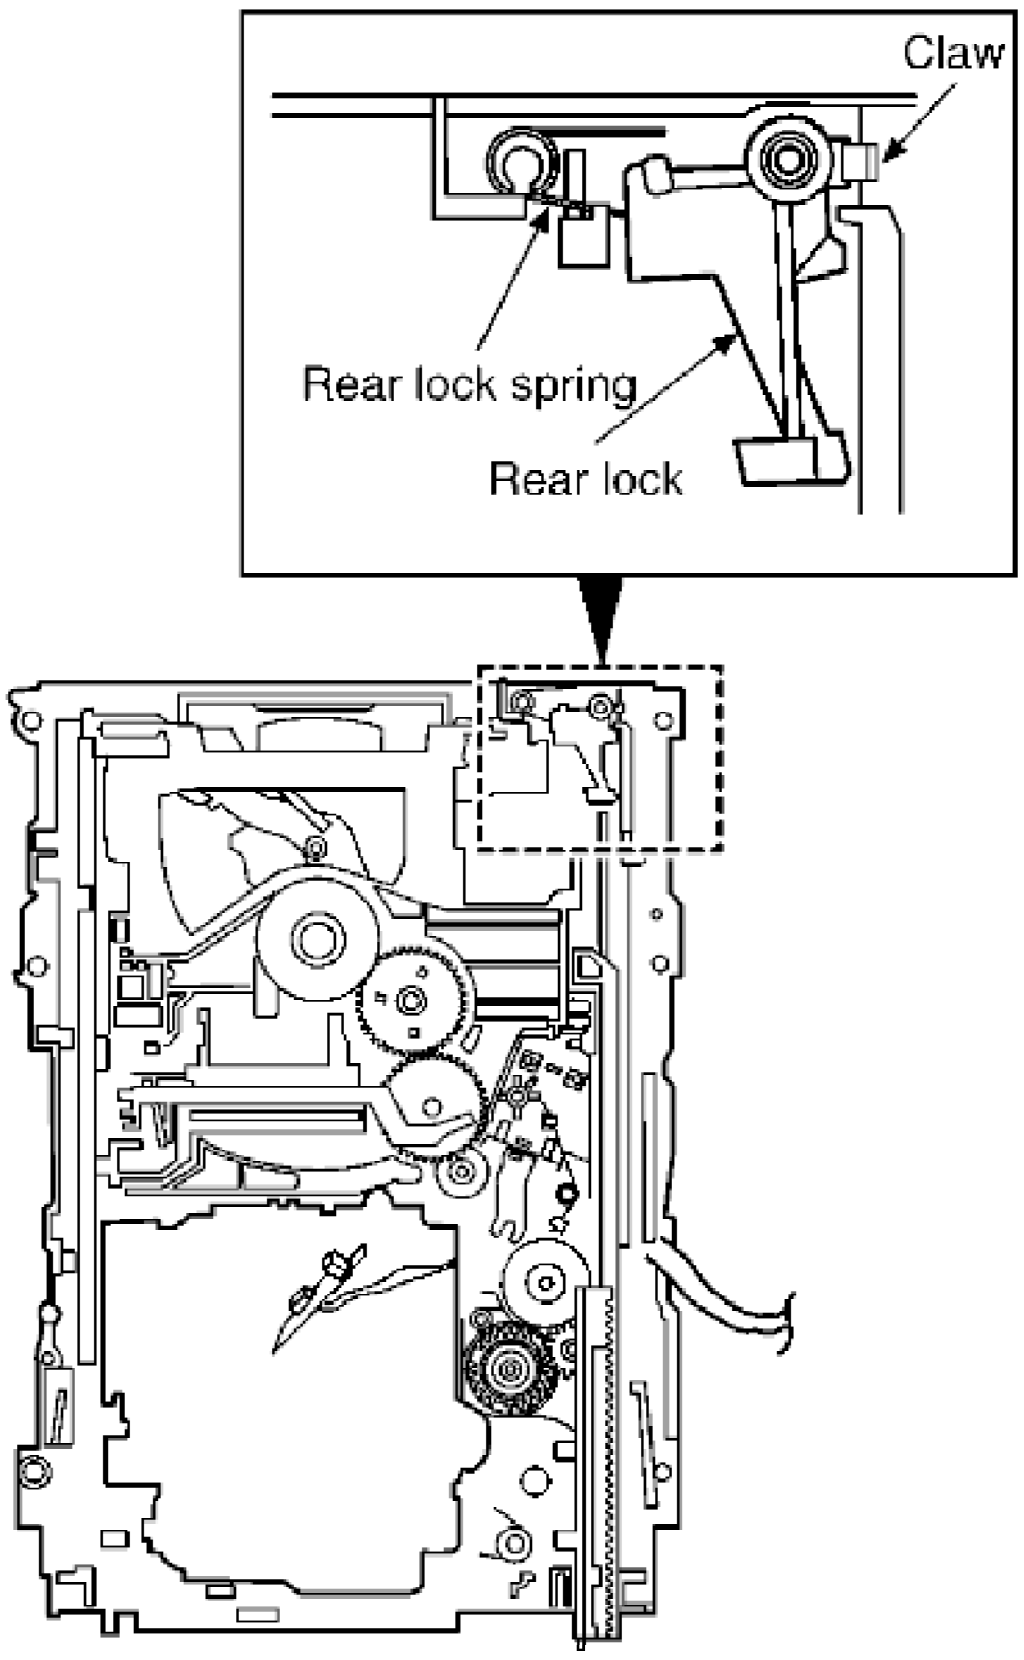
Claw
Rear lock spring
Rear lock

Step 9 Pressing the claw (B) in the direction of arrow (1), force the connection lever in the direction of arrow (2).

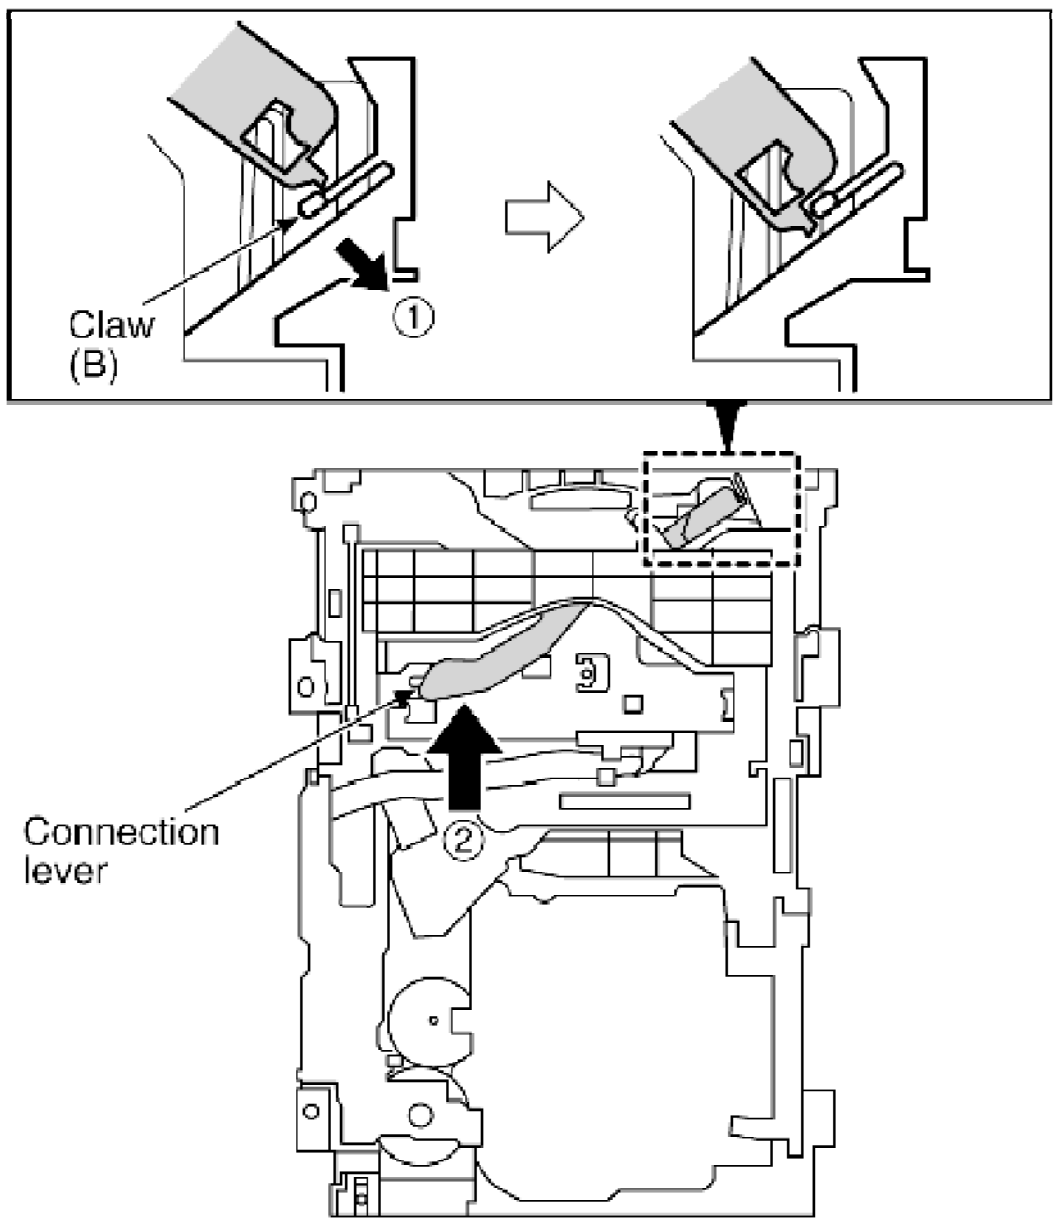
Claw
(B)
①
Connection
lever
②

Step 10 Move the slide plate 1 to the end of stock side.

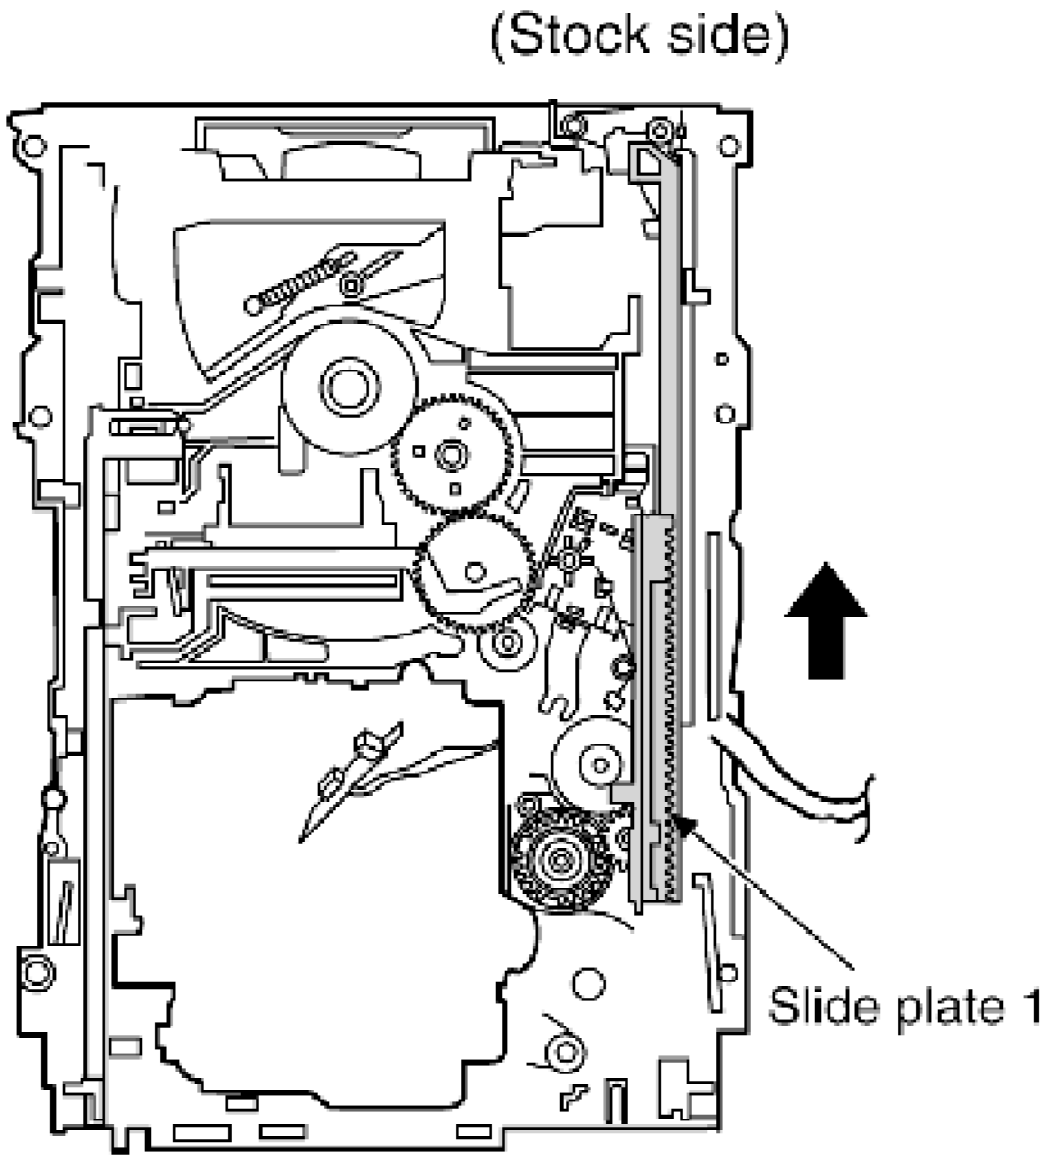
(Stock side)
Slide plate 1

Step 11 Lift up the left end of spindle base unit in the direction of arrow (1), and then remove the unit in the direction of arrow (2).

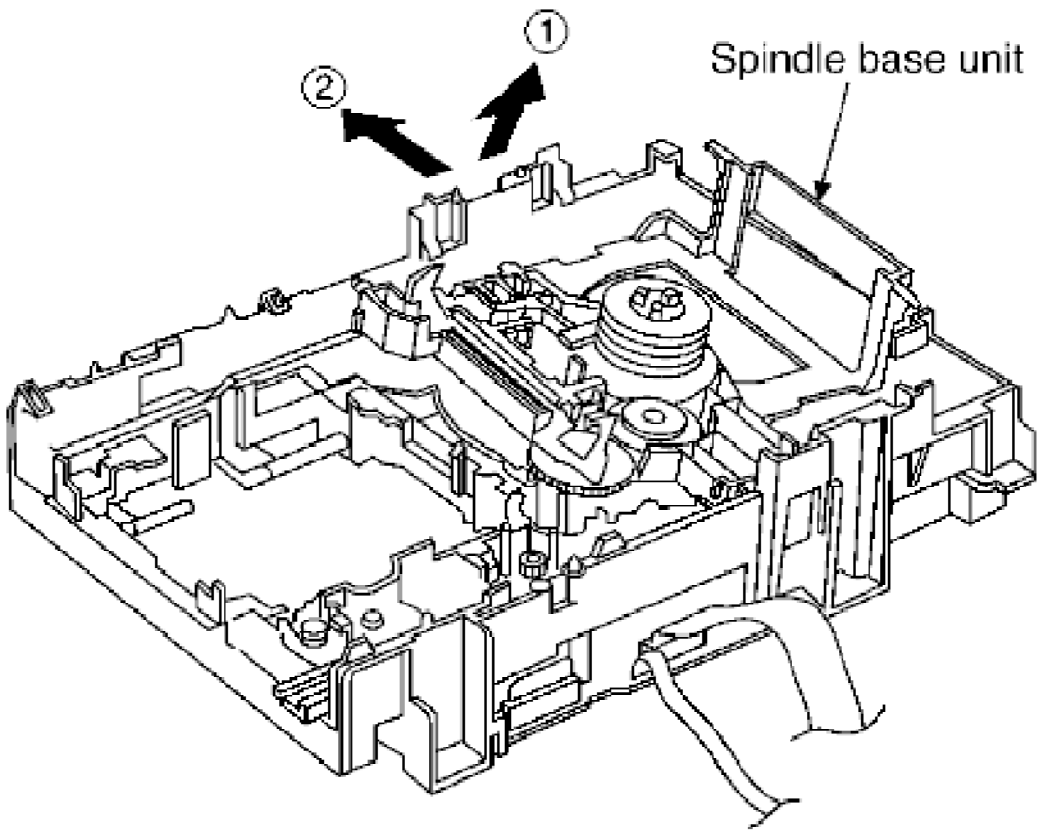
①
②
Spindle base unit

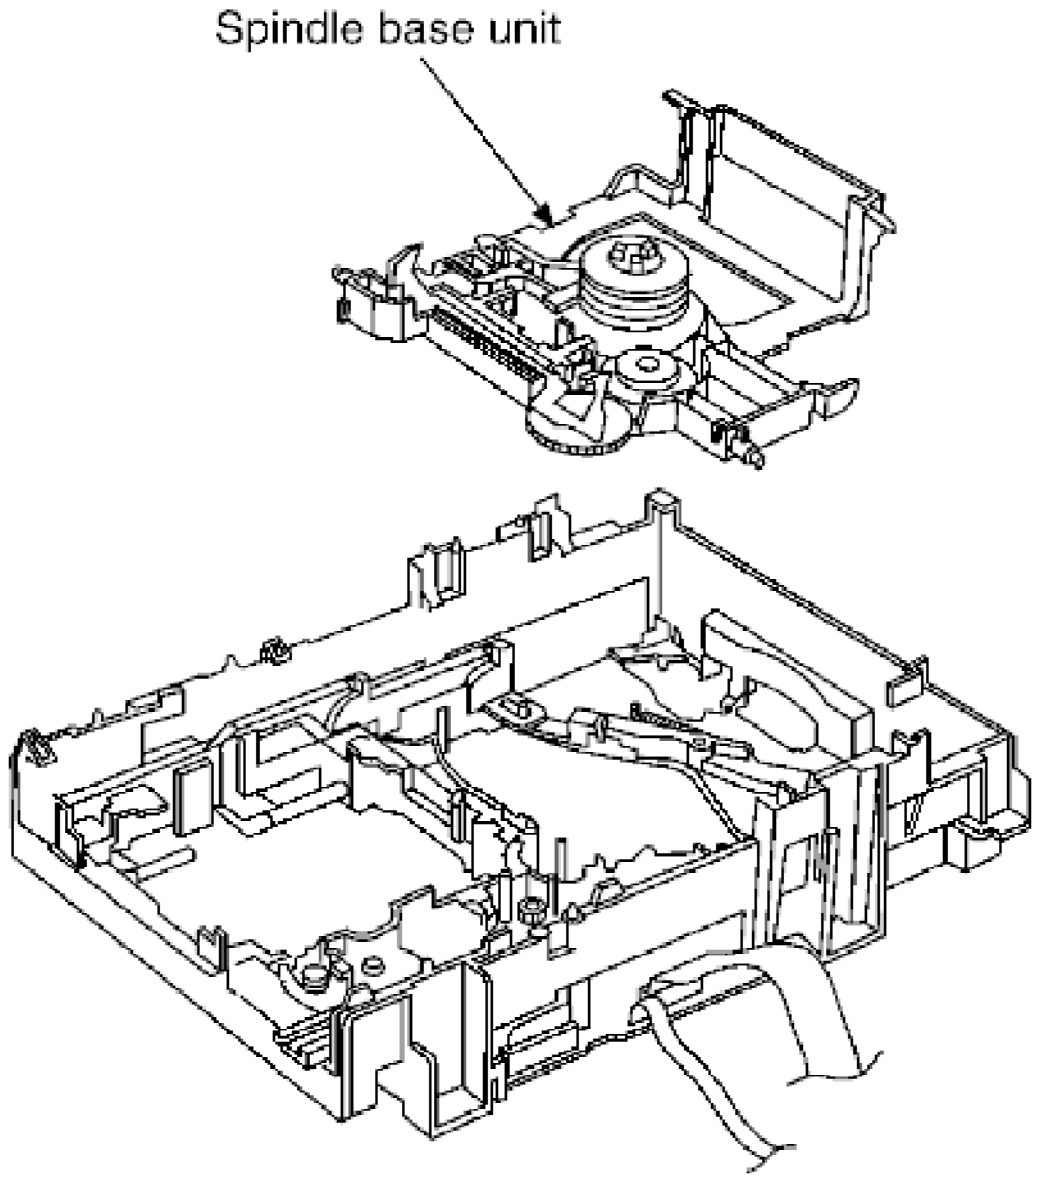
Spindle base unit

Step 12 Remove slide plate 1 and slide plate 2.

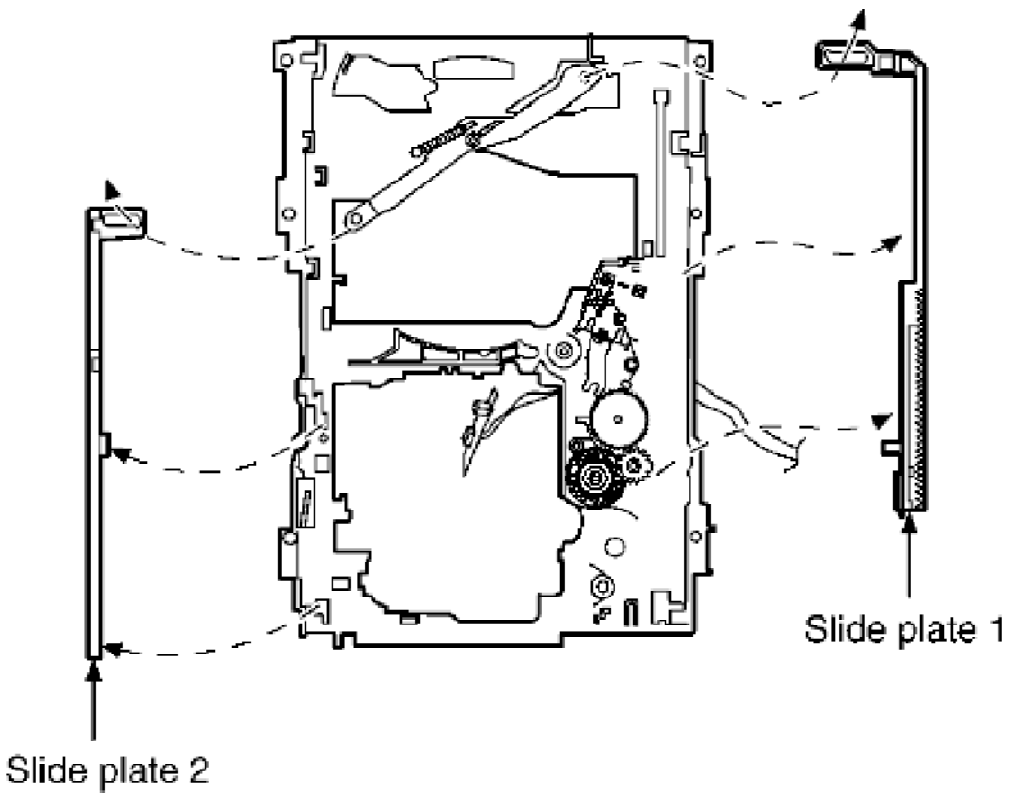
Slide plate 1
Slide plate 2

Step 13 Remove the traverse relay gear, traverse cam gear and drive gear.

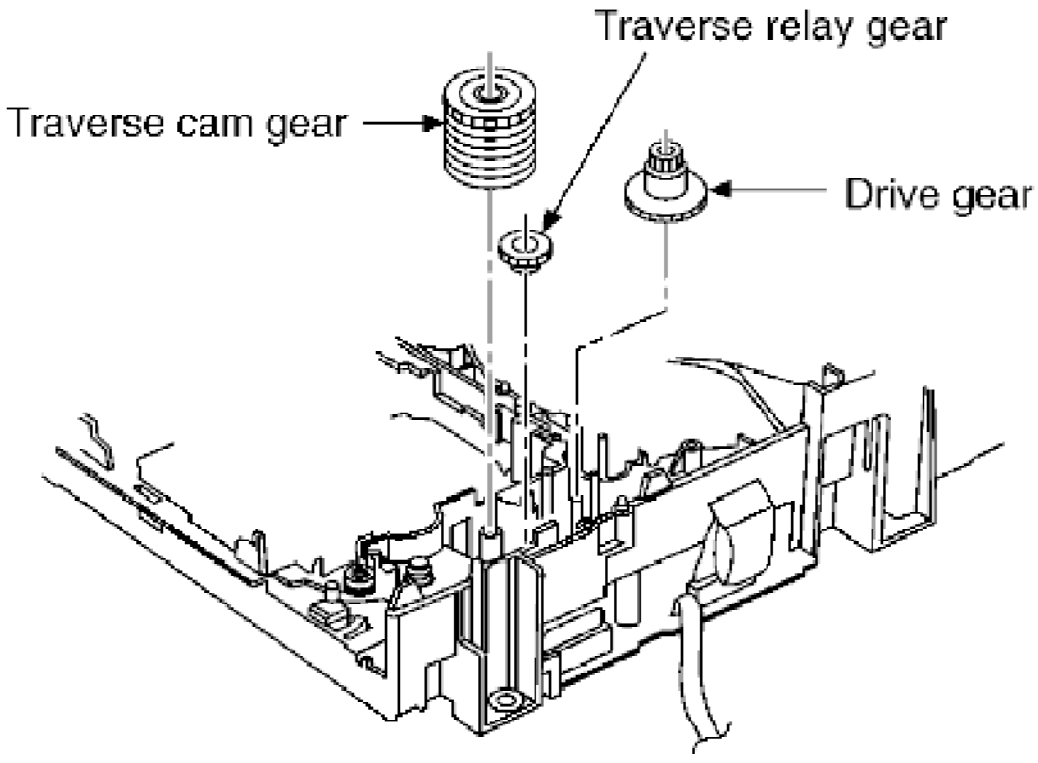
Traverse relay gear
Traverse cam gear
Drive gear

[Dissassembly/reassembly for the spindle base unit]
Step 1 Draw the 5 disc spacers.

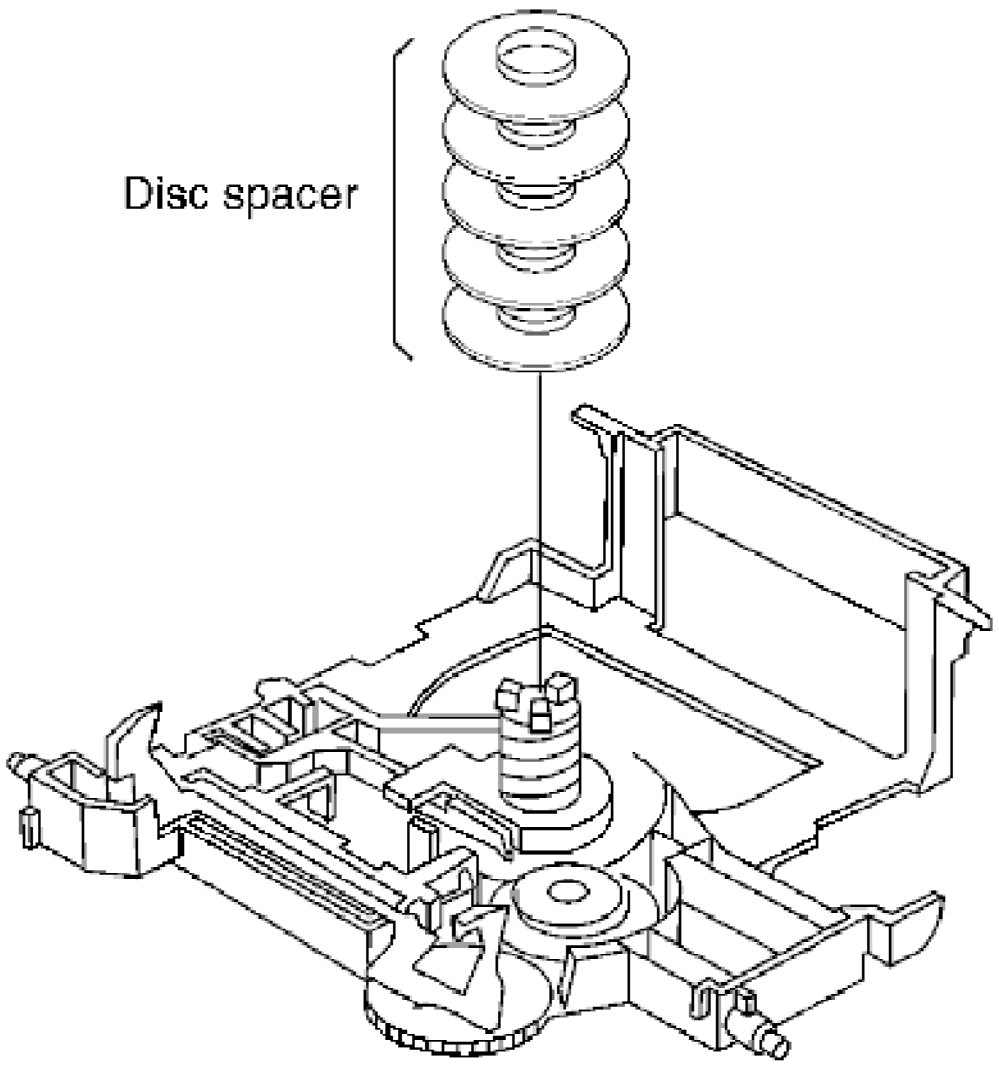
Disc spacer

Step 2 Pushing the claw, slide the support plate in the direction of arrow, and then remove it.

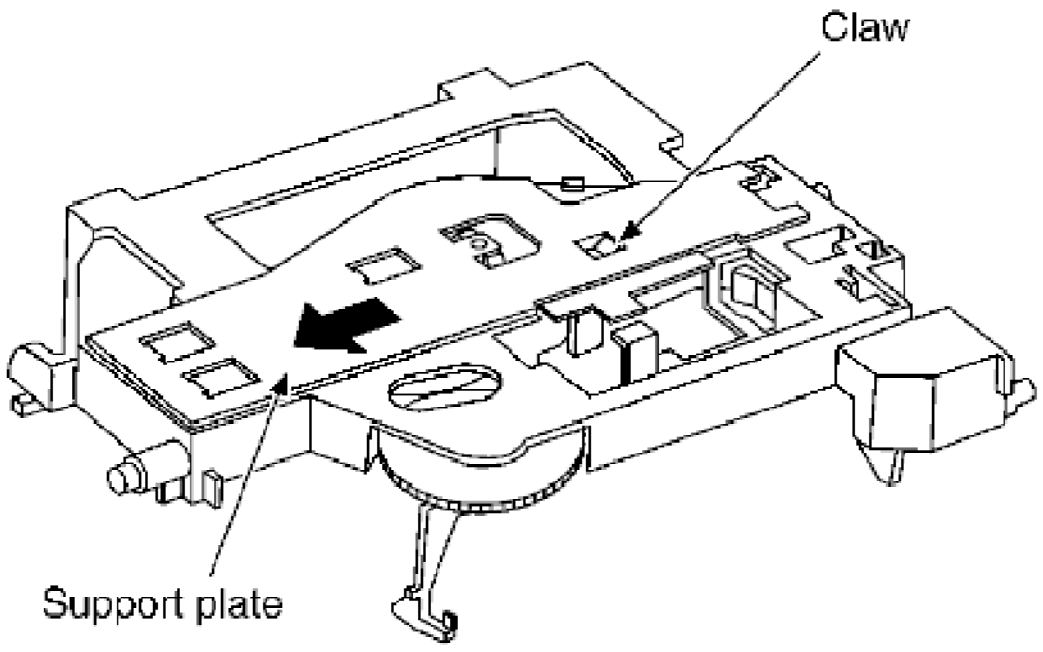
Claw
Support plate

Step 3 Rotate the disc lever in the direction of arrow (1), draw the disc lever.

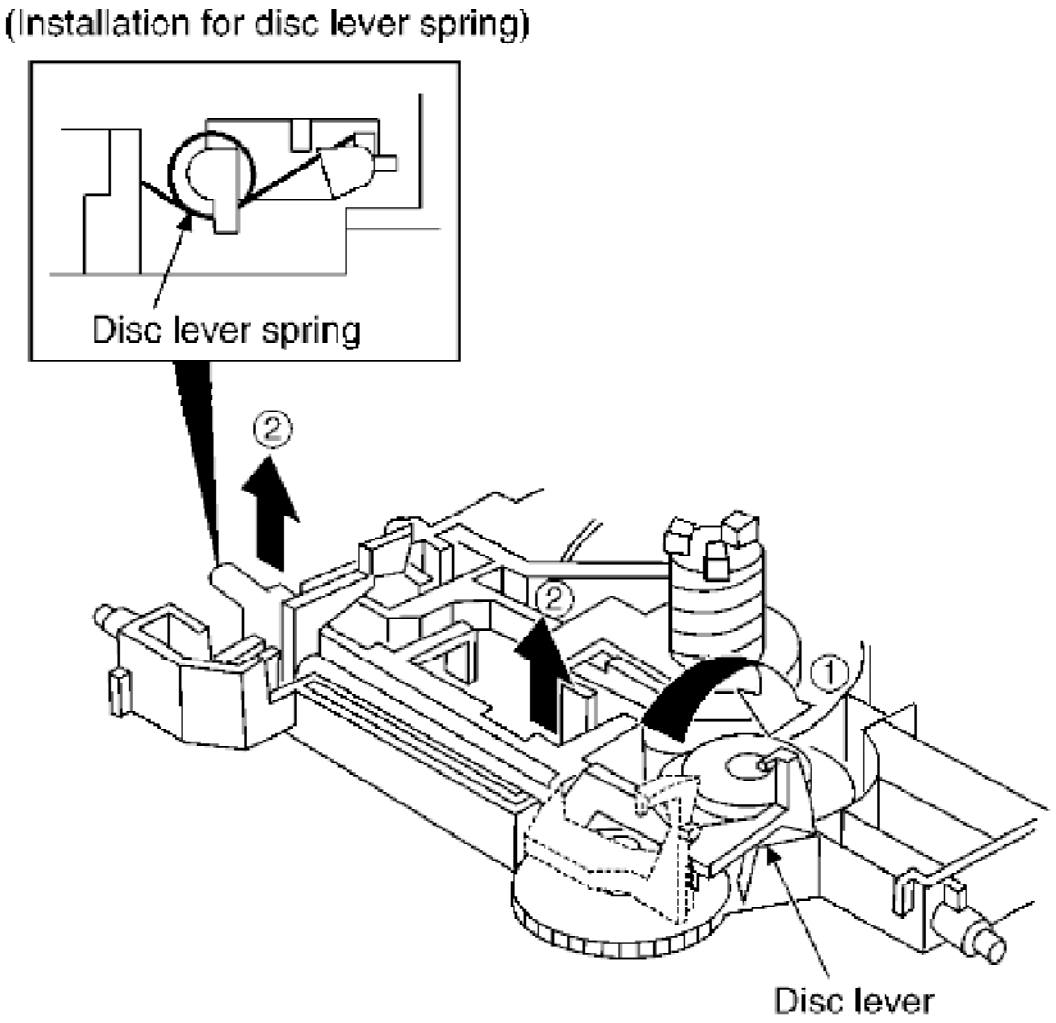
(Installation for disc lever spring)
Disc lever spring
②
②
①
Disc lever

NOTE:
Take care not to lose the disc lever spring.

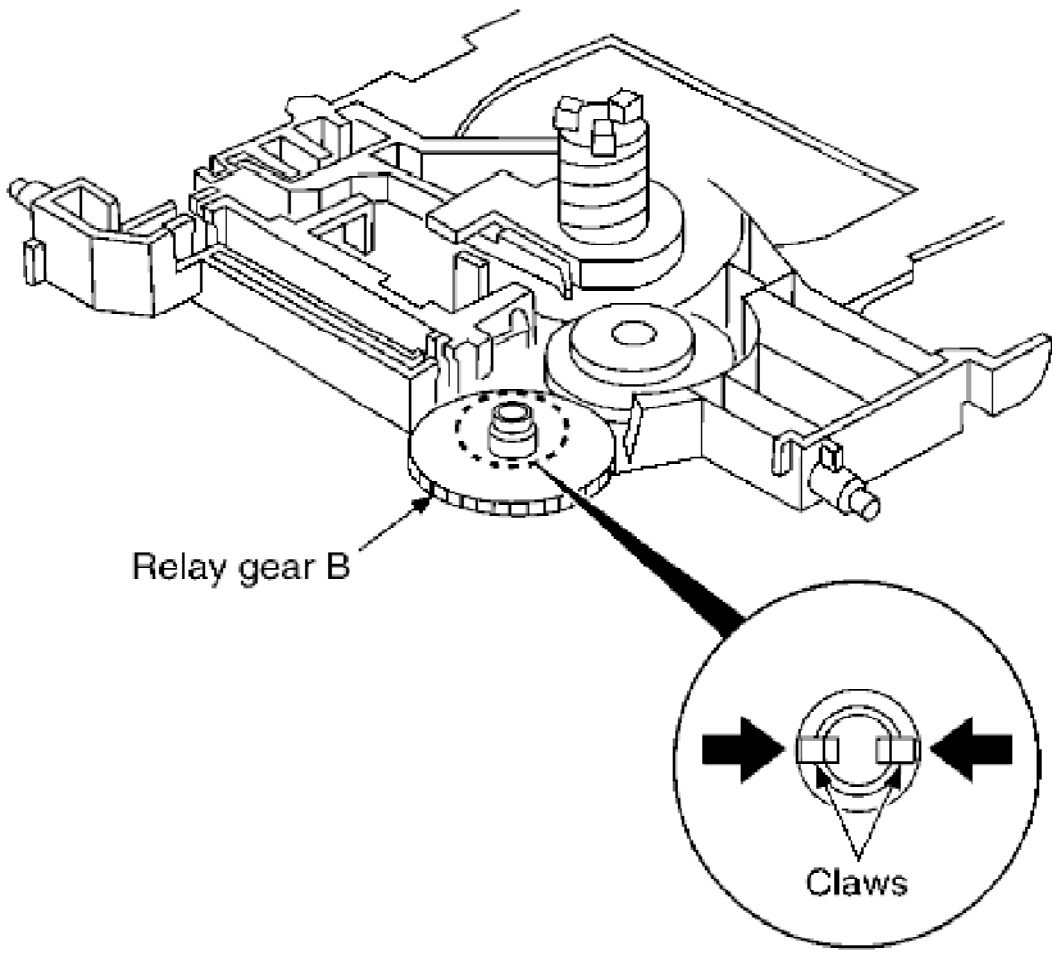
Relay gear B
Claws

Step 4 Release the 2 claws, and then draw the relay gear B.
Step 5 Release the 2 claws as shown below.

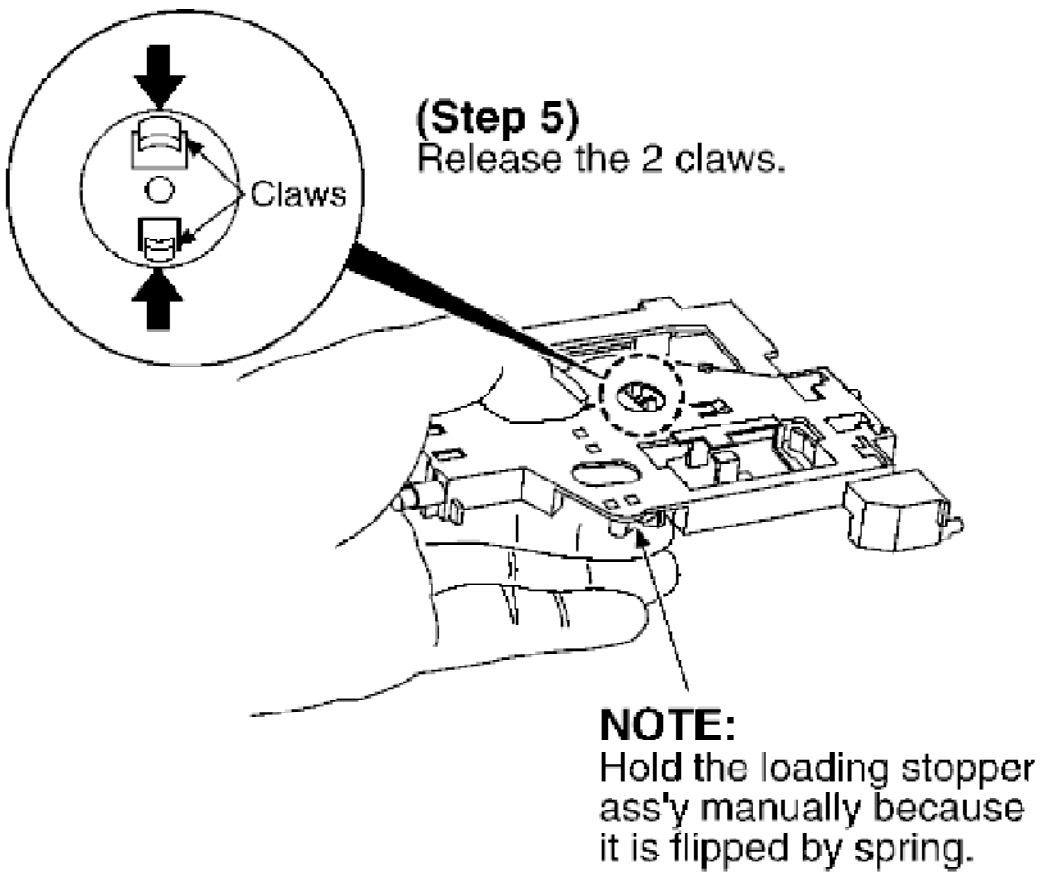
(Step 5)
Release the 2 claws.
Claws
NOTE:
Hold the loading stopper ass'y manually because it is flipped by spring.

NOTE:

Hold the loading stopper ass’y manually bacause it is flipped by spring.

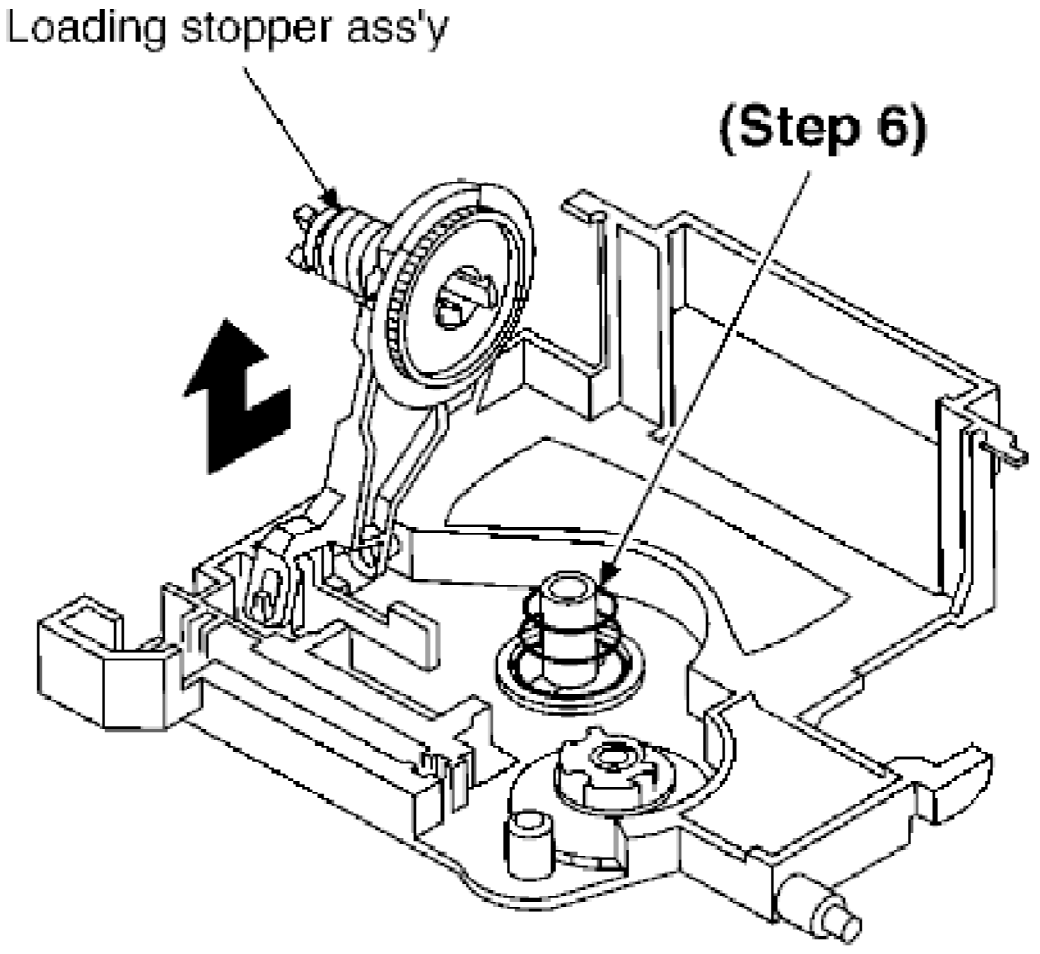
Loading stopper ass'y
(Step 6)

Step 6 Remove the cushion spring.

Step 7 Remove the loading stopper ass’y in the direction of arrow.

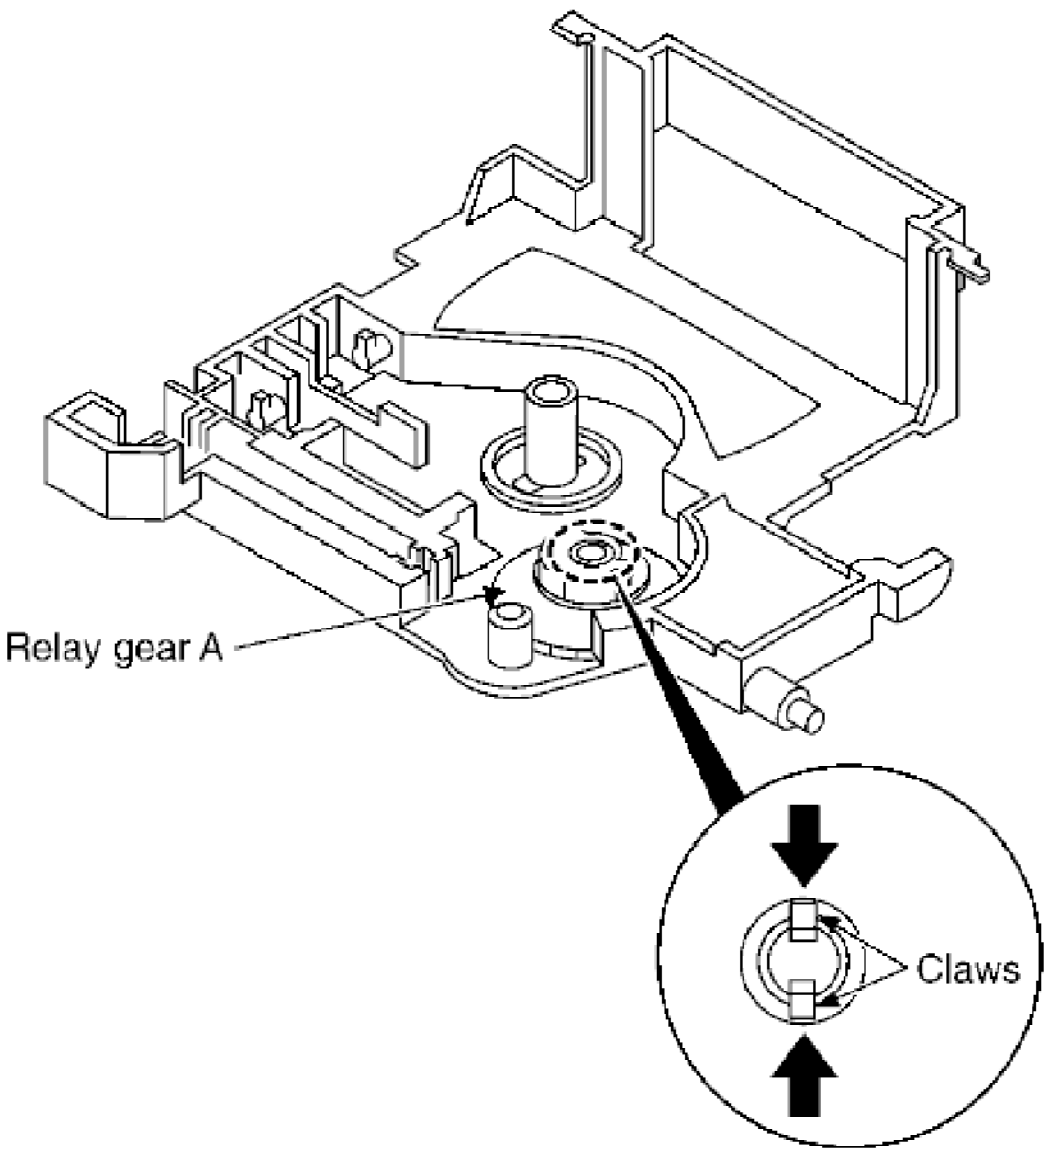
Relay gear A
Claws

Step 8 Release the 2 claws, and then remove the relay gear A.

Step 9 Release the 2 claws, and then remove the spindle shaft.

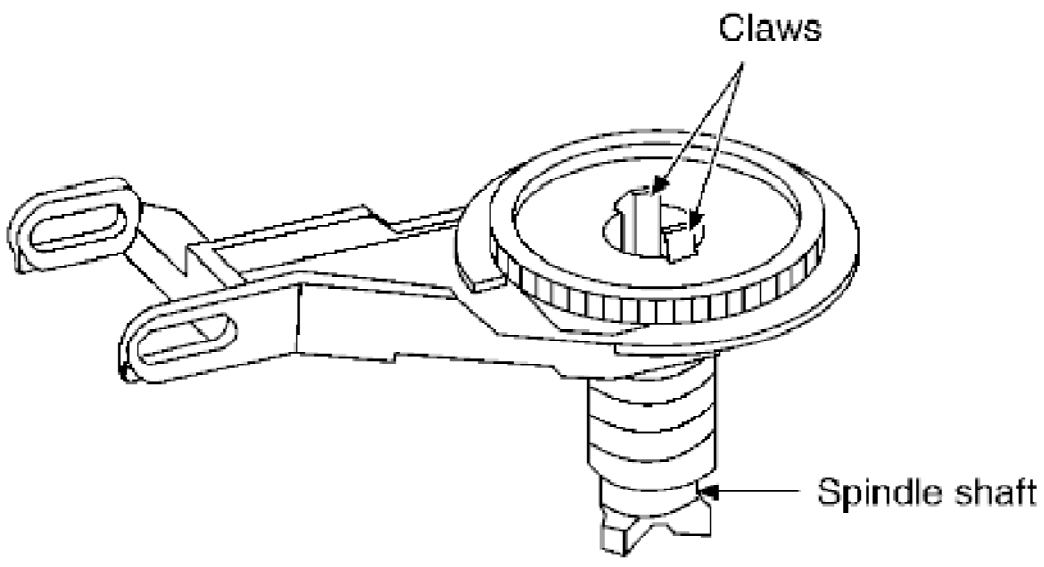
Claws
Spindle shaft

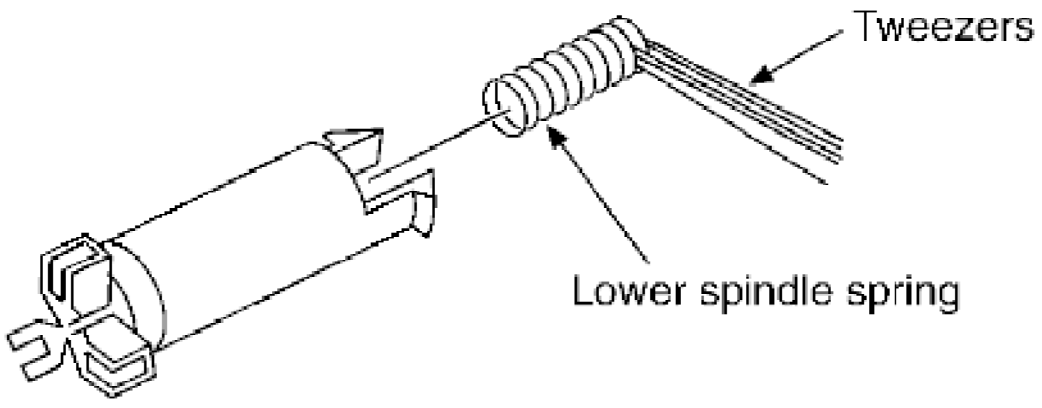
Tweezers
Lower spindle spring

Step 10 Remove the lower spindle spring with tweezers.

Step 11 Force the lower hook with thin tip of minus screwdriver.

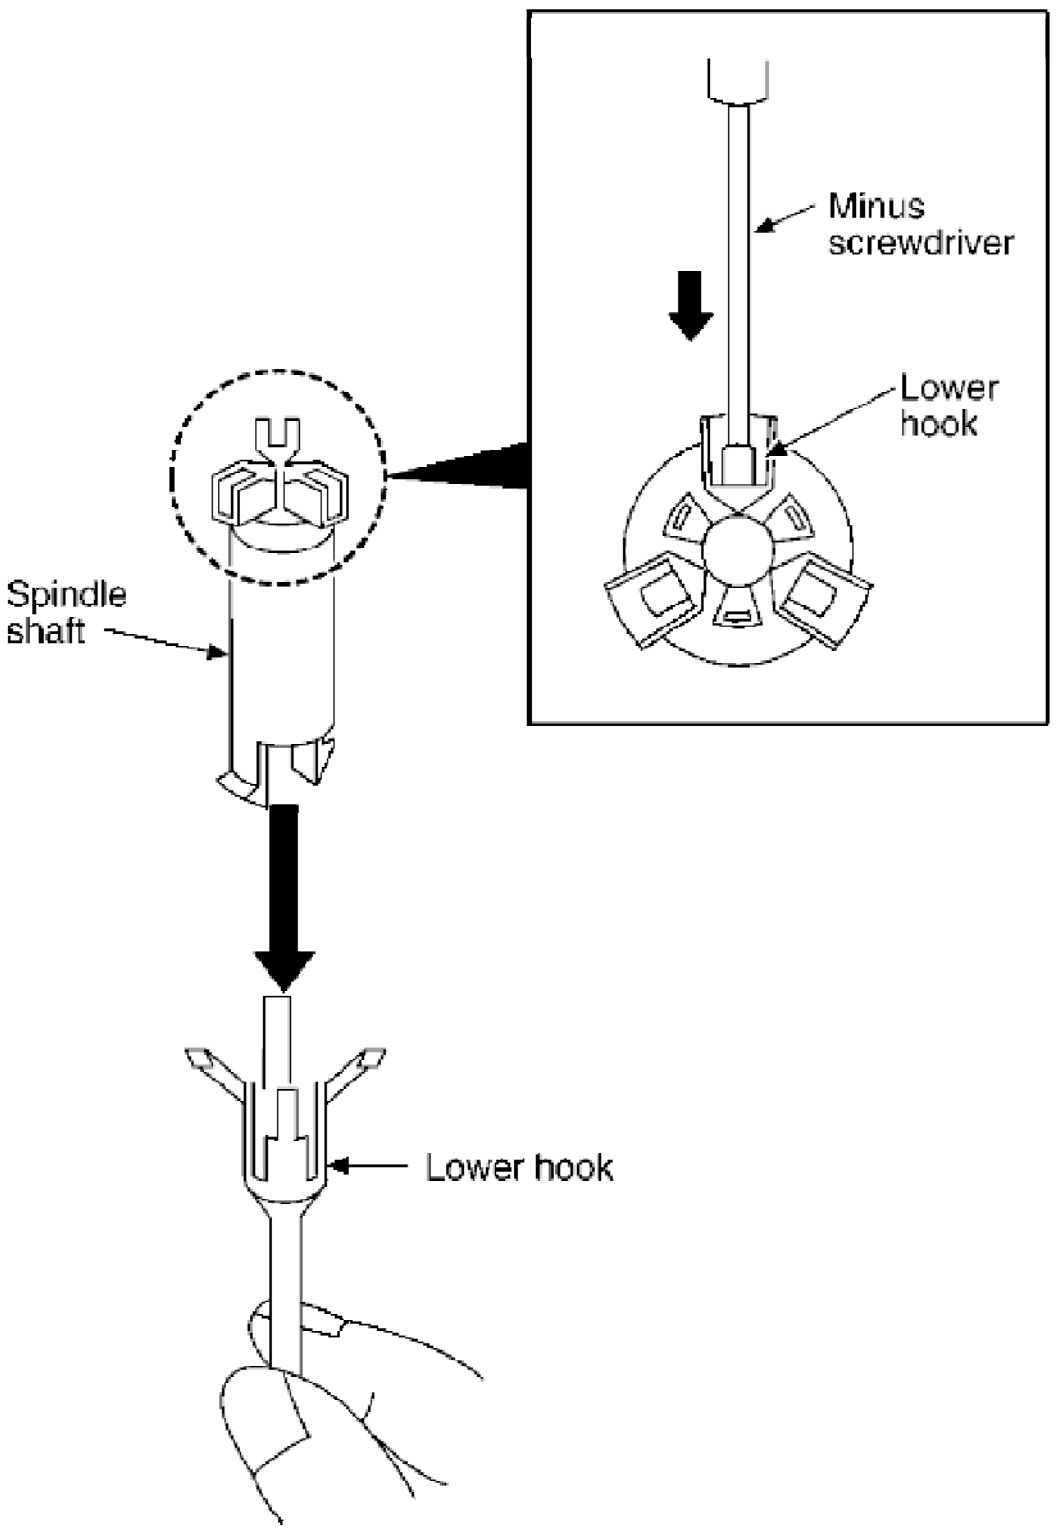
Minus
screwdriver
Lower
hook
Spindle
shaft
Lower hook

Step 12 Squeeze the shaft of lower hook, and then draw it.

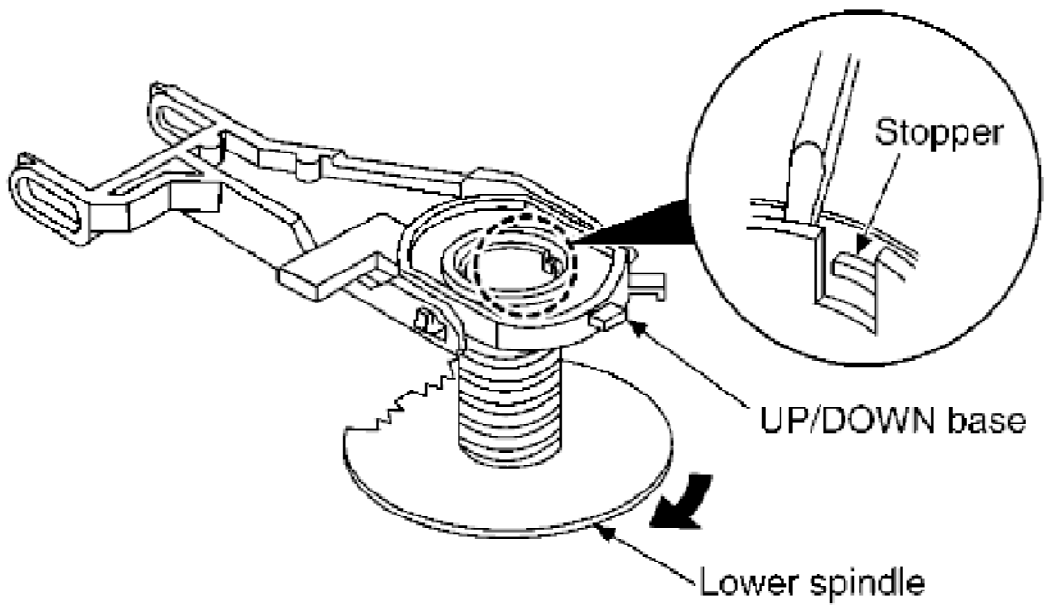
Stopper
UP/DOWN base
Lower spindle

Step 13 Rotate the lower spindle in the direction of arrow until the lower spindle interferes with stopper.

Step 14 Insert the thin tip of minus screwdriver between the lower spindle and UP/DOWN base, and then slacken the lower spindle to release the stopper. Then, rotate the lower spindle and remove it.

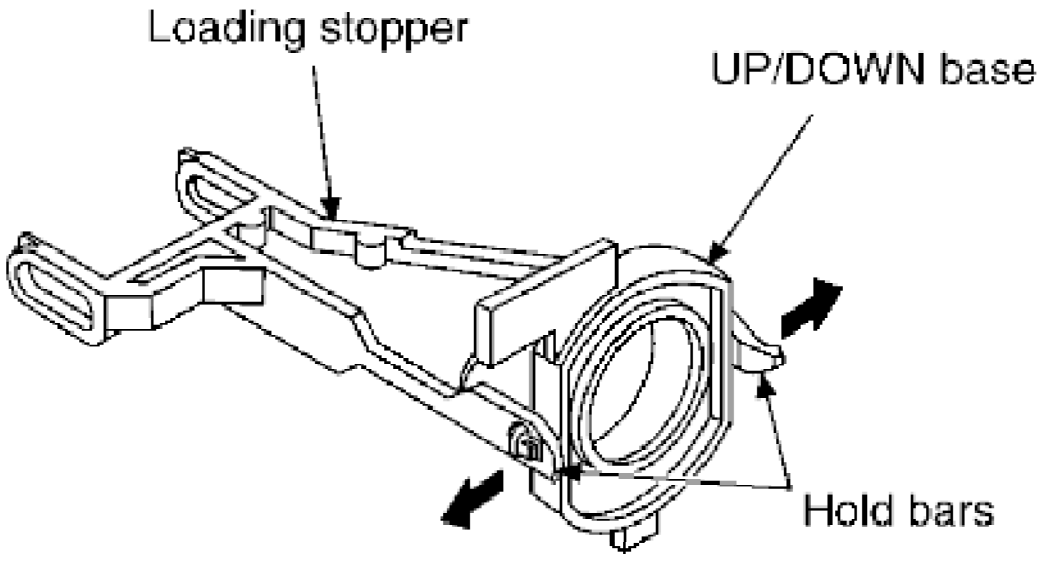
Loading stopper
UP/DOWN base
Hold bars

Step 15 Rotate the UP/DOWN base at a 90° angle. Then, spread the hold bars of loading stopper and remove the UP/DOWN base.

[Installation for loading stopper ass'y]

Step 1 Align the claw of loading stoppers ass'y with the slot of spindle base. (Caution should be exercised when alignment of claw due to the size of claws.)

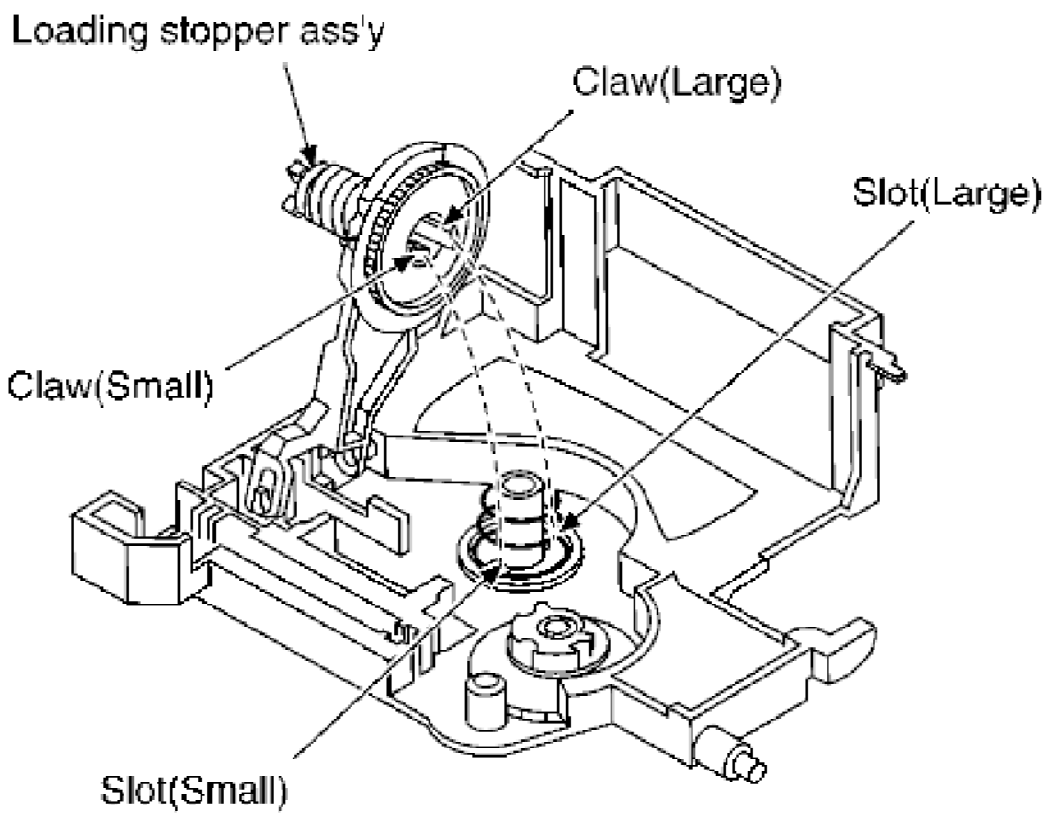
Loading stopper ass'y
Claw(Large)
Slot(Large)
Claw(Small)
Slot(Small)

Step 2 Lower the loading stopper ass'y, and then align the lower spindle with the trapezoid tooth of relay gear A.

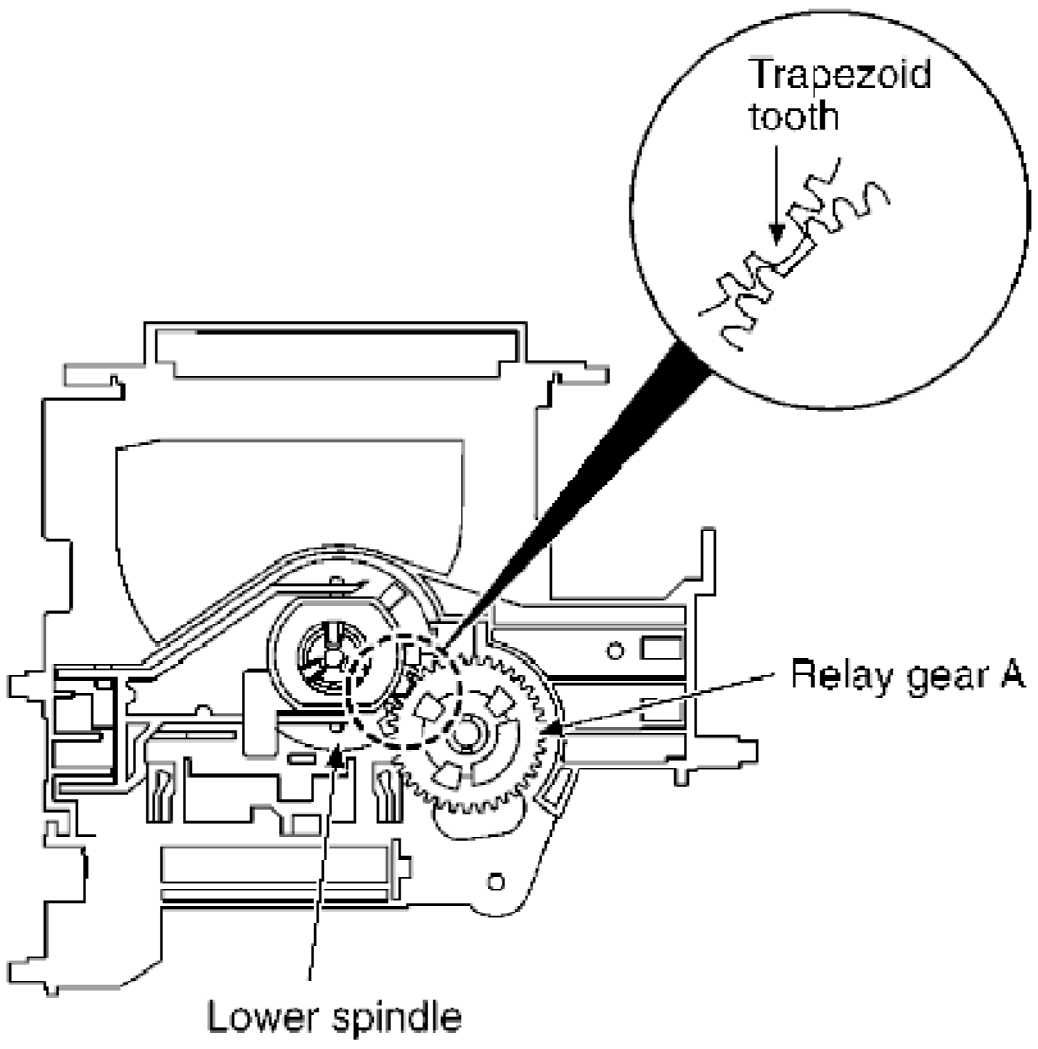
Trapezoid tooth
Relay gear A
Lower spindle

Step 3 Force the loading stopper ass'y, latch the claw firmly.

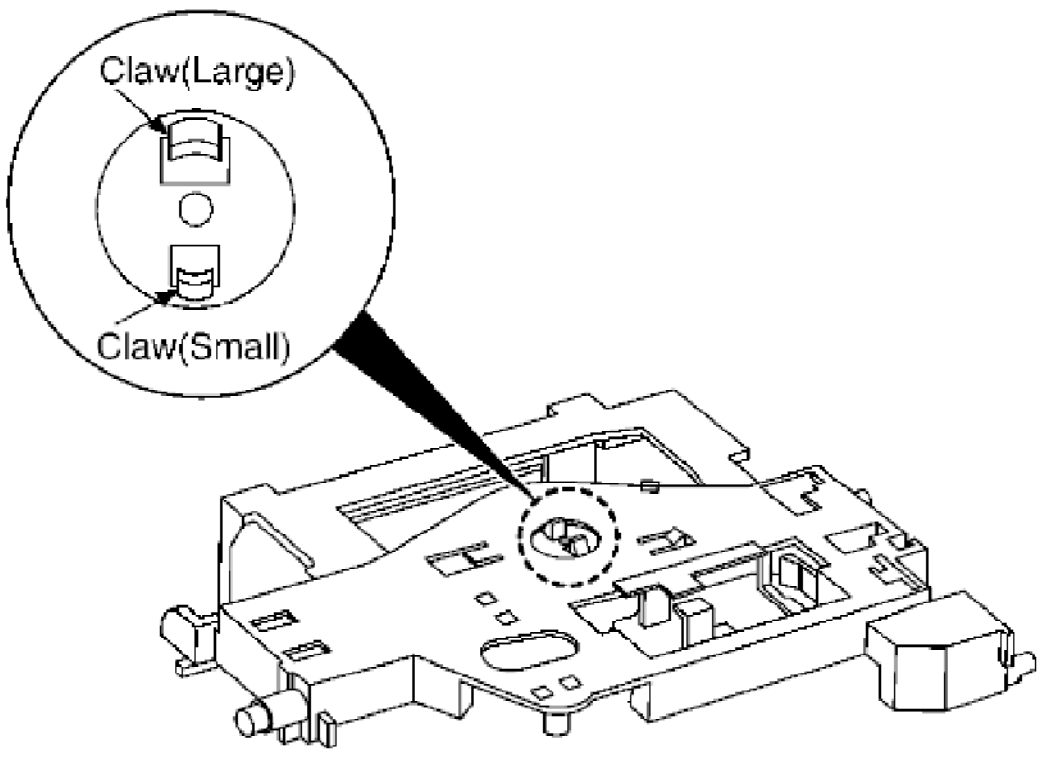
Claw(Large)
Claw(Small)

[Reassembly for mechanism base drive unit]

Step 1 Install the traverse cam gear.

Step 2 Rotate the traverse cam gear to the direction of arrow.

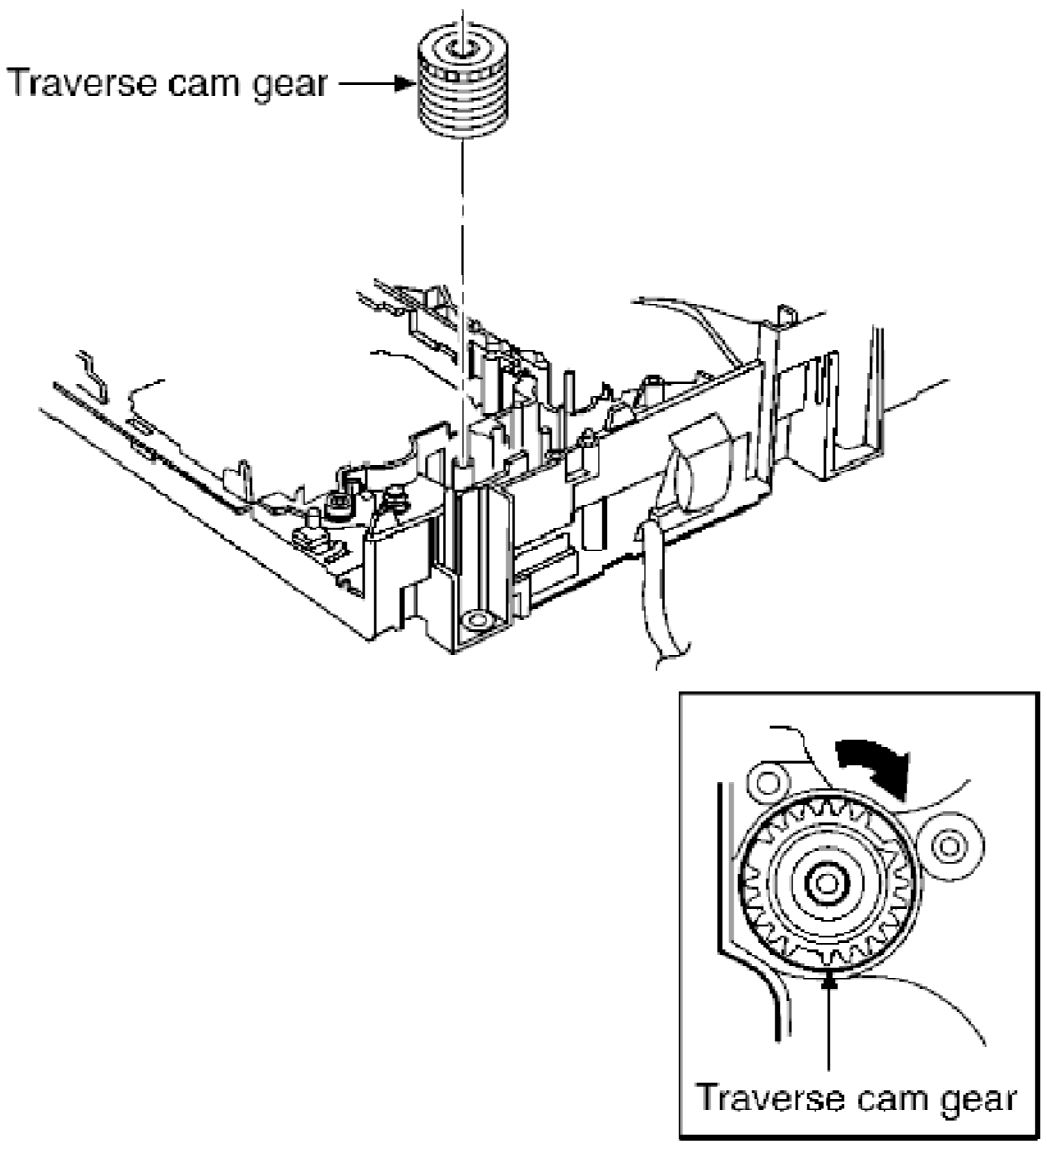
Traverse cam gear
Traverse cam gear

Step 3 Install the drive gear and traverse relay gear.

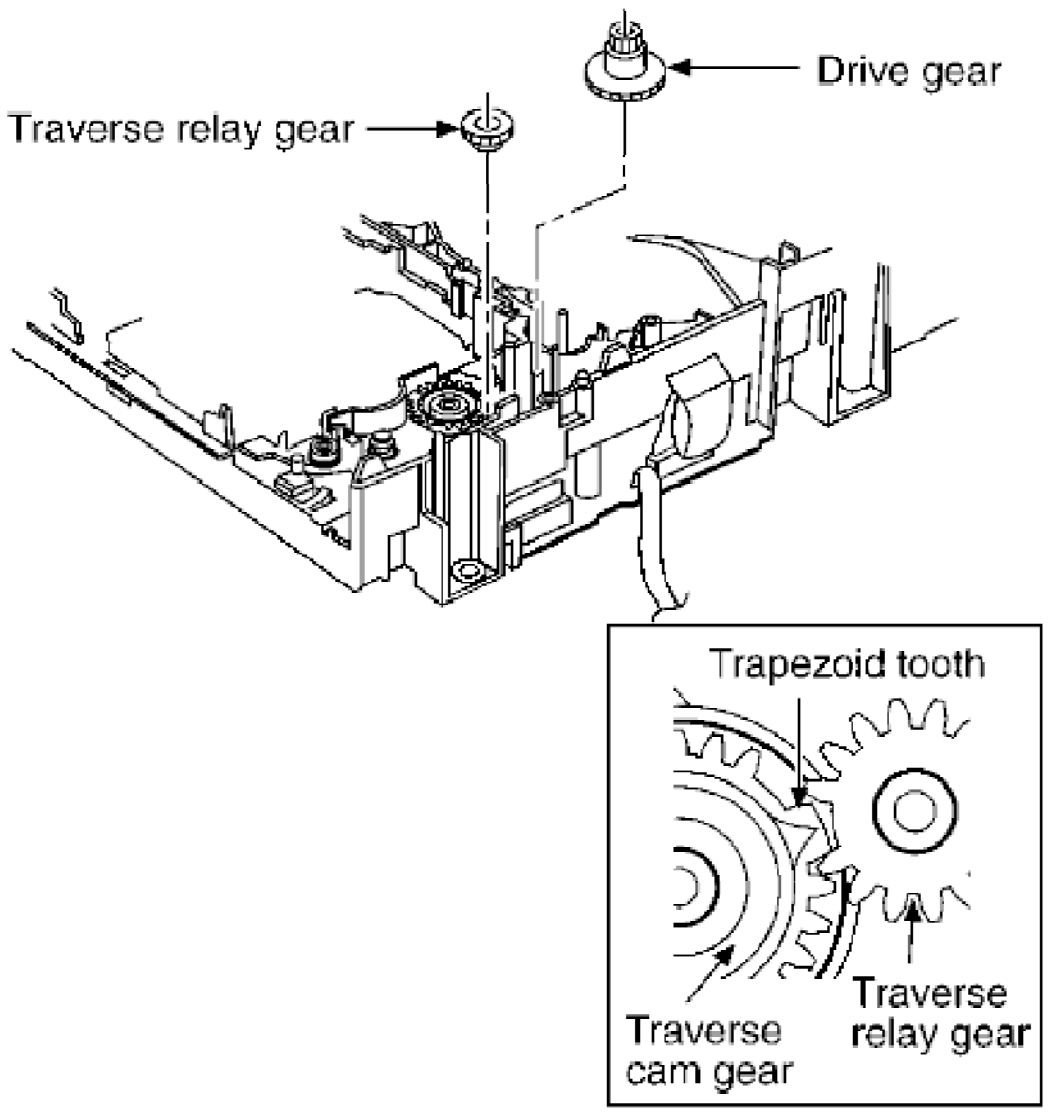
Drive gear
Traverse relay gear
Trapezoid tooth
Traverse relay gear
Traverse cam gear

***When installing the traverse relay gear, align the trapezoid tooth of gear with tooth of traverse cam gear.**

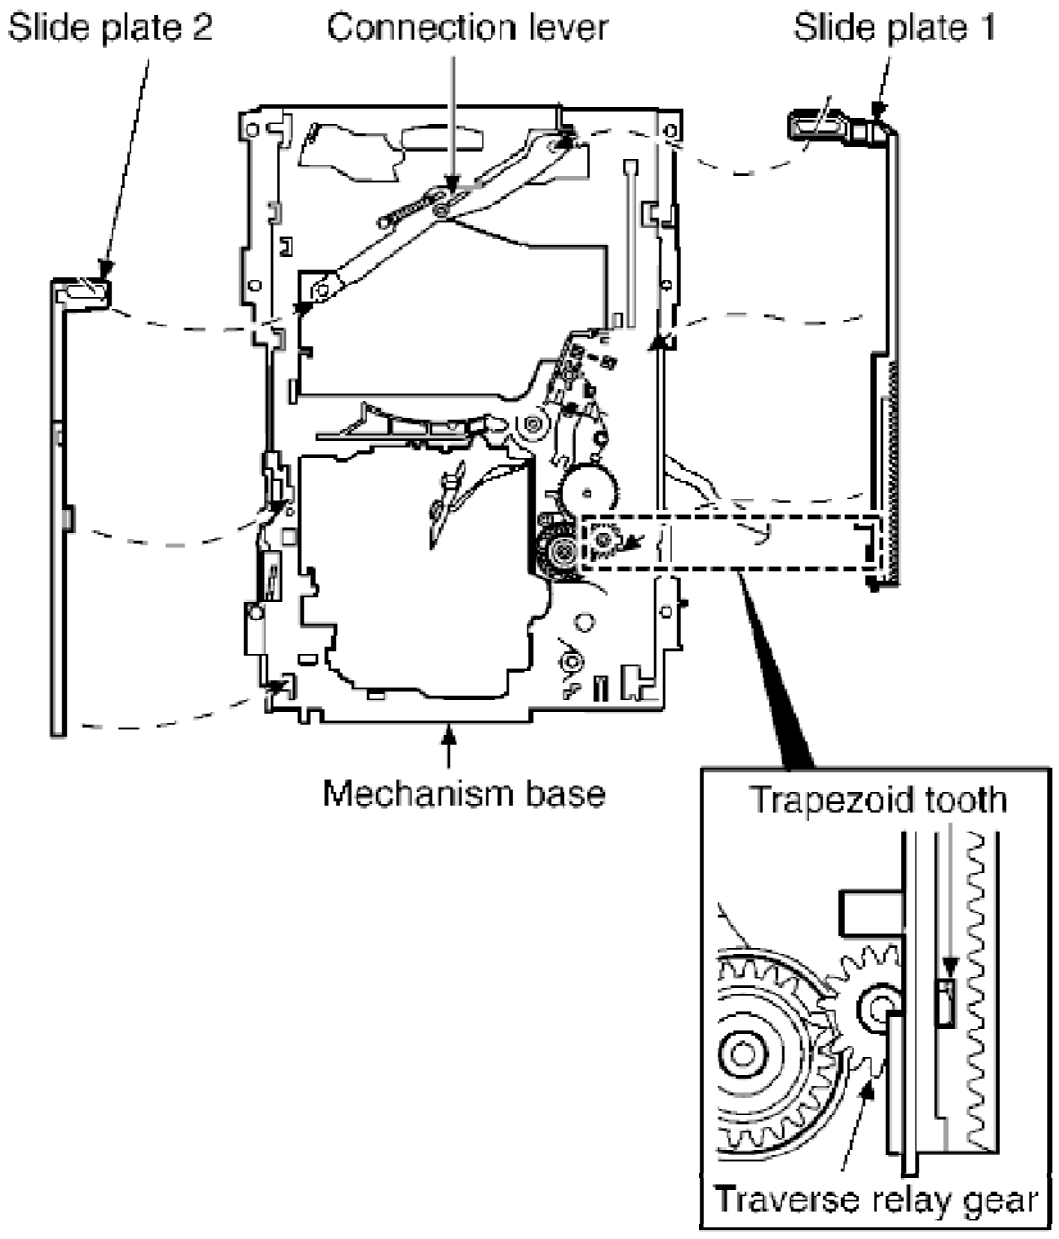
Slide plate 2
Connection lever
Slide plate 1
Mechanism base
Trapezoid tooth
Traverse relay gear

Step 4 Install the slide plate 2 to the mechanism base, and then match to the connection lever.
Step 5 Install the slide plate 1 to the mechanism base, and then match to the connection leve and align the trapezoid tooth of traverse relay gear with the slide plate 1.

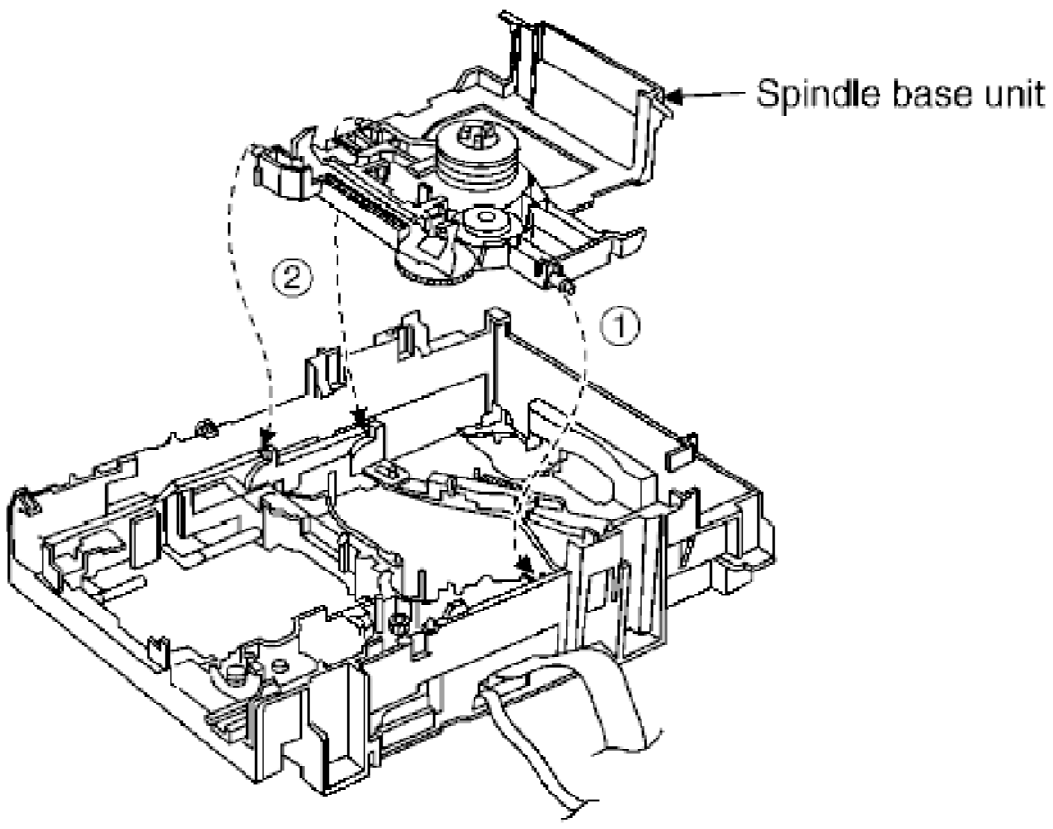
Spindle base unit
②
①

Step 6 Install the spindle base unit. (First, slide plate 1.)

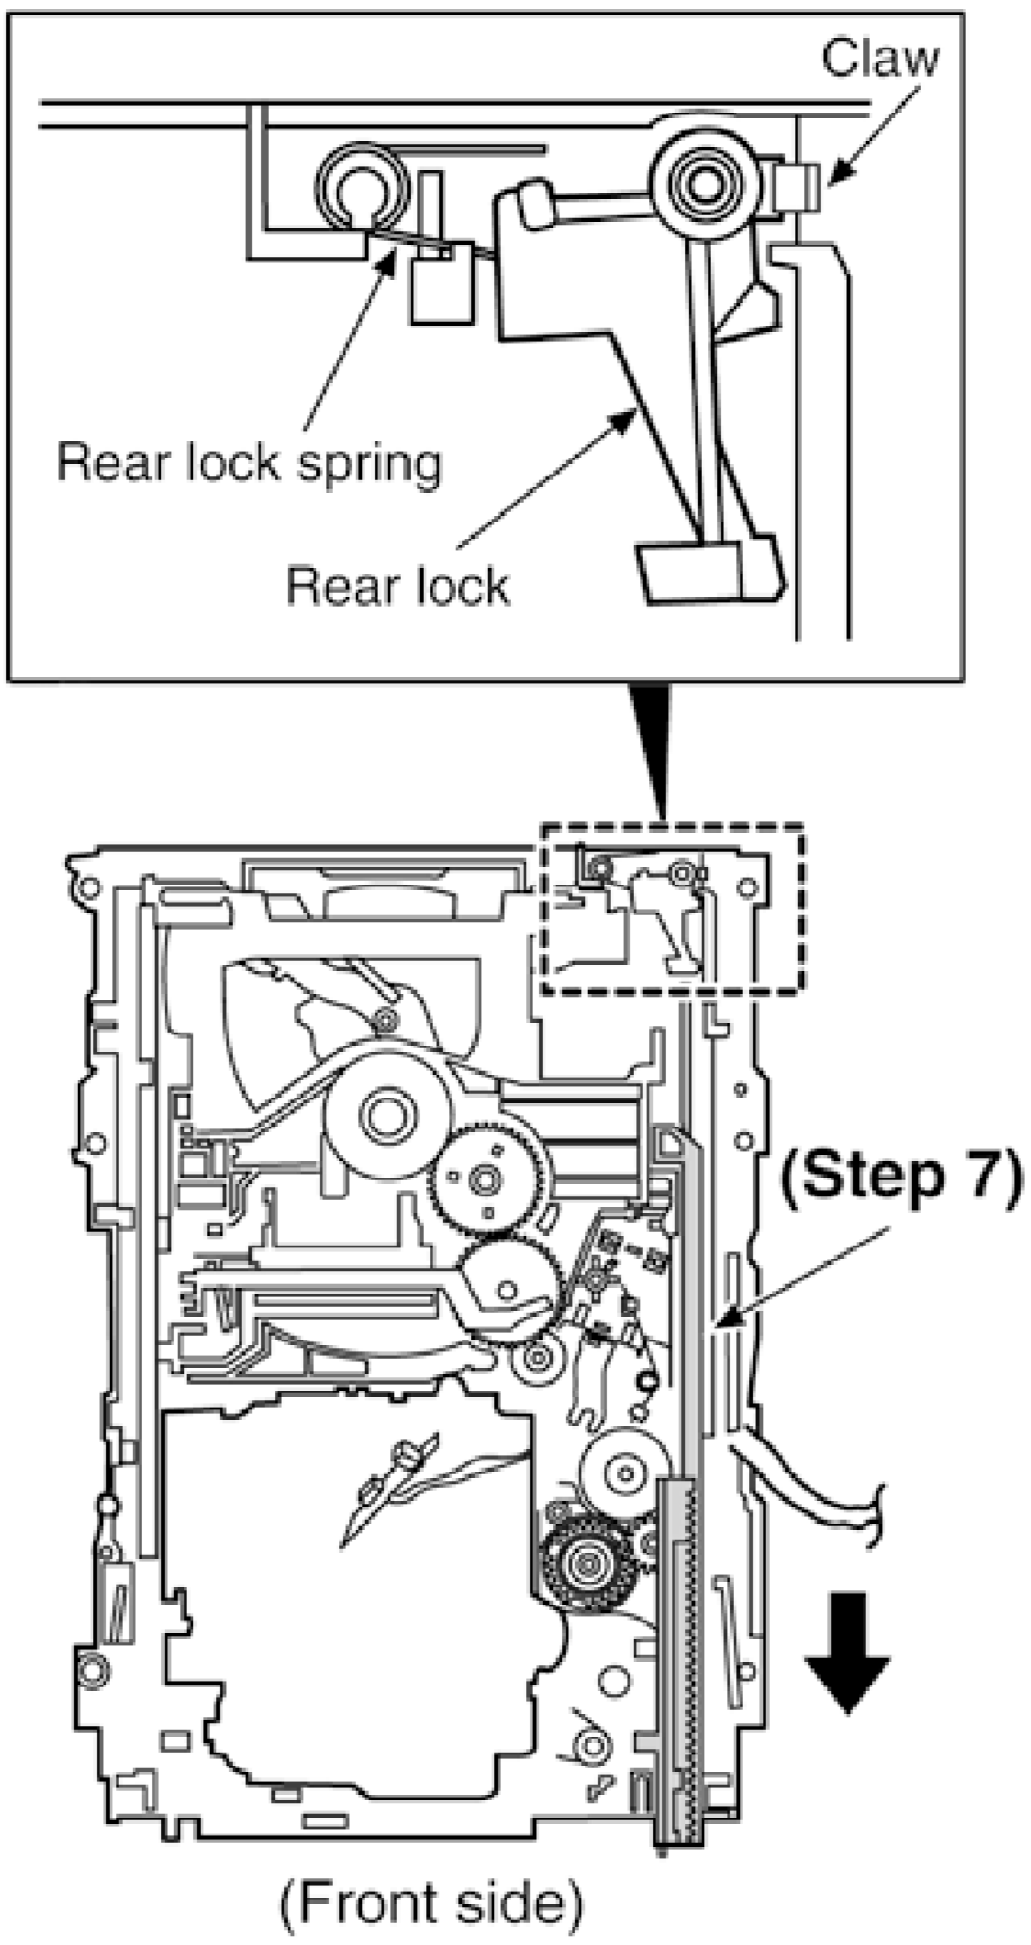
Claw
Rear lock spring
Rear lock
(Step 7)
(Front side)

Step 7 Move the slide plate 1 to forward fully.
Step 8 Install the rear lock. (The claw should be latched.)
Step 9 Install the Spindle Position P.C.B.. (The claw should be latched.)
Step 10 Install the tray lock. (The claw should be latched.)

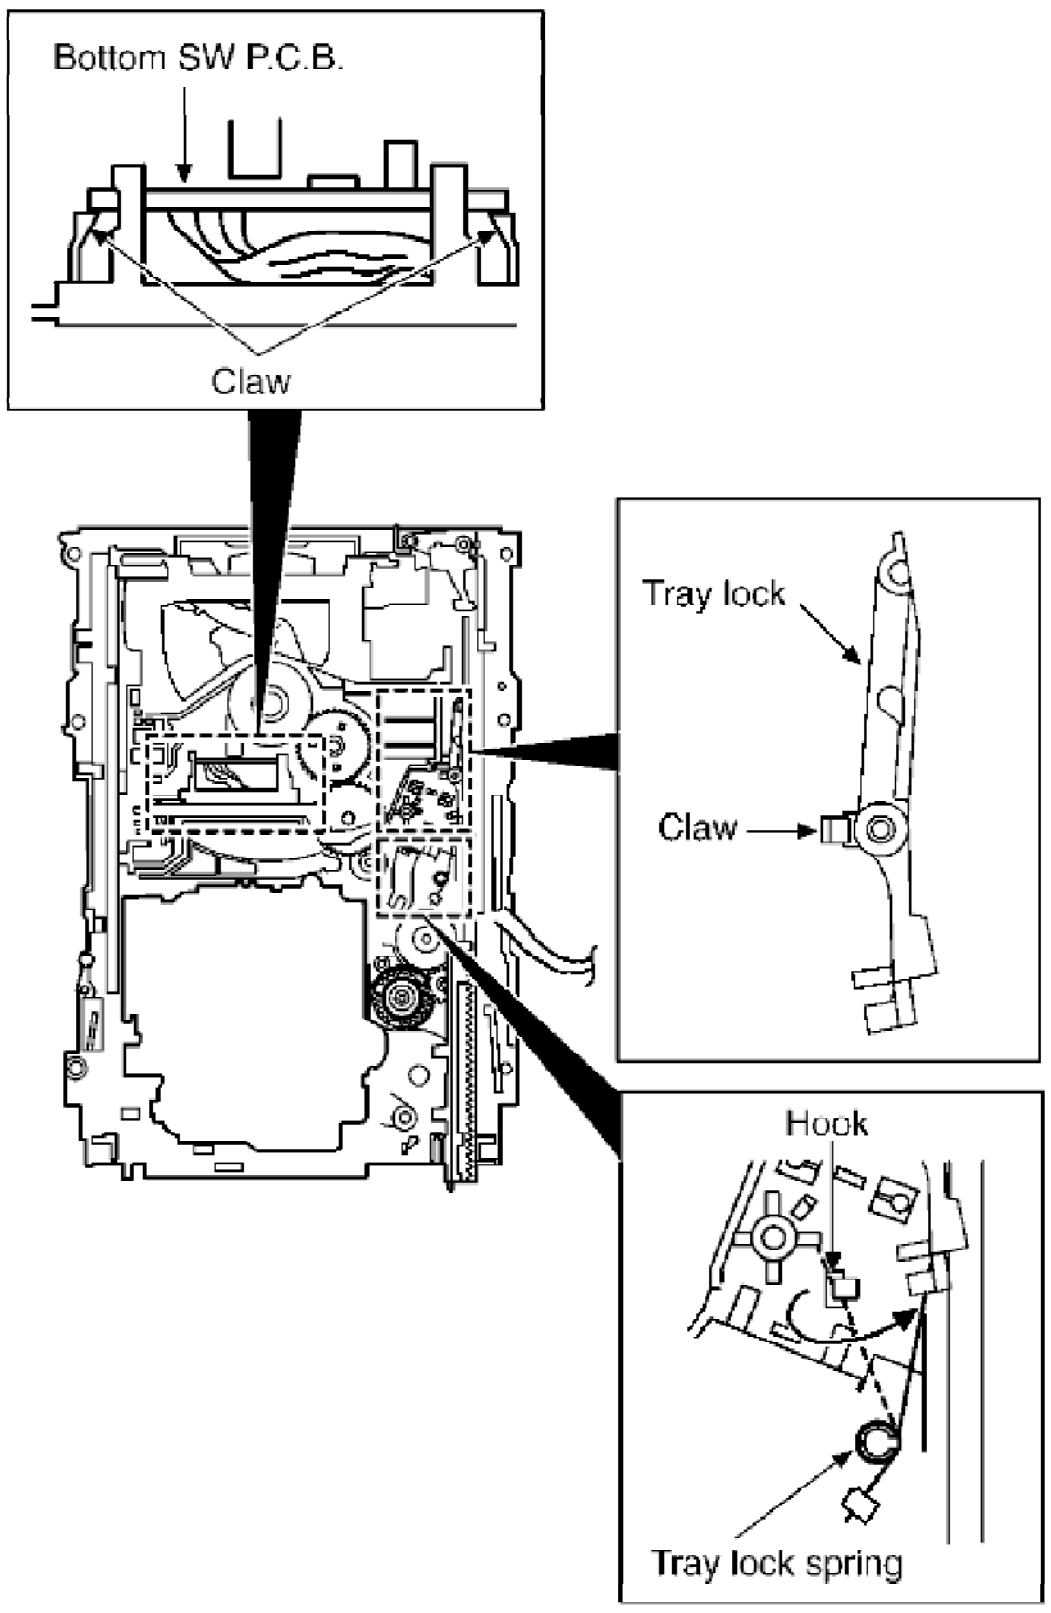
Bottom SW P.C.B.
Claw
Tray lock
Claw
Hook
Tray lock spring

Step 11 Remove the tray lock spring from hook,and then latch to the tray lock.

Step 12 Install the UP/DOWN gear, change gear, change gear spring, pulley gear and belt in the order of (1) - (5).

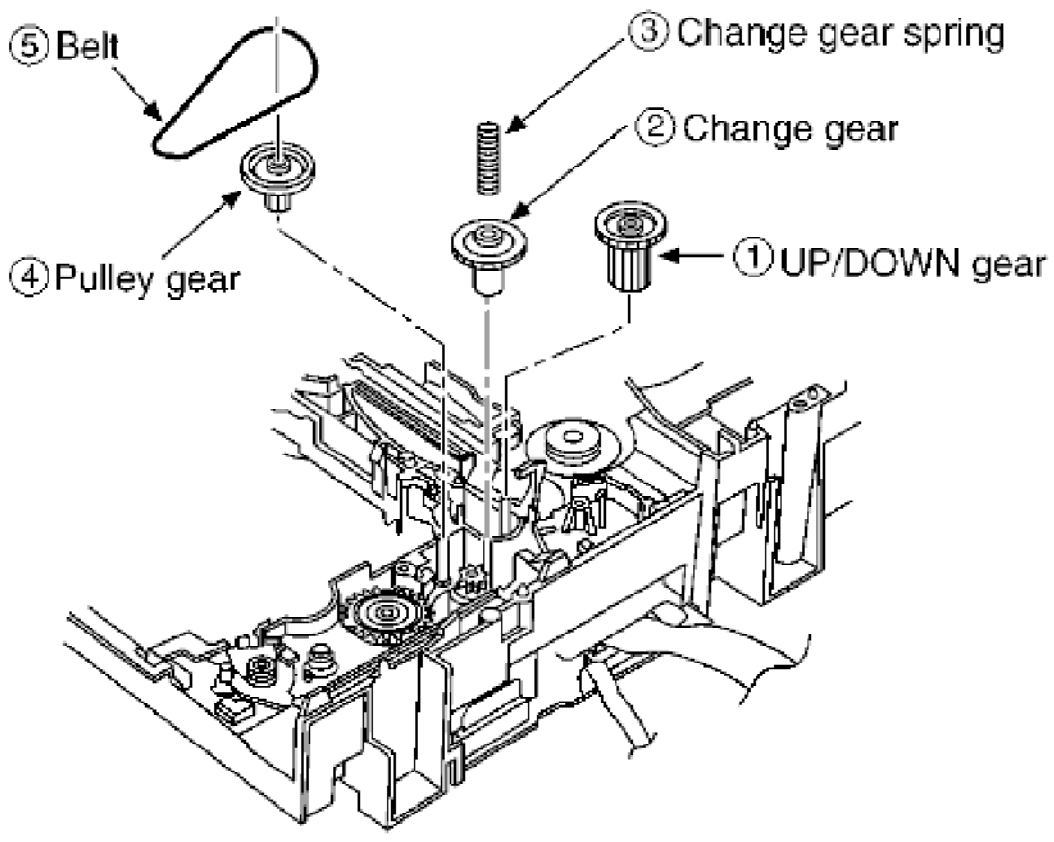
⑤Belt
③Change gear spring
②Change gear
④Pulley gear
①UP/DOWN gear

Step 13 Install the gear holder, and then tighten the screw (a).

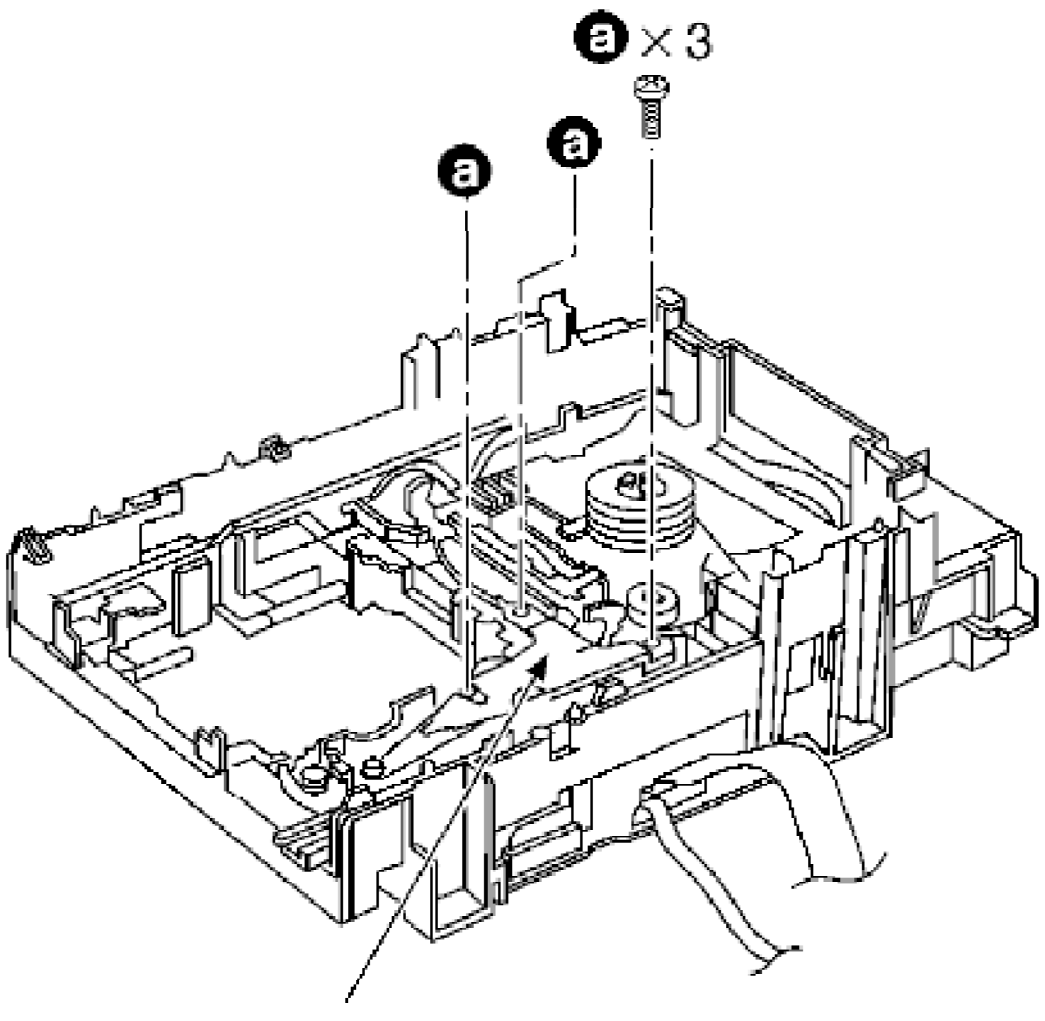

Step 14 Install the tray base, traverse ass’y, mechanism cover and upper plate.
[Operation check after servicing]
Check the proper operation of following items with gear and hexagonal screwdriver.

1. Open/close of tray base.

2. Moving the tray base to the stock side.

3. UP/DOWN operation of spindle base unit.

4. UP/DOWN operation of traverse ass’y.

10.13.4. Replacement for the motor ass’y

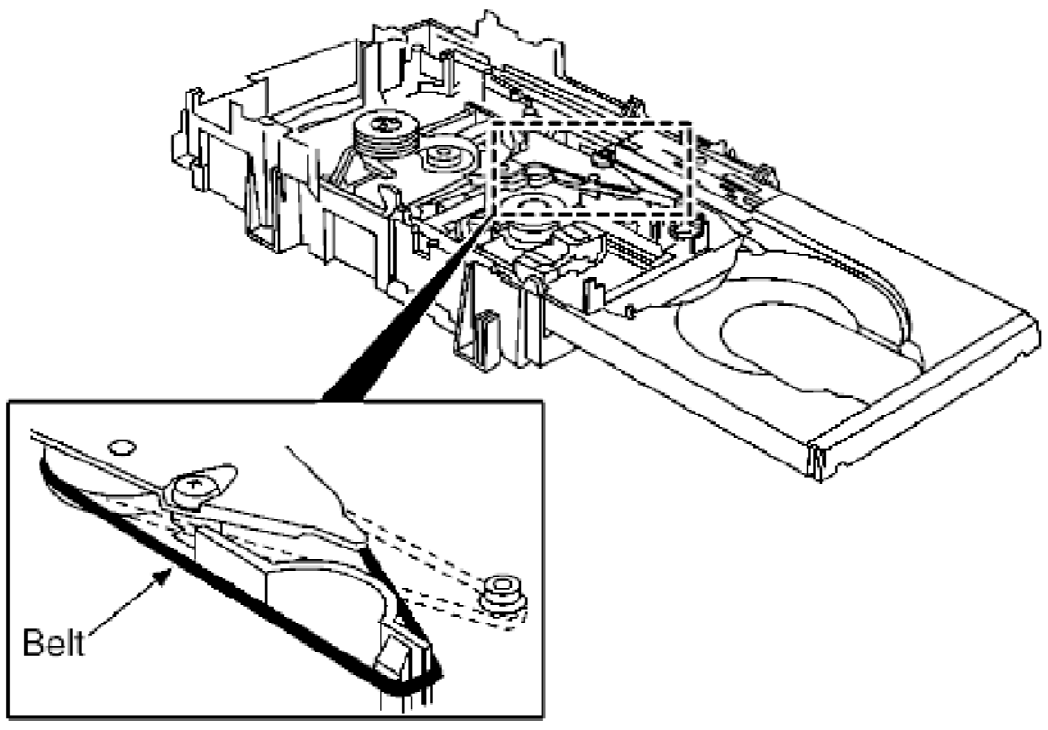

Step 1 Install the belt temporarily.
NOTE:
Take care not apply the grease to the belt.
Step 2 Upset the CD loading unit.
Step 3 Remove 3 screws.

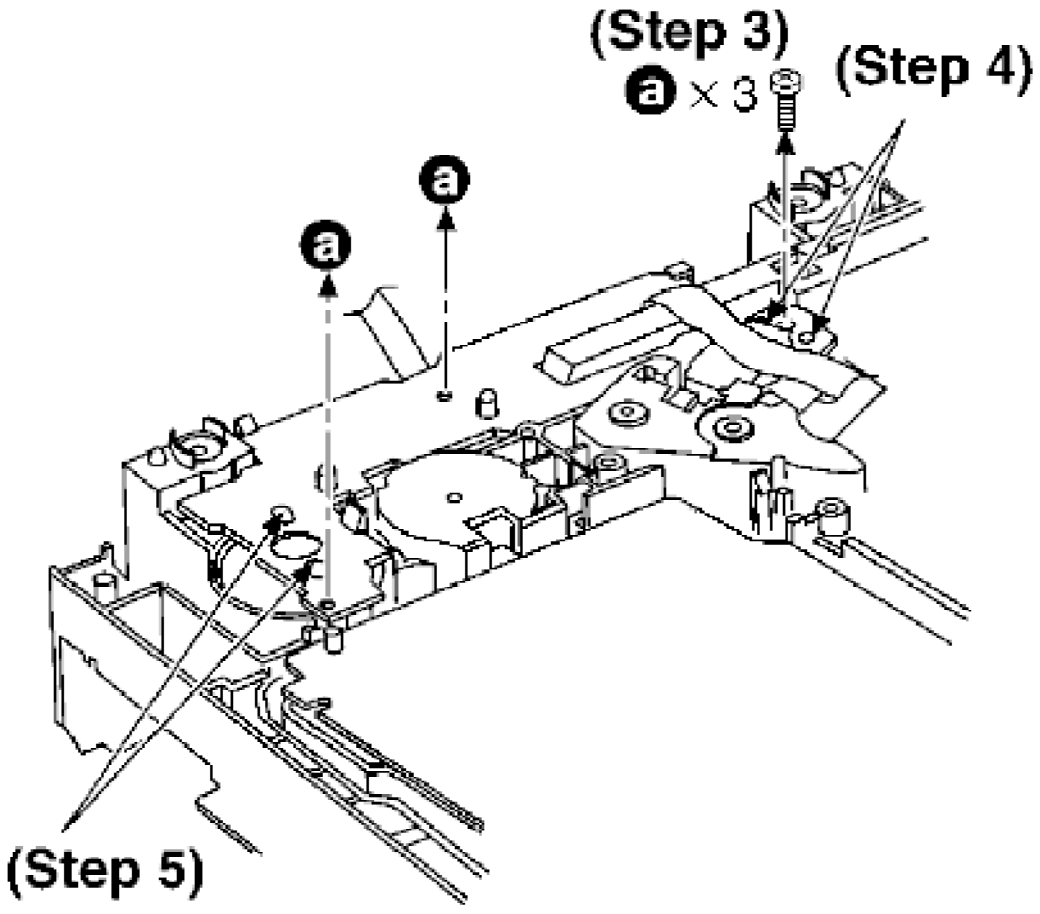
(Step 3)
ⓐ × 3
(Step 4)
ⓐ
ⓐ
(Step 5)

Step 4 Unsolder the plunger terminals (2 points).
Step 5 Unsolder the motor terminals (2 points).

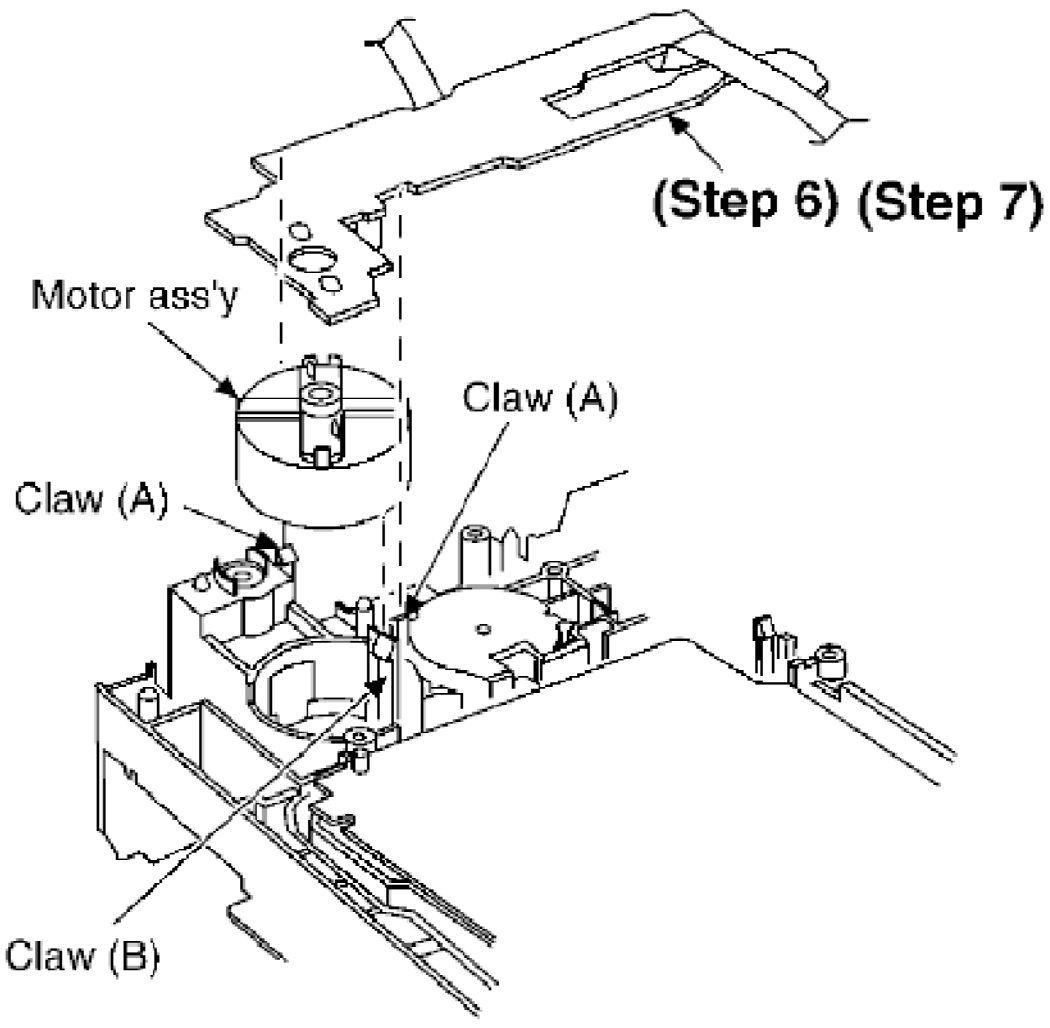
(Step 6) (Step 7)
Motor ass'y
Claw (A)
Claw (A)
Claw (B)

Step 6 Release the 2 claws (A), and then remove the Motor P.C.B.
Step 7 Release the claw (B), and then remove the motor ass'y.
[Notice for motor ass'y installation]

1. Locate the name plate of motor to the traverse ass'y.

2. Align the hole of motor with the ribs.

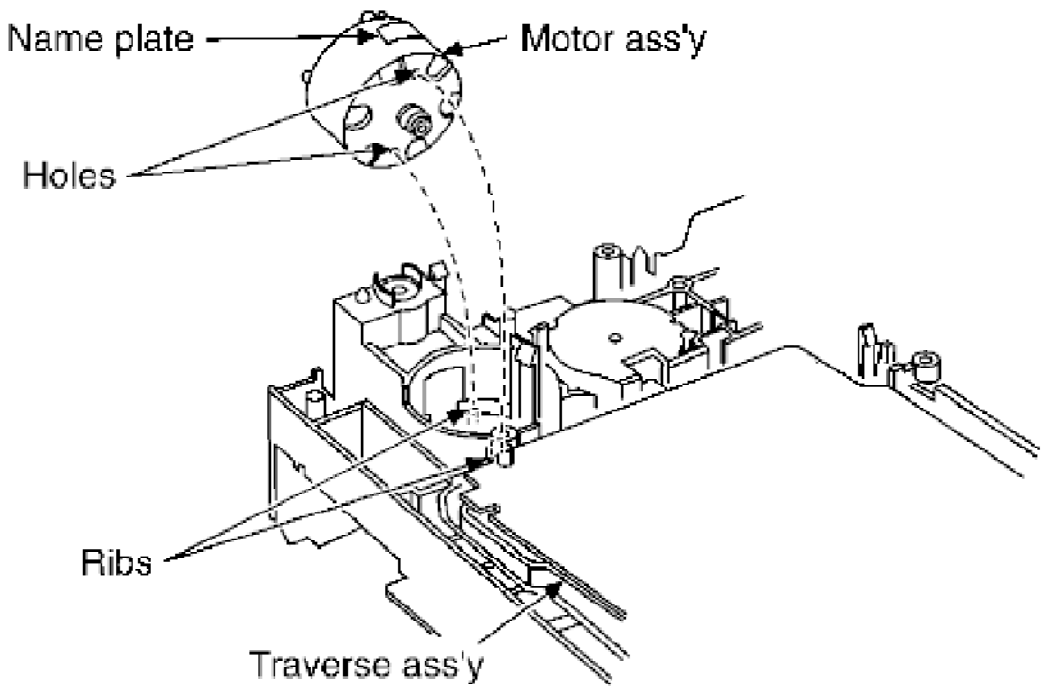
Name plate
Motor ass'y
Holes
Ribs
Traverse ass'y

10.14. Replacement for the pinch roller ass'y and head block

- **Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet**
- **Follow the (Step 1) - (Step 6) of Item 10.4 - Disassembly of CD Lid**
- **Follow the (Step 1) - (Step 3) of Item 10.6 - Disassembly of CD Mechanism Unit**
- **Follow the (Step 1) - (Step 3) of Item 10.11 - Disassembly of Front Panel Unit**
- **Follow the (Step 1) - (Step 5) of Item 10.12 - Disassembly of Deck Mechanism Unit**

*** The mechanism as shown below is for DECK1. For DECK 2, perform the same procedures.**

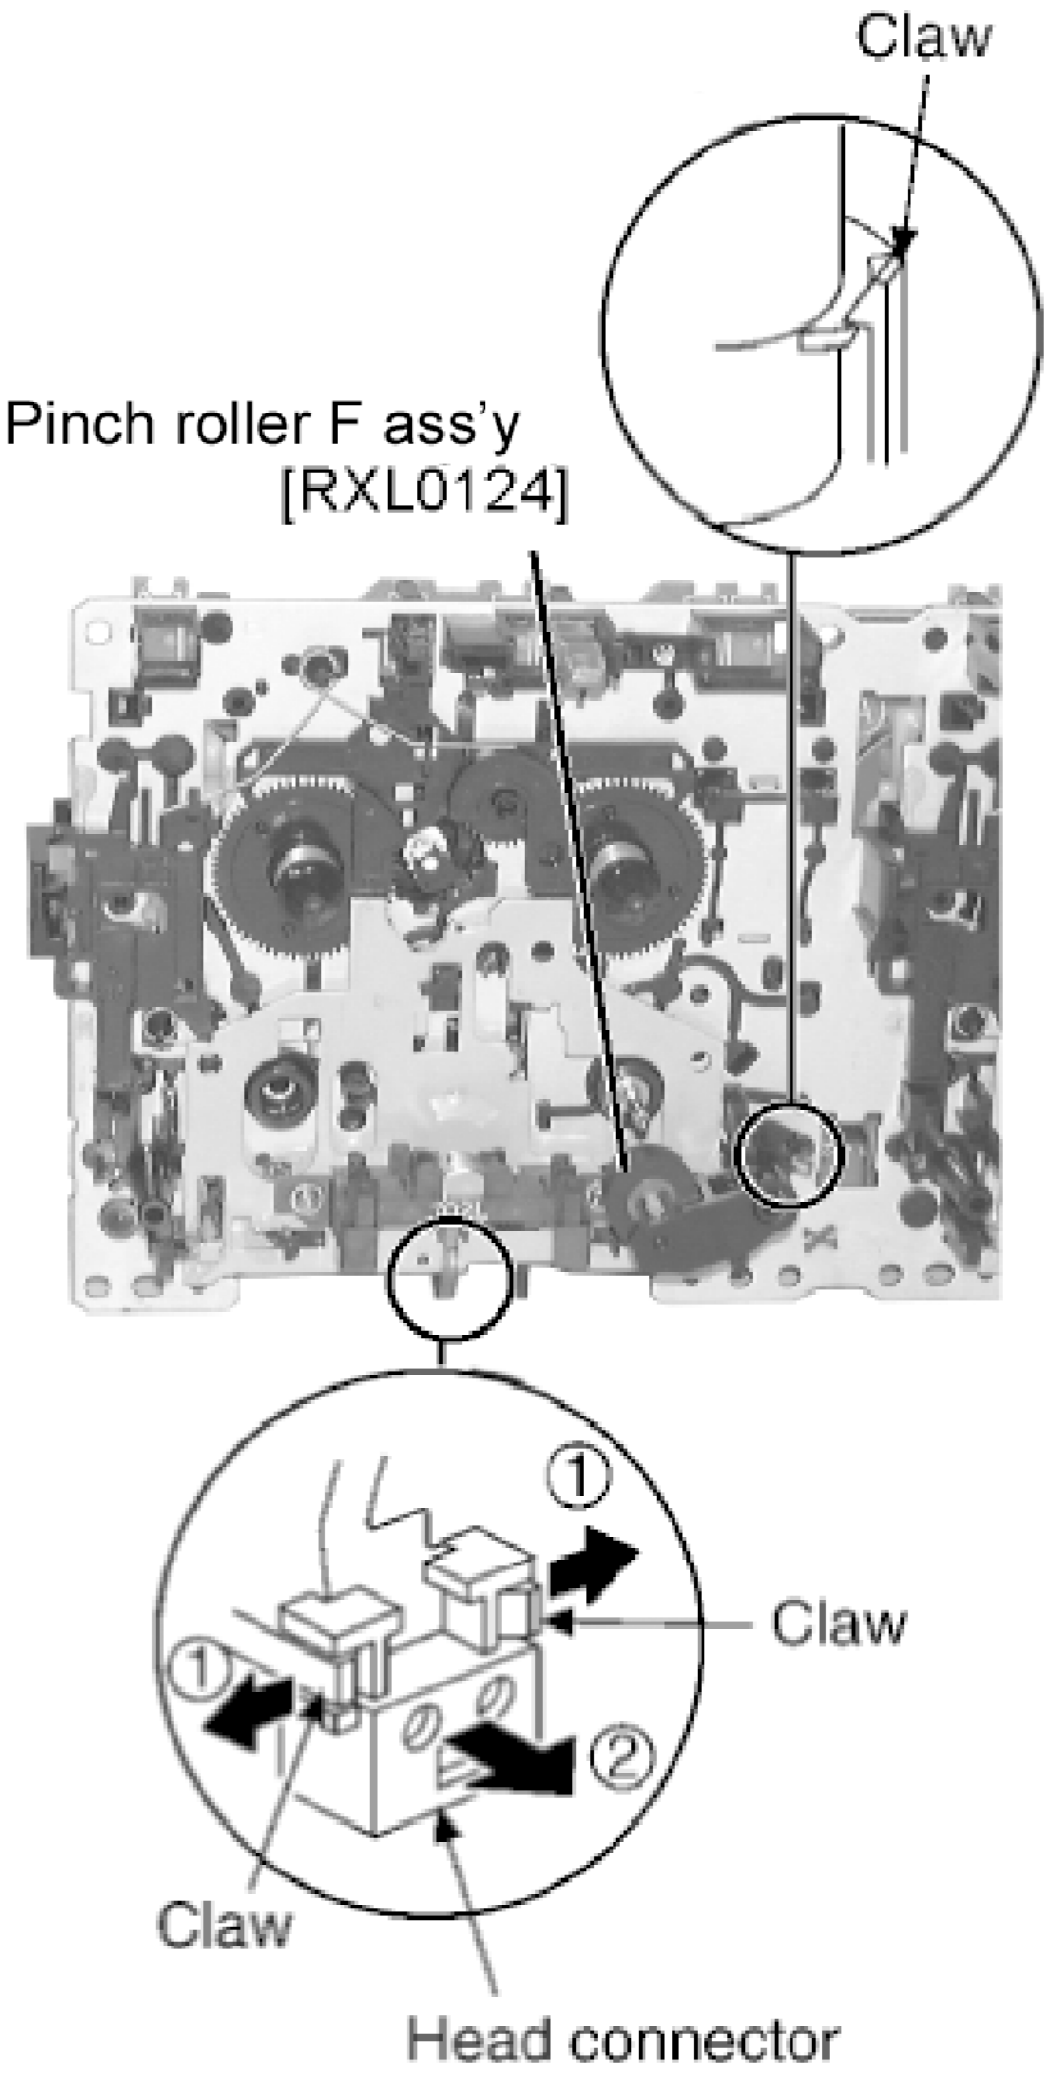
Claw
Pinch roller F ass'y
[RXL0124]
①
Claw
①
②
Claw
Head connector

Step 1 Release the 2 claws, and then remove the pinch roller (R), (F).
Step 2 Release the 2 claws, and then remove the head connector.

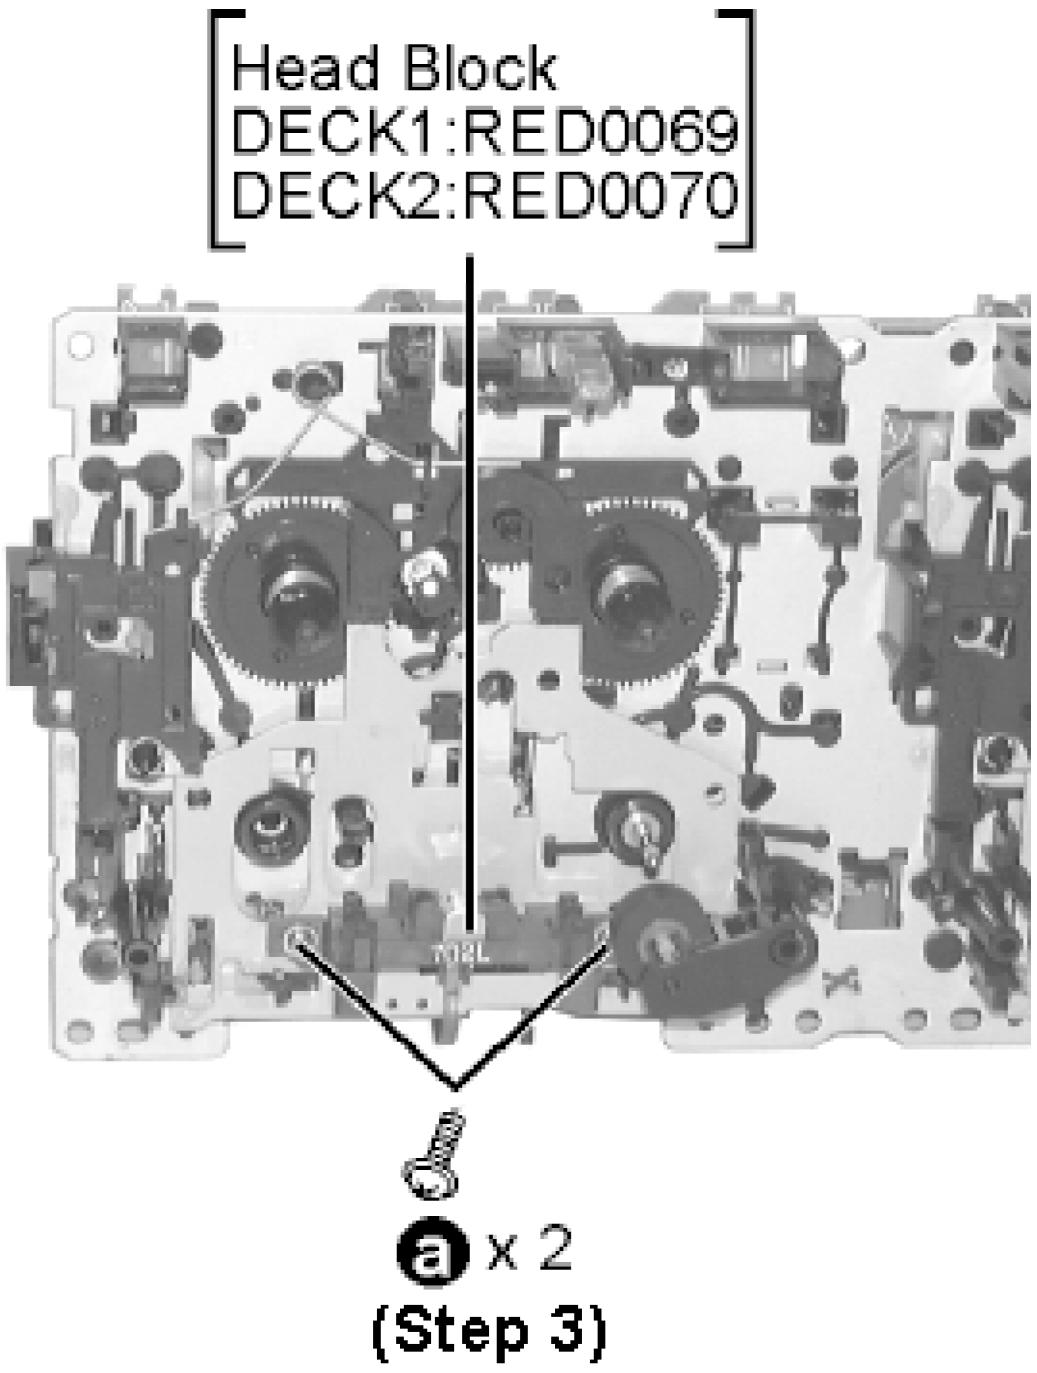

Step 3 Remove 2 screws.

10.15. Replacement for the Deck motor ass'y, capstan belt A, capstan belt B and winding belt

- **Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet**
- **Follow the (Step 1) - (Step 6) of Item 10.4 - Disassembly of CD Lid**
- **Follow the (Step 1) - (Step 3) of Item 10.6 - Disassembly of CD Mechanism Unit**
- **Follow the (Step 1) - (Step 3) of Item 10.11 - Disassembly of Front Panel Unit**
- **Follow the (Step 1) - (Step 5) of Item 10.12 - Disassembly of Deck Mechanism Unit**

Step 1 Release the 2 claws, and then remove the head connector.

Step 2 De-solder plunger point.

Step 3 Remove the Deck Mechanism P.C.B.

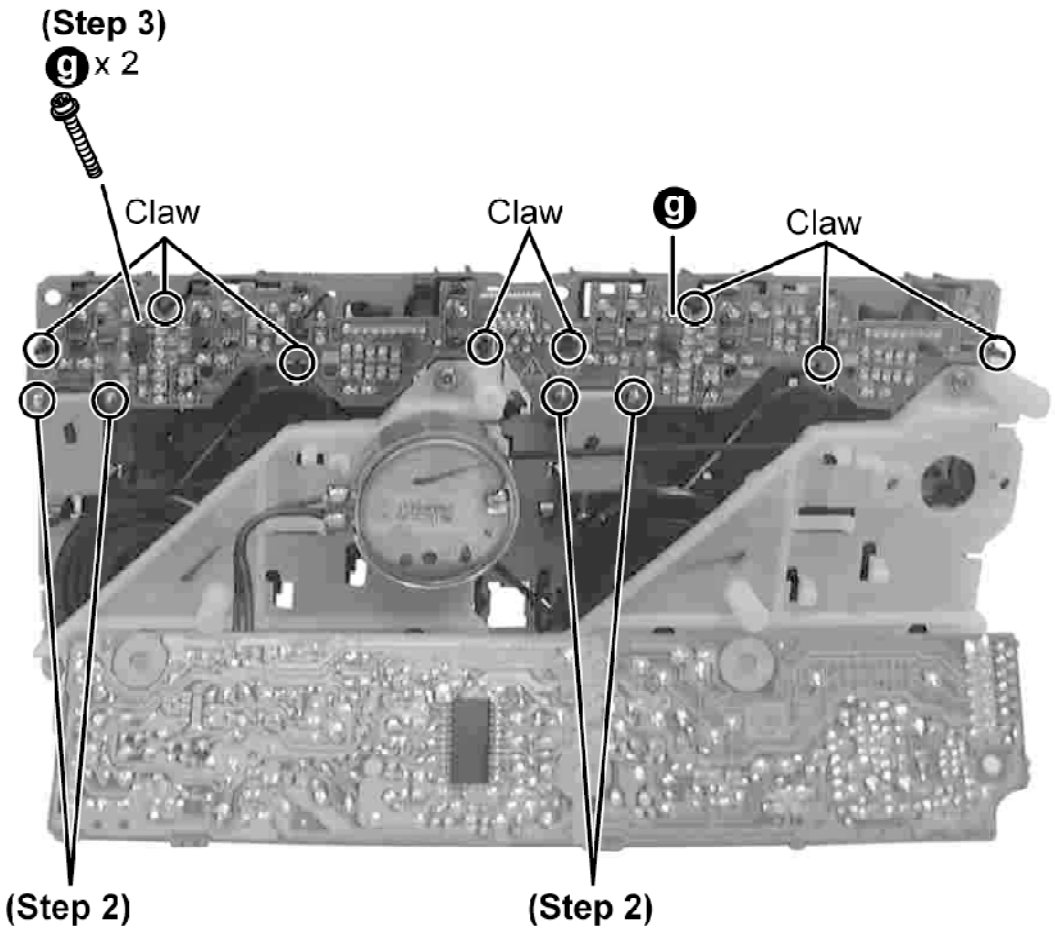
(Step 3)
g x 2
Claw
Claw
g
Claw
(Step 2)
(Step 2)

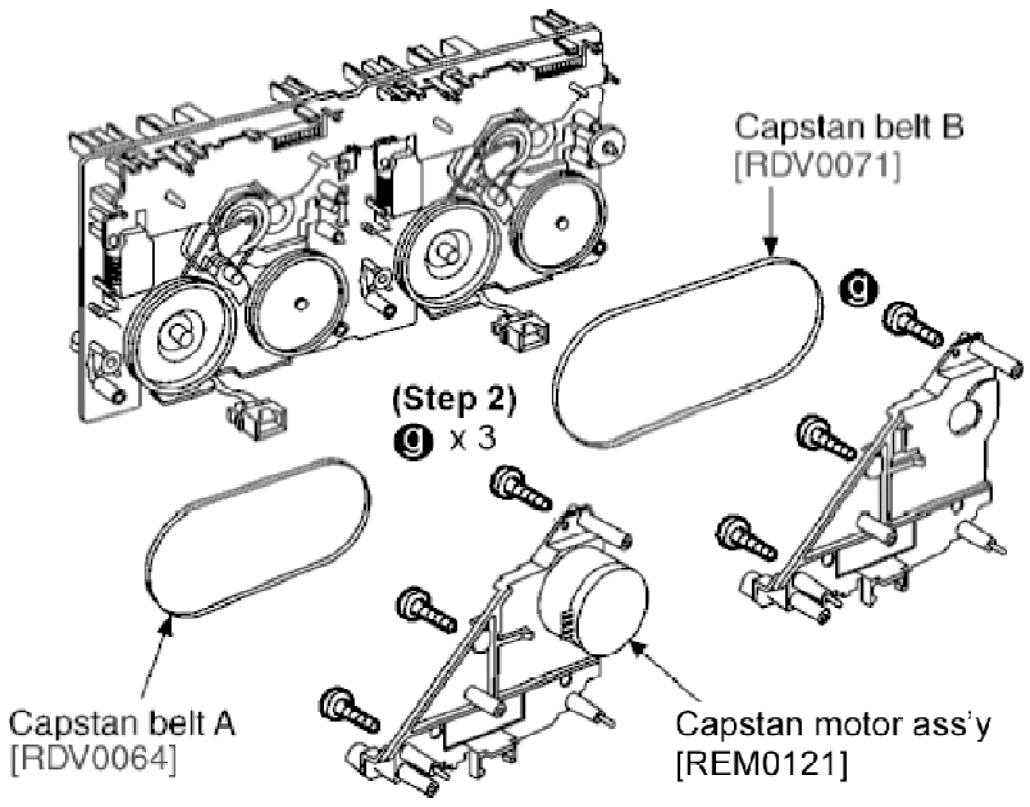
Capstan belt B
[RDV0071]
g
(Step 2)
g x 3
Capstan belt A
[RDV0064]
Capstan motor ass'y
[REM0121]

Step 4 Remove 3 screws.

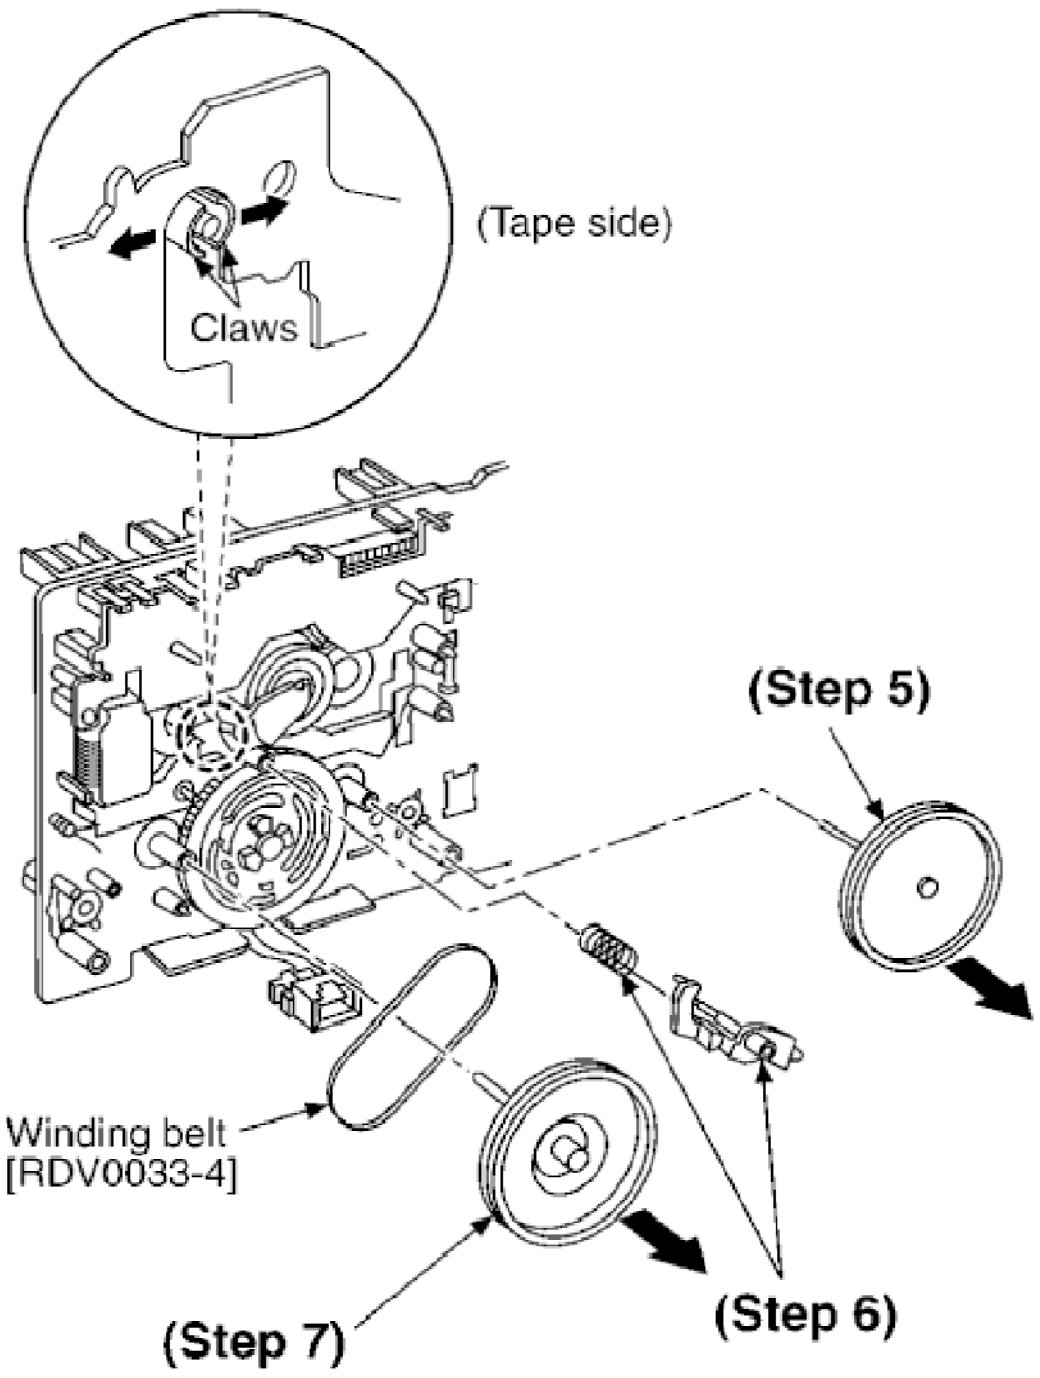
(Tape side)
Claws
(Step 5)
Winding belt
[RDV0033-4]
(Step 7)
(Step 6)

Step 5 Remove the flywheel R.
Step 6 Release the claw of tape side, and then remove the winding lever and spring.
Step 7 Remove the flywheel F.

[Installation of the belt]

Step 1 The boss and marking should be positioned horizontally.

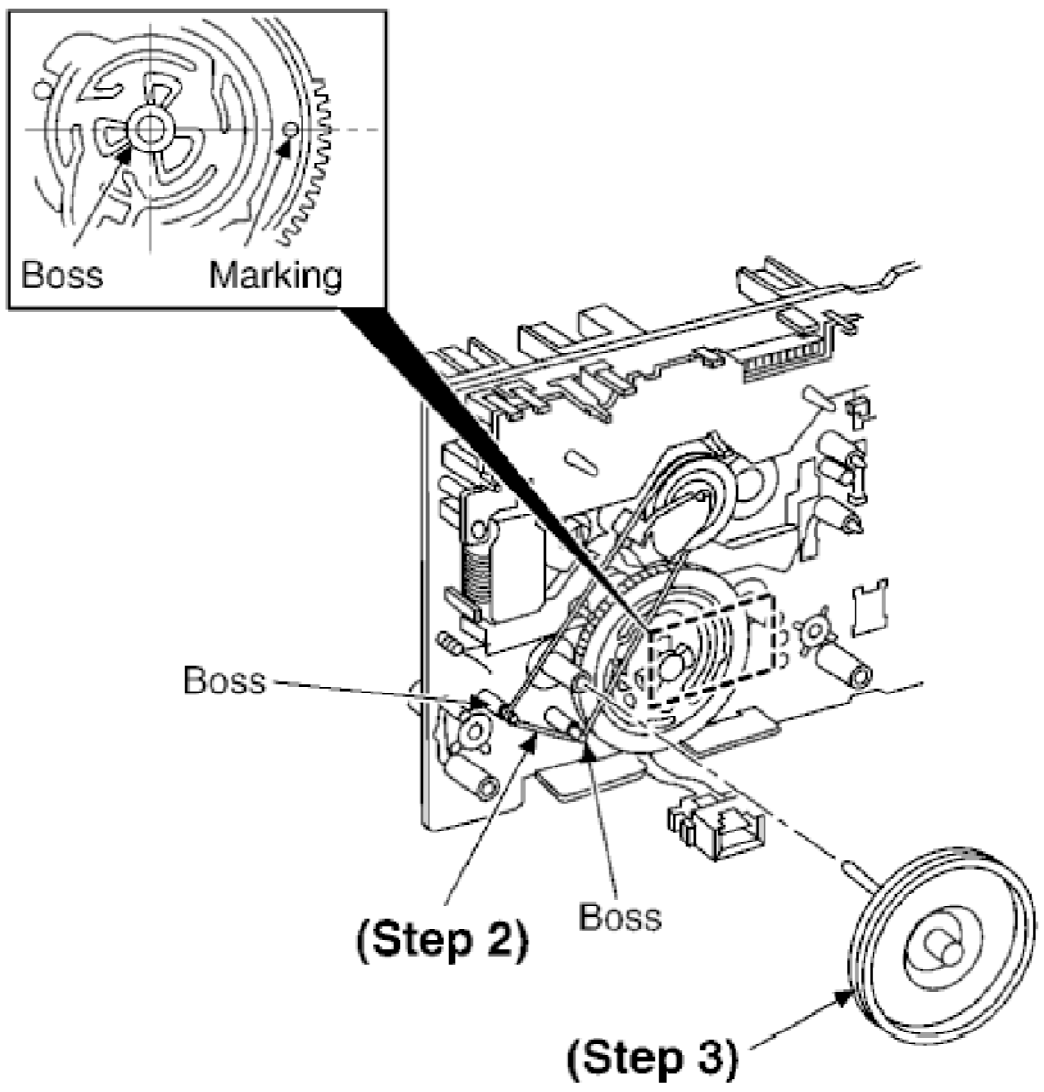
Boss
Marking
Boss
(Step 2)
Boss
(Step 3)

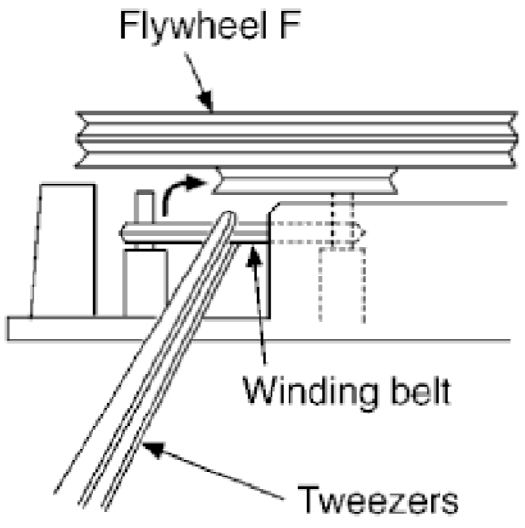
Flywheel F
Winding belt
Tweezers

Step 2 Put the winding belt on the pulley temporarily.

Step 3 Install the flywheel F.

Step 4 Put the winding belt on the flywheel F.

Step 5 Install the winding lever and spring while pressing the winding arm in the direction of arrow.

Step 6 Install the flywheel R.

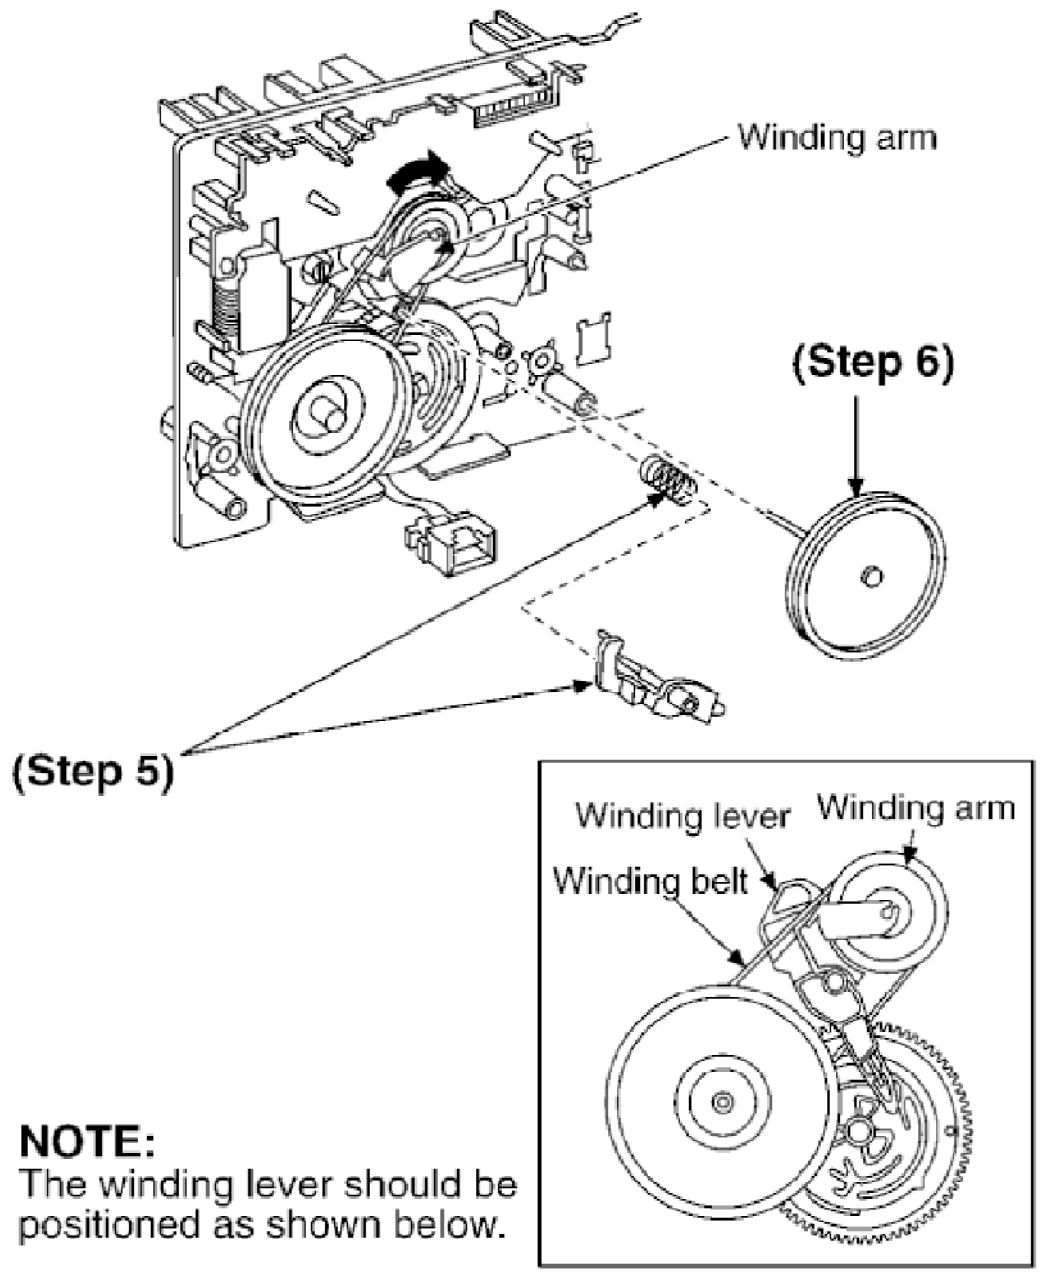
Winding arm
(Step 6)
(Step 5)
Winding lever
Winding arm
Winding belt

NOTE:
The winding lever should be positioned as shown below.

Step 7 Put the capstan belt A temporarily as shown below.

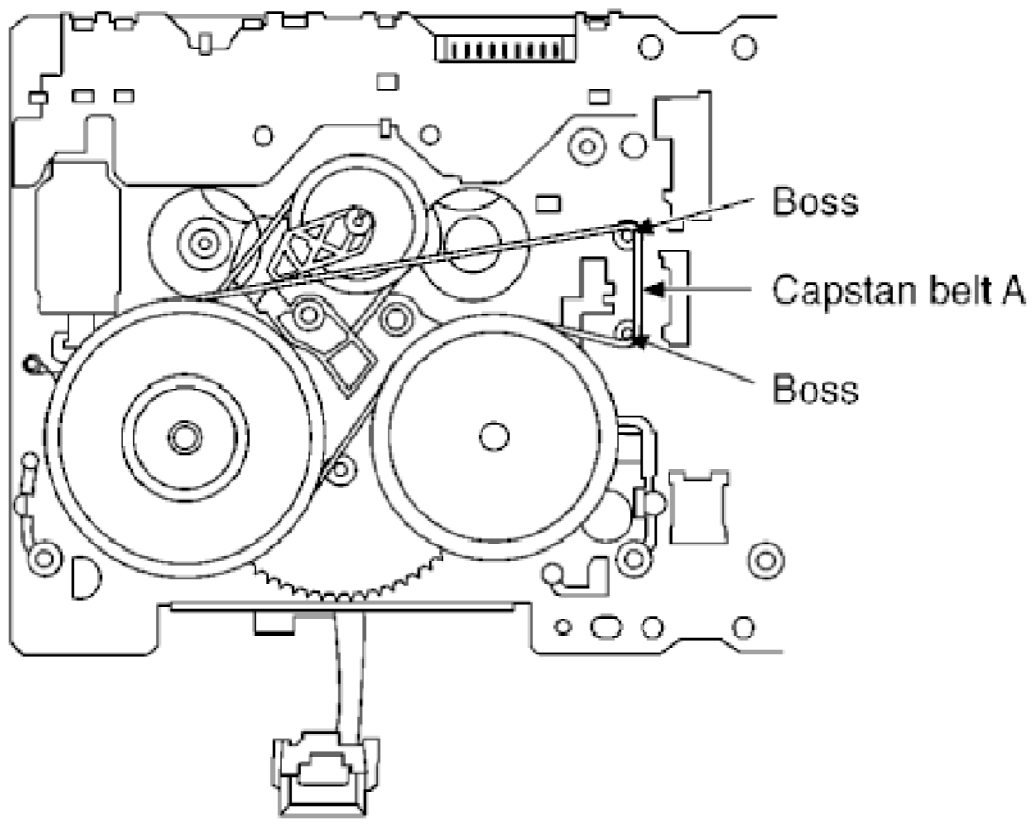
Boss
Capstan belt A
Boss

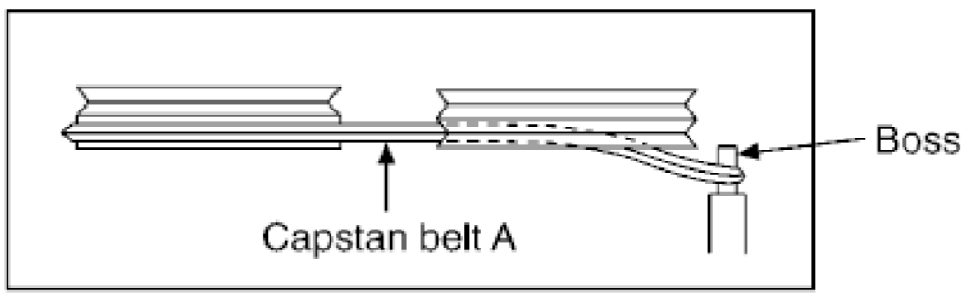
Boss
Capstan belt A

(Side view)

Step 8 Put the capstan belt B on the motor ass'y pulley.

Step 9 Install the sub chassis to the mechanism, and then tighten screws.

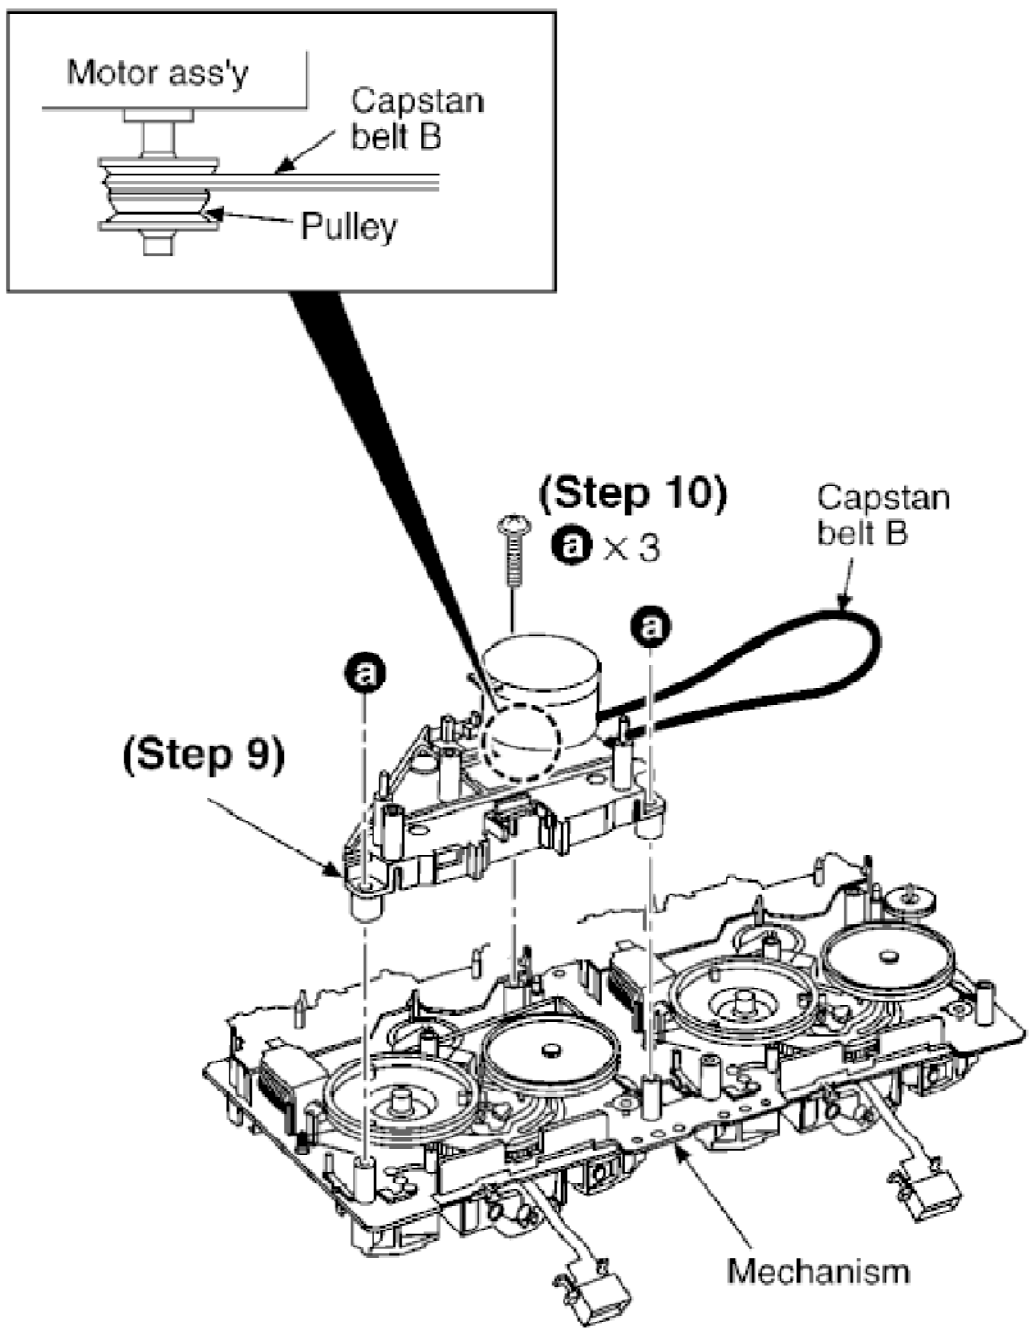
Motor ass'y
Capstan belt B
Pulley
(Step 10)
a × 3
Capstan belt B
a
a
(Step 9)
Mechanism

Step 10 Remove 3 screws.

Step 11 Put the capstan belt B as shown below.

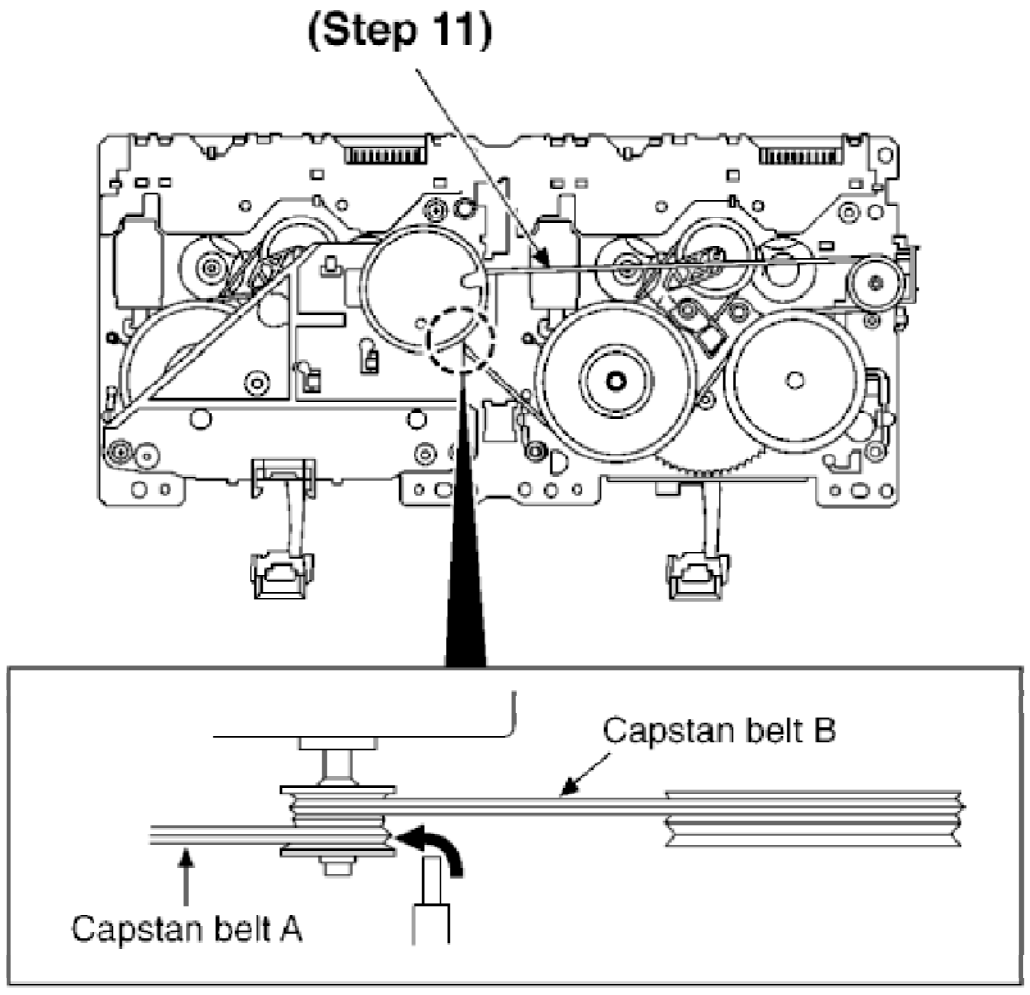
(Step 11)
Capstan belt B
Capstan belt A

Step 12 Put the capstan belt A on the motor ass'y pulley.

10.16. Replacement for the cassette lid ass'y

- Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet

Step 1 Lift up the lever upward, open the cassette lid ass'y. (For DECK1 and DECK2)

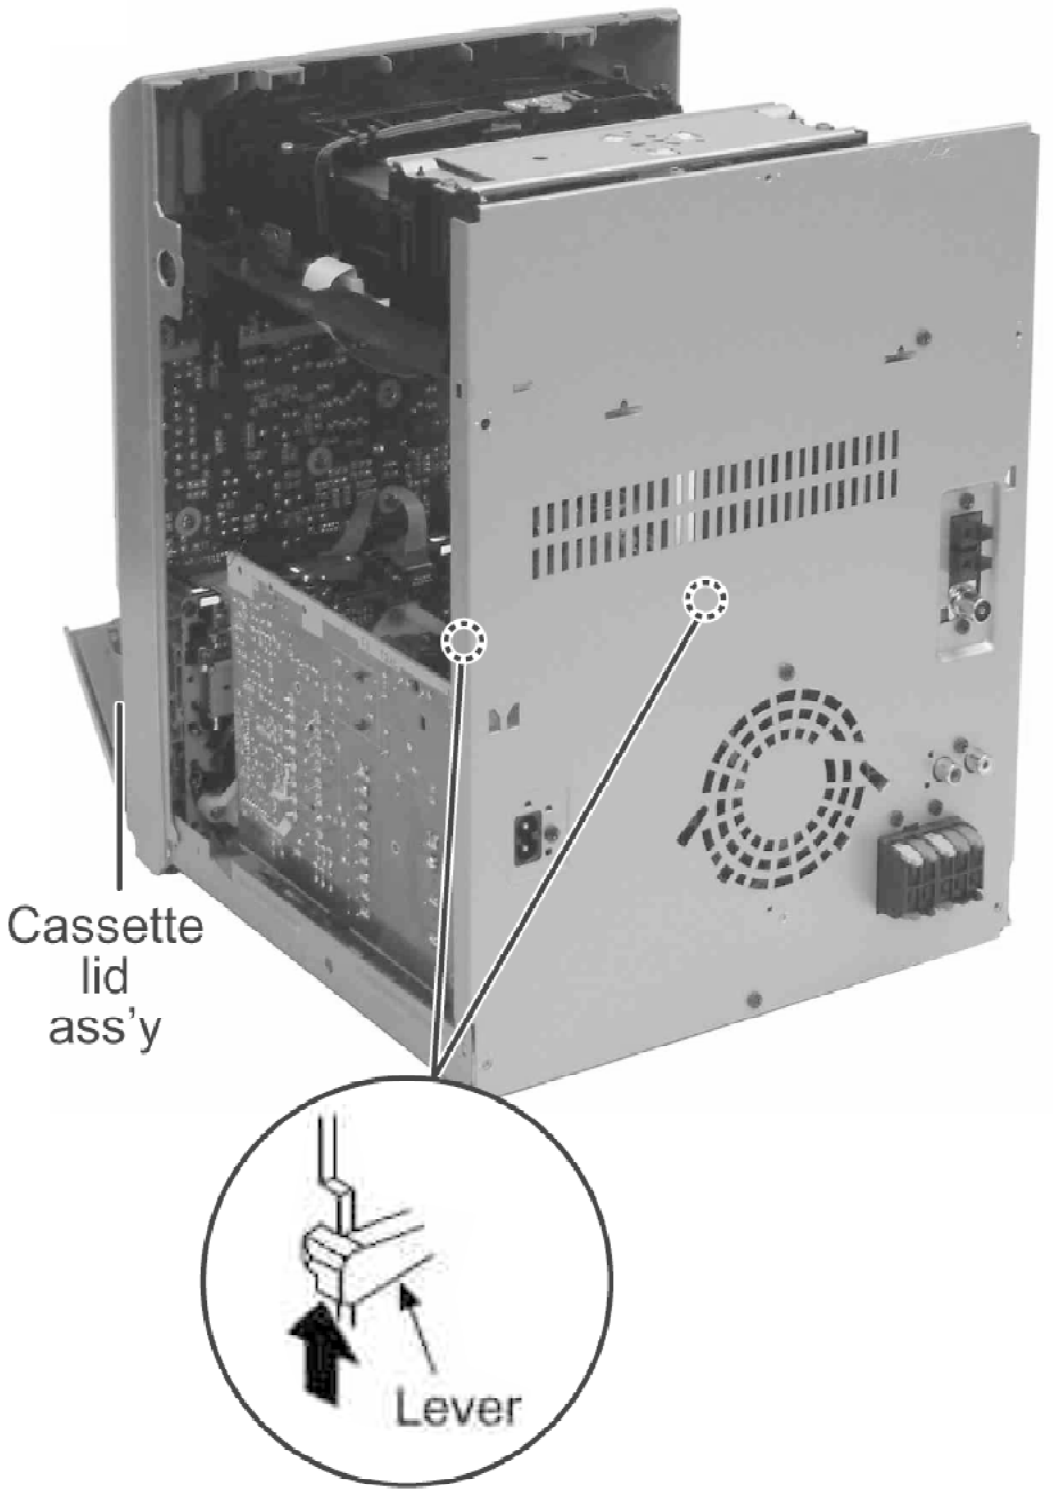
Cassette
lid
ass'y
Lever

Step 2 Push up the cassette lid ass'y in the direction of arrow. (For DECK1 and DECK2).

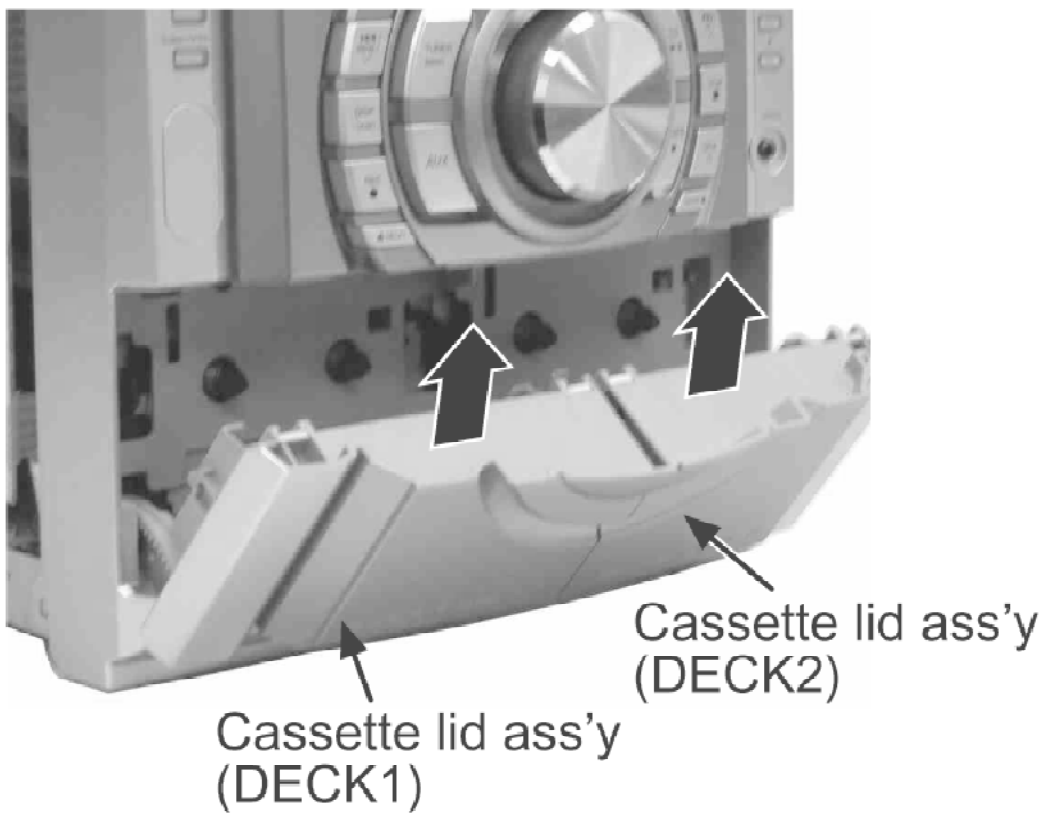
Cassette lid ass'y
(DECK2)
Cassette lid ass'y
(DECK1)

10.17. Rectification for tape jam problem

- Follow the (Step 1) - (Step 2) of Item 10.3 - Disassembly of Top Cabinet

Step 1 If a cassette tape cannot be removed from the deck (the tape is caught by the capstan or pinch roller during playback or recording), rotate the flywheel F in the direction of the arrow to remove it.

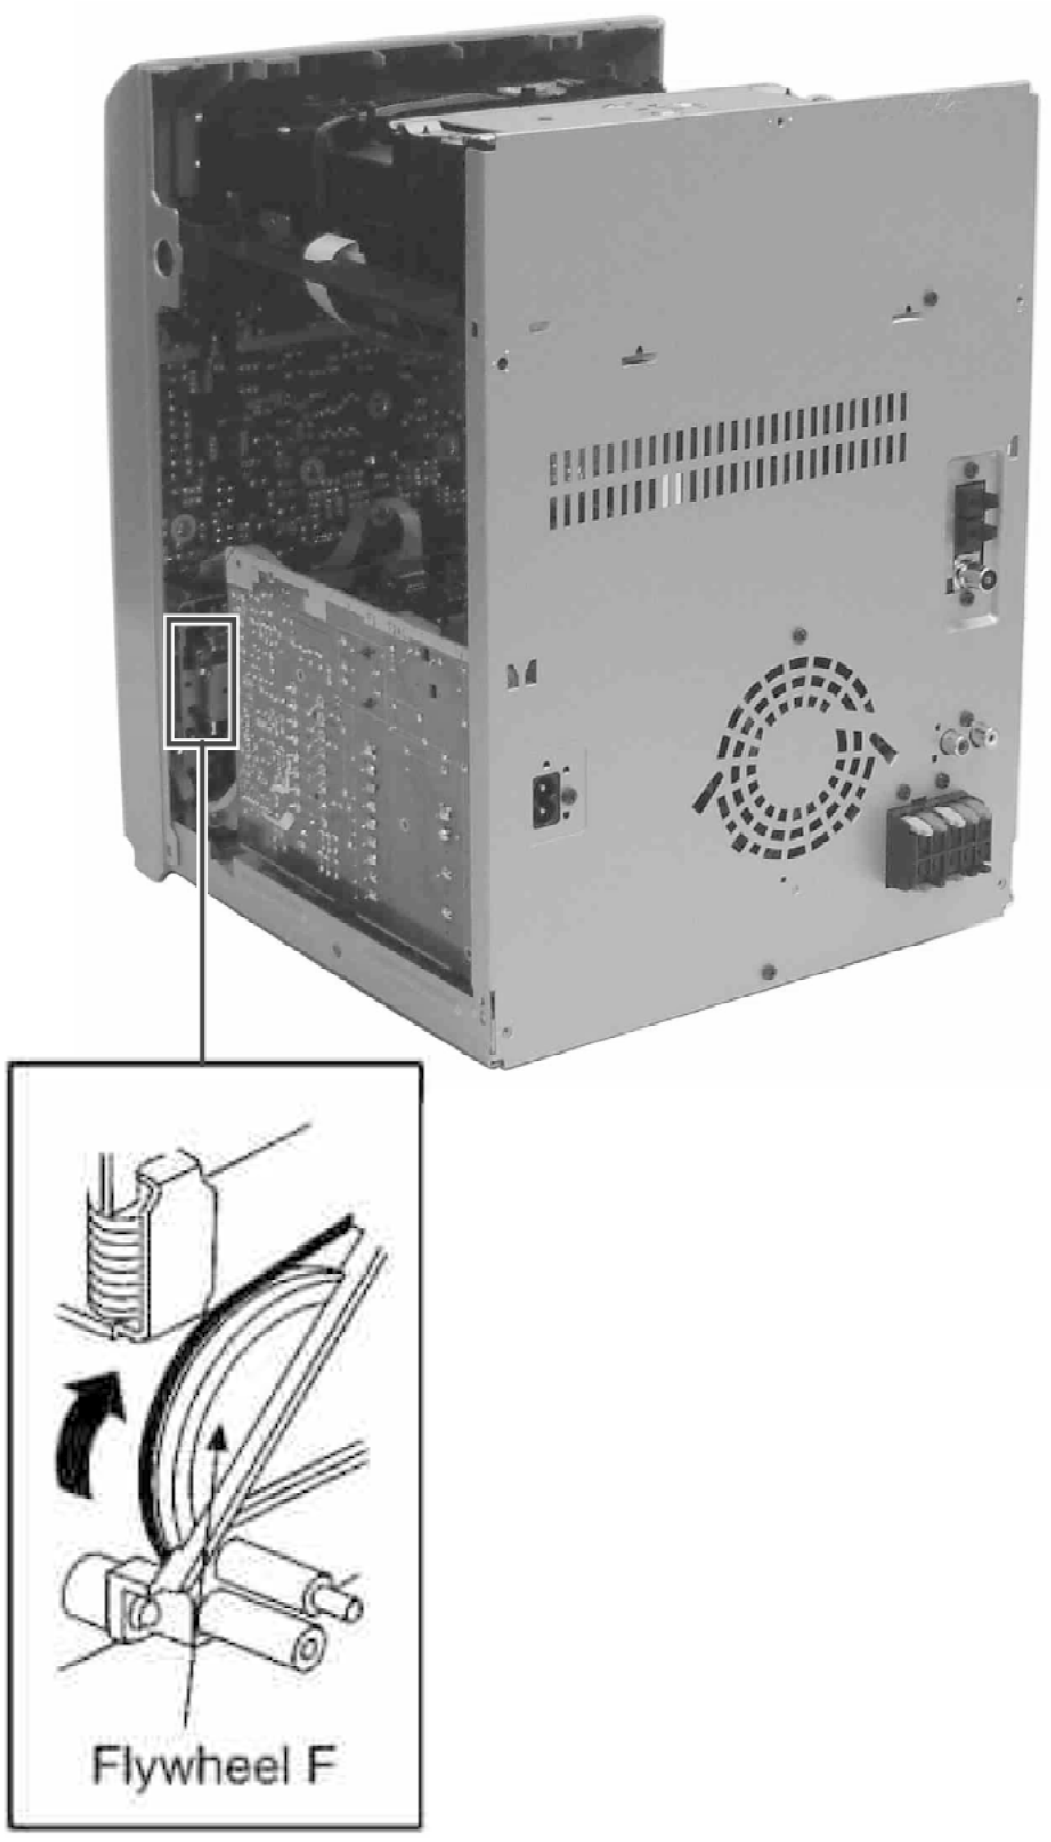

Step 2 Push the lever upward and open the cassette lid ass'y. Remove the cassette tape.

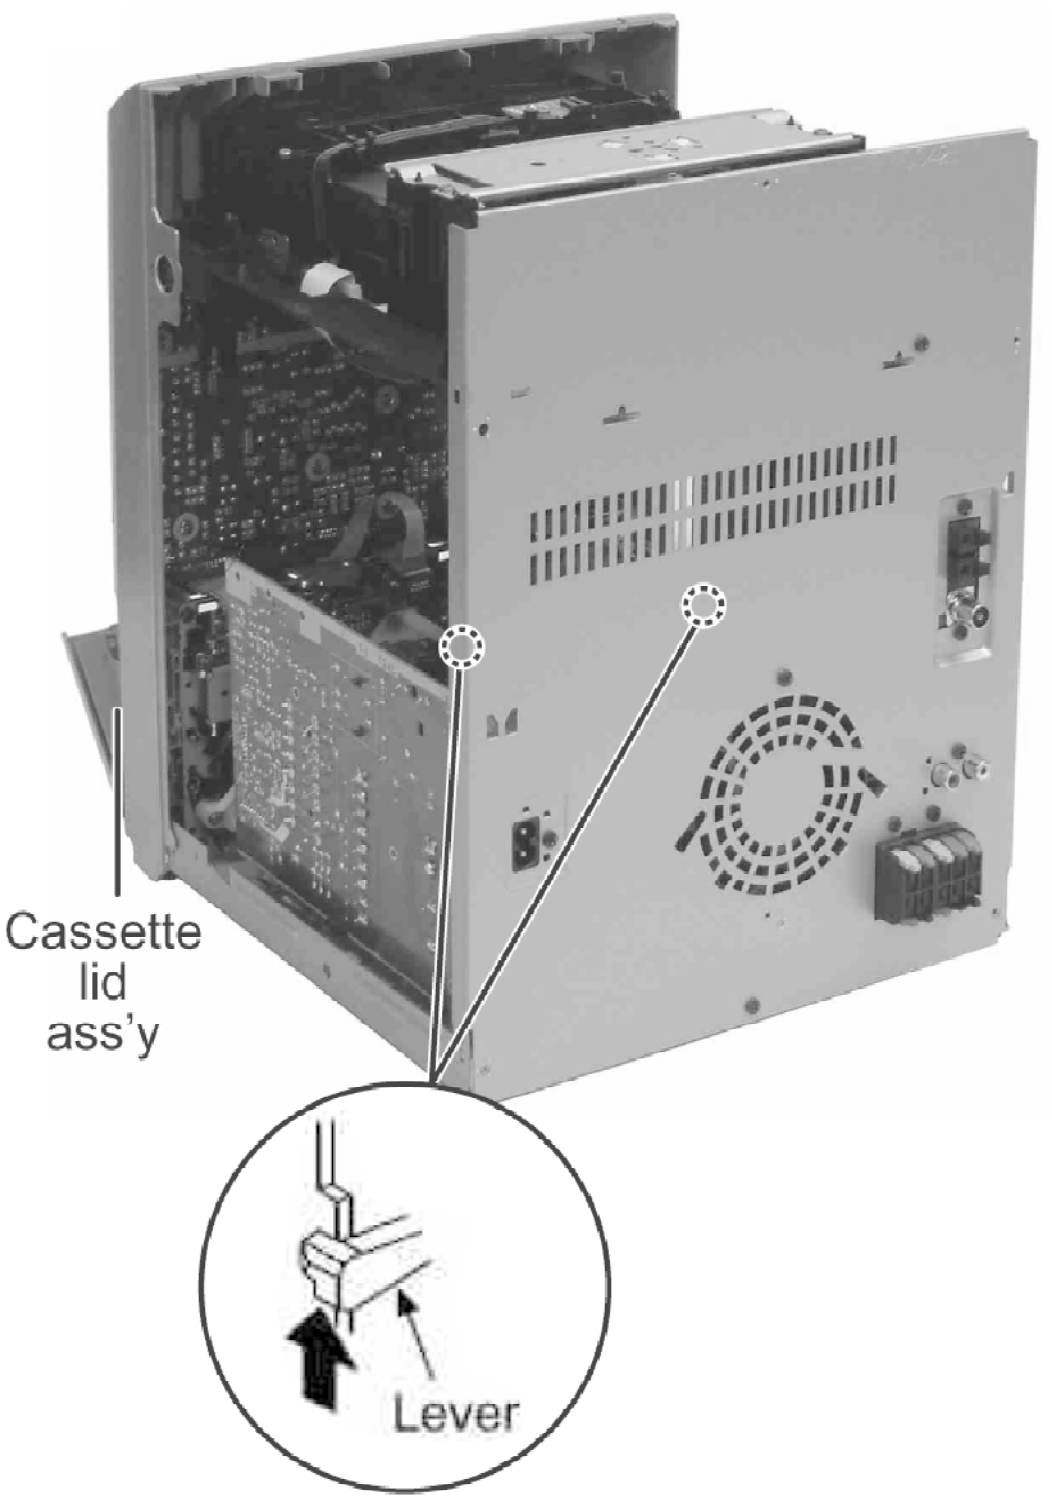
Cassette lid ass'y
Lever

11. Checking for major P.C.Bs

Note:

Checking of all major P.C.Bs (Main P.C.B., Panel P.C.B., Transformer P.C.B., Deck P.C.B., Deck Mechanism P.C.B., Sub- Power P.C.B. and Power P.C.B.) can be carried out using below procedures.

For the disassembling procedures, refer to Section 10.

11.1. Checking of Main P.C.B.

1. Remove Top Cabinet and Rear Panel.

2. Remove CD Lid.

3. Disassemble CD Mechanism Unit.

4. Connect FFC wires (CN2801 & CN2805) from CD Mechanism Unit.

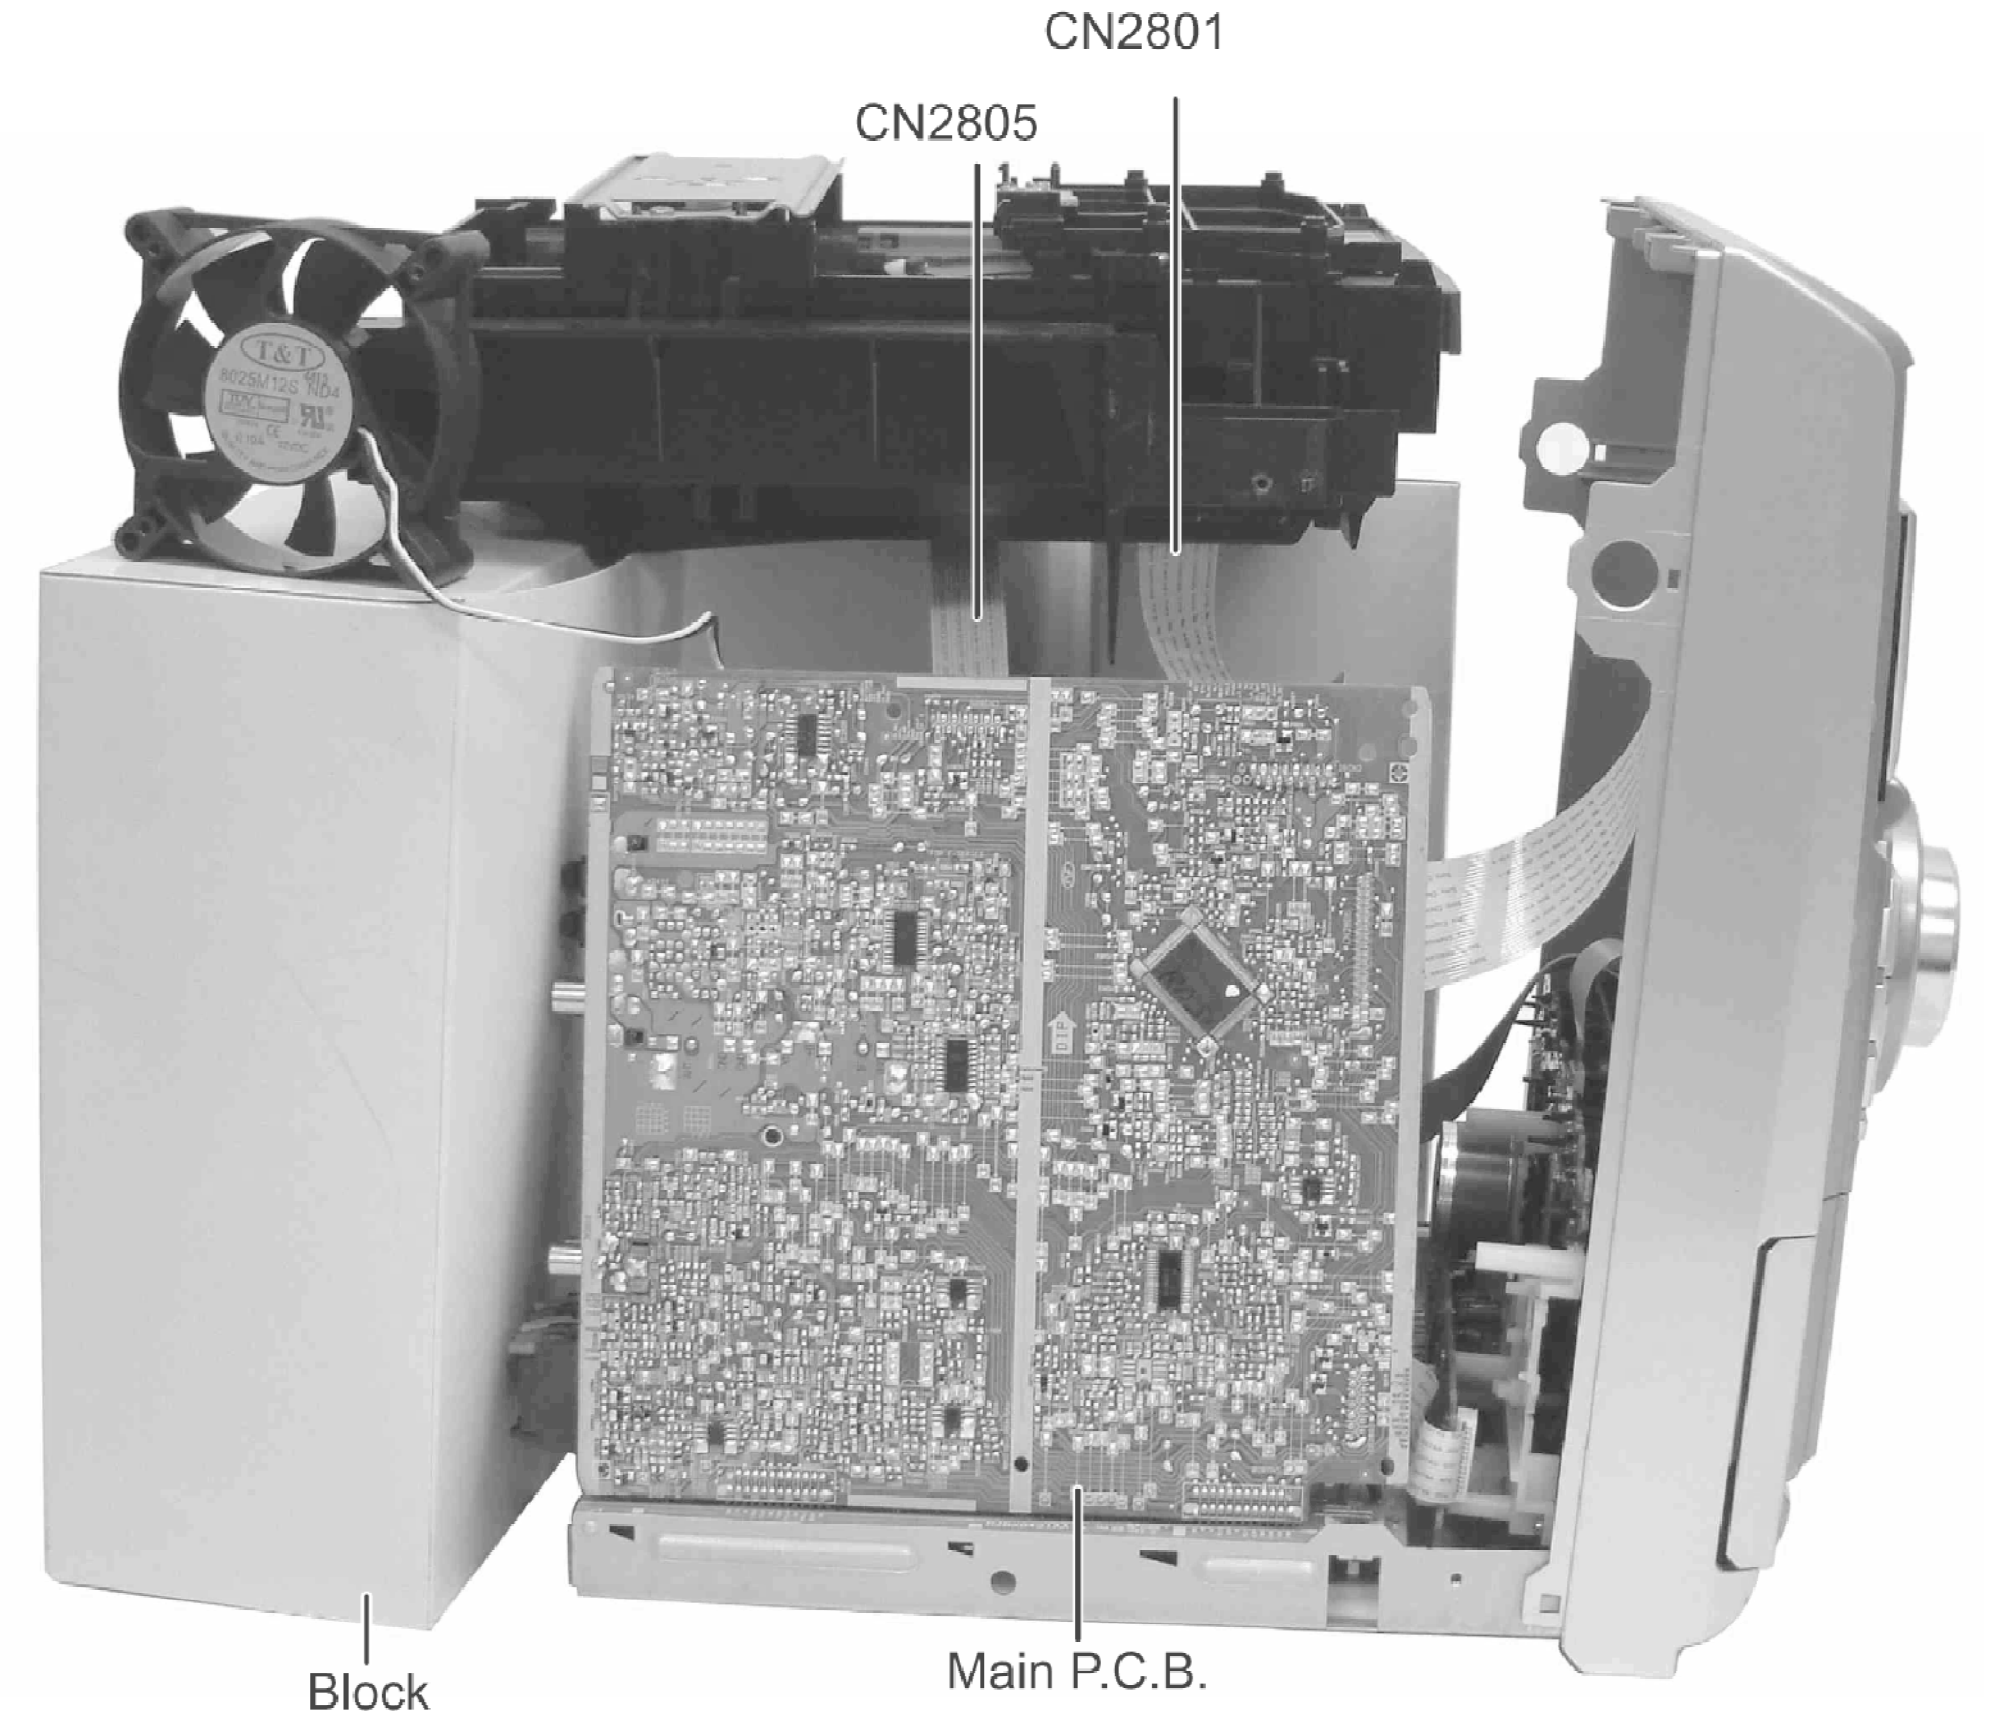

11.2. Checking of Transformer P.C.B.

1. Remove Top Cabinet and Rear Panel.

2. Remove CD Lid.

3. **Disassemble CD Mechanism Unit.**
4. **Connect FFC wires (CN2801 & CN2805) from CD Mechanism Unit.**

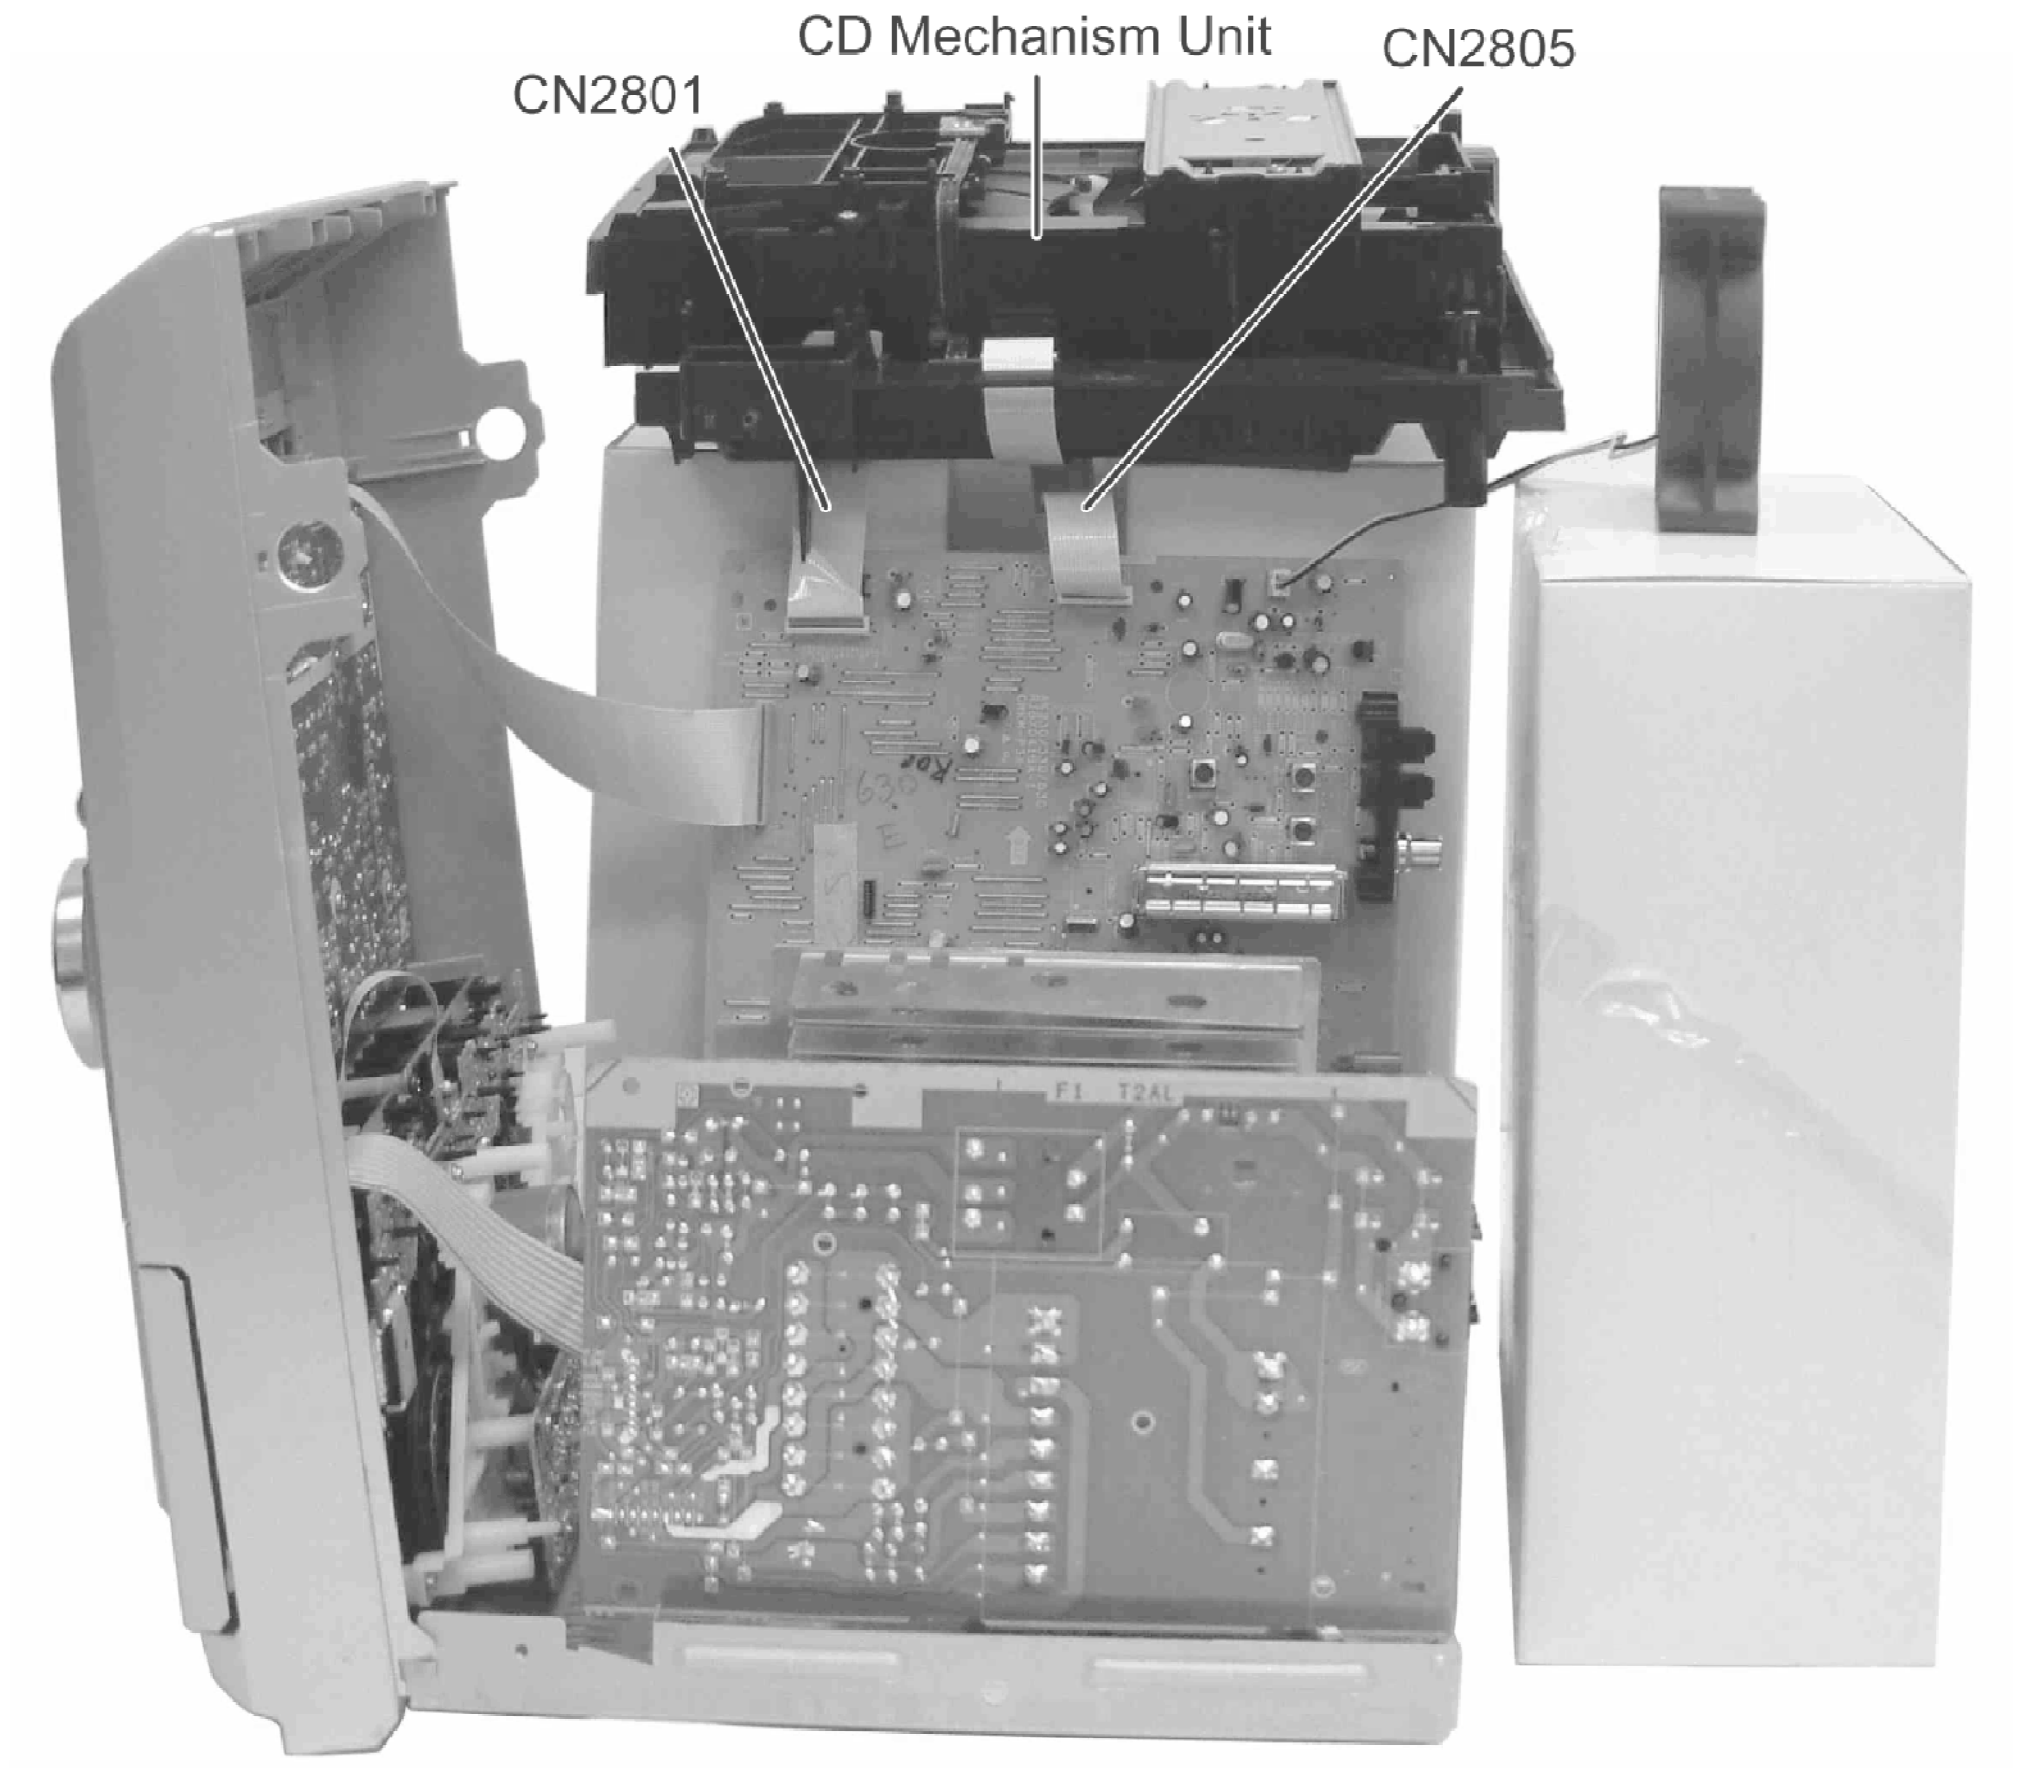

11.3. Checking of Panel, Deck & Deck Mechanism P.C.B.

1. **Remove Top Cabinet.**
2. **Remove CD Lid.**
3. **Disassemble CD Mechanism Unit.**
4. **Remove volume knob at Front Panel Unit.**
5. **Disassemble Panel P.C.B.**
6. **Disassemble Deck Mechanism Unit.**
7. **Use the extension cable (A) to reconnect (CN1001) Deck P.C.B. and (CN2803) Main P.C.B.**
8. **Use the extension cable (B) to reconnect (CP6401) Panel P.C.B. and (CN971) Deck Mechanism P.C.B.**

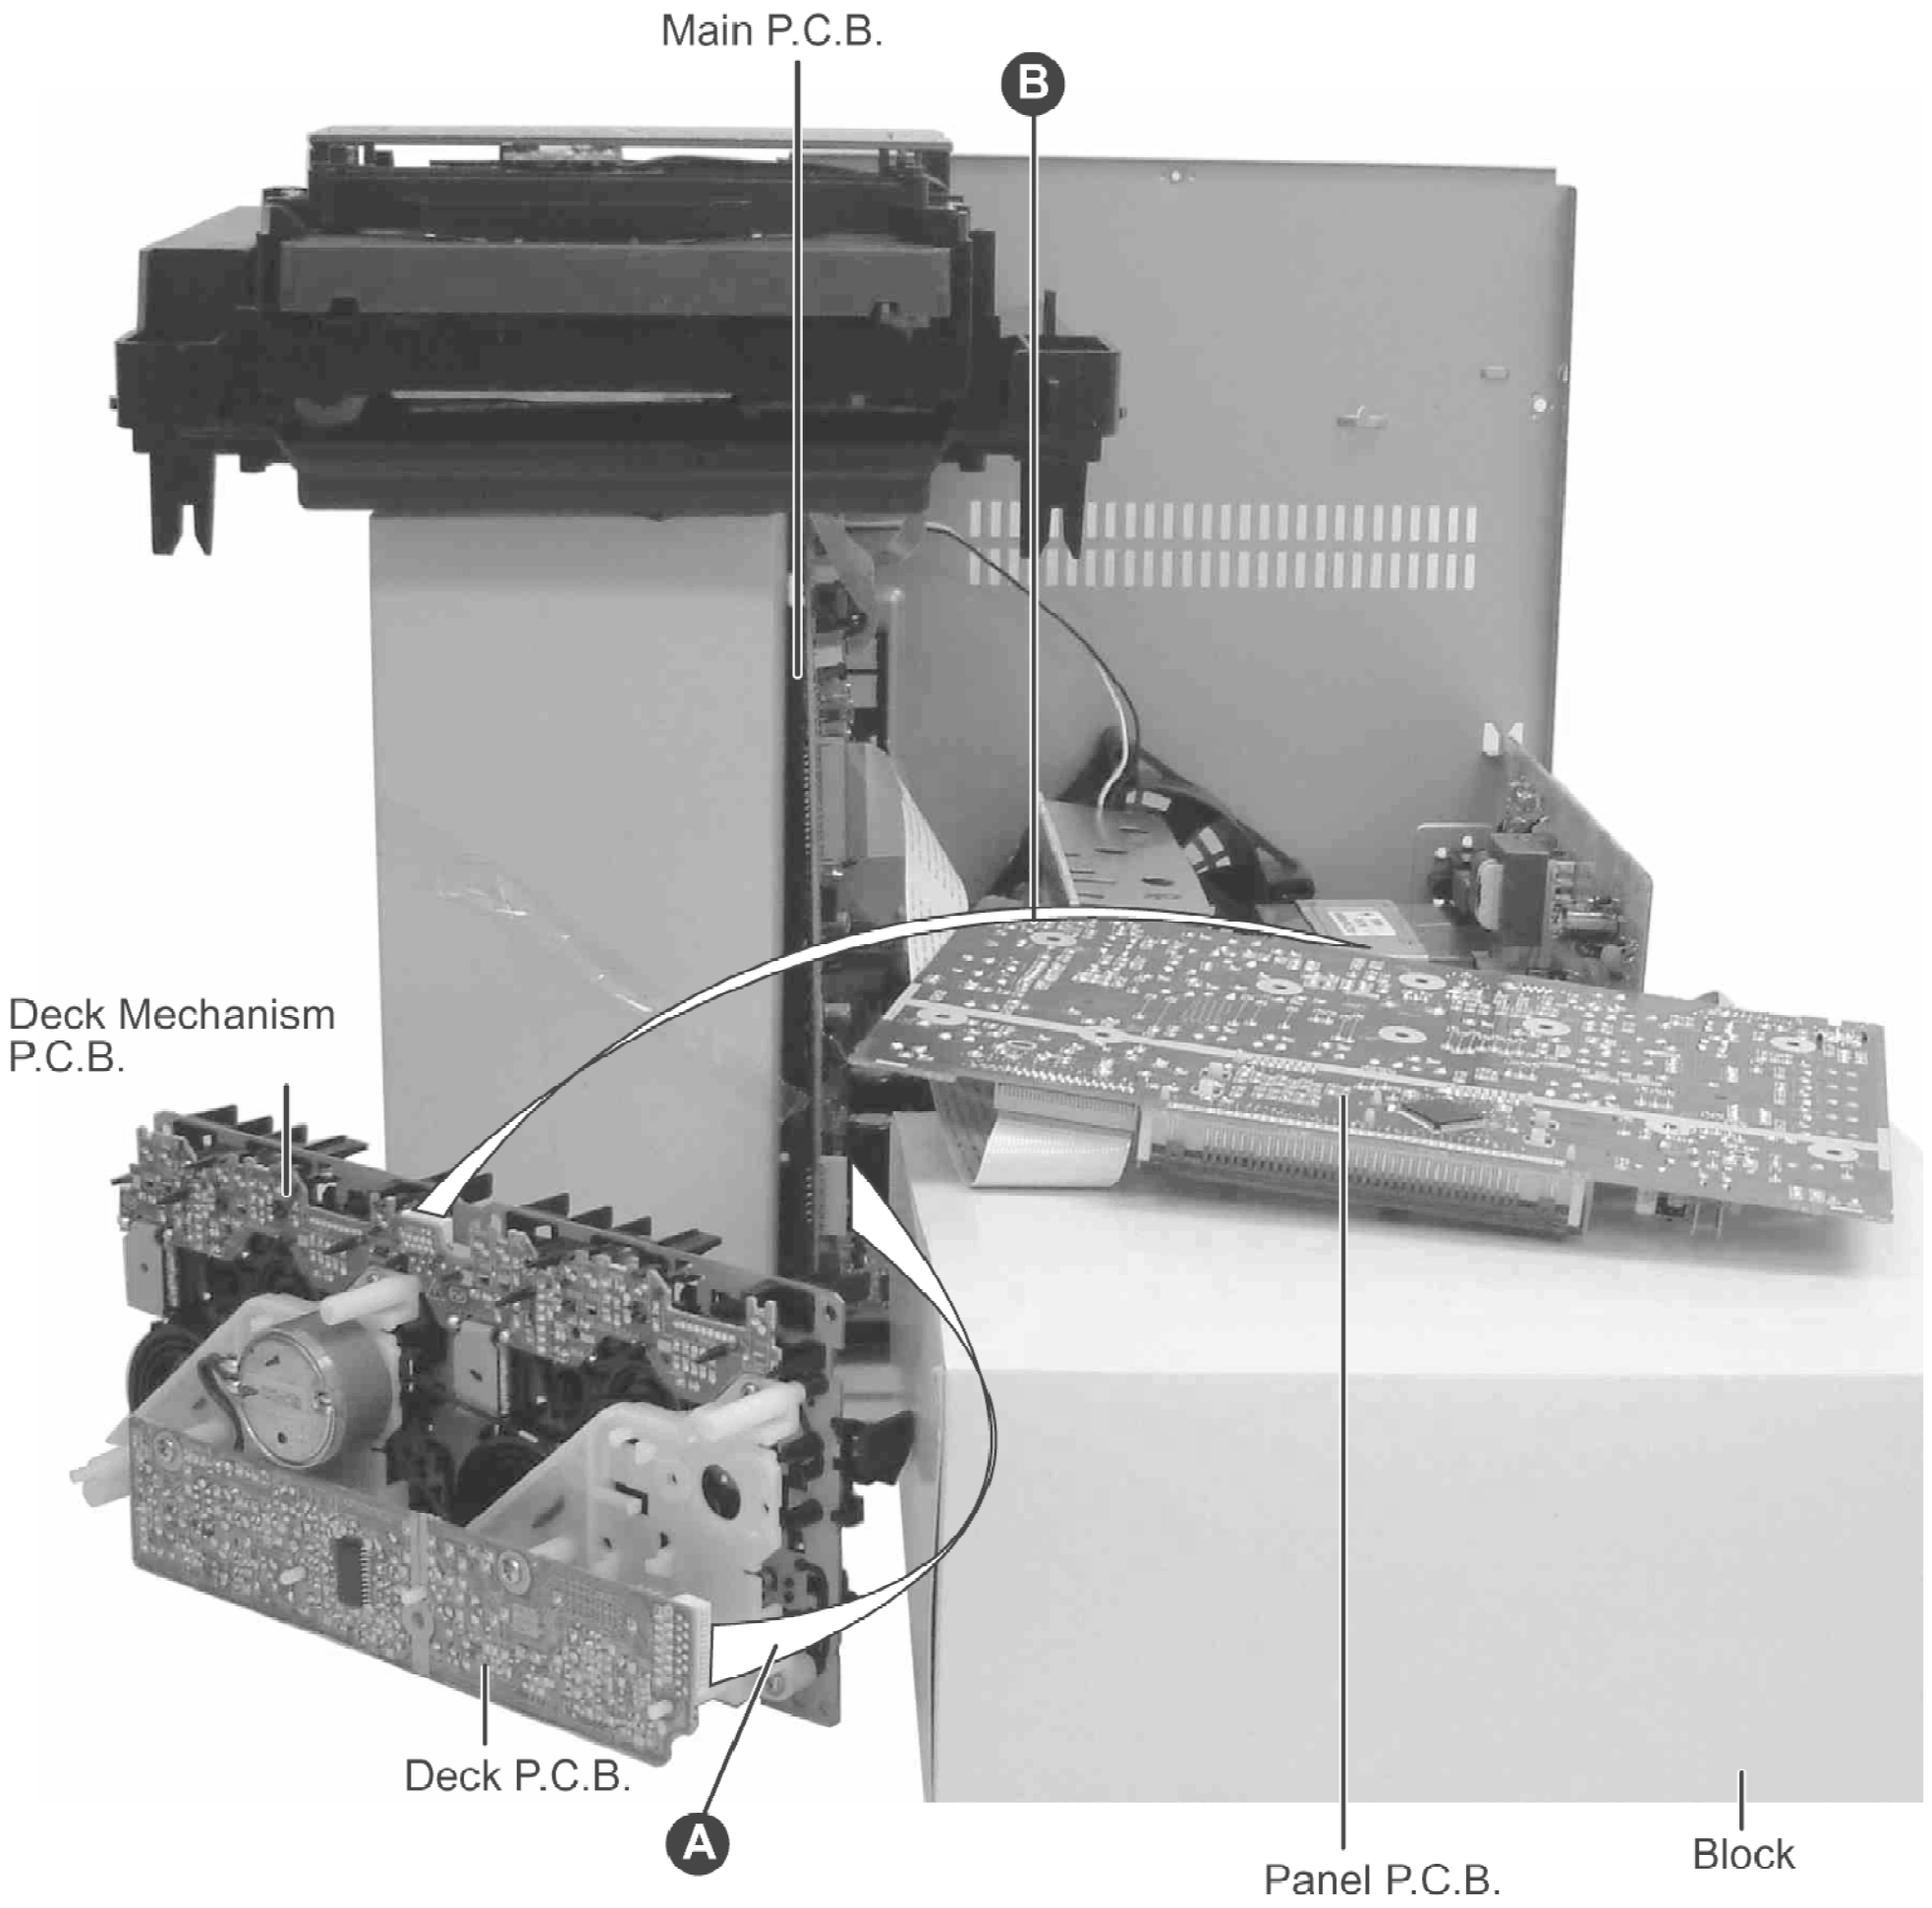
Main P.C.B.
B
Deck Mechanism P.C.B.
Deck P.C.B.
A
Panel P.C.B.
Block

Service Tools	
Extension FFC	
(A) Deck P.C.B. - Main P.C.B.	**REEX0485 (14 Pins)**
(B) Panel P.C.B. - Deck Mechanism P.C.B.	**REEX0484 (10 Pins)**

11.4. Checking of Power P.C.B.

1. Remove Top Cabinet and Rear Panel.

2. Remove CD Lid.

3. Disassemble CD Mechanism Unit.

4. Remove 3 screws at Transformer P.C.B..

5. Remove 2 screws at heat sink and 1 screw at Power P.C.B.

6. Flip the Power P.C.B.

7. Insulate the Power P.C.B. with insulation material to avoid short

circuit.

8. Use the extension cable (A) to reconnect (CN1001) Deck P.C.B. and (CN2803) Main P.C.B.

9. Use the extension cable (B) to reconnect (CP6401) Panel P.C.B. and (CN971) Deck Mechanism P.C.B.

10. Use the extension cable (C) to reconnect (H5950/W5950) Power P.C.B. and (CN5950) Transformer P.C.B.

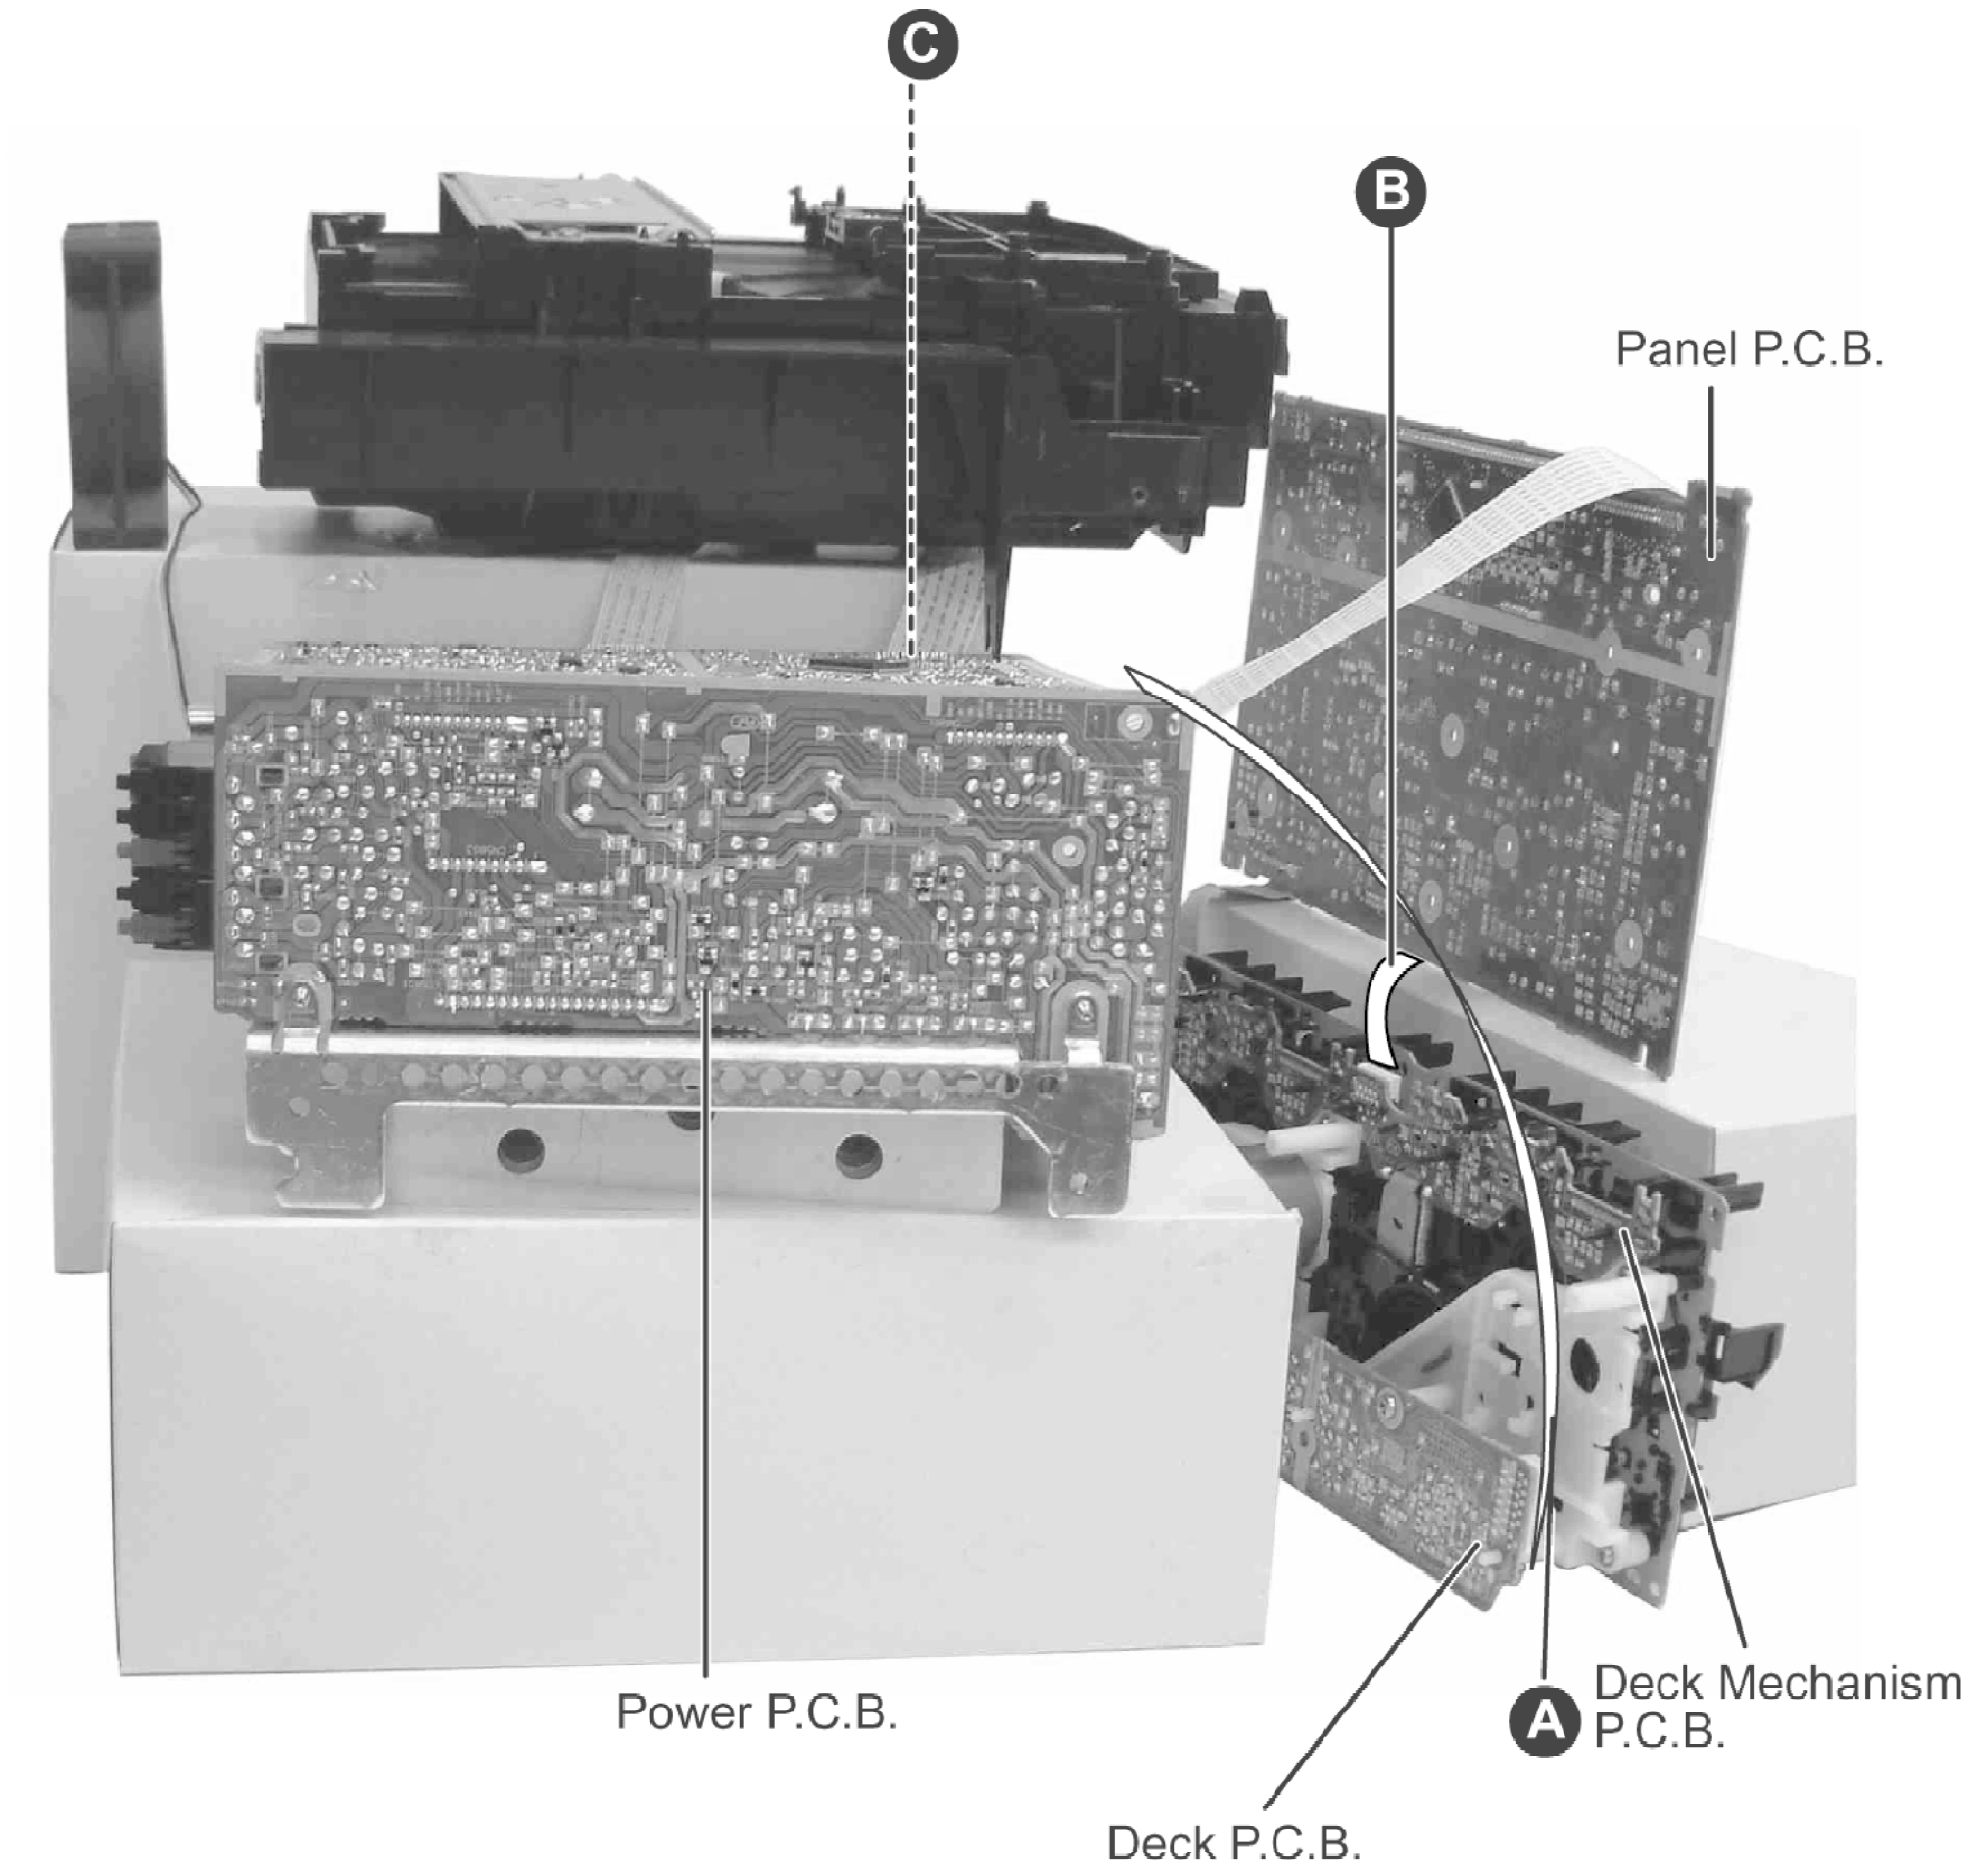
C
B
Panel P.C.B.
Power P.C.B.
A
Deck Mechanism P.C.B.
Deck P.C.B.

Service Tools	
Extension FFC	
(A) Deck P.C.B. - Main P.C.B.	**REEX0485 (14 Pins)**
(B) Panel P.C.B. - Deck Mechanism P.C.B.	**REEX0484 (10 Pins)**
(C) Power P.C.B. - Transformer P.C.B.	**RFKAK330 (9 Pins)**

12. Self-Diagnostic Function

12.1. Self-diagnostic display

This unit is equipped with a self-diagnostic display function which, will display an error code corresponding to the problem occuring.

Use this function when performing checking maintenance on the unit.

12.2. How to enter the Self-Diagnostic Function

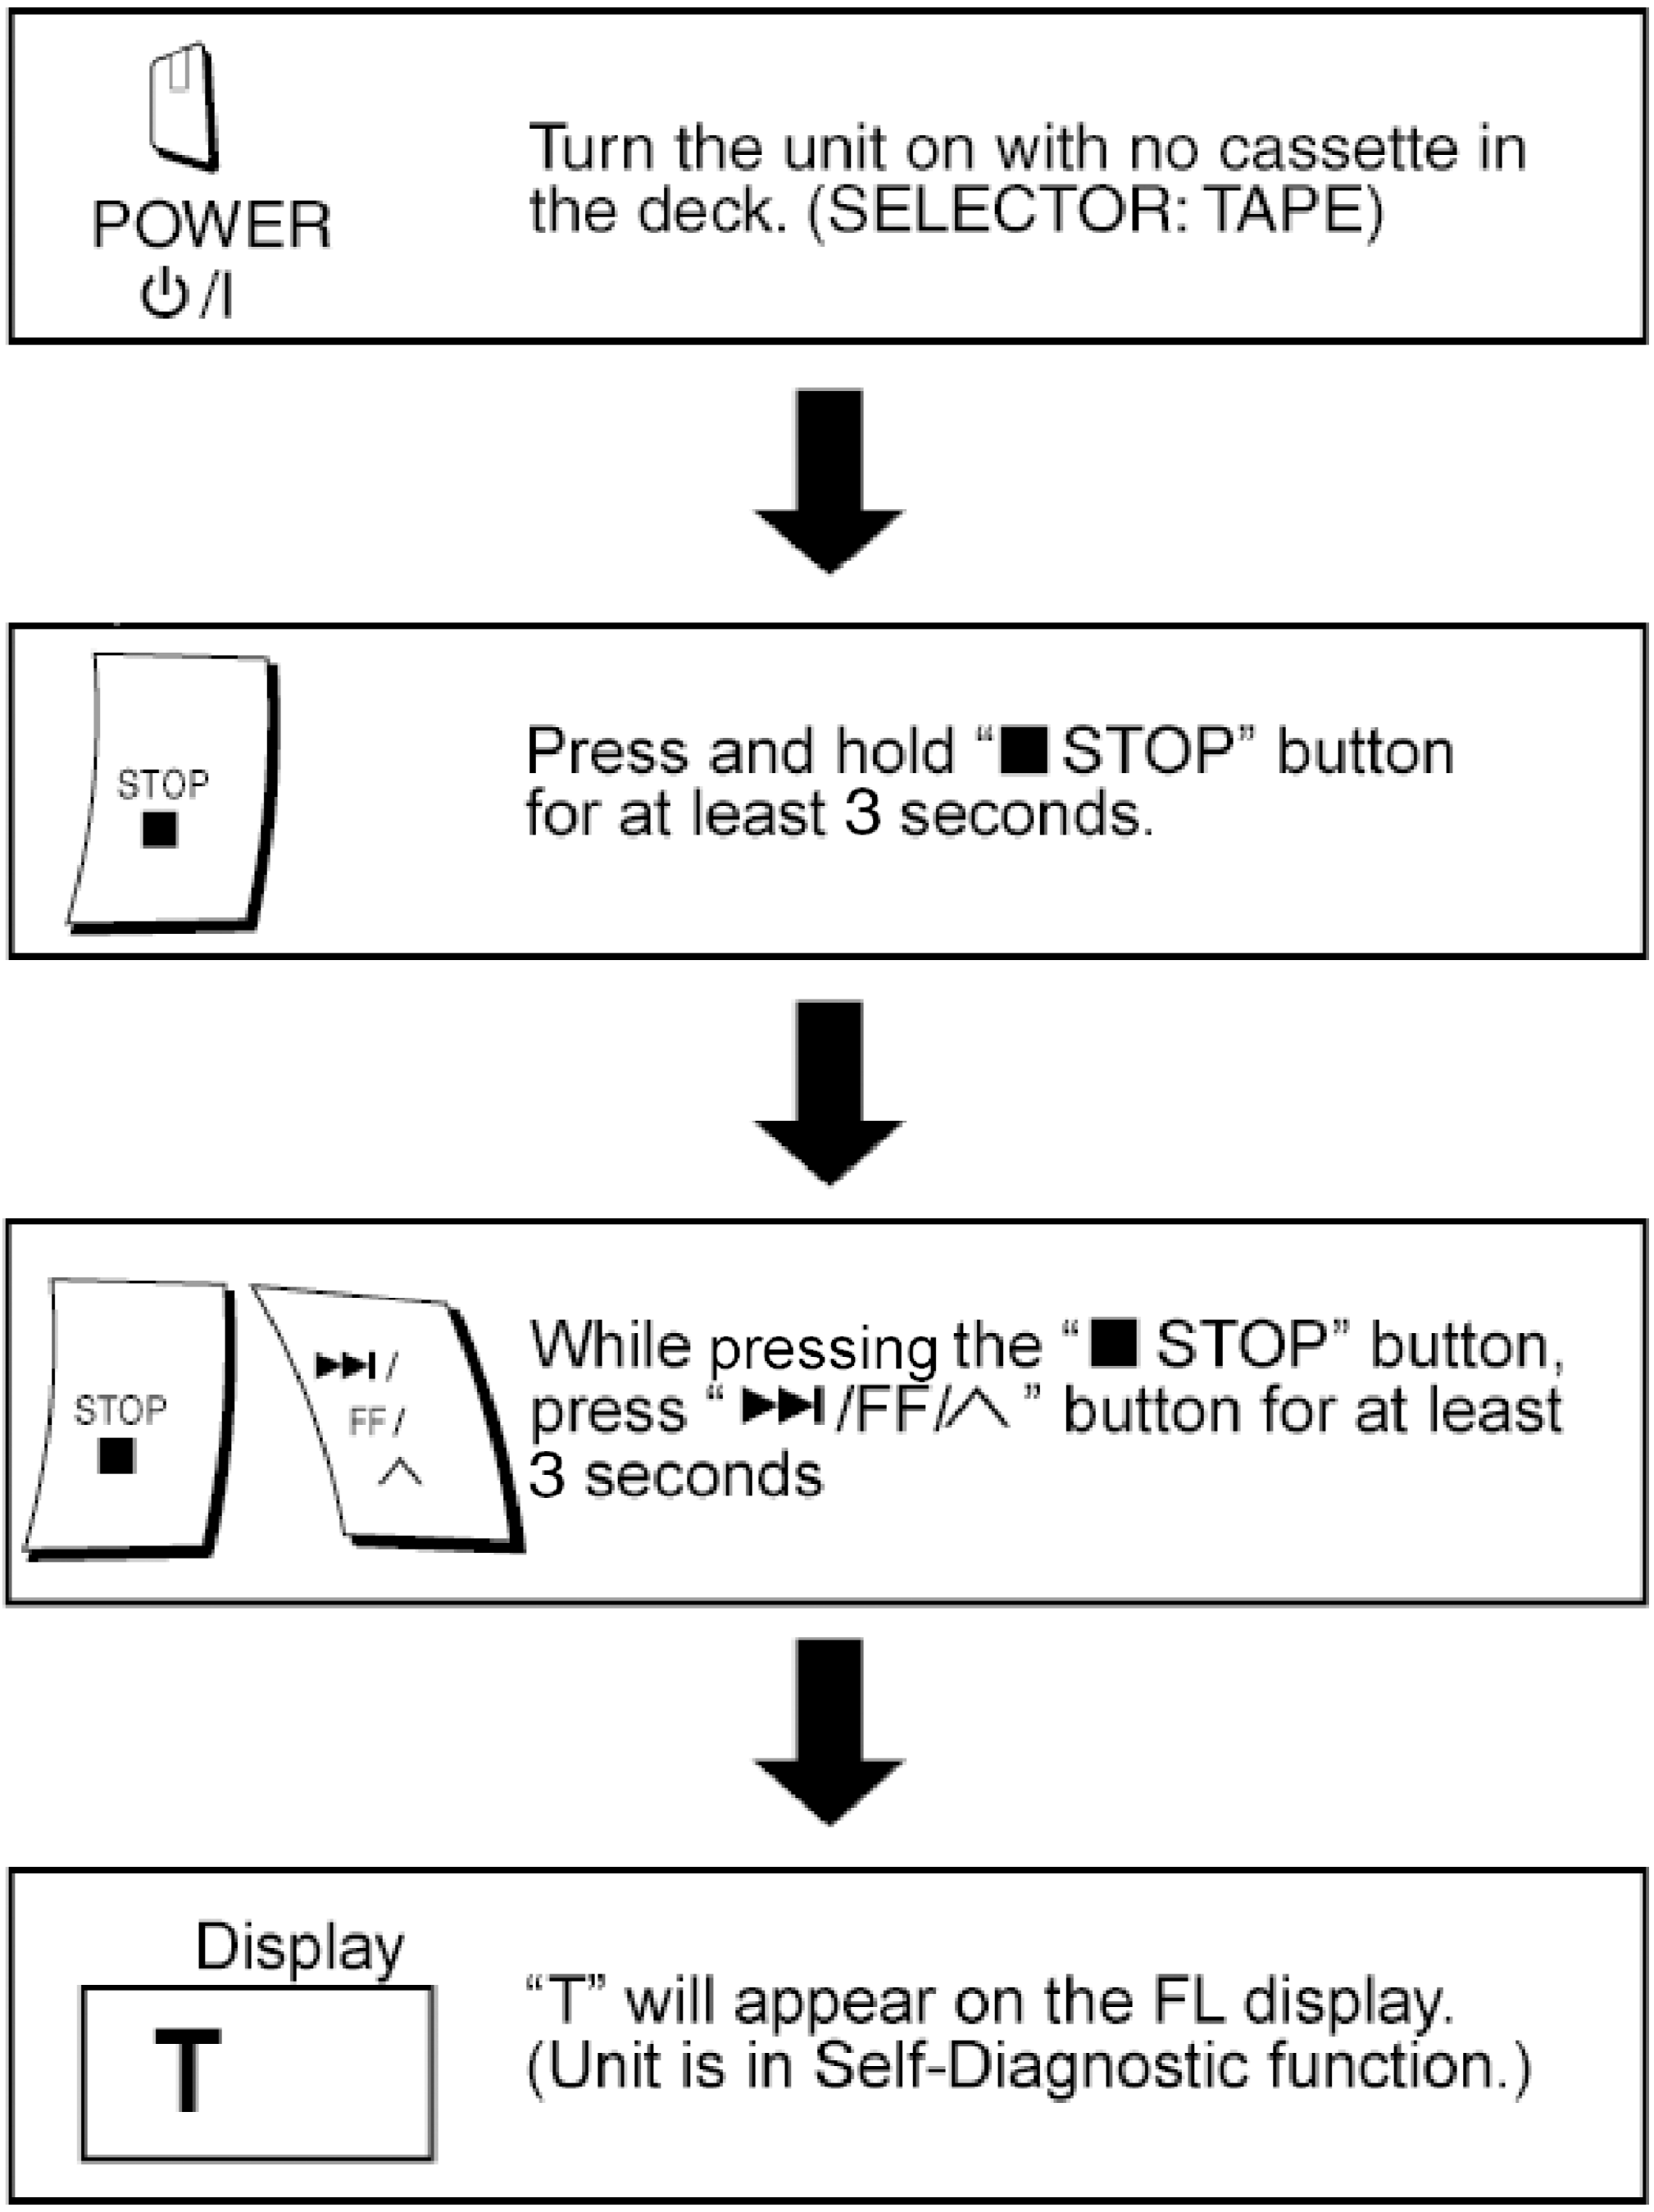

Turn the unit on with no cassette in the deck. (SELECTOR: TAPE)

Press and hold "■ STOP" button for at least 3 seconds.

While pressing the "■ STOP" button, press "►►I /FF/⋀" button for at least 3 seconds

"T" will appear on the FL display. (Unit is in Self-Diagnostic function.)

12.3. Cassette Mechanism Test (For error code H01, H02, H03, F01)

1. Press “TAPE, DECK 1/2” to select Deck 2.
2. Load a cassette tape with the erasure prevention tab, remove from left side only and close the cassette holder.
3. Press “FAST FORWARD MEMORY” (Tape will be stop after 2 seconds)
4. Load a cassette tape with the erasure prevention tab, remove from right side only and close the cassette holder.
5. Press “REVERSE FM MODE/BP” (Tape will be stop after 2 seconds)
6. Load a pre-recorded tape with both side record tabs intact and close the cassette holder.
7. Press “PLAY/TUNE/TIME ADJ UP” (After TPS function, tape will stop automatically)
8. Press “REC/STOP” (Tape will not move)
9. Press “STOP/TUNE MODE” to indicate Error code.

   - If several problem exist, error code will change each time when “ ■ /STOP” is pressed.
     (e.g. H01 → H03 → F01 .....etc.)

10. Press “TAPE, DECK 1/2” to select Deck 1.
11. Repeat step 2 to 9 to test Deck 1. (Tape Deck 1 will not check H02 because of no recording function)

12.4. CD Mechanism Test (F15, F26, F16, F17, F27, F28, F29, F30, H15 & H16)

1. Press [▶/ II, CD] (set to CD Mode) on main unit.
2. Press “CD DIRECT PLAY (1)” and [⏏, OPEN/CLOSE] button on main unit.
3. Press [⏏, OPEN/CLOSE] to close the tray.
4. Press “CD DIRECT PLAY (5)” and [⏏, OPEN/CLOSE]

wait until the tray is open.

5. Press [⏏, OPEN/CLOSE] and remove the CD.

6. Press [⏏, OPEN/CLOSE] to close the tray.

7. Press “ ■ /STOP” to indicate Error Code.

- If several problem exist, error code will change each time when “ ■ /STOP” is pressed. (e.g. F15 → F26 → F16 ....etc).

12.5. To clear all Error code

1. Press [■, STOP] and hold button for 5 seconds.

2. FL indicator shows “CLEAR” for 1 second and change to “T”.

12.6. To exit from Self-Diagnostic function

1. Press [⏻/I, POWER] button on main unit or remote control.

12.7. Power Amplifier Failure (F61)

1. When power amplifier fail, F61 will indicate automatically.

12.8. Description of Error Code

12.8.1. Abnormality detection for Deck Mechanism block

No.	Abnormal Items	Error Display	Method of Detection
1	MODE SW abnormal	H01	Normal operation during mecha transition, MOD abnormal is memorized. The content of abnorm can be confirmed in the abnormal detection mo explained in the later section.
2	REC INH SW abnormal	H02	The content of abnormality can be confirmed in abnormal detection mode explained in the later
3	HALF SW abnormal	H03	The content of abnormality can be confirmed in abnormal detection mode explained in the later
4	Reel pulse abnormal	F01	The content of abnormality can be confirmed in abnormal detection mode explained in the later

12.8.2. Abnormality detection for CD/Changer block

No.	Abnormal Items	Error Display	Method of Detection
1	REST SW abnormal	F15	Under normal operation (Self-Diagnostic Mode inclusive), this error occurs when the REST SV not detected within the specified time and shal memorized.
2	Transmission error between CD servo LSI and micon	F26	Under normal operation (Self-Diagnostic Mode inclusive), this error occurs when the selectior to CD and SENSE='H' is detected and SENSE= not detected within a fail safe time (20ms) after command transmission was sent.
3	CLAMP SW abnormal	F16	Refer to section 12.8.4 (Mechanism Error Code [M-0A] error is detected.
4	BOTTOM SW abnormal	F17	Refer to section 12.8.4 (Mechanism Error Code [M-09] error is detected.
5	POSITION SW abnormal	F27	Refer to section 12.8.4 (Mechanism Error Code [M-05 ~ M-08] error is detected.
6	SW1 abnormal	F28	Refer to section 12.8.4 (Mechanism Error Code [M-02 ~ M-08] error is detected.
7	SW2 abnormal	F29	Refer to section 12.8.4 (Mechanism Error Code [M-02 ~ M-08] error is detected.
8	OPEN SW abnormal	H15	Refer to section 12.8.4 (Mechanism Error Code [M-01] error is detected.
9	CLOSE SW abnormal	H16	Refer to section 12.8.4 (Mechanism Error Code [M-01] error is detected.
10	DISC SENSOR	F30	Refer to section 12.8.4 (Mechanism Error Code [M-01] error is detected.

12.8.3. Power supply related error detection

No.	Abnormal Items	Error Display	Method of Detection
1	POWER AMP output abnormal	F61	During normal operation, if DCDET becomes 'L normal POWER OFF process shall not be exec PCNT shall be switched to 'L' immediately. GO shall not be displayed and the error display F6 displayed instead. 2 seconds after the F61 display, ECONO shall 'L' and FL display shall be turned off. The error content shall be memorized when the abnormality occurs and can be displayed in the mecha self-diagnostic mode described later.

12.8.4. Error Code (CR20 Mechansim)

1. If mechanism problem occurs during normal or aging mode, the

error code is “remembered” and shown on the FL display.

2. Reset Condition of Error Code

A. During cold start of micro-processor IC.

B. Restart of aging mode for the mechanism unit.

3. Mechanism Error Code

Mechansim Error Code Table

Error Code	Description
M-00	No Error
M-01	OPEN Position - Horizontal Motion Abnormality at play position
M-02	PLAY Position - Horizontal Motion Abnormality at stock position
M-03	PLAY Position - Horizontal Motion Abnormality during changing position
M-04	CHANGE Position - Horizontal Error of Stock position
M-05	CHANGE Position - Ascending motion Error
M-06	CHANGE Position - Descending motion Error
M-07	STOCK Position - Ascending motion Error
M-08	STOCK Position - Descending motion Error
M-09	Abnormality during change position (bottom switch)
M-0A	Clamp Error
M-0B	Access Failure - Access Time of more tha 30 secs (Total time of automatic → Read TOC → Track access)

4. When the mechanism unit stops due to error during aging model, error code is remembered and counts of the errors are displayed on the FL display.

13. CD Test Mode Function

This CD test mode is provided to check CD unit without connecting to changer loading mechanism. This mode shall operate CD PLAY with CD unit being connected only and CD Automatic Alignment result is shown on FL display.

13.1. How to set CD test mode

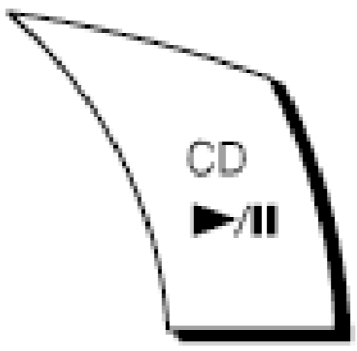

Press CD.

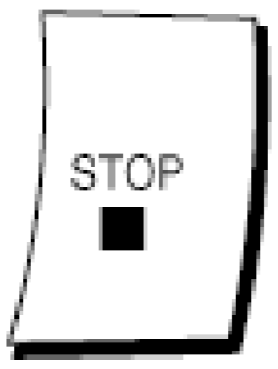

Press and hold "■STOP" button for at least 2 seconds.

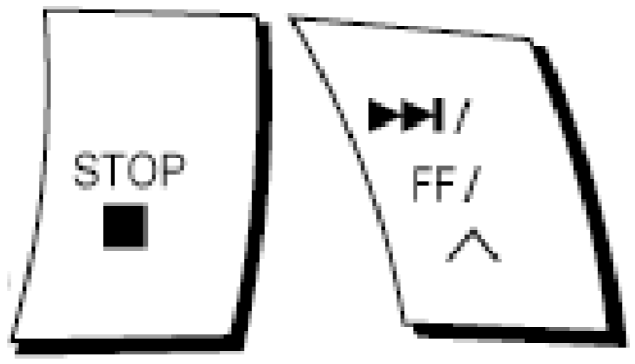

While pressing the "■ STOP" button, press "▶▶I/FF/⋀" button for at least 2 seconds

Display

CD TEST

"CD TEST" will appear on the FL display.
(Unit is in CD test mode.)

13.2. CD Automatically Adjustment result indication

Under CD test mode, pressing the numeric key '0' on the remote controller will display the auto adjustment result. FLOCK, TLOCK and CLVS status shall be shown as below:

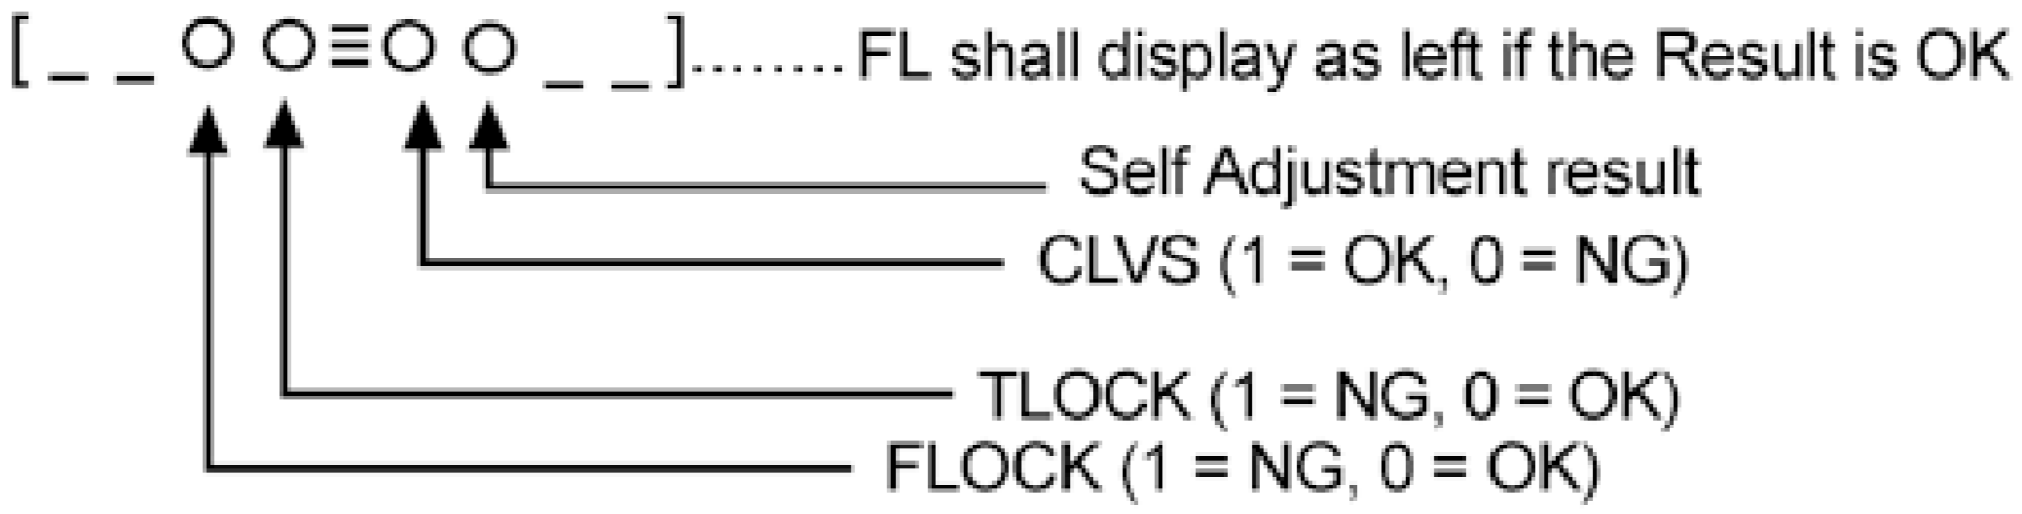
[_ _ O O≡O O _ _]........FL shall display as left if the Result is OK
Self Adjustment result
CLVS (1 = OK, 0 = NG)
TLOCK (1 = NG, 0 = OK)
FLOCK (1 = NG, 0 = OK)

During the above display, executing CD PLAY will display auto adjustment result for CD PLAY mode.

13.3. CD Mecha Aging Test Mode (CR20)

1. Functional summary of CD aging test mode

It is for the purpose to determine the reliability of the CD changer.

2. To enter into CD aging test mode

a) First, enter into self-diagnostic mode (Refer to Section 12.2. How to enter the Self-Diagnostic Function)

b) In the self-diagnostic mode, switch the SELECTOR to [▶/ II, CD] and press [|◀◀/REW/∨] . It will enter into CD aging test mode.

When in CD aging test mode, the following operation will begin and repeated:

1. [DISC STOCKER] → DISC LOAD → TRAY OPEN (2 secs) → TRAY CLOSE] as one count.

2. DISC 1 → DISC 2 → DISC 3 → DISC 4 → DISC 5 → DISC 1........repeating this endlessly.

- While performing the above operation, the FL display will show the number of its operations starting from 00001. With reference to figure as below.



- It shall move up one counter when the above operations ends. The counter will reset to 00000 when 99999 is reached.

- To exit CD aging test mode, press [⏻/I, POWER] button, the tray will return to its PLAY position and power will be off.

13.4. Micon ROM Checksum and Version Display Mode

1. Functional Summary

Display version number and calculated checksum of the micon software.

2. To enter into Micon ROM checksum and Version Display Mode.

A. Enter into Self-Diagnostic Mode (Refer to Section 12.2).

B. In the Self-Diagnostic Mode, Press ▶/ II, CD twice.
The version number and the calculated ROM Checksum of the current software will be displayed on the FL as shown in this example:

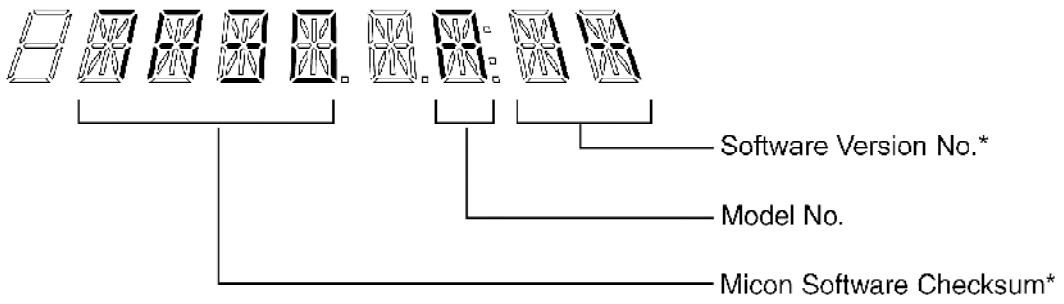

*** Note: The Software Version No. & Micon Software Checksum differs from set to set.**

- **The ROM Checksum is calculated on demand, not hard coded.**
- **The ROM Checksum is calculated by talking the arithmetic SUM of the ROM contents from the program's START address until the END address.**
  START address = [1080]H
  END address = [FFFD]H

14. Measurements and Adjustments

14.1. Cassette Deck Section

- **Measurement Condition**
- **Make sure head, capstan and press roller are clean.**
- **Judgeable room temperature 20 ± 5 °C (68 ± 9°F)**
- **Measuring instrument**
- **EVM (DC Electronic voltmeter)**
- **Digital frequency counter**
- **Test Tape**
- **Tape speed gain adjustment (3 kHz, -10 dB); QZZCWAT**

14.1.1. Tape Speed Adjustment (Deck 1/2)

1. **Set the tape edit button to "NORMAL" position.**
2. **Insert the test tape (QZZCWAT) to DECK 2 and playback (FWD side) the middle portion of it.**
3. **Adjust Motor VR (DECK 2) for the output value shown below.**

Adjustment target: 2940 ~ 3060 Hz **(NORMAL speed)**

4. **After alignment, assure that the output frequency of the DECK 1 FWD are within ±60 Hz of the value of the output frequency of DECK 2 FWD.**

Fig.1

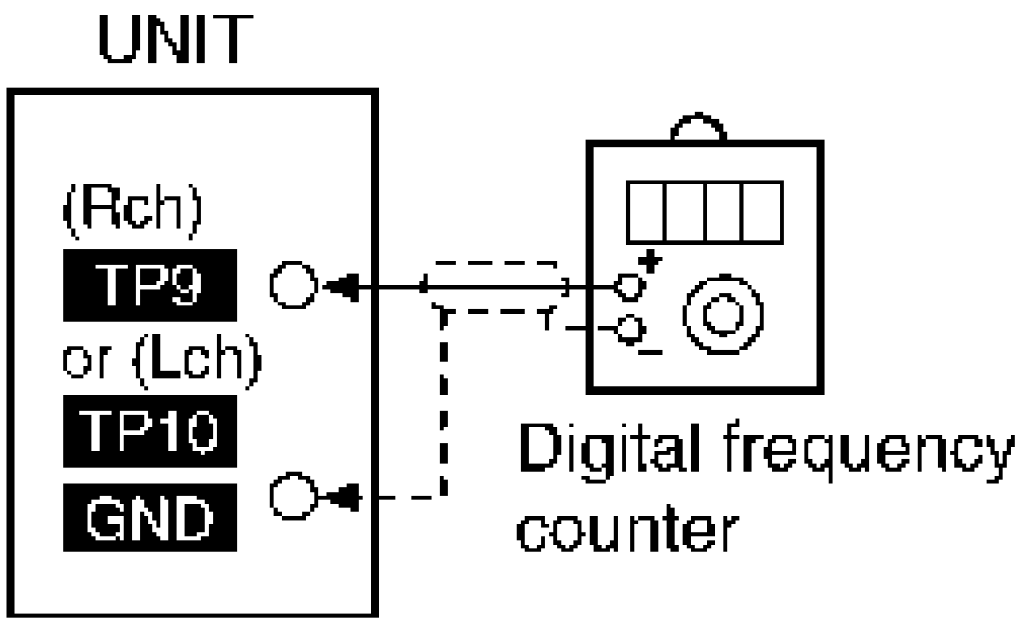
UNIT
(Rch)
TP9
or (Lch)
TP10
GND
+
−
Digital frequency counter

14.1.2. Bias and Erase Voltage Check

1. **Set the unit “AUX” position.**
2. **Insert the Normal blank tape (QZZCRA) into DECK 2 and the unit to “REC” mode (use “ ● REC/STOP” key).**
3. **Measure and make sure that the output is within the standard value.**

Bias voltage for Deck 2	**14±4mV (Normal)**
Erase voltage for Deck 2	**80mV (Normal)**

Fig.2

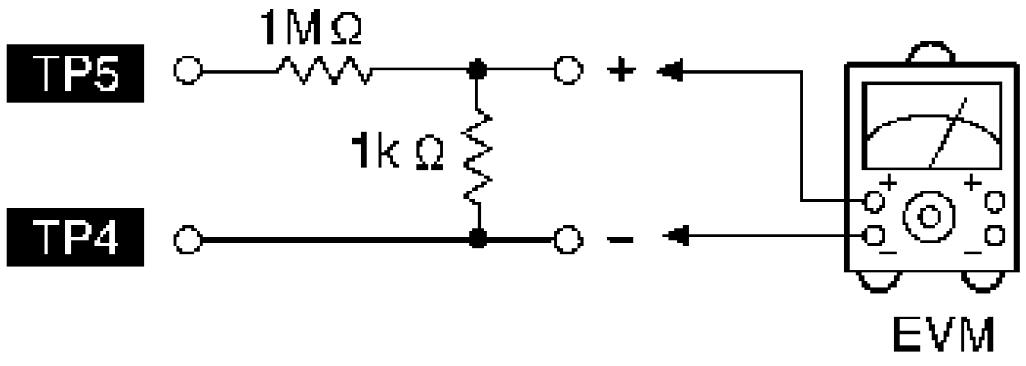
TP5
1MΩ
1kΩ
TP4
+
−
EVM

Fig.3

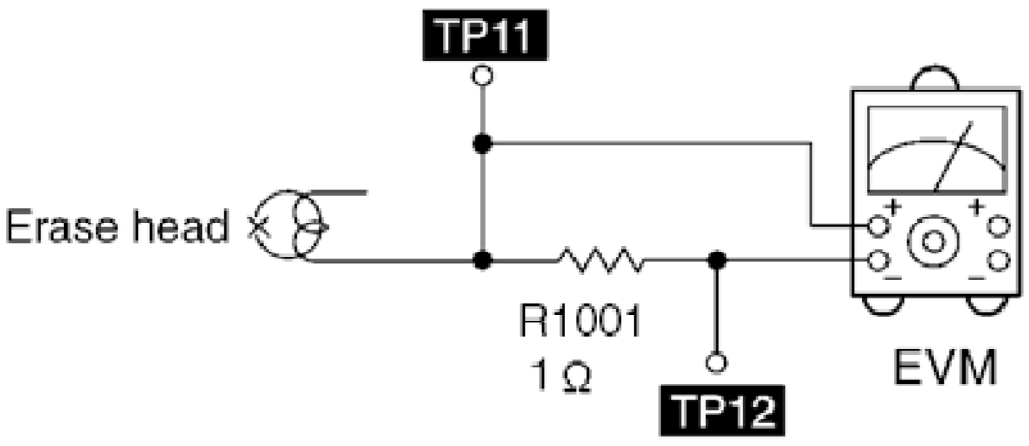
TP11
Erase head
R1001
1Ω
TP12
EVM

14.1.3. Bias Frequency Adjustment (Deck 1/2)

1. **Set the unit to “AUX” position.**

2. **Insert the Normal blank tape (QZZCRA) into DECK 2 and set the unit to "REC" mode (● use "REC/STOP" key).**
3. **Adjust L1002 so that the output frequency is within the standard value.**

Standard Value: 97 ±8 kHz	

Fig.4

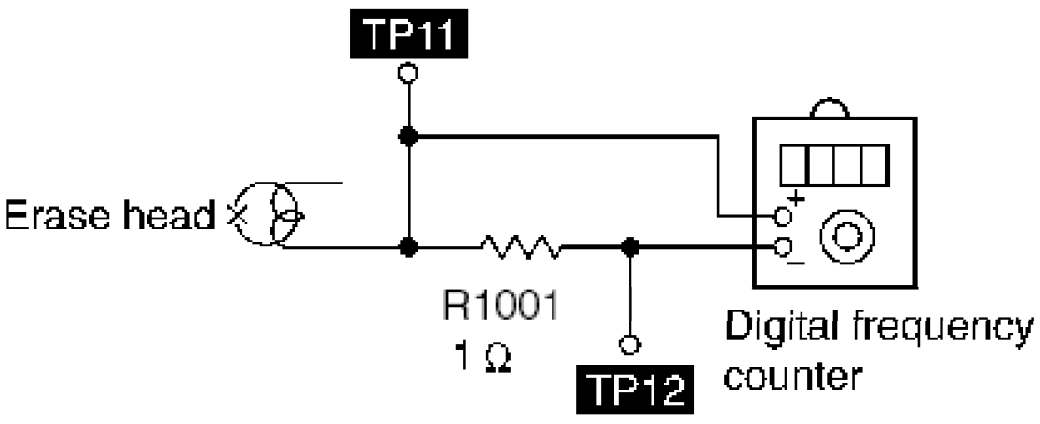
TP11
Erase head
R1001
1 Ω
TP12
Digital frequency
counter
+
−

14.2. Tuner Section

14.2.1. AM-IF Alignment

1. **Connect the instrument as shown in Fig.5.**
2. **Set the unit to AM mode.**
3. **Apply signal as shown in Fig. 5 from AM-SG.**
4. **Adjust Z2602 so that the output frequency is maximized in Fig. 6.**

Fig.5

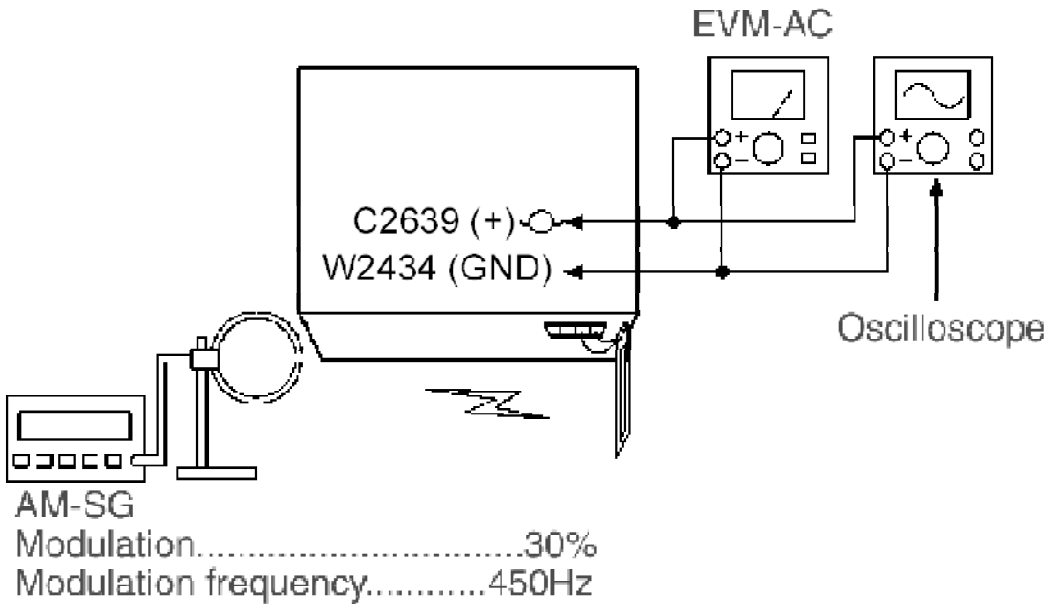
EVM-AC
C2639 (+)
W2434 (GND)
Oscilloscope
AM-SG
Modulation...............................30%
Modulation frequency...........450Hz

Fig.6

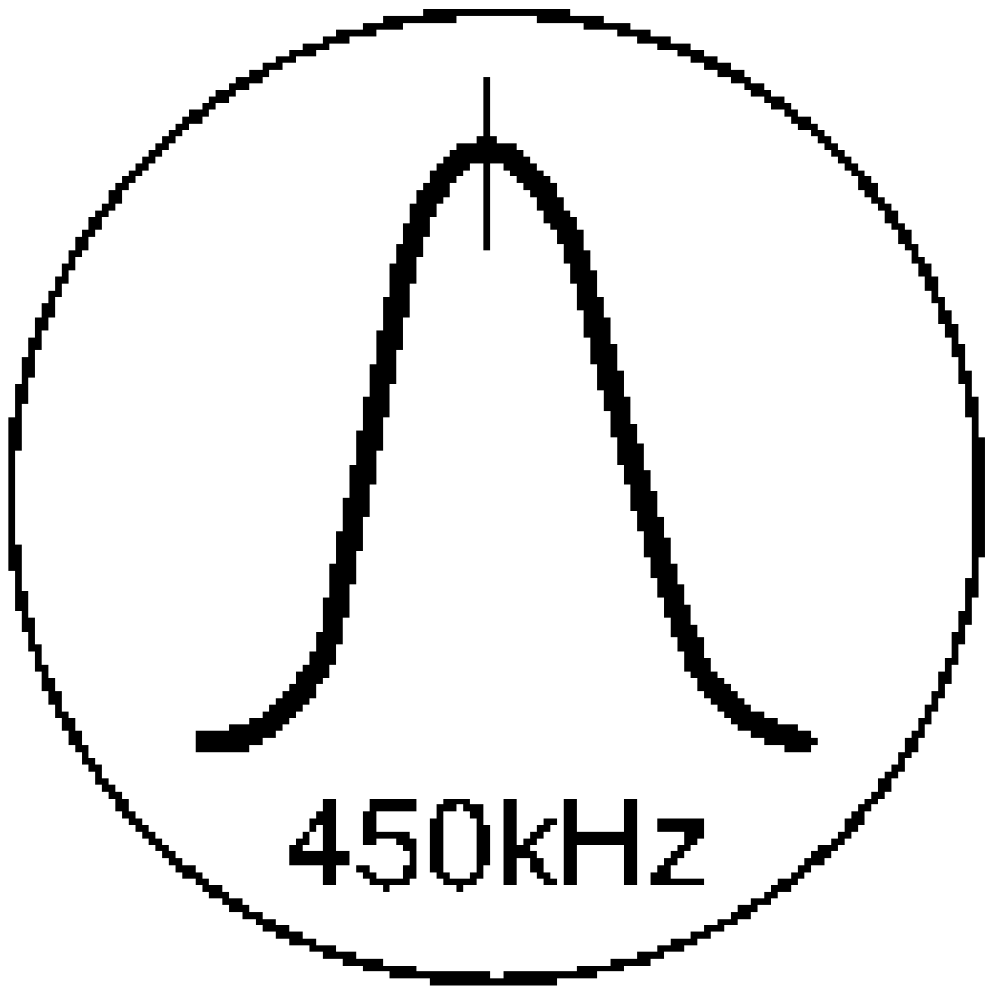

14.2.2. AM RF Adjustment

1. Connect the instrument as shown in Fig. 7.
2. Set the unit to AM mode.
3. Set AM-SG to 520kHz.
4. Receive 520kHz in the unit.
5. Adjust Z2602 (OSC) so that the EVM-AC is maximized.
6. Set AM-SG to 600Hz.
7. Receive 600Hz in the unit.
8. Adjust Z2602 (ANT) so that the EVM-SG is maximized.
9. Set AM-SG to 520kHz.
10. Receive 520kHz in the unit.
11. Adjust L2602 (OSC) so that the EVM-DC value is with 1.1±0.5V.

Fig.7

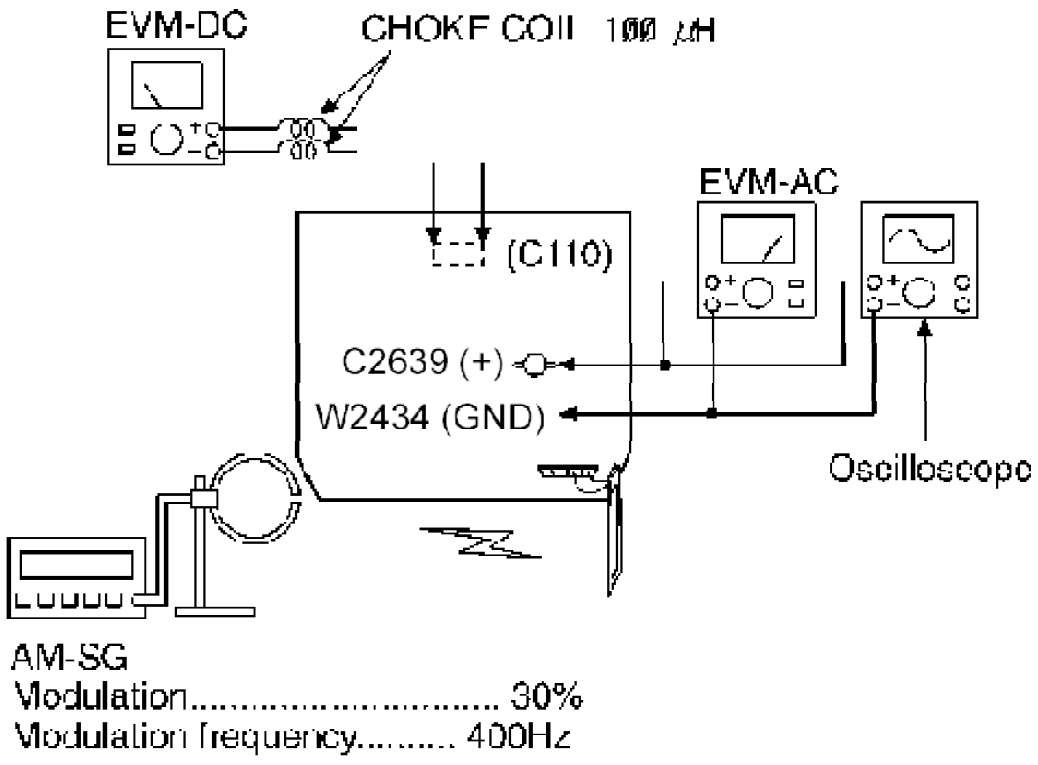
EVM-DC
CHOKE COIL 100 µH
(C110)
C2639 (+)
W2434 (GND)
EVM-AC
Oscilloscope
AM-SG
Modulation............................... 30%
Modulation frequency.......... 400Hz

14.3. Alignment Points

14.3.1. Cassette Deck Section

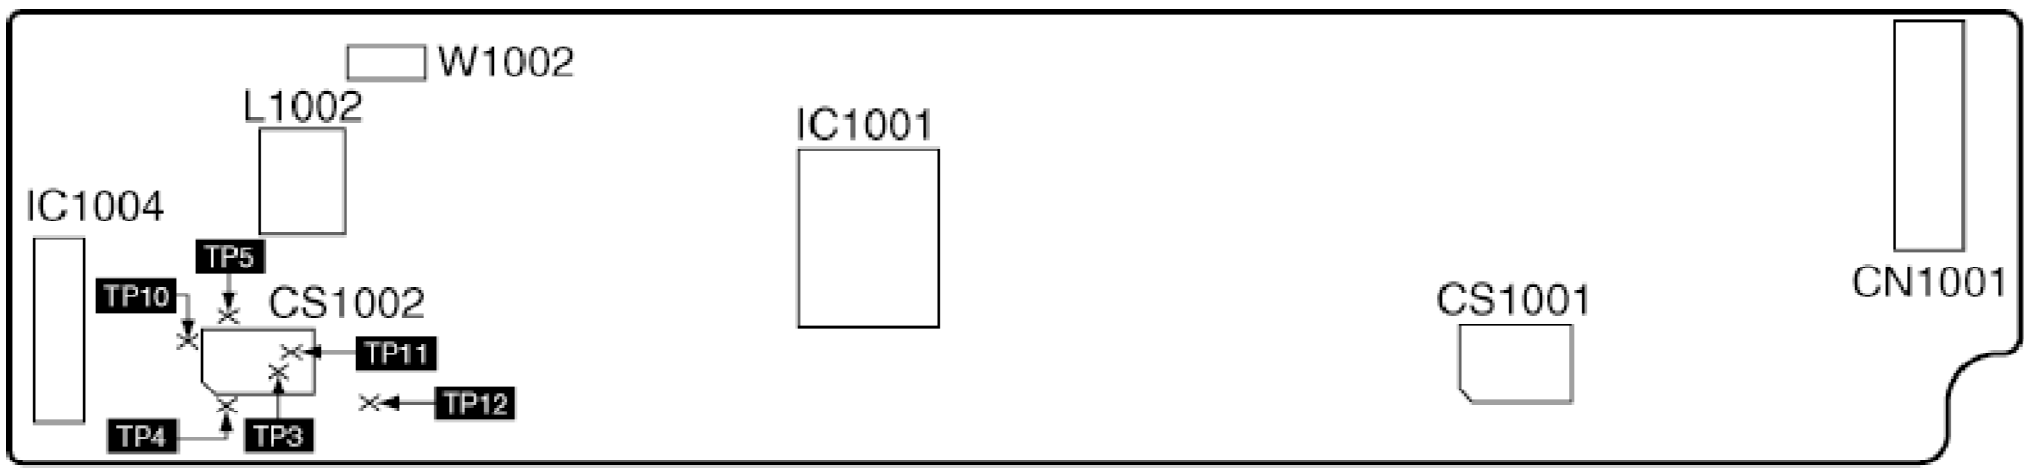
W1002
L1002
IC1001
IC1004
TP5
TP10
CS1002
TP11
TP12
TP4
TP3
CS1001
CN1001

14.3.2. Tuner Section

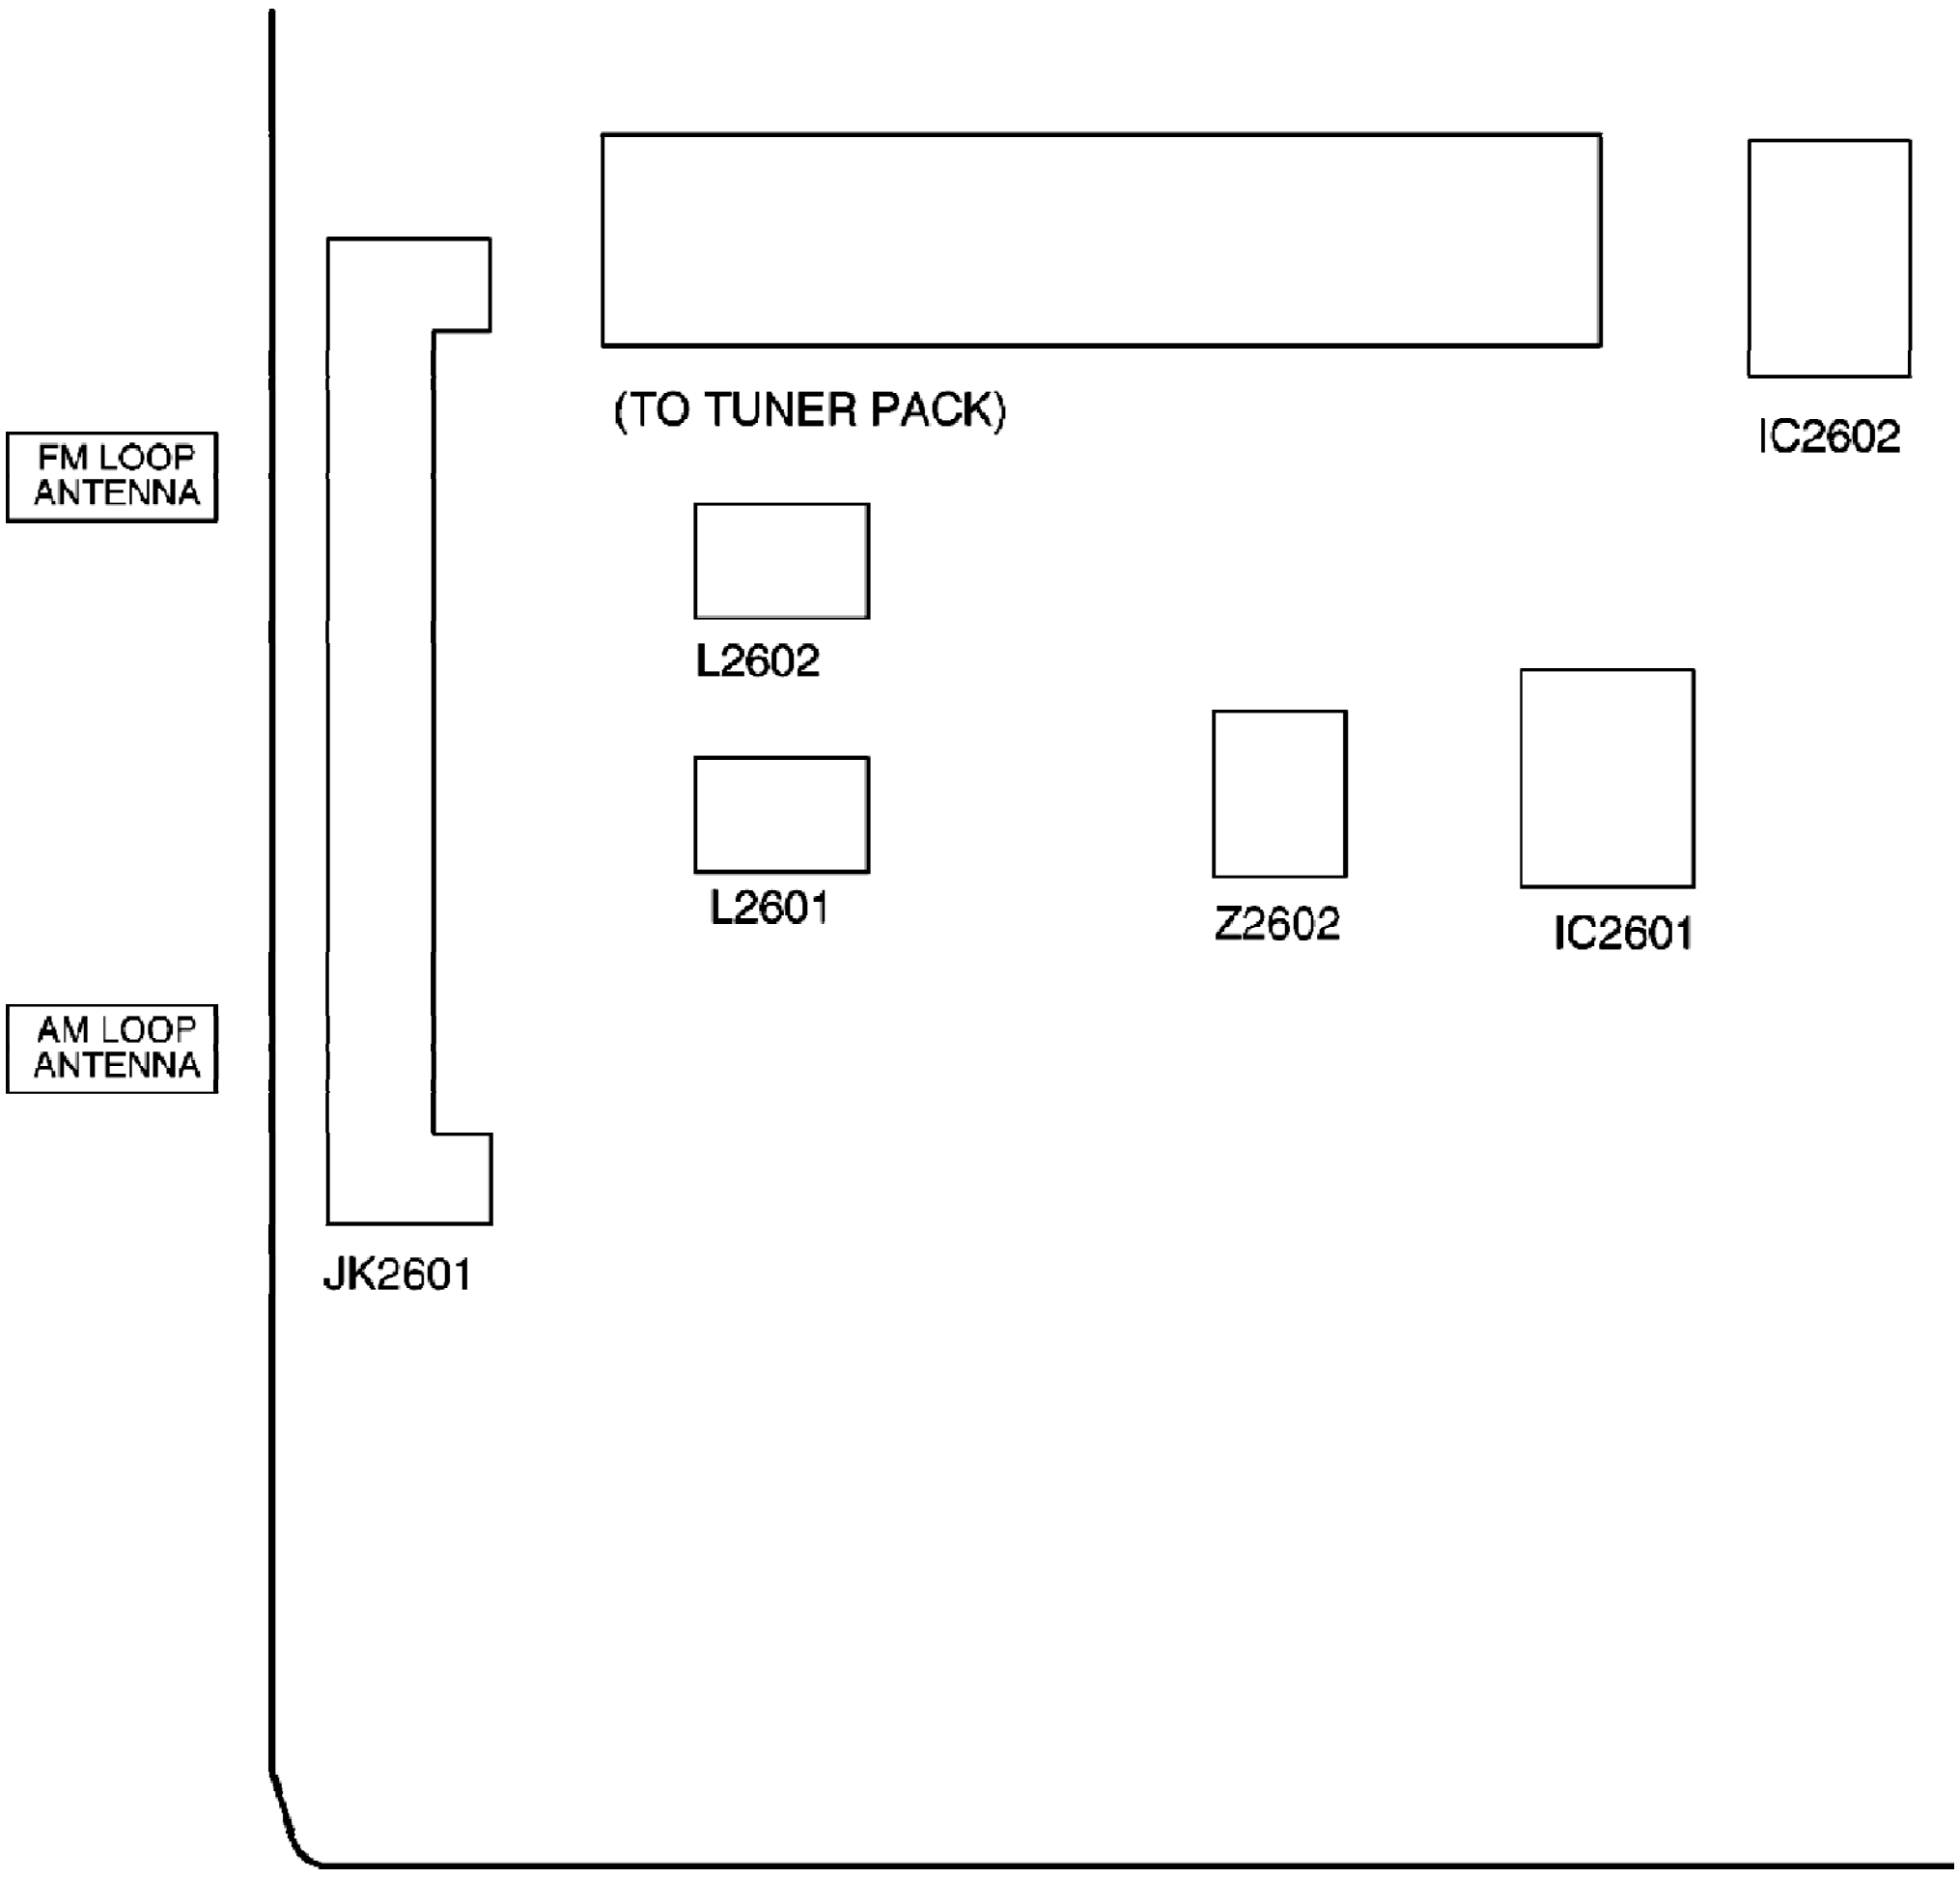
(TO TUNER PACK)
IC2602
FM LOOP ANTENNA
L2602
L2601
Z2602
IC2601
AM LOOP ANTENNA
JK2601

15. Block Diagram

16. Voltage Measurement

17. Schematic Diagram

(All schematic diagrams may be modified at any time with the development of the new technology)

Note:

SW1

: Push switch

SW2

: Push switch

SW3

: Open switch

SW4

: CD switch

SW5

: Load switch

S951

: Mode switch

S952

: Half switch

S971

: Mode switch

S972

: Half switch

S975

: Recinh_F switch

S6101

: Open/ Close switch

S6102

: CD 1 switch

S6103

: CD 2 switch

S6104

: CD 3 switch

S6105

: CD 4 switch

S6106

: CD 5 switch

S6107

: Left switch

S6108

: Down switch

S6109

: Right switch

S6110

: Up switch

S6201

: Rew switch

S6202

: Tuner switch

S6203

: CD switch

S6204

: FF switch

S6205

: Stop switch

S6206

: Deck 1/2 switch

S6207

: Deck 2 switch

S6208

: TAPE switch

S6209

: AUX switch

S6210

: Deck 1 switch

S6301

: Power switch

S6303

: H.Bass switch

S6304

: REC switch

S6305

: Demo/Display switch

S6306

: Sub-woofer switch

S6307

: Delete switch

S6308

: Marker switch

S6309

: Title Search switch

S6310

: Enter switch

S7201

: Rest switch

VR6491

: VR Volume Jog

- **The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis. Accordingly, there may arise some error in voltage values and waveformsdepending upon the internal impedance of the tester or the measuring unit.**
- **Importance safety notice :**
  Components identified by ⚠ mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

Caution !

IC, LSI and VLSI are sensitive to static electricity.
Secondary trouble can be prevented by taking care during repair.

- **Cover the parts boxes made of plastics with aluminium foil.**
- **Put a conductive mat on the work table.**
- **Ground the soldering iron.**

- Do not touch the pins of IC, LSI or VLSI with fingers directly.

17.1. (A) CD Servo Circuit

17.2. (B) Main (Tuner) Circuit

17.3. (B) Main Circuit

17.4. (C) Panel Circuit

17.5. (D) Transformer Circuit

17.6. (E) CD Detect Circuit, (F) Spindle Position Circuit, (G)CD Loading Circuit & (L) Sub-Power Circuit

17.7. (H) Power Circuit

17.8. (I) Deck Circuit & (J) Deck Mechanism Circuit

18. Printed Circuit Board

Note: Circuit board diagrams may be modified at any time with the development of new technology.

18.1. (A) CD Servo P.C.B.

18.2. (B) Main P.C.B.

18.3. (C) Panel P.C.B.

18.4. (D) Transformer P.C.B.

18.5. (E) CD Detect P.C.B., (F) Spindle Position P.C.B. & (G) CD Loading P.C.B.

18.6. (H) Power P.C.B. & (L) Sub-Power P.C.B.

18.7. (I) Deck P.C.B. & (J) Deck Mechanism P.C.B.

19. Wiring Connection Diagram

20. Illustration of IC’s, Transistors and Diodes

21. Terminal Function of IC’s

21.1. IC7002 (MN6627953HB) Servo processor/ Digital signal processor/ Digital filter/ D/A converter

Pin No.	Mark	I/O	Function
1	EXT0	I/O	Extend input/output port 0
2	EXT1	I/O	Extend input/output port 1
3	EXT2	I/O	Extend input/output port 2
4	PWMSEL	I	PWM output selection input (L: Direct; H: Tri-State
5	SPOUT	O	Spindle driver output signal
6	SPPOL	O	Spindle driver output signal
7	TRVP	O	Spindle driver output signal
8	TRVM	O	Spindle driver output signal
9	TRVP2	O	Traverse driver output signal 2 (+)
10	TRVM2	O	Traverse driver output signal 2 (-)
11	TRP	O	Traverse driver output signal (+)
12	TRM	O	Traverse driver output signal (-)
13	FOP	O	Traverse driver output signal (+)
14	FOM	O	Traverse driver output signal (-)
15	IOVDD3	-	I/O power supply 3
16	DVDD1	-	Power supply 1 for digital circuit
17	DVSS1	-	Digital circuit GND 1
18	ADPVCC	I	Power voltage monitor. Power voltage input
19	TEIN	I	DSP traverse error signal input
20	FEIN	I	DSP focus error signal input
21	CEA	I/O	HPF-Amp capacitance connection terminal
22	RFENV	O	RF envelope signal monitor

			monitor

Pin No.	Mark	I/O	Function
23	FEOUT	O	FE Amp output
24	FEN	I	FE Amp reversal input
25	TEN	I	TE Amp reversal input
26	TEOUT	O	TE Amp output
27	VREF	O	VREF output
28	PD	I	APC Amp input
29	LD	O	APC Amp output
30	E	I	Tracking input signal 1
31	F	I	Tracking input signal 2
32	D	I	Tracking input signal 4
33	B	I	Tracking input signal 2
34	C	I	Tracking input signal 3
35	A	I	Focus input signal 1
36	DCDET	I	Detection HPF capacitance terminal
37	RFVDD	-	RF Amp power supply
38	RESERVE	-	AVSS2
39	RFOUT	O	RF Amp output
40	RFIN	I	AGC input
41	CAGC	I/O	AGC control terminal
42	ARFOUT	O	AGC output (Audio RF)
43	AVSS2	-	Analog circuit GND 2
44	ARFIN	I	RF signal input
45	DSLF	O	DSL loop filter
46	IREF	I	I (current), Reference input
47	PLLF	O	PLL loop filter
48	PLLF0	O	PLL loop filter
49	AVDD2	-	Analog circuit power supply 2
50	OUTL	O	LCH output signal
51	AVSS1	-	Audio output circuit GND 1
52	N.C.	-	No Connection
53	AVDD1	-	Power supply 1 for analog circuit

Pin No.	Mark	I/O	Function
54	OUTR	O	RCH output signal
55	DVSS2	-	Digital circuit GND 2
56	IOVDD1	-	I/O power supply 1
57	DVDD2	-	Power supply 2 for Digital circuit
58	REGON	I	Laser diode control (H : ON)
59	IOMODE	I	I/O switching setting input
60	NTEST	I	Test mode setting input (H: ON)
61	TX	O	Digital audio interface output
62	FLAG	O	Flag signal output
63	MCLK	I	Micro-P serial command CLK
64	MDATA	I	Micro-P serial command DATA
65	MLD	I	Micro-P serial command LOAD
66	STAT	O	Status signal output
67	BLKCK	O	Subcode block clock
68	NRST	I	LSI reset input (L: RESET)
69	DVSS3	-	Digital circuit GND 3
70	X2	O	Crystal oscillator circuit output
71	X1	I	Crystal oscillator circuit input
72	IOVDD2	I	I/O power supply 2
73	DQSY	O	Pack signal output for CD-Text data
74	TXTD	O	CDText signal output
75	TXTCK	I	External clock signal input for CD-Text register
76	GIO0	I/O	General purpose input /output Terminal 0
77	GIO1	I/O	General purpose input /output Terminal 1
78	GIO2	I/O	General purpose input /output Terminal 2
79	GOUT0	O	General purpose output Terminal 0

Pin No.	Mark	I/O	Function
80	GOUT1	O	General purpose output Terminal 1

21.2. IC7003 (AN8739SBTE2) Focus coil/ Tracking coil/ Traverse motor/ Spindle motor drive

Pin No.	Mark	I/O	Function
1	/RST	O	RESET output terminal
2	N.C.	-	No Connection
3	IN2	I	Motor drive (2) input
4	PC2	I	Turntable motor drive signal (“L” :ON)
5	N.C.	-	No Connection
6	IN1	I	Motor driver (1) input
7	PVCC1	-	Power supply (1) for driver
8	PGND1	-	Ground connection (1) for driver
9	N.C.	-	No Connection
10	D1-	O	Motor driver (1) reverse-action output
11	D1+	O	Motor driver (1) forward-action output
12	D2-	O	Motor driver (2) reverse-action output
13	D2+	O	Motor driver (2) forward-action output
14	D3-	O	Motor driver (3) reverse-action output
15	D3+	O	Crystal oscillating circuit input (f = 16.9344MHz)
16	D4-	O	Motor driver (4) reverse-action output
17	D4+	O	Motor driver (4) forward-action output
18	N.C.	-	No Connection
19	PGND2	-	Ground connection (2) for driver
20	PVCC2	-	Power supply (2) for driver
21	VCC	-	Power supply terminal
22	VREF	-	Reference voltage input
23	IN4	I	Motor driver (4) input
24	IN3	I	Motor driver (3) input

Pin No.	Mark	I/O	Function
25	RSTIN	I	Reset terminal
26	N.C.	-	No Connection

21.3. IC2801 (C2CBJG000572) System Microprocessor

Pin No.	Mark	I/O	Function
1	LM_L	I	Level Meter Left
2	N.C.	-	No Connection
3	PLL_CE	O	PLL Chip Select
4	RDS_DAT	I	RDS Data Input
5	RDS_CLK	I	RDS Clock Input
6	N.C.	-	No Connection
7	N.C.	-	No Connection
8	BYTE	I	External Data Bus Width Select Input
9	CNVss/ EFP_CNVss	-	Flash Mode Terminal (Connect to ground)
10	Xcin	-	32.768 kHz Sub Clock
11	Xcout	-	32.768 kHz Sub Clock
12	/RESET/ EFP_RESET	I	Reset Input (ACTIVE L)
13	Xout	-	10 MHz Main Clock
14	Vss	-	Ground (0V)
15	Xin	-	10 MHz Main Clock
16	Vcc	-	Power Supply (+5V)
17	/NMI	-	Connect to Vcc (+5V)
18	RMT	I	Remote Control Input
19	BLKCK	I	CD Block Clock Input (Inverted)
20	SYNC	I	AC Failure Detect Input
21	ST/DO	I	Tuner IF Data/ Stereo Input
22	SD	I	Tuner Signal Detect Input
23	Harmonic_SW	I/O	*3 Harmonic Switch (Active L)
24	SW_LVL 1	O	*4 Sub-Woofer Level 1
25	SW_LVL 2	O	*4 Sub-Woofer Level 2
26	ASP_DAT	O	ASP Data
27	ASP_CLK	O	ASP Clock
28	N.C.	-	No Connection
29	PLL_DATA	O	PLL DATA
30	PLL_CLK	O	PLLCLK

Pin No.	Mark	I/O	Function
31	REG 8/ EFP_RxD1	I	Region Setting 8 (Subwoofer)
32	REG 7/ EFP_RxD1	I	Region Setting 7 (MIC)
33	REG 6/ EFP_SCLK	I	Region Setting 6 (RDS)
34	REG 5/ EFP_BUSY	I	Region Setting 5 (Optical Out)
35	REG 4	I	Region Setting 4 (Deck Mechanism)
36	REG 3	I	Region Setting 3 (Tuner)
37	REG 2	I	Region Setting 2 (Tuner)
38	REG 1	I	Region Setting 1 (Tuner)
39	MUTE_H	O	HIC Mute
40	MUTE_A	O	Audio Mute
41	EE_CS/EFP_/EPM	O	EEPROM Chip Select
42	EE_CLK	O	EEPROM Clock
43	EE_DAT	I/O	EEPROM Data
44	N.C.	-	No Connection
45	N.C.	-	No Connection
46	PCONT/EFP_/CE	O	Main Transformer Control Output
47	DCDET	I	DC Detect Input
48	N.C.	-	No Connection
49	N.C.	-	No Connection
50	N.C.	-	No Connection
51	N.C.	-	No Connection
52	HALF_1	I	Deck 1 Half Playback Input
53	MODE_1	I	Deck 1 Mode Playback Input
54	SW_LED	O	*2 Sub Woofer LED
55	N.C.	-	No Connection
56	PLG1	O	Deck 1 plunger control
57	PLG2	O	Deck 2 plunger control
58	MTR	I/O	Deck motor control (“L” for motor ON)
59	REC	I/O	L when record circuit is operating
60	DECK1_H	O	H when DECK 1 P/B head is selected
61	N.C.	-	No Connection

Pin No.	Mark	I/O	Function
62	Vcc	-	Power Supply (+5V)
63	N.C.	-	No Connection
64	Vss	-	Ground (0V)
65-66	N.C.	-	No Connection
67	V_JOG_A	I	Volume Jog A
68	V_JOG_B	I	Volume Jog B
69	EX1_CLK	I/O	*1 I/O Expander Clock
70	EX1_DAT	I	*1 I/O Expander Data
71	/FL_RESET	O	Reset Input (ACTIVE L)
72	FL_CS	I/O	FL Driver Chip Select
73	FL_DOUT	O	Serial Data To FL Driver (Output)
74	FL_CLK	I/O	Serial Clock To FL Driver
75	N.C.	-	No Connection
76	SSEQ_LED	O	Super Sound EQ LED
77	CD_RST	O	CD Reset Output
78	STATUS	I	CD Servo LSI Status Input
79	MLD	O	CD Command Load Output
80	MDATA_OUT	O	CD Command Data Output
81	MCLK	O	CD Command Clock Output
82	/RESTSW	I	CD Limit Switch Input for the Most Inner Point (Active Low)
83	CHG_HLF	O	Changer Half Drive Output
84	CHG_CW	O	Changer Motor Clockwise Output
85	CHG_CCW	O	Changer Motor Counterclockwise Output
86	CHG_SW1	I	CD Changer Switch 1 Input
87	CHG_SW2	I	CD Changer Switch 2 Input
88	CHG_PLR	O	Changer Plunger Output
89	CHG_AD2	I	Changer AD Detection Input (Position/Bottom)

Pin No.	Mark	I/O	Function
90	CHG_AD1	I	Changer AD Detection Input (Open/Clamp)
91	DECK2	I	DECK CONDITION INPUT 2 (R_INHF/MODE2/HALF2)
92	KEY3	I	KEY3 INPUT
93	KEY2	I	KEY2 INPUT
94	KEY1	I	KEY1 INPUT
95	PHOTO_2	I	Rotation Detection Signal (Deck 2)
96	AVss	-	Analog Power Supply Input (Connect to GND)
97	PHOTO_1	I	Rotation Detection Signal (Deck 1)
98	VREF	-	Reference for A-D (5V)
99	AVcc	-	Analog Power Supply Input
100	Demo Selector	I	(H= default demo on, L= default demo off.)

22. Troubleshooting Guide

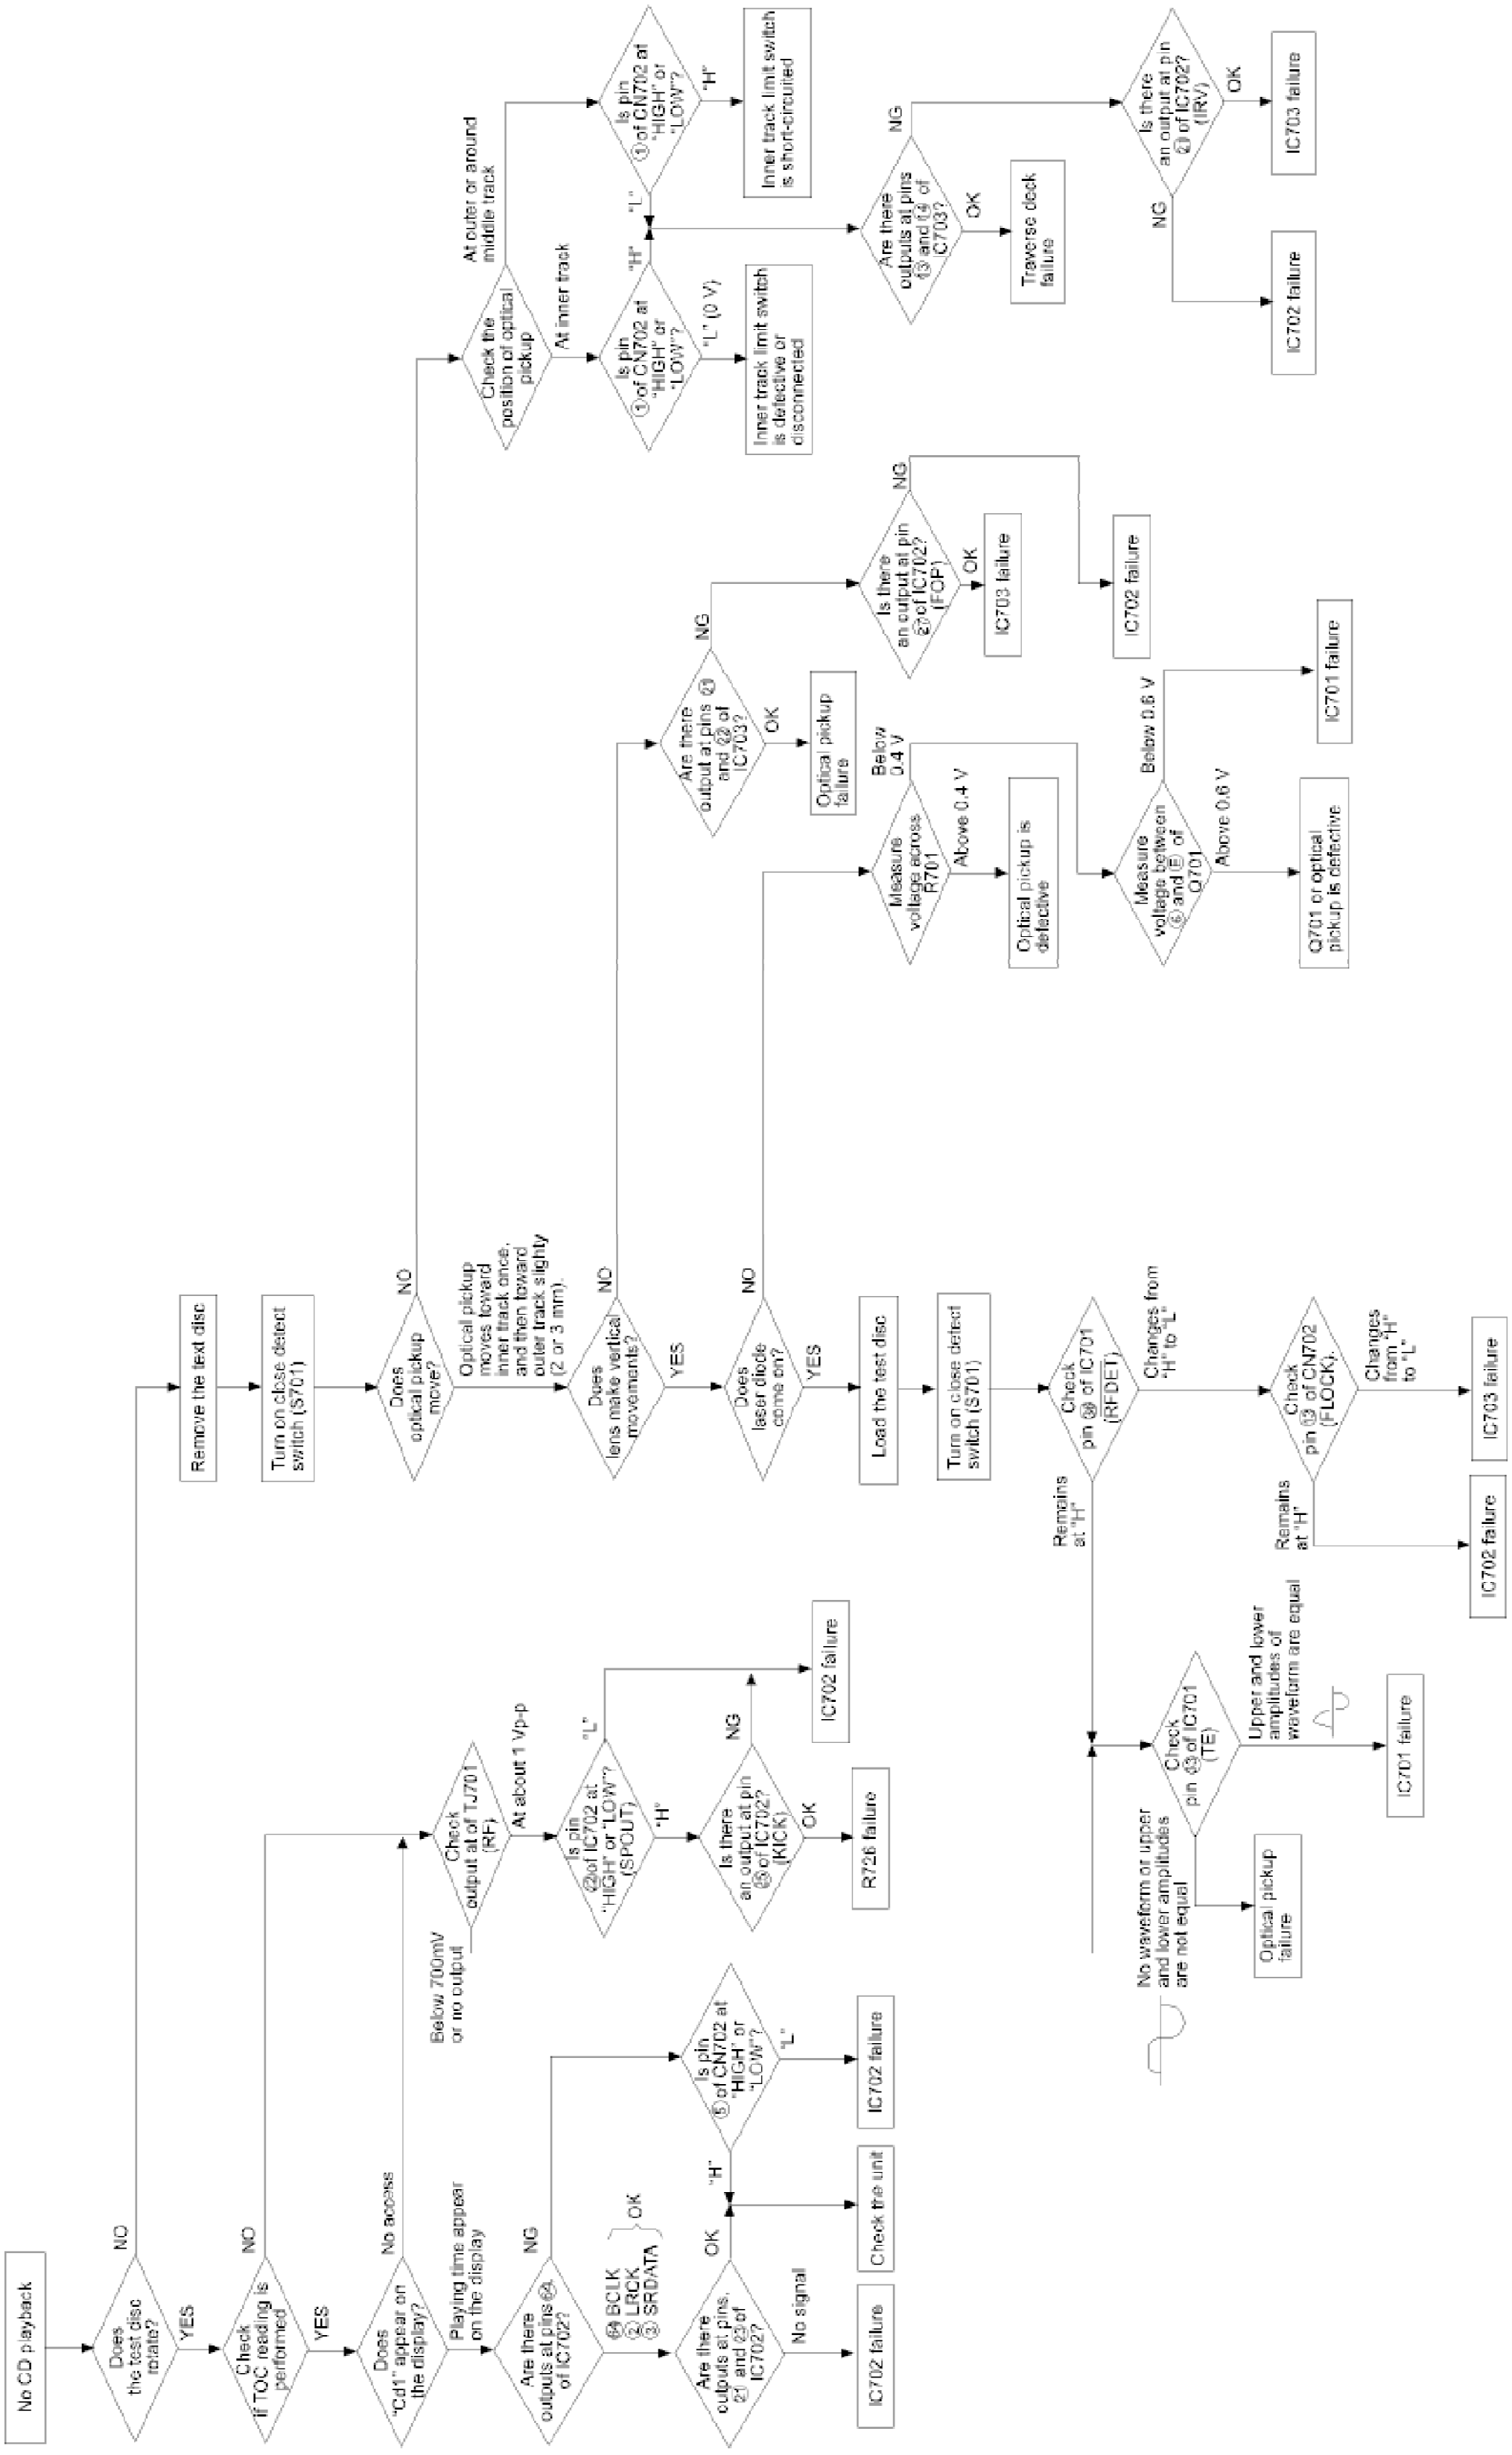
No CD playback
Does the test disc rotate?
NO
YES
Remove the text disc
Turn on close detect switch (S701)
Does optical pickup move?
NO
Optical pickup moves toward inner track once, and then toward outer track slighty (2 or 3 mm).
Check the position of optical pickup
At outer or around middle track
At inner track
Is pin ① of CN702 at "HIGH" or "LOW"?
"H"
"L"
"L" (0 V)
Inner track limit switch is defective or disconnected
Is pin ① of CN702 at "HIGH" or "LOW"?
"H"
Inner track limit switch is short-circuited
Are there outputs at pins ⑬ and ⑭ of IC703?
OK
NG
Traverse deck failure
Is there an output at pin ㉑ of IC702? (IRV)
NG
OK
IC702 failure
IC703 failure
Does lens make vertical movements?
NO
YES
Are there output at pins ㉑ and ㉒ of IC703?
OK
NG
Optical pickup failure
Is there an output at pin ㉗ of IC702? (FOP)
OK
NG
IC703 failure
IC702 failure
Does laser diode come on?
NO
YES
Measure voltage across R701
Below 0.4 V
Above 0.4 V
Optical pickup is defective
Measure voltage between Ⓑ and Ⓔ of Q701
Below 0.6 V
Above 0.6 V
Q701 or optical pickup is defective
IC701 failure
Load the test disc
Turn on close detect switch (S701)
Check pin ㊳ of IC701 (RFDET)
Remains at "H"
Changes from "H" to "L"
Check pin ⑬ of CN702 (FLOCK).
Remains at "H"
Changes from "H" to "L"
IC702 failure
IC703 failure
Check pin ㊸ of IC701 (TE)
No waveform or upper and lower amplitudes are not equal
Upper and lower amplitudes of waveform are equal
Optical pickup failure
IC701 failure
Check if TOC reading is performed
NO
YES
Does "Cd1" appear on the display?
No access
Playing time appear on the display
Check output at of TJ701 (RF)
Below 700mV or no output
At about 1 Vp-p
Is pin ㉒ of IC702 at "HIGH" or "LOW"? (SPOUT)
"L"
"H"
Is there an output at pin ㉕ of IC702? (KICK)
NG
OK
R726 failure
IC702 failure
Are there outputs at pins ㉔ of IC702?
NG
㉔ BCLK
② LRCK
③ SRDATA
OK
Are there outputs at pins, 21 and ㉓ of IC702?
OK
No signal
IC702 failure
Check the unit
Is pin ⑤ of CN702 at "HIGH" or "LOW"?
"H"
"L"
IC702 failure

23. Parts Location and Replacement Parts List

Notes:

- **Important safety notice:**
  Components identified by ⚠ mark have special characteristics important for safety.
  Furthermore, special parts which have purposes of fire-retardent (resistors), high-quality sound (capacitors), low noise (resistors), etc are used.
  When replacing any of these components, be sure to use only manufacturer's specified parts shown in the parts list.
- **The parenthesized indications in the Remarks columns specify the areas or colour. (Refer to the cover page for area or colour)**
  Parts without these indications can be used for all areas.
- **Warning: This product uses a laser diode. Refer to caution statements on "Precaution of Laser Diode".**
  ACHTUNG:
- **Die Lasereinheit nicht zerlegen.**
- **Die Lasereinheit darf nur gegen eine vom Hertsteller spezifizierte Einheit ausgetauscht werden.**
- **Capacitor values are in microfarads (μ F) unless specified otherwise, P= Pico-farads (pF), F= Farads.**
- **Resistance values are in ohms, unless specified otherwise, 1K= 1,000 (OHM).**
- **The marking (RTL) indicates that the Retention Time is limited for this items. After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of a availability is dependent on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.**
- **[M] Indicates in the Remarks columns indicates parts supplied by PAVCSG.**
- **The "(SF)" mark denotes the standard part.**
- **Reference for O/I book languages are as follows:**

Ar:	Arabic	Du:	Dutch	It:	Italian	Sp	Spanish
Cf:	Canadian French	En:	English	Ko:	Korean	Sw:	Swedis
Cz:	Czech	Fr:	French	Po:	Polish	Co:	Traditio Chinese
Da:	Danish	Ge:	German	Ru:	Russian	Cn:	Simplifi Chinese
Pe:	Persian	Ur:	Ukraine				

23.1. Deck Mechanism (RAA4502-S)

23.1.1. Deck Mechanism Parts Location

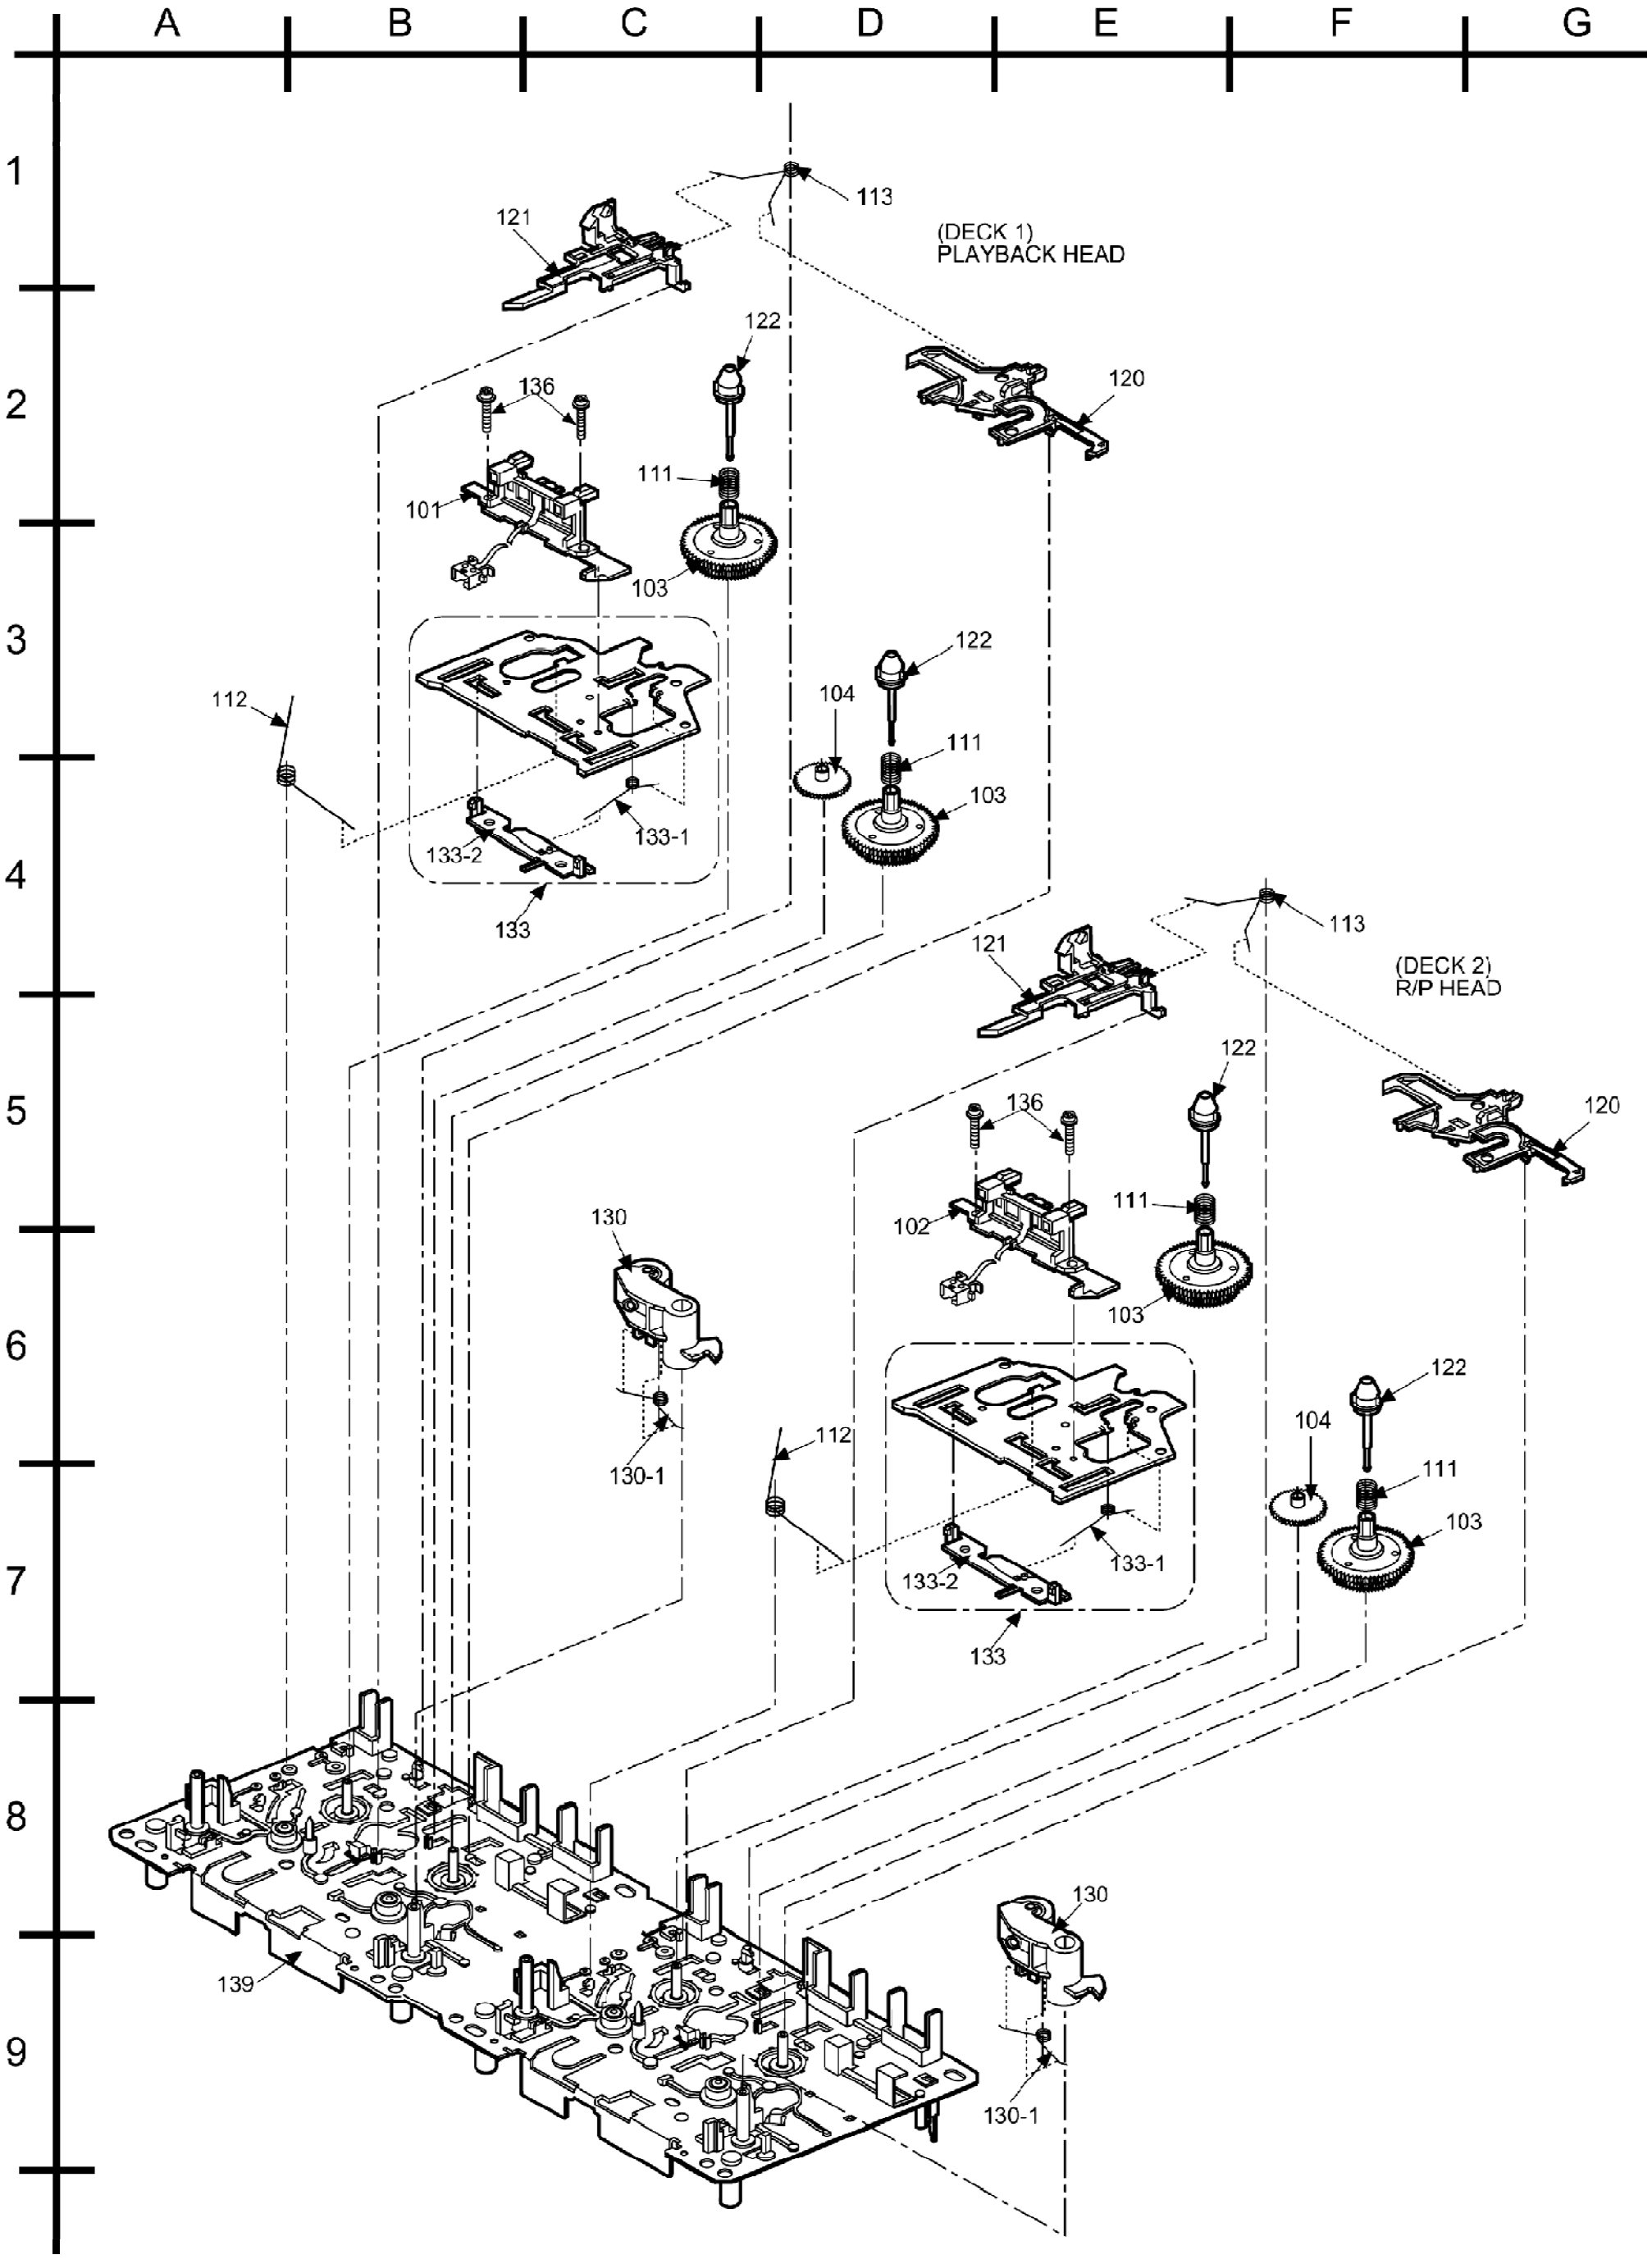
A
B
C
D
E
F
G
(DECK 1)
PLAYBACK HEAD
133-1
133-2
(DECK 2)
R/P HEAD
130-1
133-1
133-2
130-1

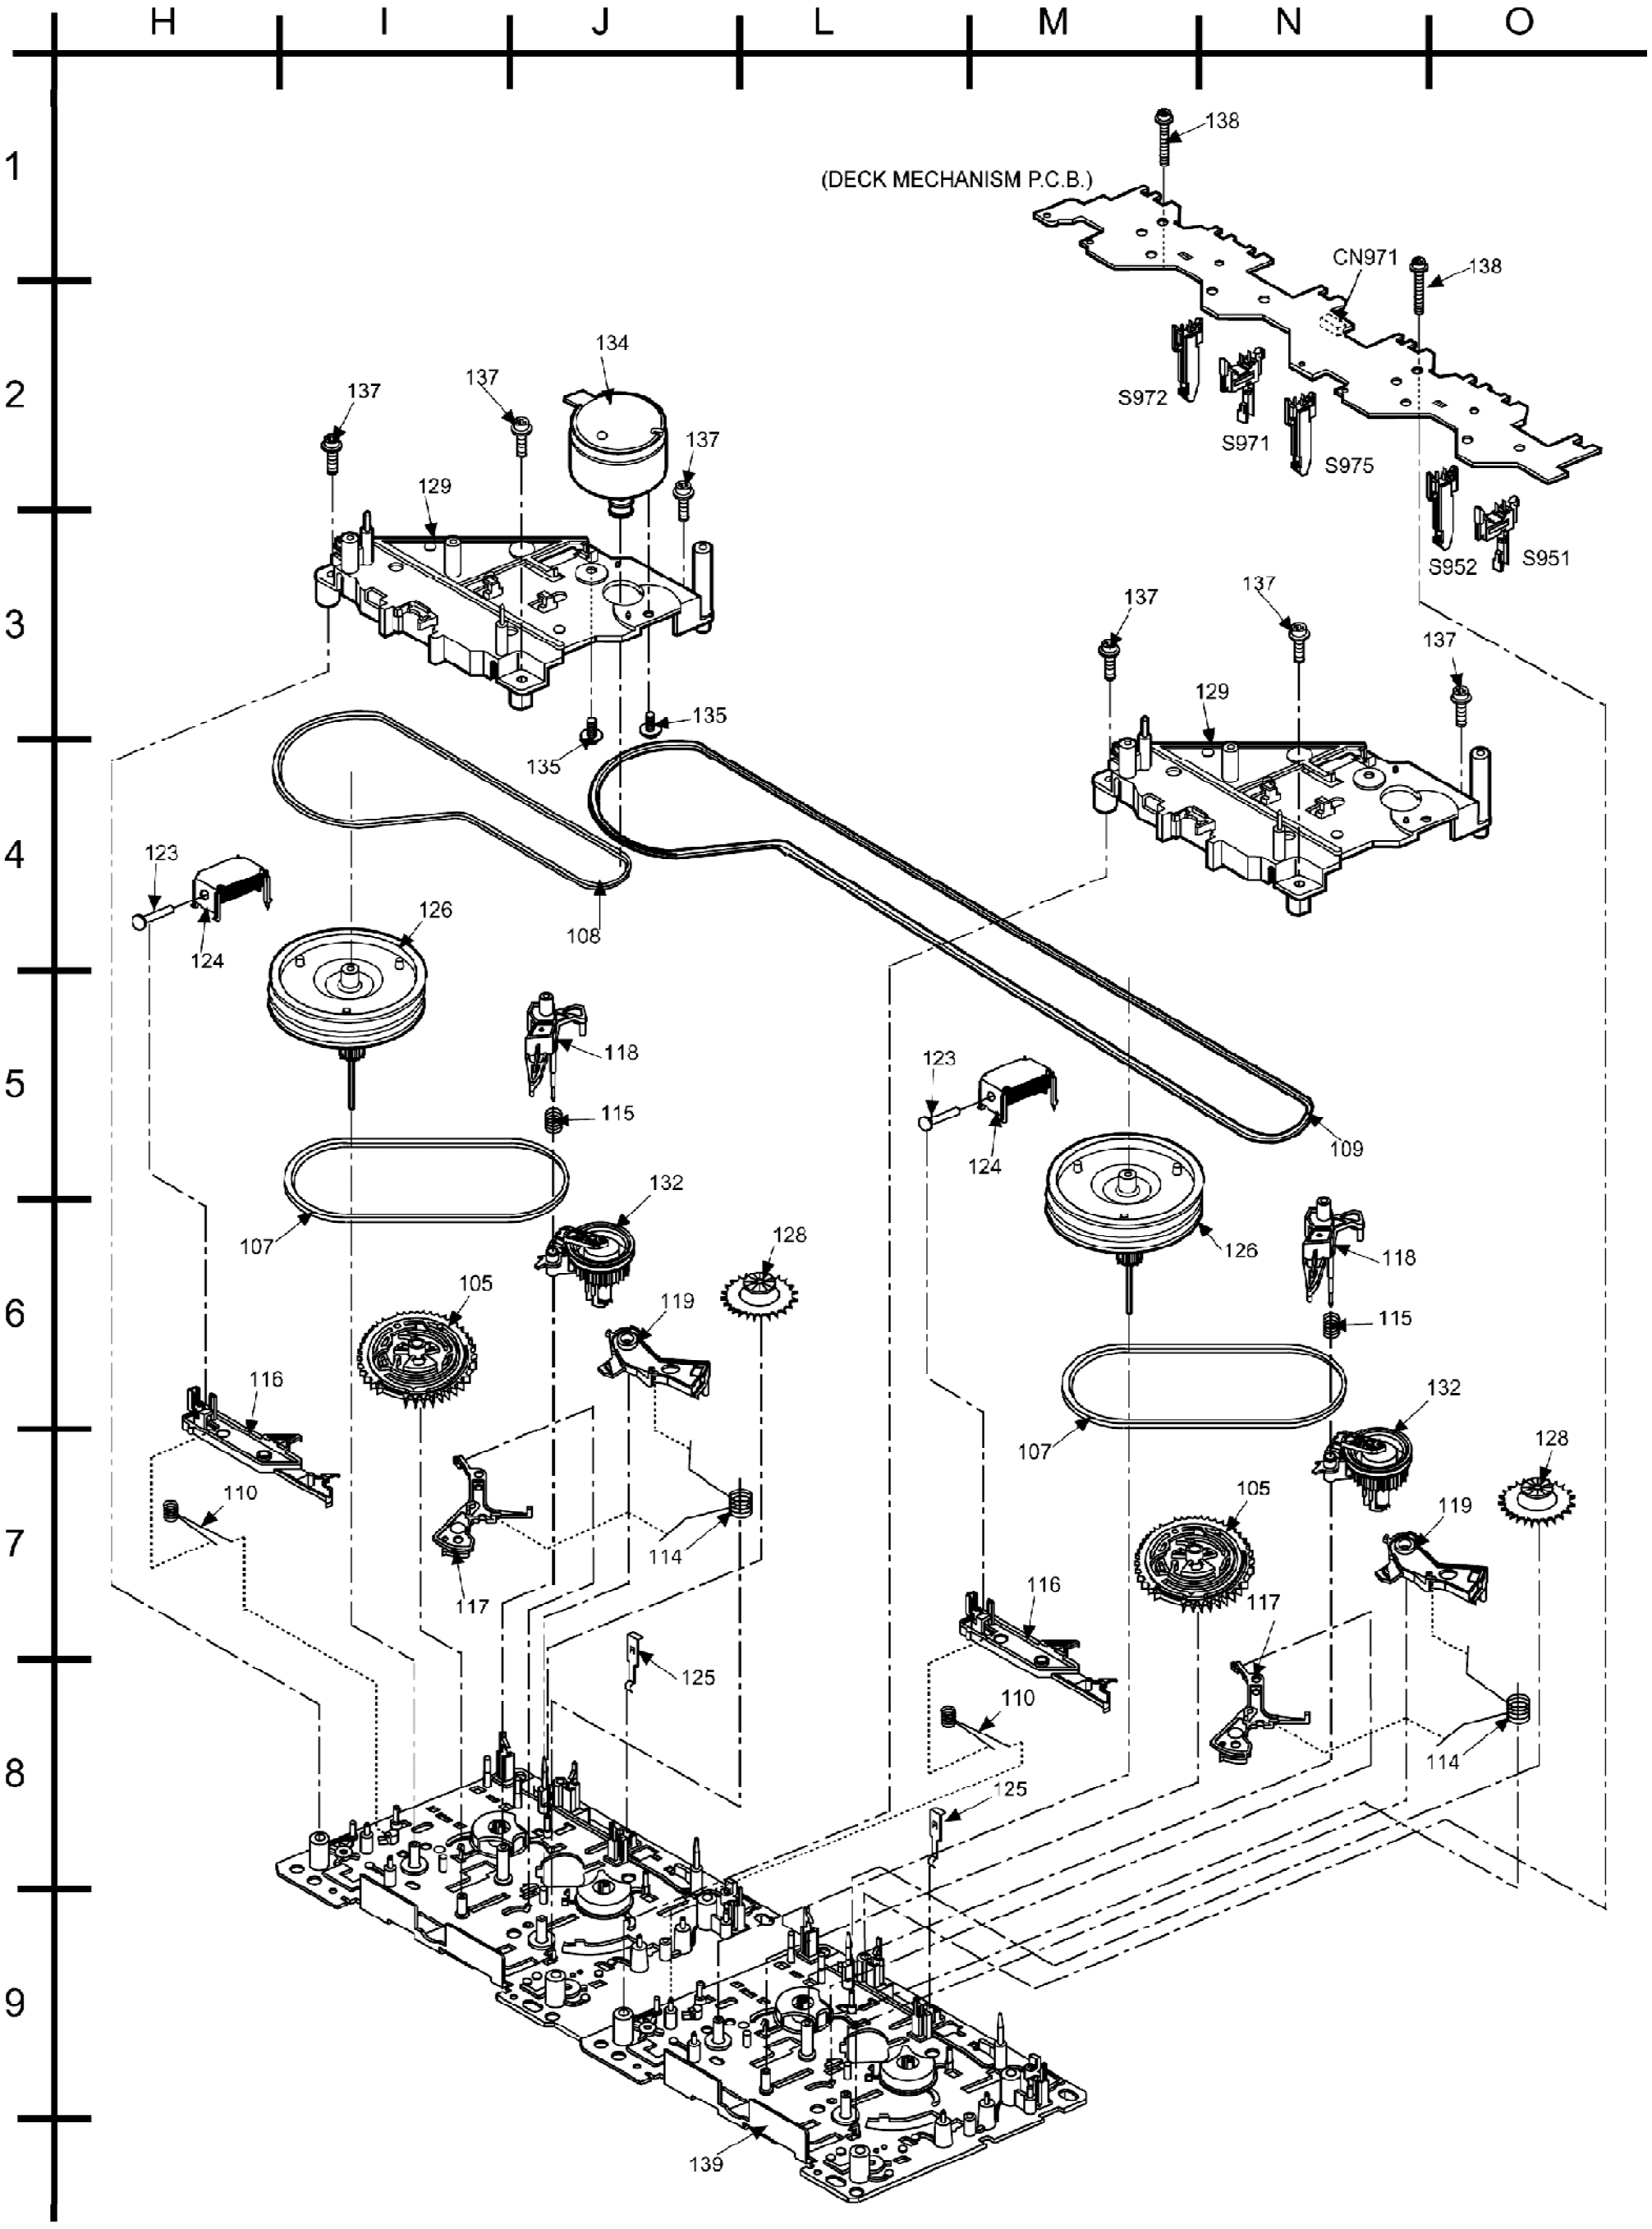
H
I
J
L
M
N
O
1
2
3
4
5
6
7
8
9
138
(DECK MECHANISM P.C.B.)
CN971
138
S972
S971
S975
S952
S951
134
137
137
137
129
135
135
137
137
137
129
123
124
126
108
118
115
123
124
109
107
132
128
126
118
115
105
119
116
110
114
117
125
107
132
128
105
119
116
117
110
114
125
139

23.1.2. Deck Mechanism Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		CASSETTE DECK	
101	RED0069	R/P HEAD BLOCK UNIT	[M]
102	RED0070	P/B HEAD BLOCK UNIT	[M]
103	RDG0300	REEL BASE GEAR	[M]
104	RDG0301	WINDING RELAY GEAR	[M]
105	RDK0026	MAIN GEAR	[M]
107	RDV0033-4	WINDING BELT	[M]
108	RDV0064	CAPSTAN BELT A	[M]
109	RDV0071	CAPSTAN BELT B	[M]
110	RMB0312	TRIGGER LEVER SPRING	[M]
111	RMB0400	REEL SPRING	[M]
112	RMB0403	HEAD PANEL SPRING	[M]
113	RMB0404	BRAKE ROD SPRING	[M]
114	RMB0406	FR LEVER SPRING	[M]
115	RMB0408	THRUST SPRING	[M]
116	RML0370	TRIGGER LEVER	[M]
117	RML0371	FR LEVER	[M]
118	RML0372	WINDING LEVER	[M]
119	RML0374	EJECT LEVER	[M]
120	RMM0131	BRAKE ROD	[M]
121	RMM0133	EJECT ROD	[M]
122	RMQ0519	REEL HUB	[M]
123	RMS0398-1	MOVING CORE	[M]
124	RSJ0003	PLUNGER ASS'Y	[M]
125	RMC0061	PACK SPRING	[M]
126	RXF0061	FLYWHEEL F ASS'Y	[M]
128	RXG0040	FF RELAY GEAR ASS'Y	[M]
129	RMK0283A-J	SUB-CHASSIS	[M]
130	RXL0124	PINCH ROLLER F ASS'Y	[M]
130-1	RMB0401	PINCH ARM SPRING F	[M]
132	RXL0126	WINDING ARM ASS'Y	[M]
133	RXQ0412	HEAD PANEL ASS'Y	[M]
133-1	RMB0405	FR ROD SPRING	[M]
133-2	RMM0132	FR ROD	[M]
134	REM0121	CAP MOTOR ASS'Y	[M]
135	RHD26022	MOTOR SCREW	[M]
136	XTW2+5LFJ	HEAD BLOCK UNIT SCREW	[M]
137	XTW26+10SFJ	SUB-CHASSIS SCREW	[M]
138	XYC2+JF17FJ	PCB EARTH SCREW	[M]
139	RFKJAA4501-S	CHASSIS ASS'Y	[M]

23.2. CD Loading Mechanism (RD-DAC026-S)

23.2.1. CD Loading Mechanism Parts Location

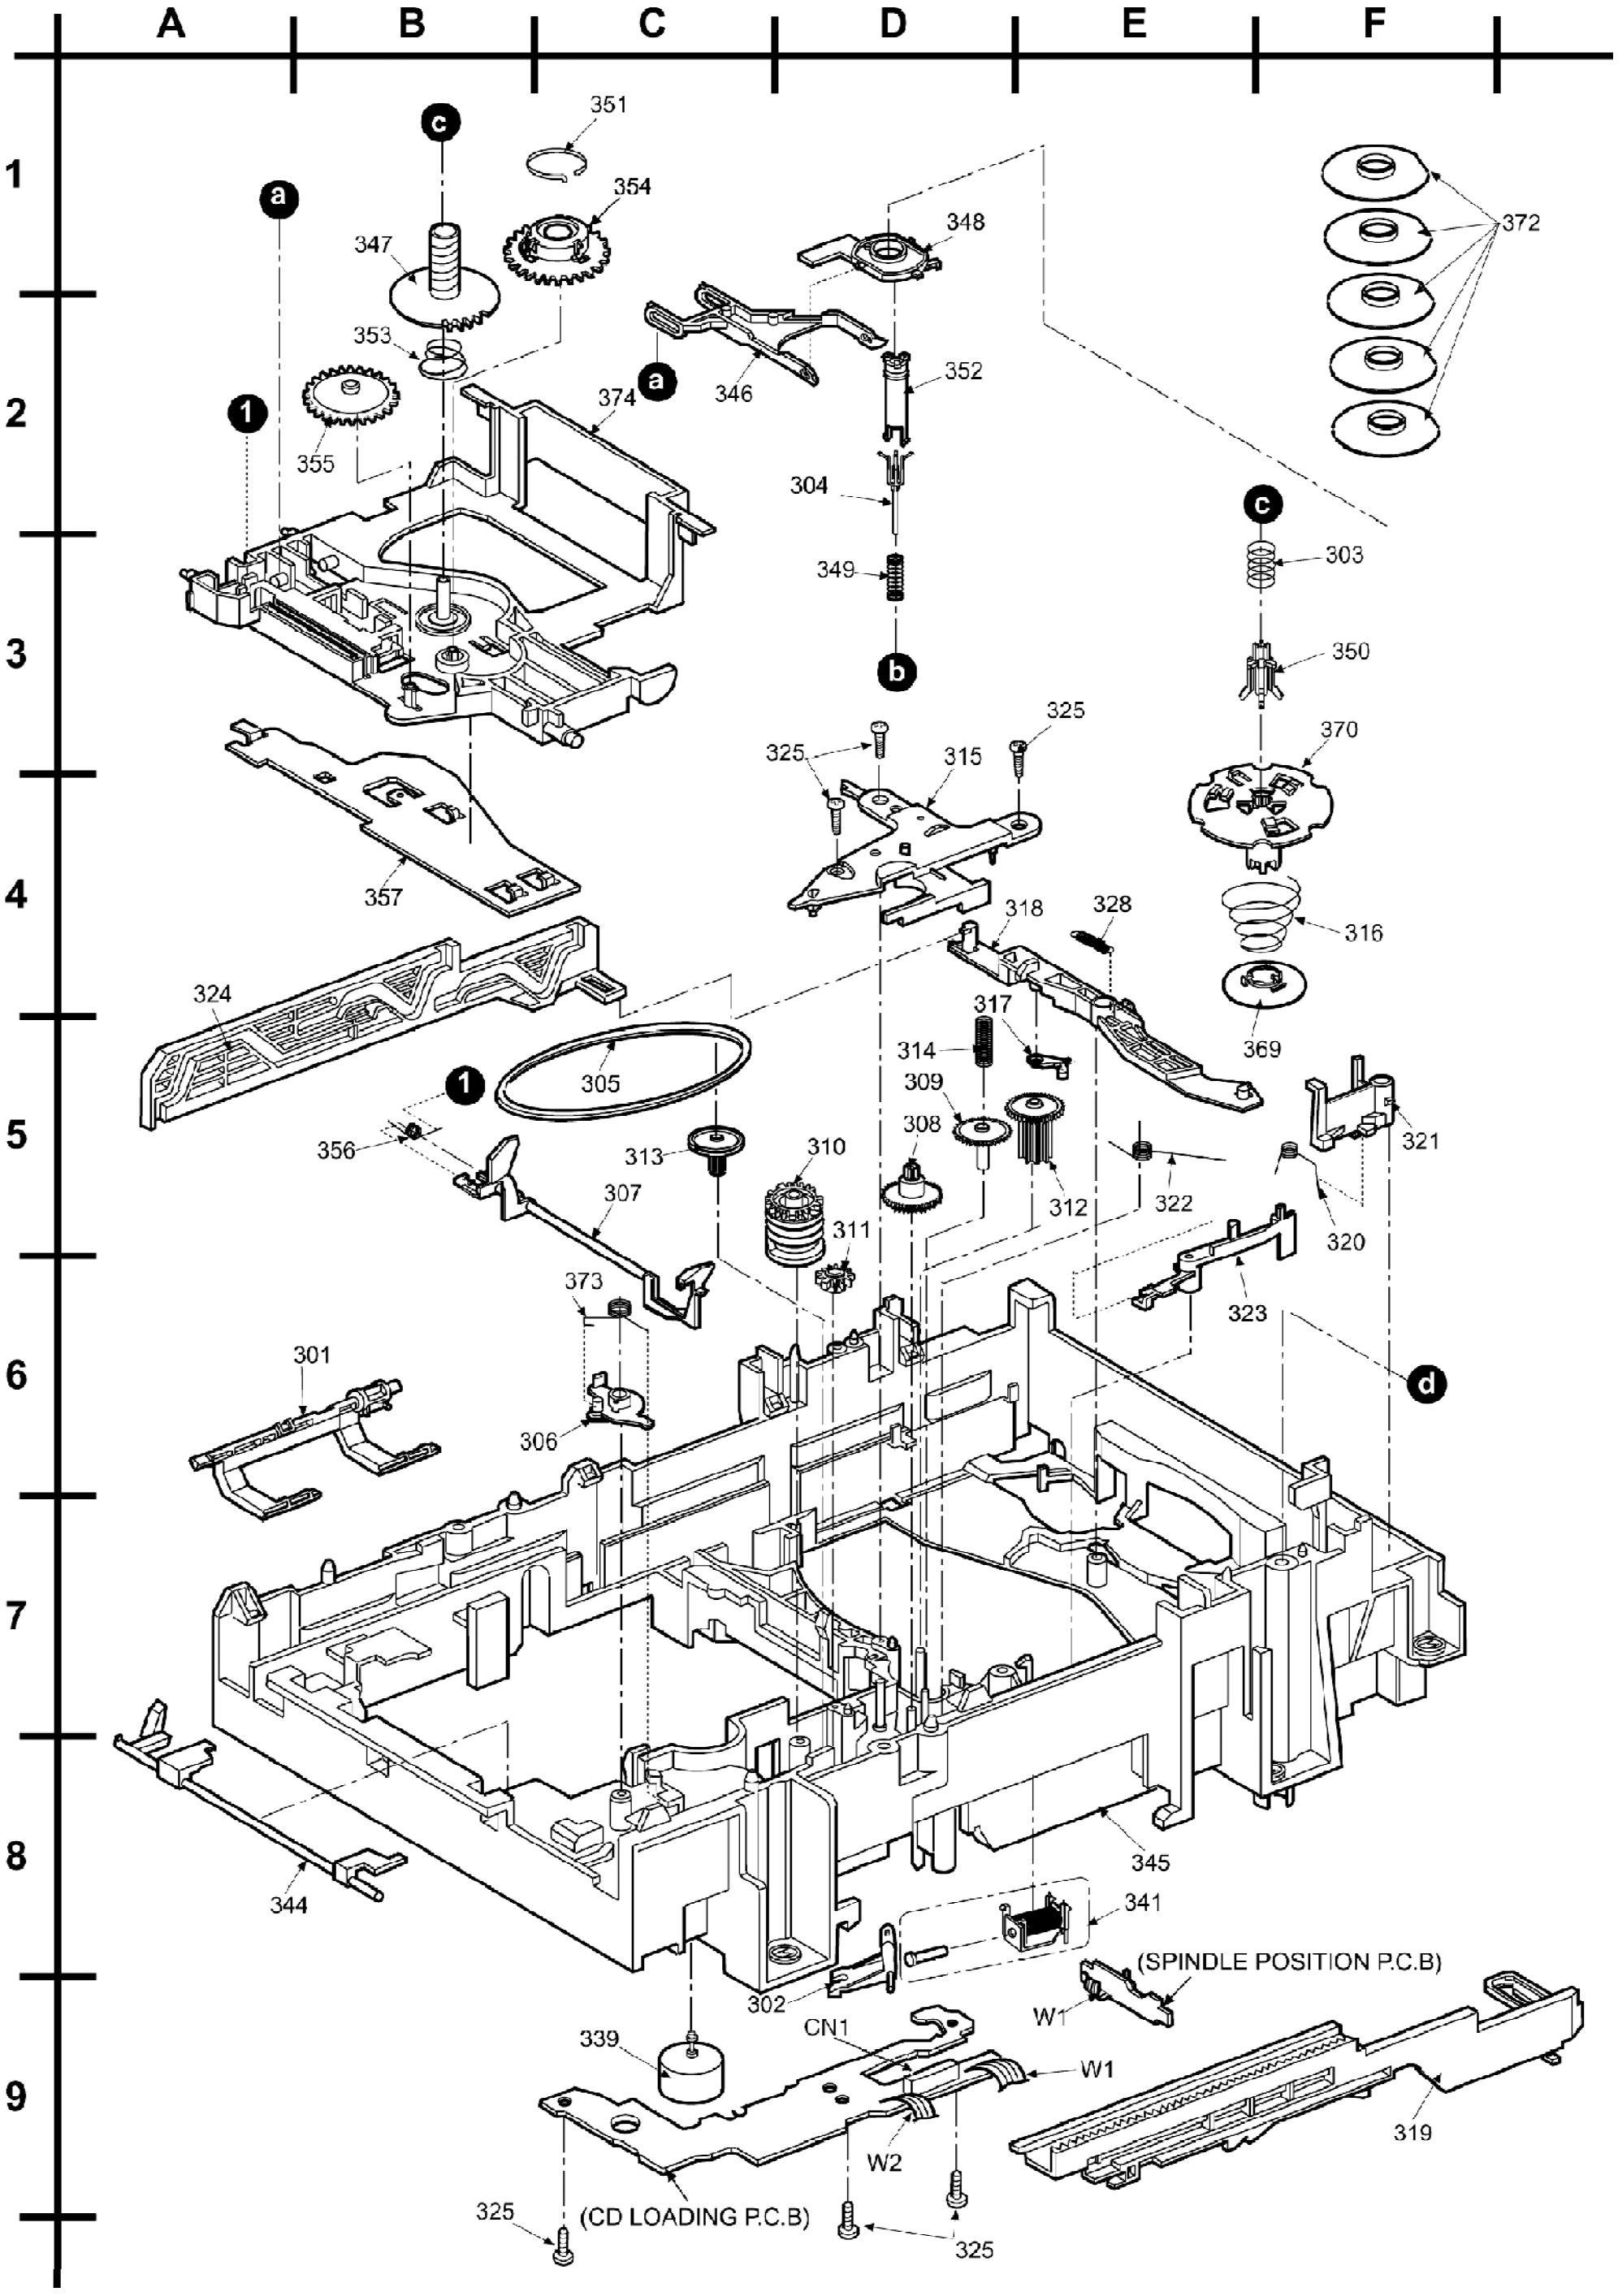
A
B
C
D
E
F
c
a
a
c
b
d
(SPINDLE POSITION P.C.B)
W1
CN1
W1
W2
(CD LOADING P.C.B)

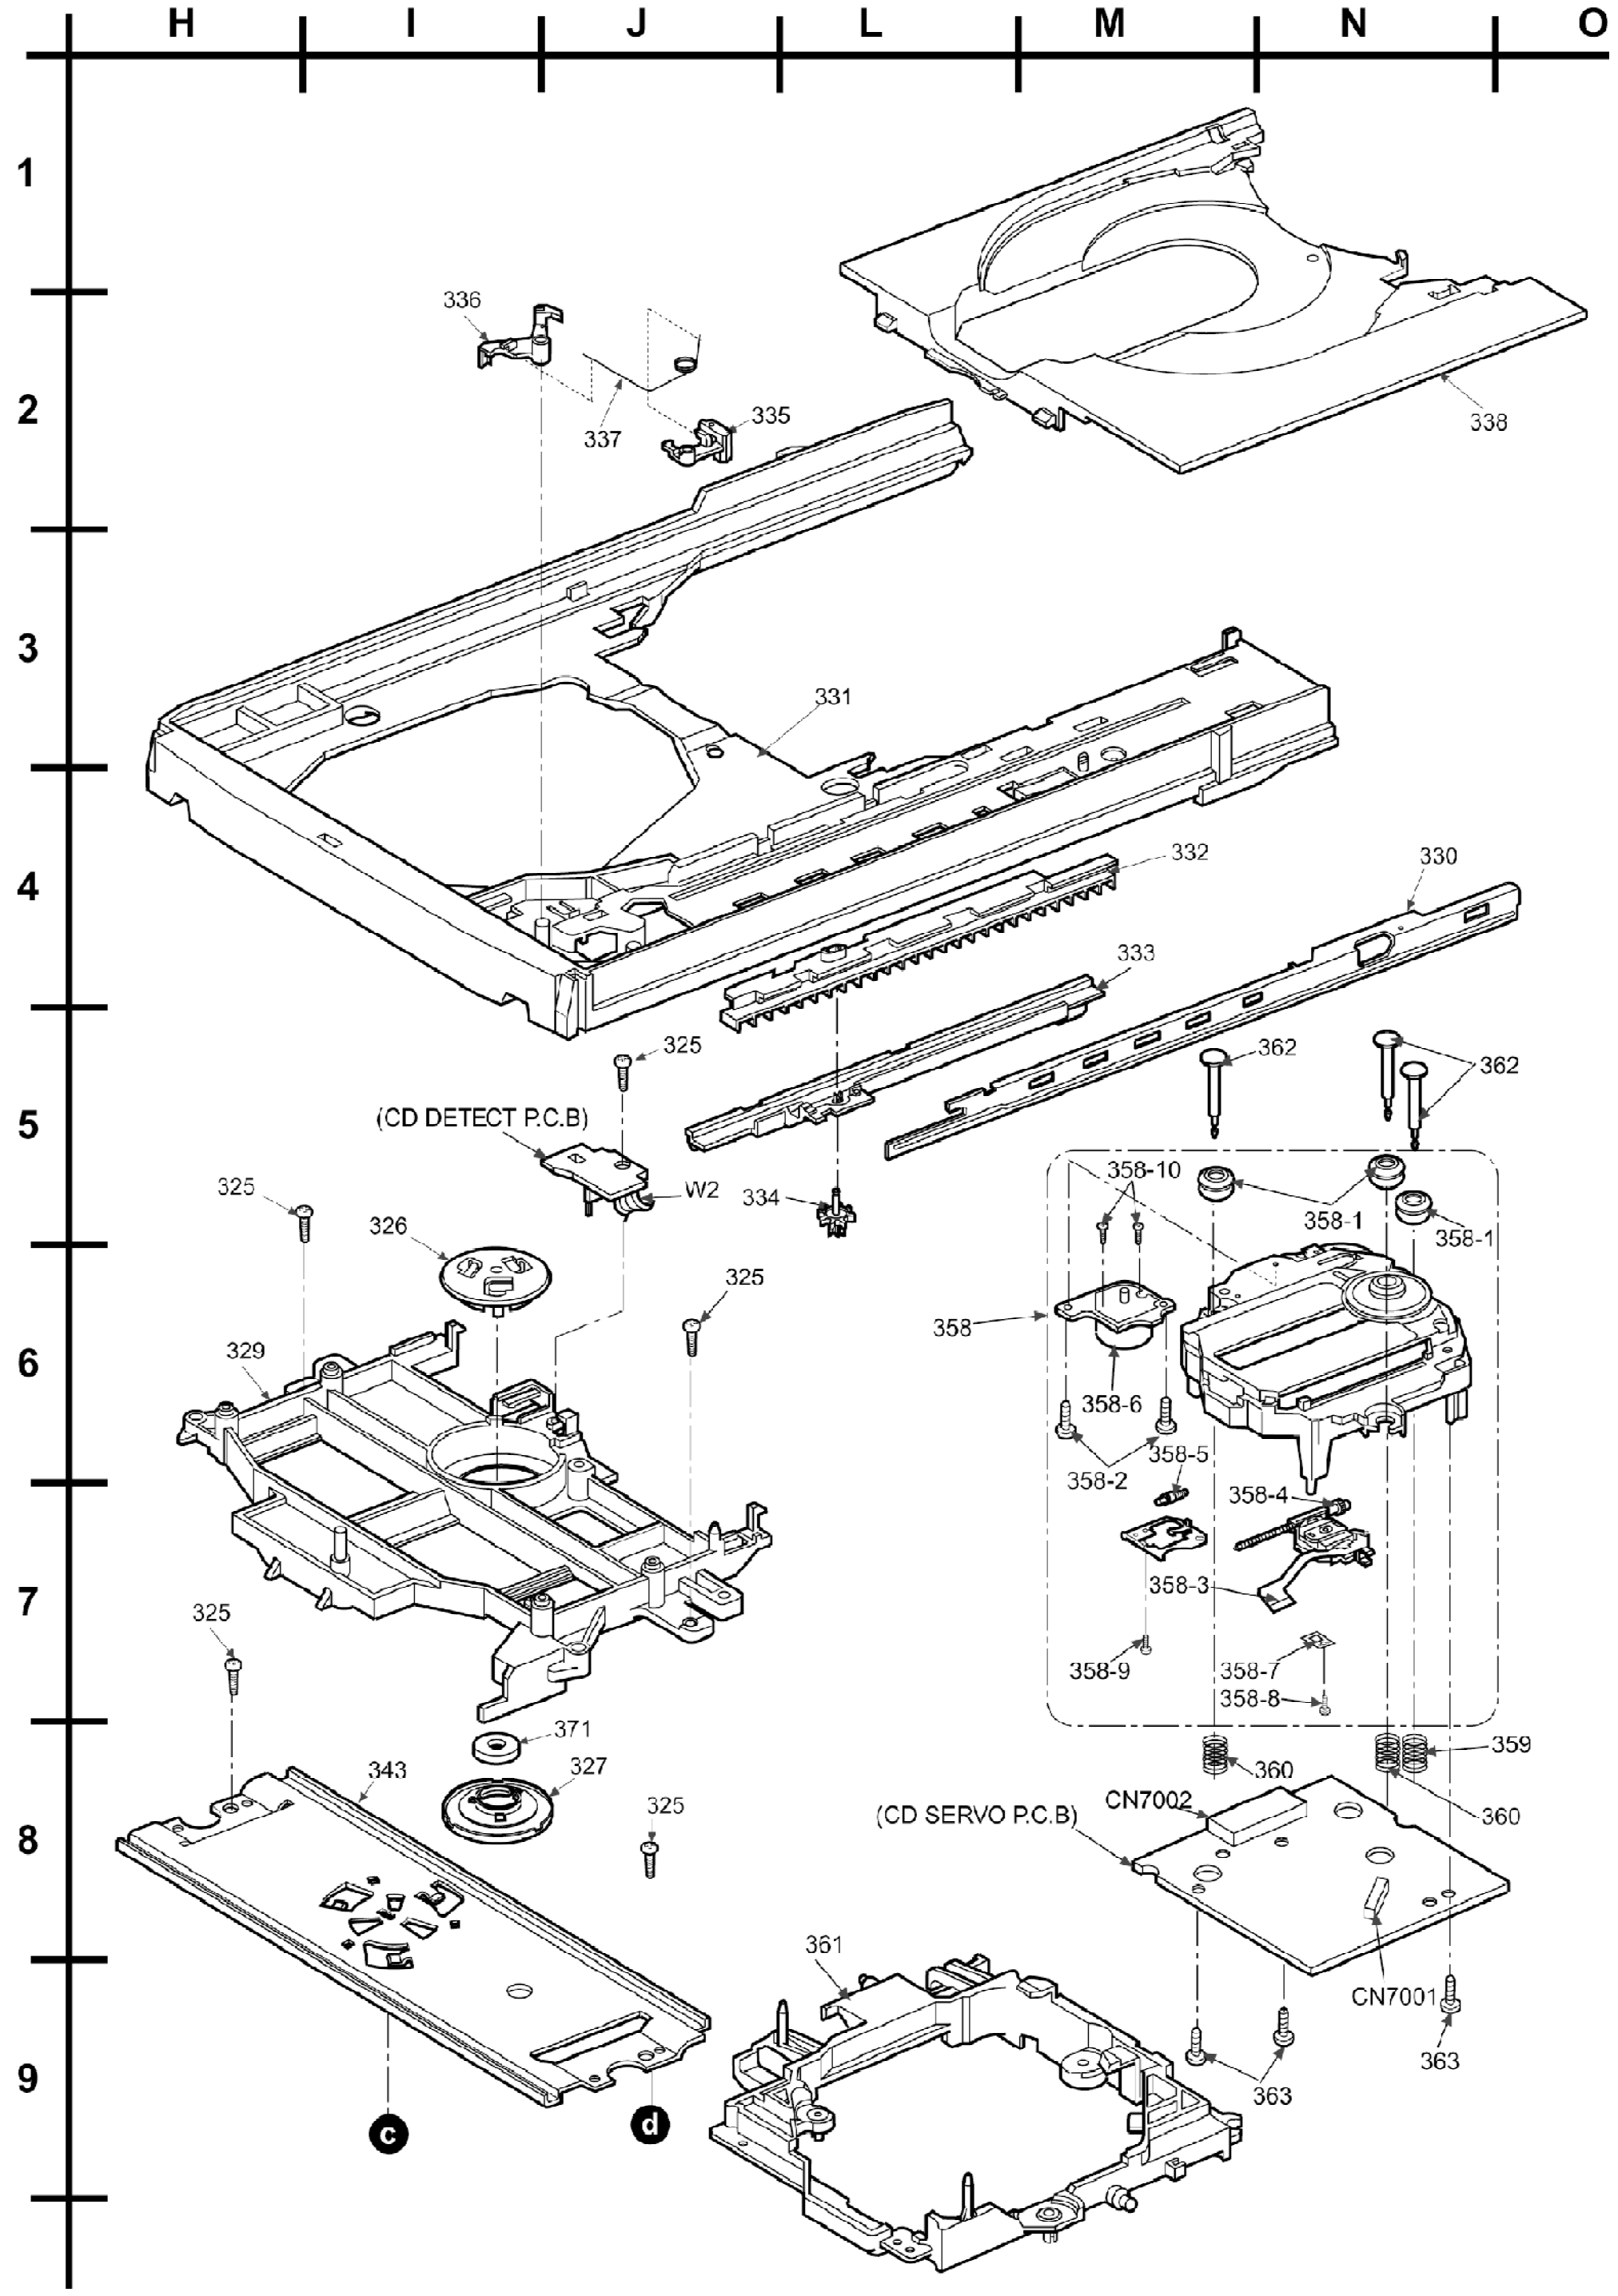
H
I
J
L
M
N
O
1
2
3
4
5
6
7
8
9
336
337
335
338
331
332
330
333
325
362
362
(CD DETECT P.C.B)
W2
334
325
326
358-10
358-1
358-1
325
358
329
358-6
358-5
358-2
358-4
358-3
325
358-9
358-7
358-8
371
359
343
327
360
325
(CD SERVO P.C.B)
CN7002
360
361
CN7001
363
363
c
d

23.2.2. CD Loading Mechanism Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		TRAVERSE DECK	
301	RML0517	TIMING LEVER	[M]
302	RML0516	PLUNGER LEVER	[M]
303	RMB0551	UPPER SPINDLE SPRING	[M]
304	RMQ0744	LOWER HOOK	[M]
305	RDV0056	BELT	[M]
306	RML0525	FRONT LOCK LEVER	[M]
307	RML0526	DISC LEVER	[M]
308	RDG0424	DRIVE GEAR	[M]
309	RDG0425	CHANGE GEAR	[M]
310	RDG0427	TRAVERSE CAM GEAR	[M]
311	RDG0428	TRAVERSE RELAY GEAR	[M]
312	RDG0426	UP/DOWN GEAR	[M]
313	RDG0429	PULLEY GEAR	[M]
314	RMB0549-1	CHANGE GEAR SPRING	[M]
315	RMQ0748	PITCH PLATE	[M]
316	RMB0553	PUSH SPRING	[M]
317	RML0530	ASSIST LEVER	[M]
318	RML0518	CONNECTION LEVER	[M]
319	RMM0201	SLIDE PLATE 1	[M]
320	RME0258	REAR LOCK SPRING	[M]
321	RML0521	REAR LOCK	[M]
322	RME0257	TRAY LOCK LEVER SPRING	[M]
323	RML0520	TRAY LOCK	[M]
324	RMM0202	SLIDE PLATE 2	[M]
325	XTB3+10JFJ	SCREW	[M]
326	RMR0334	FIXED PLATE	[M]
327	RMR0624-W2	CLAMPER	[M]
328	RMB0561	ASSIST LEVER SPRING	[M]
329	RMR1121-K	MECHA COVER	[M]
330	RMA1110-2	TRAY ANGLE	[M]
331	RMR1122-H1	TRAY BASE	[M]
332	RMM0204	CARRIER	[M]
333	RMM0203	DRIVE RACK	[M]
334	RDG0432	SPEED UP GEAR	[M]
335	RML0524	SLIDE LOCK	[M]
336	RML0523	CARRIER LOCK	[M]
337	RME0260-1	SLIDE LOCK SPRING	[M]
338	RMR1123-H	TRAY	[M]
339	RXQ0595	MOTOR SUB ASS'Y	[M]
341	RSJ0003	SOLENOLD ASS'Y	[M]
343	RMA1106	UPPER PLATE	[M]
344	RML0519	CD LEVER	[M]
345	RFKNAAK27GCS	MECHA BASE ASS'Y	[M]
346	RML0522	TURNING STOPPER	[M]
347	RMQ0745	LOWER SPINDLE	[M]
348	RMQ0746	UP/DOWN BASE	[M]
349	RMB0550	LOWER SPINDLE SPRING	[M]
350	RMQ0747	UPPER HOOK	[M]
351	RME0263	CLICK SPRING	[M]
352	RMQ0743	SPINDLE SHAFT	[M]
353	RMB0552	CUSHION SPRING	[M]
354	RDG0430	RELAY GEAR 'A'	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
355	RDG0431	RELAY GEAR ‘B’	[M]
356	RME0262	DISK LEVER SPRING	[M]
357	RMA1105	SUPPORT PLATE	[M]
358	RAE0153Z-3S	TRAVERSE	[M]
358-1	SHGD113-1	FLOATING CUSHION	[M]
358-2	SNSD38	TRV MOTOR ASSY SCREW	[M]
358-3	RAF0152A-S	152A CD OPU	[M]
358-4	RDG0247	DRIVE GEAR	[M]
358-5	RDG0248	RELAY GEAR	[M]
358-6	RXQ0339	TRAVERSE MOTOR ASS’Y	[M]
358-7	RXQ0304-1	NUT PLATE ASS’Y	[M]
358-8	XQN17+CG5FJ	NUT PLATE ASSY SCREW	[M]
358-9	XQS2+A3FJ	SPINDLE MOTOR SCREW	[M]
358-10	XQS17+A35FJ	TRAVERSE MOTOR SCREW	[M]
359	RME0142	FLOATING SPRING A	[M]
360	RME0109	FLOATING SPRING B	[M]
361	RMR1124A-X	CD TRAVERSE CHASSIS	[M]
362	RMS0632	TRAVERSE PIN	[M]
363	XTN2+6GFJ	SCREW	[M]
369	RMX0141	PUSH SPACER	[M]
370	RMQ0749	UPPER SPINDLE	[M]
371	RHM0001	MAGNET	[M]
372	RMX0140	DISC SPACER	[M]
373	RME0261	FRONT LOCK SPRING	[M]
374	RMQ0742	SPINDLE BASE	[M]

23.3. Cabinet

23.3.1. Cabinet Parts Location

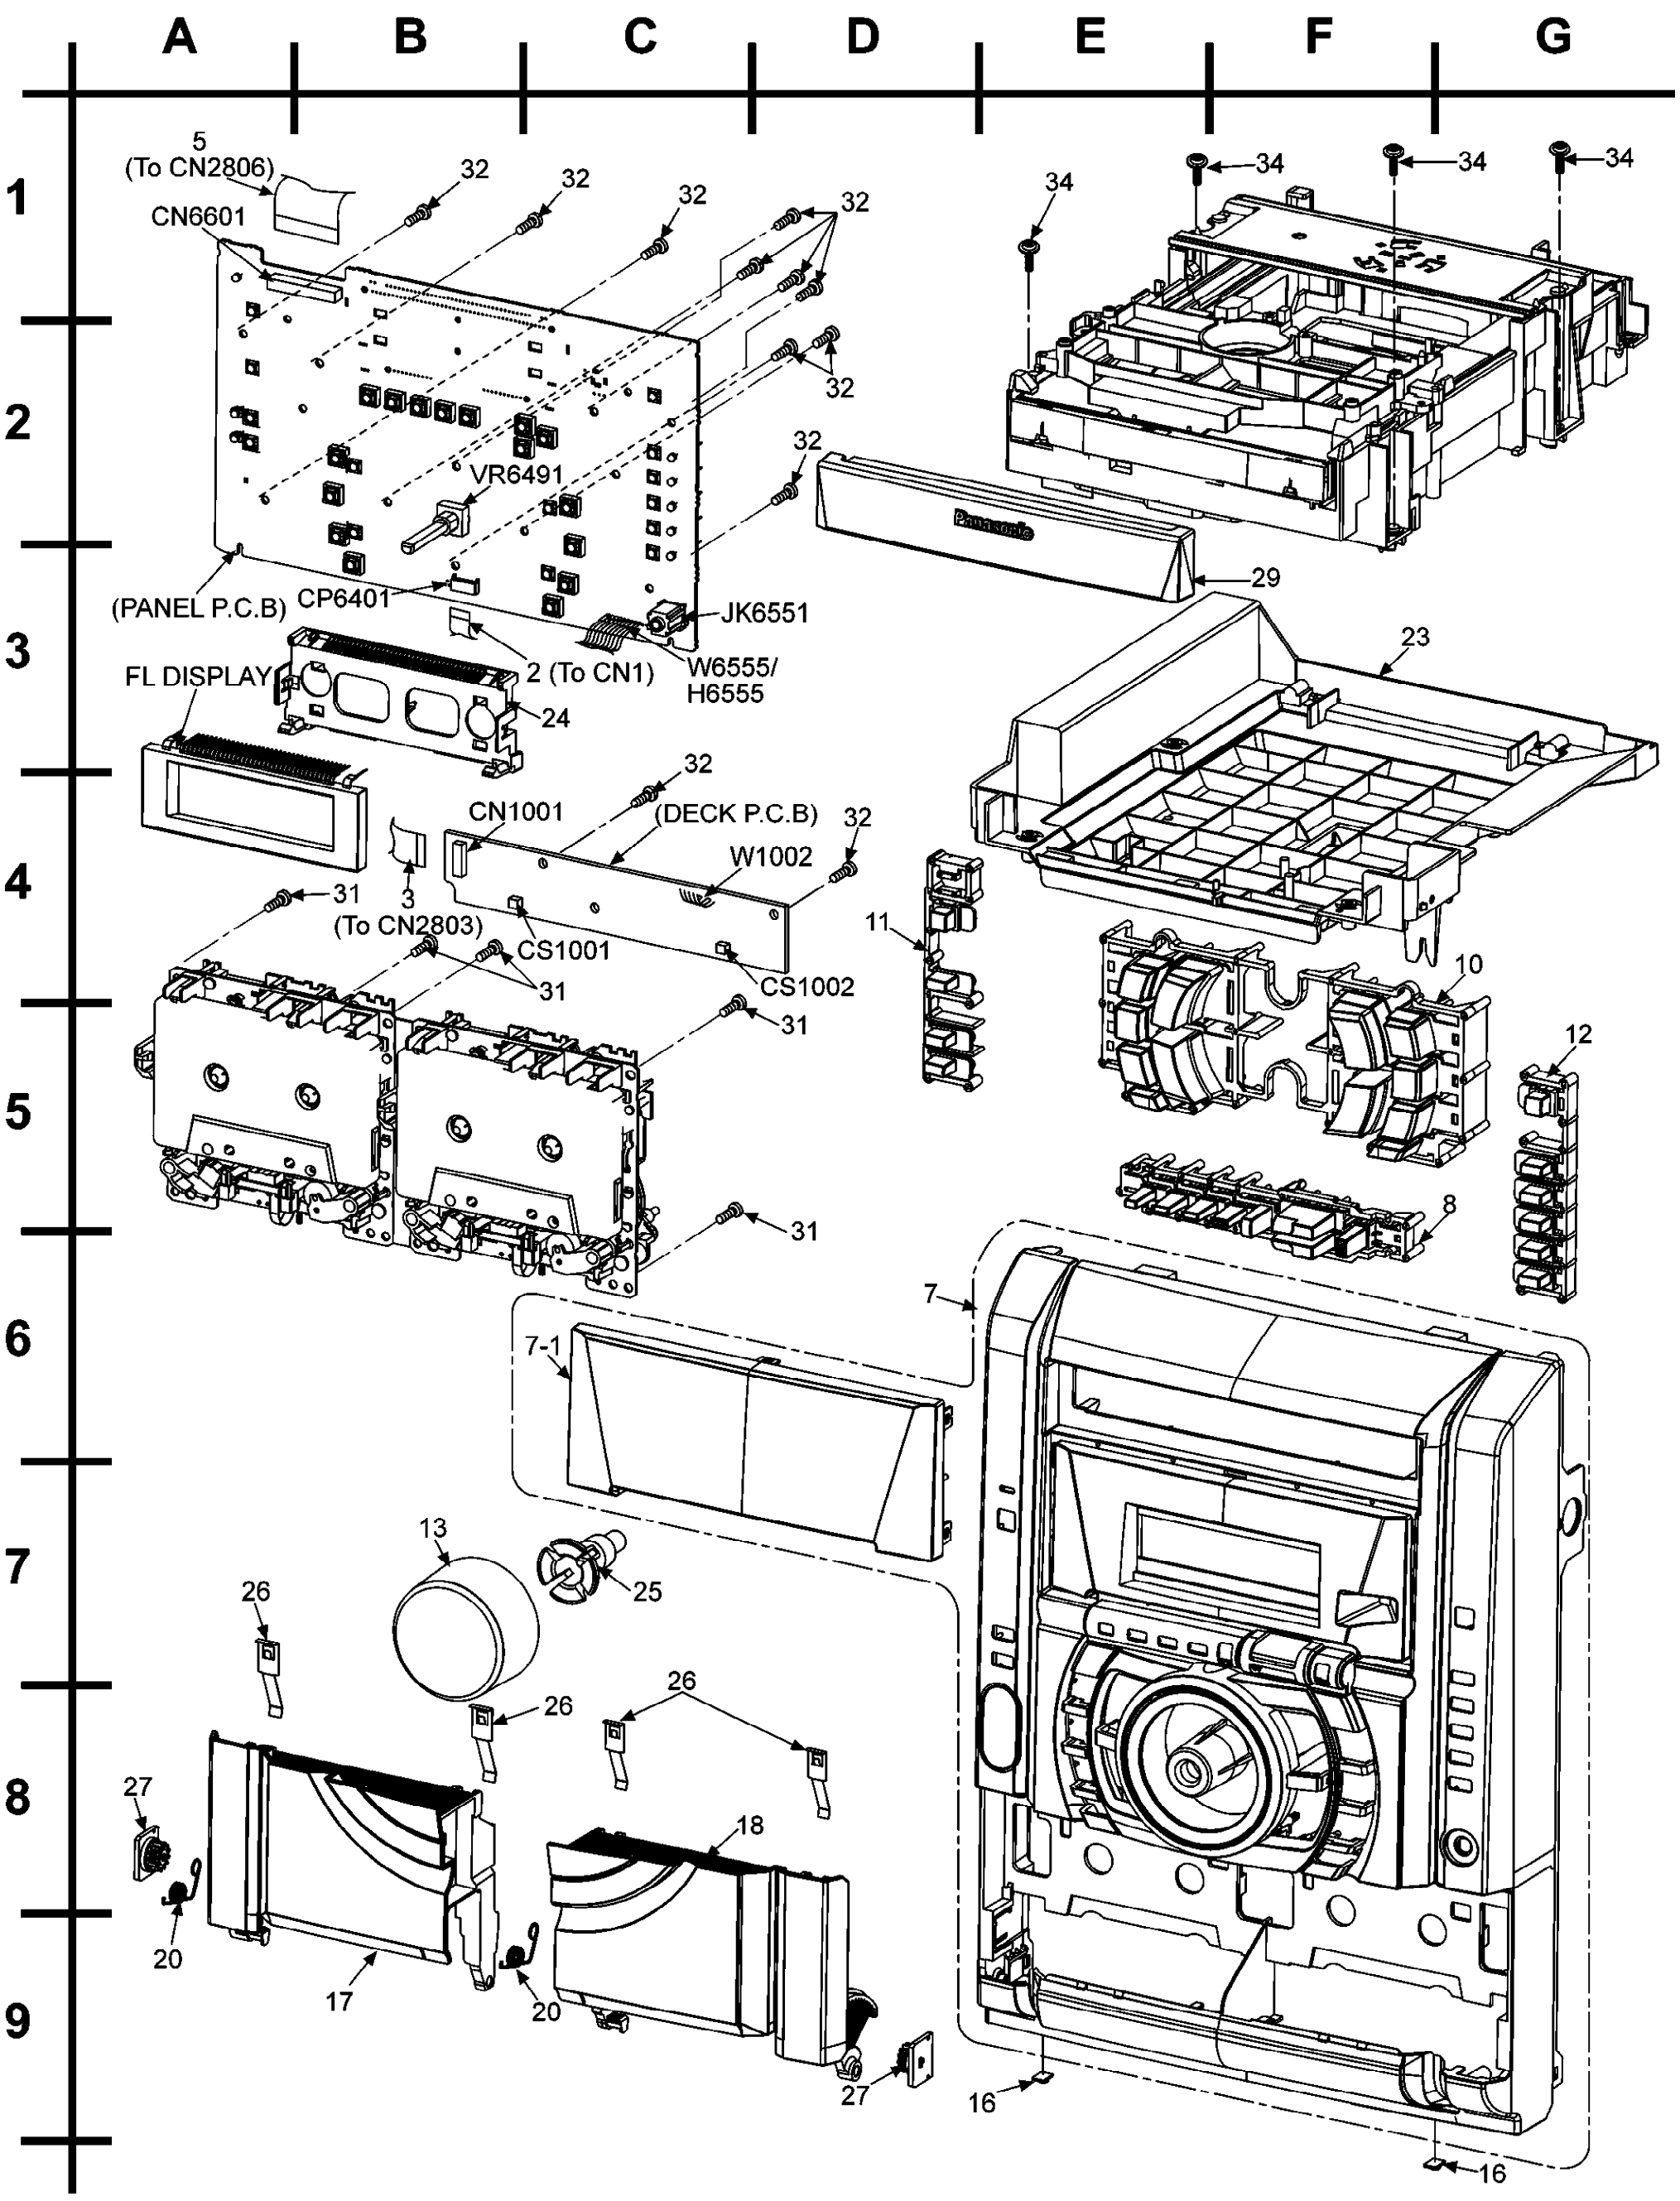
A
B
C
D
E
F
G
(To CN2806)
CN6601
VR6491
(PANEL P.C.B)
CP6401
JK6551
2 (To CN1)
W6555/
H6555
FL DISPLAY
CN1001
(DECK P.C.B)
W1002
(To CN2803)
CS1001
CS1002
7-1

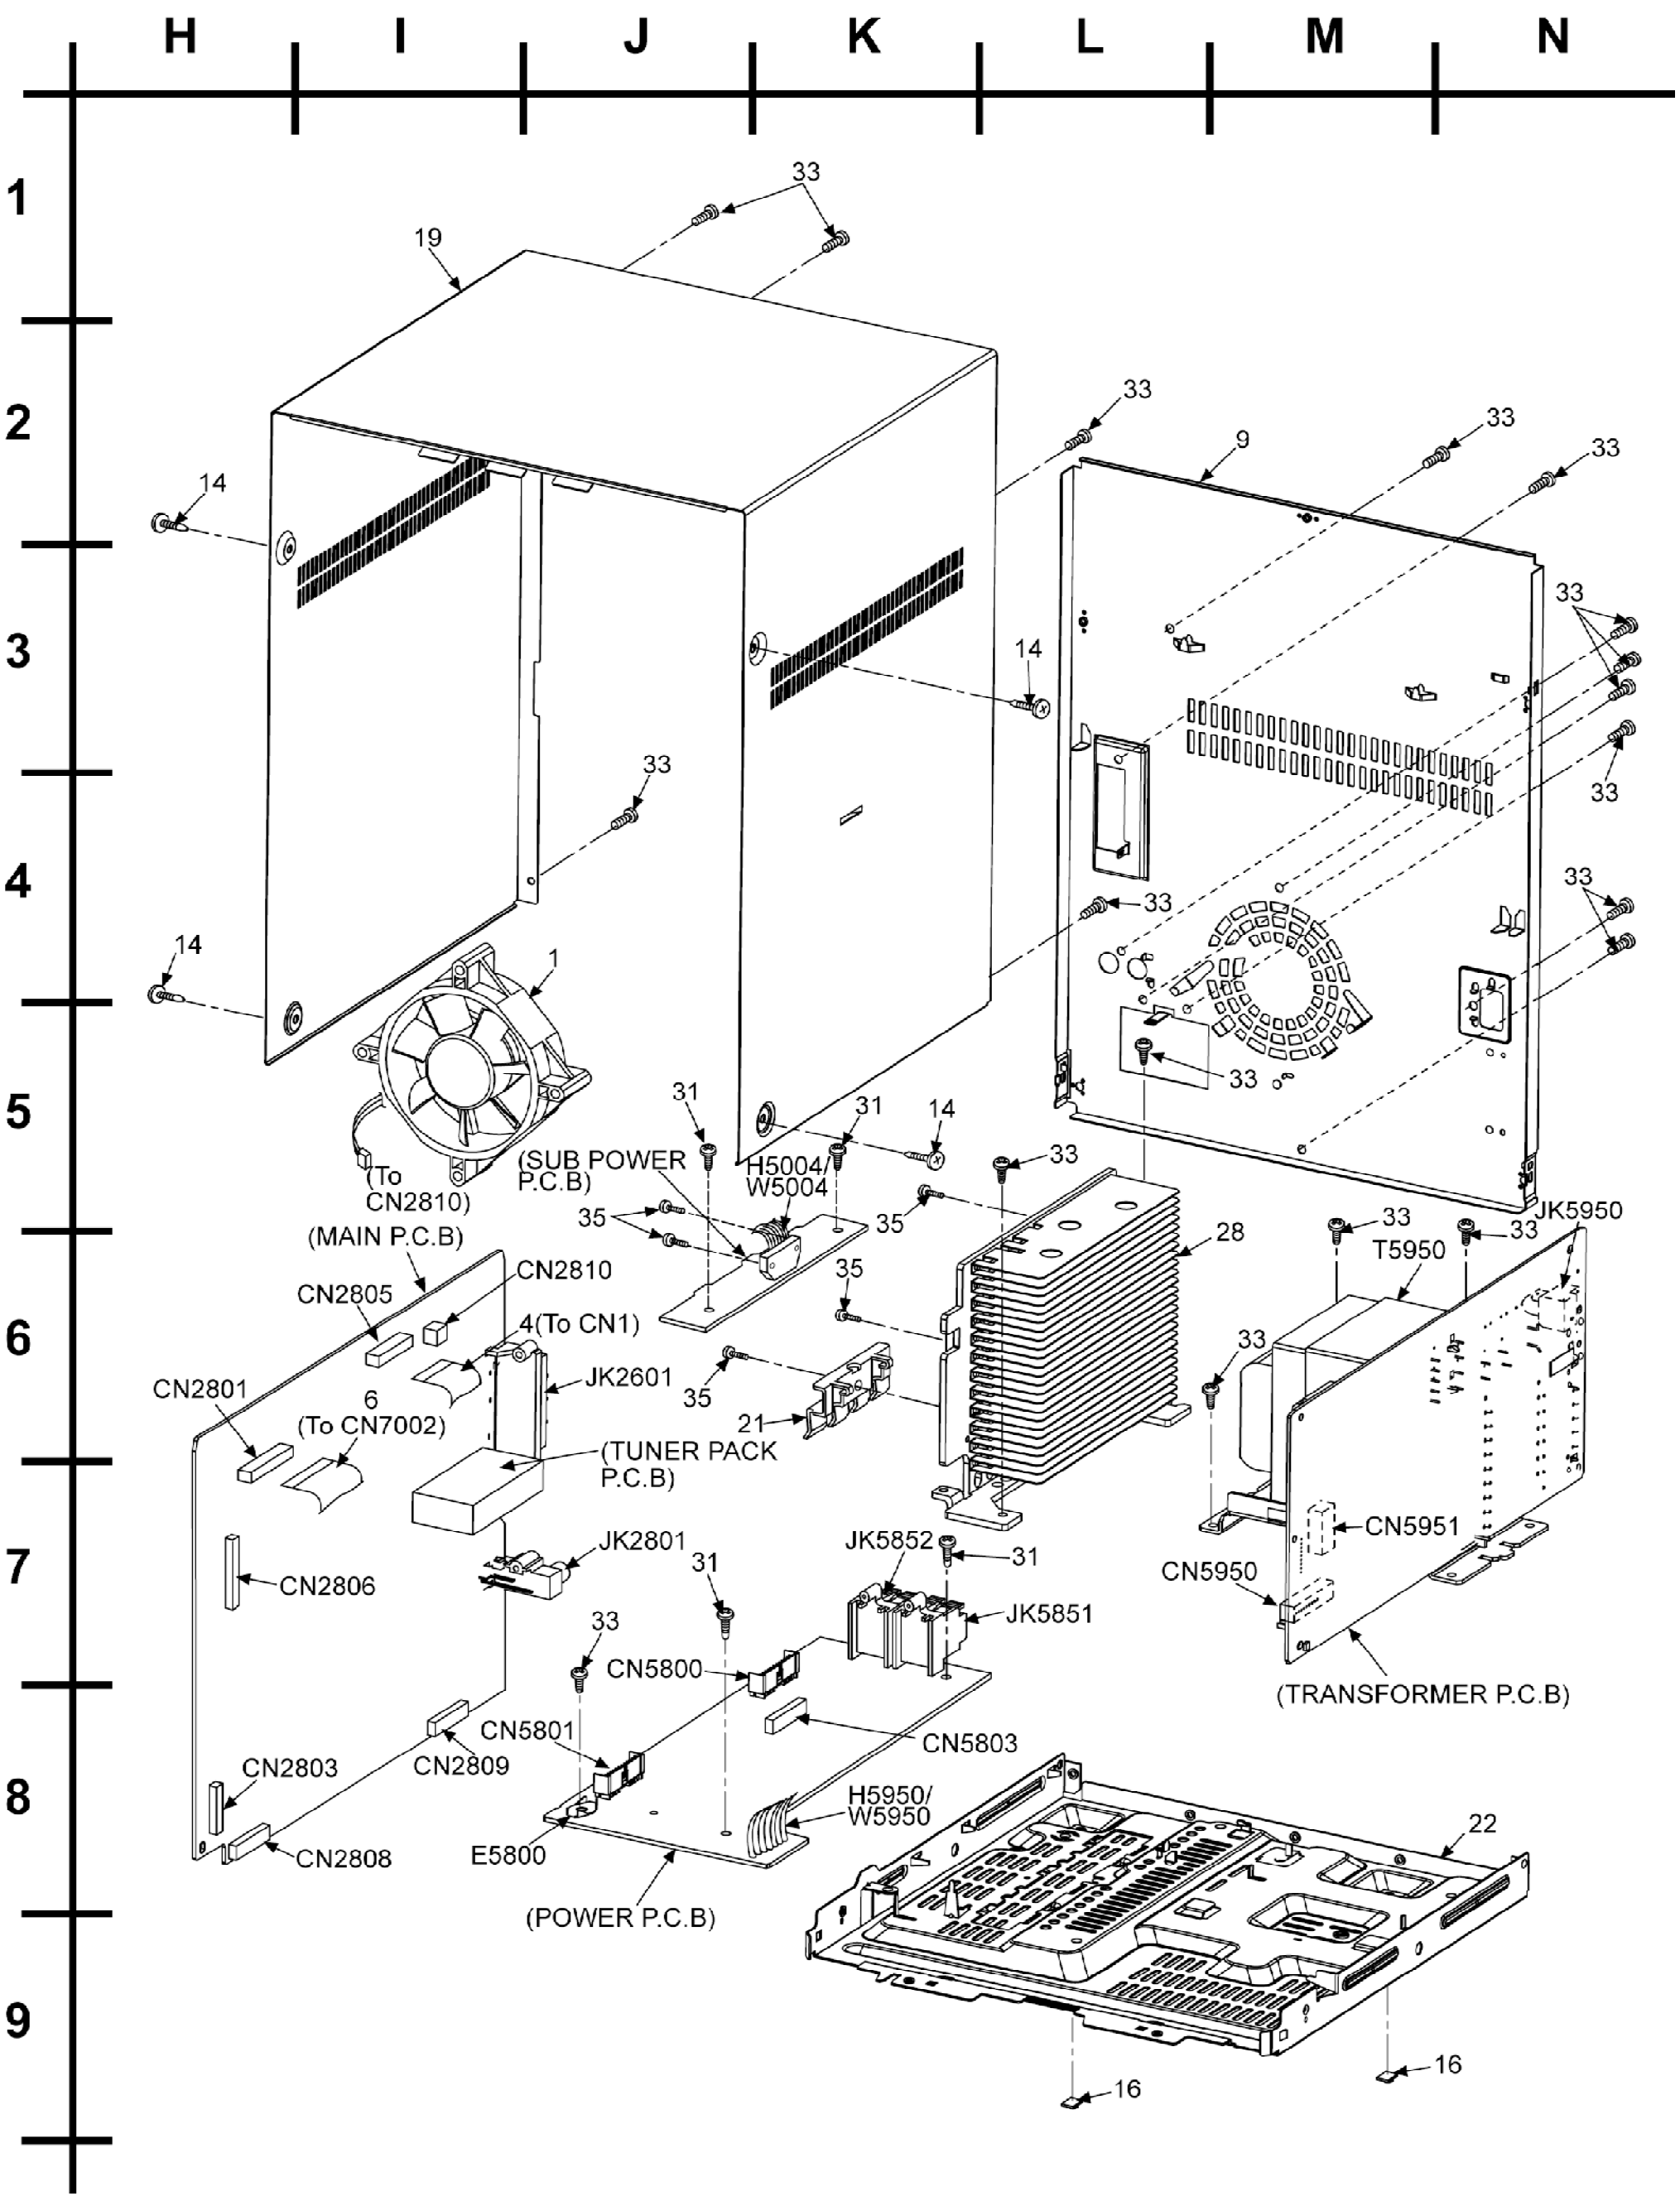
H
I
J
K
L
M
N
1
2
3
4
5
6
7
8
9
33
19
33
9
33
33
14
33
14
33
33
33
14
1
33
33
(To CN2810)
(SUB POWER P.C.B)
31
31
14
H5004/ W5004
33
(MAIN P.C.B)
35
35
28
33
33
JK5950
T5950
35
CN2810
CN2805
4(To CN1)
33
CN2801
JK2601
35
6 (To CN7002)
21
(TUNER PACK P.C.B)
CN5951
JK2801
JK5852
31
31
CN5950
CN2806
33
JK5851
CN5800
(TRANSFORMER P.C.B)
CN5801
CN5803
CN2803
CN2809
H5950/ W5950
22
CN2808
E5800
(POWER P.C.B)
16
16

23.3.2. Cabinet Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS	
1	L6FALEFH0030	FAN	[M]
2	REEX0202	10P FFC (PANEL)	[M]
3	REEX0211	14P FFC WIRE (DECK)	[M]
4	REEX0212	14P FFC WIRE (CD)	[M]
5	REEX0401	30P FFC (PANEL)	[M]
6	REEX0447	16P FFC WIRE	[M]
7	RFKGAAK630GC	FRONT PANEL ASS'Y	[M]
7-1	RKWX0239B-H	FL WINDOW	[M]
8	RGUX0592-S	MP3 BUTTON	[M]
9	RGRX0042E-BA	REAR PANEL	[M]E
9	RGRX0042E-CA	REAR PANEL	[M]EB
9	RGRX0042E-DA	REAR PANEL	[M]EG
10	RGUX0593-S	FUNCTION BUTTON	[M]
11	RGUX0594A-S	POWER/SSEQ BTN	[M]
12	RGUX0595-S	CD EJECT BTN/CONTROL	[M]
13	RGWX0072-S	VOLUME KNOB	[M]
14	RHD30004-2S	SCREW	[M]
16	RKA0072-KJ	LEG CUSHION	[M]
17	RKFX0125-1S	CASS LID L	[M]
18	RKFX0126-1S	CASS LID R	[M]
19	RKMX0105-S	TOP CABINET	[M]
20	RMBX0036	CASS OPEN SPRING	[M]
21	RMCX0021	TRANSISTOR CLIP	[M]
22	RMKX0099-2	BOTTOM CHASSIS	[M]
23	RMKX0100	CD CHASSIS	[M]
24	RMNX0138	FL HOLDER	[M]
25	RMQX0128	VOLUME KNOB ADAPTOR	[M]
26	RUS757ZAA	CASS HALF SPRING	[M]
27	RXGX0002	DAMPER GEAR	[M]
28	RXXX0057	HEAT SINK UNIT	[M]
29	RYFX0138G-K2	CD LID UNIT	[M]
31	XTB3+10JFJ	SCREW	[M]
32	RHD26046	SCREW	[M]
33	RHD30119	SCREW	[M]
34	XTW3+12TFJ	SCREW	[M]
35	XTW3+15TFJ	SCREW	[M]

23.4. Electrical Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		PRINTED CIRCUIT BOARD	
	REPX0443A	CD SERVO P.C.B.	[M](RTL)
	REPX0442M	MAIN P.C.B.	[M](RTL)
	REPX0474D	PANEL P.C.B.	[M](RTL)
	REPX0468F	TRANSFORMER P.C.B.	[M](RTL)
	REP2578A-N	CD DETECT P.C.B.	[M](RTL)
	REP2578A-N	SPINDLE POSITION P.C.B.	[M](RTL)
	REP2578A-N	CD LOADING P.C.B.	[M](RTL)
	REPX0447B	POWER P.C.B.	[M](RTL)
	REPX0447B	SUB-POWER P.C.B.	[M](RTL)
	REPX0331D	DECK P.C.B.	[M](RTL)
	REPX0321A	DECK MECHANISM P.C.B.	[M](RTL)
		INTEGRATED CIRCUITS	
IC1	C0GAM0000005	IC MOTOR DRIVE	[M]
IC951	CNB13030R2AU	IC PHOTO INTERRUPTER	[M]
IC971	CNB13030R2AU	IC PHOTO INTERRUPTER	[M]
IC1001	AN7348S-E1	IC P.B. EQ/REC AMP/ALC/TPS AMP	[M]
IC1004	C1AA00000612	IC R/P SELECT	[M]
IC2601	LA1833NMNTLM	IC FM/AM IF AMP/DET/AM OSC MIX/FM MPX	[M]
IC2602	LC72131MDTRM	IC PLL FREQUENCY SYNTHESIZER	[M]
IC2801	C2CBJG000572	IC MICROPROCESSOR	[M]
IC2803	C1BB00000732	IC AUDIO SOUND PROCESSOR	[M]
IC2804	C0AABA000009	IC DUAL OP-AMP	[M]
IC2805	C0ABBB000244	IC DUAL OP-AMP	[M]
IC2806	C0ABBB000244	IC DUAL OP-AMP	[M]
IC2809	C1BB00000715	IC RDS CIRCUIT	[M]
IC2810	C0ABBB000244	IC DUAL OP-AMP	[M]
IC5002	RSN35H2B-P	IC POWER HIC	[M]
IC5801	RSN315H42C-P	IC POWER HIC	[M]
IC6601	C0HBB0000039	IC FL DRIVER	[M]
IC7002	MN6627953HB	IC SERVO PROCESSOR/DIGITAL SIGNAL PROCESSOR/ DIGITAL FILTER/D/A CONVERTER	[M]
IC7003	AN8739SBTE2	IC FOCUS COIL/TRACKING COIL/TRAVERSE MOTOR/ SPINDLE MOTOR DRIVE	[M]
		TRANSISTORS	
Q1	B1GACFGG0004	TRANSISTOR	[M]
Q1003	B1AAGC000007	TRANSISTOR	[M]
Q1004	B1AAGC000007	TRANSISTOR	[M]
Q1005	B1AAGC000007	TRANSISTOR	[M]
Q1007	B1ABCE000016	TRANSISTOR	[M]
Q1017	B1AARC000003	TRANSISTOR	[M]
Q2142	B1ABCE000016	TRANSISTOR	[M]
Q2181	B1ABCE000016	TRANSISTOR	[M]
Q2242	B1ABCE000016	TRANSISTOR	[M]
Q2281	B1ABCE000016	TRANSISTOR	[M]
Q2501	B1GDCFJJ0047	TRANSISTOR	[M]
Q2511	B1GDCFJJ0047	TRANSISTOR	[M]
Q2512	B1ABCE000016	TRANSISTOR	[M]
Q2551	B1GDCFJJ0047	TRANSISTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
Q2552	B1GDCFJJ0047	TRANSISTOR	[M]
Q2553	B1ABCE000016	TRANSISTOR	[M]
Q2554	B1ABCE000016	TRANSISTOR	[M]
Q2571	B1GFGCAA0001	TRANSISTOR	[M]
Q2601	B1AABC000003	TRANSISTOR	[M]
Q2606	B1GCCFJJ0016	TRANSISTOR	[M]
Q2610	2SC3311ARA	TRANSISTOR	[M]
Q2701	2SD0592ARA	TRANSISTOR	[M]
Q2702	2SB0709AHL	TRANSISTOR	[M]
Q2703	2SD0592ARA	TRANSISTOR	[M]
Q2704	2SB0709AHL	TRANSISTOR	[M]
Q2705	2SB0709AHL	TRANSISTOR	[M]
Q2706	2SD0601AHL	TRANSISTOR	[M]
Q2806	B1GBCFJJ0051	TRANSISTOR	[M]
Q2901	B1ACKD000005	TRANSISTOR	[M]
Q2902	B1AACF000064	TRANSISTOR	[M]
Q2906	B1ABCE000016	TRANSISTOR	[M]
Q2907	B1ABCE000016	TRANSISTOR	[M]
Q2936	B1ACKD000005	TRANSISTOR	[M]
Q2937	B1GBCFJJ0051	TRANSISTOR	[M]
Q2978	B1GDCFJJ0047	TRANSISTOR	[M]
Q2980	B1GDCFJJ0047	TRANSISTOR	[M]
Q5801	B1BACG000023	TRANSISTOR	[M]
Q5802	B1BCCG000002	TRANSISTOR	[M]
Q5803	B1BACG000023	TRANSISTOR	[M]
Q5804	B1BCCG000002	TRANSISTOR	[M]
Q5805	B1ACCF000094	TRANSISTOR	[M]
Q5806	B1GDCFGA0018	TRANSISTOR	[M]
Q5807	B1ABCE000016	TRANSISTOR	[M]
Q5808	B1BACD000018	TRANSISTOR	[M]
Q5812	B1ABCE000016	TRANSISTOR	[M]
Q5813	B1ABCE000016	TRANSISTOR	[M]
Q5814	B1ABCE000016	TRANSISTOR	[M]
Q5950	B1BACD000018	TRANSISTOR	[M]
Q5951	2SB0621AHA	TRANSISTOR	[M]
Q5952	B1GACFJJ0018	TRANSISTOR	[M]
Q5953	B1AACF000064	TRANSISTOR	[M]
Q6411	B1ACKD000005	TRANSISTOR	[M]
Q6415	B1ACKD000005	TRANSISTOR	[M]
Q6421	B1GACFLL0008	TRANSISTOR	[M]
Q6425	B1GACFLL0008	TRANSISTOR	[M]
Q6456	B1GACFLL0008	TRANSISTOR	[M]
Q6457	B1GACFLL0008	TRANSISTOR	[M]
Q7601	B1ADCF000001	TRANSISTOR	[M]
		DIODES	
D1	B3NAA0000096	PHOTO INTERRUPTOR	[M]
D2	B0BA4R600003	DIODE	[M]
D951	MA2C16500E	DIODE	[M]
D971	MA2C16500E	DIODE	[M]
D1003	B0ACCK000005	DIODE	[M]
D1004	B0BC3R700004	DIODE	[M]
D2241	B0ACCK000005	DIODE	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
D2332	B0ADCC000002	DIODE	[M]
D2512	RB751V-40	DIODE	[M]
D2551	B0BC2R4A0006	DIODE	[M]
D2552	B0BC2R4A0006	DIODE	[M]
D2601	B0BC5R000009	DIODE	[M]
D2602	B0CDBB000015	DIODE	[M]
D2701	B0ACCK000005	DIODE	[M]
D2702	B0BC01000014	DIODE	[M]
D2703	B0ACCK000005	DIODE	[M]
D2704	B0ACCK000005	DIODE	[M]
D2705	B0ACCK000005	DIODE	[M]
D2706	B0EAKM000117	DIODE	[M]
D2802	B0ADCJ000020	DIODE	[M]
D2804	B0ACCK000005	DIODE	[M]
D2811	B0ADCJ000020	DIODE	[M]
D2813	B0ACCK000005	DIODE	[M]
D2901	B0ADCC000002	DIODE	[M]
D2904	B0EAKM000117	DIODE	[M]
D2936	B0EAKM000117	DIODE	[M]
D2951	B0BC7R500001	DIODE	[M]
D5003	B0BC01500006	DIODE	[M]
D5801	B0BC01000014	DIODE	[M]
D5802	B0BC01500006	DIODE	[M]
D5803	B0BC01500006	DIODE	[M]
D5804	B0ACCK000005	DIODE	[M]
D5805	B0EAKM000117	DIODE	[M]
D5807	B0EAKM000117	DIODE	[M]
D5808	B0BC5R600003	DIODE	[M]
D5809	B0BC01000014	DIODE	[M]
D5813	B0ACCK000005	DIODE	[M]
D5814	B0ACCK000005	DIODE	[M]
D5820	B0BC01500006	DIODE	[M]
D5950	B0EAMM000038	DIODE	[M]
D5951	B0EAMM000038	DIODE	[M]
D5952	B0EAMM000038	DIODE	[M]
D5953	B0EAMM000038	DIODE	[M]
D5954	B0EAKM000117	DIODE	[M]
D5955	B0EAKM000117	DIODE	[M]
D5956	B0EAKM000117	DIODE	[M]
D5957	B0EAKM000117	DIODE	[M]
D5958	B0EAKM000117	DIODE	[M]
D5959	B0EAKM000117	DIODE	[M]
D5960	B0BA03100002	DIODE	[M]
D5961	B0EAKM000117	DIODE	[M]
D5962	B0EAKM000117	DIODE	[M]
D5963	B0EAKM000117	DIODE	[M]
D5964	B0BA6R600008	DIODE	[M]
D5965	B0AACK000004	DIODE	[M]
D5966	B0EAKM000117	DIODE	[M]
D5970	B0EAMM000038	DIODE	[M]
D5971	B0EAMM000038	DIODE	[M]
D5972	B0EAMM000038	DIODE	[M]
D5973	B0EAMM000038	DIODE	[M]
D5986	B0EAKM000117	DIODE	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
D5987	B0EAKM000117	DIODE	[M]
D6456	B3AAA0000583	DIODE	[M]
D6457	B3AAA0000583	DIODE	[M]
D6458	B3AAA0000583	DIODE	[M]
D6635	B0BA7R000005	DIODE	[M]
		VARIABLE RESISTORS	
VR6491	EVEKE2F2524M	VOLUME JOG	[M]
		SWITCHES	
S951	K0J1BB000017	SW MODE	[M]
S952	RSH1A019-2U	SW HALF	[M]
S971	K0J1BB000017	SW MODE	[M]
S972	RSH1A019-2U	SW HALF	[M]
S975	RSH1A019-2U	SW RECINH_F	[M]
S6101	EVQ21405R	SW OPEN/CLOSE	[M]
S6102	EVQ21405R	SW CD 1	[M]
S6103	EVQ21405R	SW CD 2	[M]
S6104	EVQ21405R	SW CD 3	[M]
S6105	EVQ21405R	SW CD 4	[M]
S6106	EVQ21405R	SW CD 5	[M]
S6107	EVQ21405R	SW LEFT	[M]
S6108	EVQ21405R	SW DOWN	[M]
S6109	EVQ21405R	SW RIGHT	[M]
S6110	EVQ21405R	SW UP	[M]
S6201	EVQ21405R	SW REW	[M]
S6202	EVQ21405R	SW TUNER	[M]
S6203	EVQ21405R	SW CD	[M]
S6204	EVQ21405R	SW FF	[M]
S6205	EVQ21405R	SW STOP	[M]
S6206	EVQ21405R	SW DECK 1/2	[M]
S6207	EVQ21405R	SW DECK 2	[M]
S6208	EVQ21405R	SW TAPE	[M]
S6209	EVQ21405R	SW AUX	[M]
S6210	EVQ21405R	SW DECK 1	[M]
S6301	EVQ21405R	SW POWER	[M]
S6303	EVQ21405R	SW H.BASS	[M]
S6304	EVQ21405R	SW REC	[M]
S6305	EVQ21405R	SW DEMO/DISPLAY	[M]
S6306	EVQ21405R	SW SUB-WOOFER	[M]
S6307	EVQ21405R	SW DELETE	[M]
S6308	EVQ21405R	SW MARKER	[M]
S6309	EVQ21405R	SW TITLE SEARCH	[M]
S6310	EVQ21405R	SW NETER	[M]
S7201	RSH1A043-U	SW REST	[M]
SW1	RSH1A032-U	SW PUSH	[M]
SW2	RSH1A032-U	SW PUSH	[M]
SW3	K0J1BB000017	SW OPEN	[M]
SW4	K0L1BA000007	SW CD	[M]
SW5	K0L1BB000005	SW LOAD	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
		CONNECTORS	
CN1	K1MN14A00049	14P FFC CONNECTOR	[M]
CN971	K1MN10B00104	10P FFC CONNECTOR	[M]
CN1001	K1MN14B00058	14P CONNECTOR	[M]
CN2801	RJS1A9416-1	16P CONECTOR	[M]
CN2803	RJS1A9414-1	14P CONNECTOR	[M]
CN2805	RJS1A9414-1	14P CONNECTOR	[M]
CN2806	K1MN30A00046	30P FFC CONNECTOR	[M]
CN2808	K1KB12B00036	12P CONNECTOR	[M]
CN2809	K1KB12B00036	12P CONNECTOR	[M]
CN2810	K1KA02A00008	2P CONNECTOR	[M]
CN5800	K1KA12A00184	12P CONNECTOR	[M]
CN5801	K1KA12A00184	12P CONNECTOR	[M]
CN5803	K1KA09A00227	9P CONNECTOR	[M]
CN5950	K1KA09A00227	9P CONNECTOR	[M]
CN5951	K1KA09A00047	9P CONNECTOR	[M]
CN6601	K1MN30A00046	30P FFC CONNECTOR	[M]
CN7001	RJS2A8616	16P FPC CONNECTOR	[M]
CN7002	RJS1A9316	16P FFC CONNECTOR	[M]
CP6401	K1MN10B00104	10P FFC CONNECTOR	[M]
CS1001	K1MN05A00039	CONNECTOR SOCKET	[M]
CS1002	K1MN05A00039	CONNECTOR SOCKET	[M]
		CERAMIC FILTERS	
CF2601	J0B1075AA006	CERAMIC FILTER	[M]
CF2602	J0B1075AA006	CERAMIC FILTER	[M]
		COILS & TRANSFORMERS	
L1001	G0C470JA0052	RF CHOKE COIL	[M]
L1002	7L1A62N	BIAS OSC COIL	[M]
L2601	GNS-A0882DC	AM COIL	[M]
L2602	G2BPC0000016	OSCILLATOR COIL	[M]
L2961	G0C101JA0052	INDUCTOR	[M]
L2962	G0C101JA0052	INDUCTOR	[M]
L2996	ERJ3GEY0R00V	CHIP JUMPER	[M]
L5201	G0AR76Y00001	CHOKE COIL	[M]
L5202	G0AR76Y00001	CHOKE COIL	[M]
L5401	G0AR76Y00001	CHOKE COIL	[M]
L5402	G0AR76Y00001	CHOKE COIL	[M]
L5678	G0AR76Y00001	CHOKE COIL	[M]
L5778	G0AR76Y00001	CHOKE COIL	[M]
L6551	G0C100JA0044	AXIAL COIL	[M]
L6552	G0C100JA0044	AXIAL COIL	[M]
L6553	G0C100JA0044	AXIAL COIL	[M]
L6621	G0C100JA0044	AXIAL COIL	[M]
T5950	G4C7AFH00004	TRANSFORMER	[M] ⚠
T5951	RTP1H3E002	BACK UP TRANSFORMER	[M] ⚠

Ref. No.	Part No.	Part Name & Description	Remarks
		COMPONENT COMBINATIONS	
Z971	RGSD12A1445T	RADA RESISTOR	[M]
Z2602	G2BAD0000003	AM IFT	[M]
Z2620	ENV17290G1Y	FM TUNER PACK	[M]
Z5950	ERZV10V511CS	ZENER	[M] ⚠
Z6481	B3RAB0000040	IR SENSOR	[M]
		RELAY	
RL5950	K6B1AEA00015	POWER RELAY	[M] ⚠
		OSCILLATORS	
X2602	H3F1065A0002	DISCRIMINATOR	[M]
X2603	H0H720400005	CRYSTAL OSCILLATOR	[M]
X2801	H0A327200115	CRYSTAL OSCILLATOR	[M]
X2802	H2B100500004	CERAMIC RESONATORS	[M]
X2803	H0H433400002	CRYSTAL	[M]
X7201	H2B169500002	RESONATOR	[M]
		DISPLAY TUBE	
FL6601	A2BD00000110	FL	[M]
		FUSE	
F1	K5D202BLA013	FUSE 2.0A	[M] ⚠
		FUSE HOLDERS	
FC1	K3GE1BA00021	FUSE CLIP	[M]
FC2	K3GE1BA00021	FUSE CLIP	[M]
		FUSE PROTECTOR	
FP5833	K5G400A00001	FUSE PROTECTOR	[M] ⚠
FP5950	K5G402A00025	FUSE PROTECTOR	[M] ⚠
FP5951	K5G102A00023	FUSE PROTECTOR	[M] ⚠
		HOLDERS	
H5004	RJS1A5509	9P CABLE HOLDER	[M]
H5950	RJS1A5509	9P CABLE HOLDER	[M]
H6555	K1YZ09000002	WIRE HOLDER	[M]
		JACKS	
JK2601	RJH8304N	JK ANTENNA	[M]
JK2801	K2HA204B0153	JK	[M]
JK5851	K4BC04B00078	JK SPEAKER	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
JK5852	K4BC06B00046	JK SPEAKER	[M]
JK5950	K2AA2B000011	JK AC INLET	[M] ⚠
JK6551	K2HC103A0023	JK	[M]
		EARTH TERMINALS	
E5800	SNE1004-2	EARTH TERMINAL	[M]
E5801	RSQX0001	EARTH PLATE	[M]
		WIRES	
W1	REZ1023-1	4P WIRE	[M]
W2	REZ1024	3P WIRE	[M]
W1002	RWJ0102050CK	MAIN-MECHA MOTOR WIRE	[M]
W5004	REXX0457	9P FLAT WIRE	[M]
W5950	REXX0325	9P FLAT WIRE	[M]
W6555	REXX0324	9P FLAT WIRE	[M]
		CHIP RESISTORS	
W2901	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2902	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2903	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2904	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2905	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2906	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2907	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2908	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2909	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2910	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2911	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2912	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2913	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2915	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2917	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2918	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2919	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2920	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2921	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2922	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2923	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2924	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2925	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2926	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2927	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2928	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2929	ERJ3GEY0R00V	CHIP JUMPER	[M]
W2930	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7001	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7002	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7003	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7004	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7005	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7006	ERJ3GEY0R00V	CHIP JUMPER	[M]

[illegible]	[illegible]	[illegible]	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
W7007	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7008	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7009	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7010	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7011	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7012	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7013	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7014	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7015	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7016	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7017	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7018	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7019	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7020	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7021	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7022	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7023	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7024	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7025	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7027	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7028	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7033	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7034	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7040	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7041	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7042	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7043	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7044	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7050	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7051	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7052	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7053	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7054	ERJ3GEY0R00V	CHIP JUMPER	[M]
W7055	ERJ3GEY0R00V	CHIP JUMPER	[M]
		RESISTORS	
R1	ERDS2TJ102T	1K 1/4W	[M]
R952	ERDS2TJ821T	820 1/4W	[M]
R953	ERDS2TJ393T	39K 1/4W	[M]
R972	ERDS2TJ821T	820 1/4W	[M]
R973	ERDS2TJ393T	39K 1/4W	[M]
R1001	ERJ3GEYJ1R0V	1 1/16W	[M]
R1002	ERJ3GEY0R00V	0 1/16W	[M]
R1003	ERJ3GEYJ103V	10K 1/16W	[M]
R1004	ERJ3GEYJ152V	1.5K 1/16W	[M]
R1005	ERJ3GEYJ472V	4.7K 1/16W	[M]
R1007	ERD25FVJ4R7T	4.7 1/4W	[M]
R1009	ERJ3GEYJ183V	18K 1/16W	[M]
R1010	ERJ3GEYJ183V	18K 1/16W	[M]
R1011	ERJ3GEYJ103V	10K 1/16W	[M]
R1012	ERJ3GEYJ472V	4.7K 1/16W	[M]
R1013	ERJ3GEYJ472V	4.7K 1/16W	[M]
R1014	ERJ3GEYJ472V	4.7K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R1015	ERJ3GEYJ470V	47 1/16W	[M]
R1016	ERJ3GEYJ470V	47 1/16W	[M]
R1017	ERJ3GEYJ822V	8.2K 1/16W	[M]
R1018	ERJ3GEYJ392V	3.9K 1/16W	[M]
R1019	ERJ3GEYJ392V	3.9K 1/16W	[M]
R1020	ERJ3GEY0R00V	0 1/16W	[M]
R1022	ERJ3GEYJ103V	10K 1/16W	[M]
R1024	ERJ3GEY0R00V	0 1/16W	[M]
R1025	ERJ3GEY0R00V	0 1/16W	[M]
R1026	ERJ3GEYJ102V	1K 1/16W	[M]
R1027	ERJ3GEY0R00V	0 1/16W	[M]
R1028	ERJ3GEYJ822V	8.2K 1/16W	[M]
R1029	ERJ3GEYJ475V	4.7M 1/16W	[M]
R1030	ERJ3GEYJ101V	100 1/16W	[M]
R1031	ERJ3GEYJ273V	27K 1/16W	[M]
R1032	ERJ3GEYJ103V	10K 1/16W	[M]
R1035	ERJ3GEYJ103V	10K 1/16W	[M]
R1040	ERJ3GEY0R00V	0 1/16W	[M]
R1049	ERJ3GEY0R00V	0 1/16W	[M]
R1050	ERJ3GEY0R00V	0 1/16W	[M]
R1055	ERJ3GEYJ222V	2.2K 1/16W	[M]
R1057	ERJ3GEYJ222V	2.2K 1/16W	[M]
R1060	ERJ3GEYJ391V	390 1/16W	[M]
R1084	ERJ3GEYJ222V	2.2K 1/16W	[M]
R1085	ERJ3GEYJ473V	47K 1/16W	[M]
R1086	ERJ3GEYJ222V	2.2K 1/16W	[M]
R1087	ERJ3GEYJ473V	47K 1/16W	[M]
R1090	ERJ3GEYJ221V	220 1/16W	[M]
R1091	ERJ3GEY0R00V	0 1/16W	[M]
R1092	ERJ3GEY0R00V	0 1/16W	[M]
R1097	ERJ3GEYJ103V	10K 1/16W	[M]
R1098	ERJ3GEYJ103V	10K 1/16W	[M]
R1099	ERJ3GEY0R00V	0 1/16W	[M]
R1100	ERJ3GEY0R00V	0 1/16W	[M]
R1101	ERJ3GEY0R00V	0 1/16W	[M]
R2004	ERJ3GEY0R00V	0 1/16W	[M]
R2101	ERJ3GEYJ122V	1.2K 1/16W	[M]
R2102	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2103	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2106	ERJ3GEYJ101V	100 1/16W	[M]
R2107	ERJ3GEYJ473V	47K 1/16W	[M]
R2108	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2111	ERJ3GEYJ103V	10K 1/16W	[M]
R2112	ERJ3GEYJ223V	22K 1/16W	[M]
R2113	ERJ3GEYJ103V	10K 1/16W	[M]
R2116	ERJ3GEYJ123V	12K 1/16W	[M]
R2117	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2118	ERJ3GEYJ103V	10K 1/16W	[M]
R2141	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2142	ERJ3GEYJ223V	22K 1/16W	[M]
R2143	ERJ3GEYJ104V	100K 1/16W	[M]
R2145	ERJ3GEYJ103V	10K 1/16W	[M]
R2146	ERJ3GEYJ102V	1K 1/16W	[M]
R2149	ERJ3GEYJ222V	2.2K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2152	ERJ3GEY0R00V	0 1/16W	[M]
R2154	ERJ3GEYJ104V	100K 1/16W	[M]
R2166	ERJ3GEYJ330V	33 1/16W	[M]
R2167	ERJ3GEYJ330V	33 1/16W	[M]
R2168	ERJ3GEYJ330V	33 1/16W	[M]
R2169	ERJ3GEYJ330V	33 1/16W	[M]
R2170	ERJ3GEYJ1R0V	1 1/16W	[M]
R2171	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2181	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2182	ERJ3GEYJ183V	18K 1/16W	[M]
R2183	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2184	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2191	ERJ3GEYJ102V	1K 1/16W	[M]
R2192	ERJ3GEY0R00V	0 1/16W	[M]
R2193	ERJ3GEYJ104V	100K 1/16W	[M]
R2196	ERJ3GEYJ123V	12K 1/16W	[M]
R2197	ERJ3GEYJ102V	1K 1/16W	[M]
R2201	ERJ3GEYJ122V	1.2K 1/16W	[M]
R2202	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2206	ERJ3GEYJ101V	100 1/16W	[M]
R2207	ERJ3GEYJ473V	47K 1/16W	[M]
R2211	ERJ3GEYJ103V	10K 1/16W	[M]
R2212	ERJ3GEYJ223V	22K 1/16W	[M]
R2216	ERJ3GEYJ123V	12K 1/16W	[M]
R2217	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2241	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2242	ERJ3GEYJ223V	22K 1/16W	[M]
R2243	ERJ3GEYJ104V	100K 1/16W	[M]
R2245	ERJ3GEYJ103V	10K 1/16W	[M]
R2246	ERJ3GEYJ102V	1K 1/16W	[M]
R2247	ERJ3GEYJ104V	100K 1/16W	[M]
R2248	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2249	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2252	ERJ3GEY0R00V	0 1/16W	[M]
R2254	ERJ3GEYJ104V	100K 1/16W	[M]
R2266	ERJ3GEYJ330V	33 1/16W	[M]
R2267	ERJ3GEYJ330V	33 1/16W	[M]
R2268	ERJ3GEYJ330V	33 1/16W	[M]
R2269	ERJ3GEYJ330V	33 1/16W	[M]
R2270	ERJ3GEYJ1R0V	1 1/16W	[M]
R2271	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2281	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2282	ERJ3GEYJ183V	18K 1/16W	[M]
R2283	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2284	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2291	ERJ3GEYJ102V	1K 1/16W	[M]
R2292	ERJ3GEY0R00V	0 1/16W	[M]
R2293	ERJ3GEYJ104V	100K 1/16W	[M]
R2296	ERJ3GEYJ123V	12K 1/16W	[M]
R2297	ERJ3GEYJ102V	1K 1/16W	[M]
R2301	ERJ3GEYJ473V	47K 1/16W	[M]
R2302	ERJ3GEYJ153V	15K 1/16W	[M]
R2303	ERJ3GEYJ334V	330K 1/16W	[M]
R2304	ERJ3GEYJ823V	82K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2311	ERJ3GEY0R00V	0 1/16W	[M]
R2316	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2317	ERJ3GEYJ104V	100K 1/16W	[M]
R2318	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2320	ERJ3GEY0R00V	0 1/16W	[M]
R2331	ERJ3GEY0R00V	0 1/16W	[M]
R2332	ERJ3GEYJ393V	39K 1/16W	[M]
R2333	ERJ3GEY0R00V	0 1/16W	[M]
R2337	ERJ3GEYJ474V	470K 1/16W	[M]
R2338	ERJ3GEYJ102V	1K 1/16W	[M]
R2339	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2401	ERJ3GEYJ473V	47K 1/16W	[M]
R2402	ERJ3GEYJ153V	15K 1/16W	[M]
R2403	ERJ3GEYJ334V	330K 1/16W	[M]
R2404	ERJ3GEYJ823V	82K 1/16W	[M]
R2411	ERJ3GEY0R00V	0 1/16W	[M]
R2416	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2417	ERJ3GEYJ104V	100K 1/16W	[M]
R2418	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2420	ERJ3GEY0R00V	0 1/16W	[M]
R2439	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2501	ERJ3GEYJ153V	15K 1/16W	[M]
R2502	ERJ3GEYJ104V	100K 1/16W	[M]
R2503	ERJ3GEYJ474V	470K 1/16W	[M]
R2511	ERJ3GEYJ224V	220K 1/16W	[M]
R2512	ERJ3GEY0R00V	0 1/16W	[M]
R2513	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2514	ERJ3GEYJ104V	100K 1/16W	[M]
R2515	ERJ3GEYJ822V	8.2K 1/16W	[M]
R2516	ERJ3GEYJ102V	1K 1/16W	[M]
R2517	ERJ3GEYJ104V	100K 1/16W	[M]
R2518	ERJ3GEYJ104V	100K 1/16W	[M]
R2519	ERJ3GEYJ183V	18K 1/16W	[M]
R2520	ERJ3GEYJ103V	10K 1/16W	[M]
R2521	ERJ3GEYJ103V	10K 1/16W	[M]
R2522	ERJ3GEYJ103V	10K 1/16W	[M]
R2523	ERJ3GEYJ104V	100K 1/16W	[M]
R2524	ERJ3GEYJ102V	1K 1/16W	[M]
R2525	ERJ3GEYJ104V	100K 1/16W	[M]
R2527	ERJ3GEYJ102V	1K 1/16W	[M]
R2531	ERJ3GEY0R00V	0 1/16W	[M]
R2532	ERJ3GEY0R00V	0 1/16W	[M]
R2533	ERJ3GEYJ103V	10K 1/16W	[M]
R2534	ERJ3GEYJ152V	1.5K 1/16W	[M]
R2535	ERJ3GEYJ333V	33K 1/16W	[M]
R2537	ERJ3GEYJ102V	1K 1/16W	[M]
R2538	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2539	ERJ3GEYJ104V	100K 1/16W	[M]
R2555	ERJ3GEYJ102V	1K 1/16W	[M]
R2556	ERJ3GEYJ102V	1K 1/16W	[M]
R2557	ERJ3GEYJ102V	1K 1/16W	[M]
R2558	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2559	ERJ3GEYJ183V	18K 1/16W	[M]
R2560	ERJ3GEYJ332V	3.3K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2561	ERJ3GEYJ223V	22K 1/16W	[M]
R2562	ERJ3GEYJ473V	47K 1/16W	[M]
R2563	ERJ3GEYJ473V	47K 1/16W	[M]
R2564	ERJ3GEYJ334V	330K 1/16W	[M]
R2565	ERJ3GEYJ392V	3.9K 1/16W	[M]
R2566	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2568	ERJ3GEYJ104V	100K 1/16W	[M]
R2571	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2582	ERJ3GEY0R00V	0 1/16W	[M]
R2584	ERJ3GEYJ334V	330K 1/16W	[M]
R2585	ERJ3GEYJ334V	330K 1/16W	[M]
R2586	ERJ3GEYJ122V	1.2K 1/16W	[M]
R2587	ERJ3GEYJ122V	1.2K 1/16W	[M]
R2591	ERJ3GEYJ334V	330K 1/16W	[M]
R2592	ERJ3GEY0R00V	0 1/16W	[M]
R2601	ERJ3GEY0R00V	0 1/16W	[M]
R2602	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2603	ERJ3GEYJ101V	100 1/16W	[M]
R2604	ERJ3GEYJ102V	1K 1/16W	[M]
R2605	ERJ3GEYJ471V	470 1/16W	[M]
R2606	ERJ3GEYJ474V	470K 1/16W	[M]
R2607	ERJ3GEYJ331V	330 1/16W	[M]
R2610	ERJ3GEYJ102V	1K 1/16W	[M]
R2611	ERJ3GEYJ391V	390 1/16W	[M]
R2612	ERJ3GEYJ104V	100K 1/16W	[M]
R2613	ERJ3GEYJ103V	10K 1/16W	[M]
R2614	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2615	ERJ3GEYJ561V	560 1/16W	[M]
R2616	ERJ3GEYJ102V	1K 1/16W	[M]
R2617	ERJ3GEYJ683V	68K 1/16W	[M]
R2618	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2619	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2620	ERJ3GEYJ473V	47K 1/16W	[M]
R2621	ERJ3GEYJ223V	22K 1/16W	[M]
R2622	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2623	ERJ3GEYJ683V	68K 1/16W	[M]
R2624	ERJ3GEYJ330V	33 1/16W	[M]
R2625	ERJ3GEYJ471V	470 1/16W	[M]
R2626	ERJ3GEYJ102V	1K 1/16W	[M]
R2627	ERJ3GEYJ471V	470 1/16W	[M]
R2628	ERJ3GEYJ820V	82 1/16W	[M]
R2629	ERJ3GEYJ273V	27K 1/16W	[M]
R2630	ERJ3GEYJ103V	10K 1/16W	[M]
R2631	ERJ3GEYJ121V	120 1/16W	[M]
R2632	ERJ3GEYJ103V	10K 1/16W	[M]
R2633	ERJ3GEYJ102V	1K 1/16W	[M]
R2634	ERJ3GEYJ471V	470 1/16W	[M]
R2635	ERJ3GEYJ102V	1K 1/16W	[M]
R2636	ERJ3GEYJ102V	1K 1/16W	[M]
R2637	ERJ3GEYJ102V	1K 1/16W	[M]
R2638	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2639	ERJ3GEYJ223V	22K 1/16W	[M]
R2640	ERJ3GEYJ223V	22K 1/16W	[M]
R2641	ERJ3GEYJ682V	6.8K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2642	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2643	ERJ3GEYJ223V	22K 1/16W	[M]
R2644	ERJ3GEYJ121V	120 1/16W	[M]
R2645	ERJ3GEYJ104V	100K 1/16W	[M]
R2646	ERJ3GEYJ104V	100K 1/16W	[M]
R2651	ERJ3GEYJ820V	82 1/16W	[M]
R2652	ERJ3GEY0R00V	0 1/16W	[M]
R2699	ERJ3GEY0R00V	0 1/16W	[M]
R2701	ERJ3GEYJ225V	2.2M 1/16W	[M]
R2702	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2703	ERJ3GEYJ104V	100K 1/16W	[M]
R2704	ERJ3GEY0R00V	0 1/16W	[M]
R2705	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2706	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2707	ERJ3GEYJ102V	1K 1/16W	[M]
R2708	ERJ3GEYJ103V	10K 1/16W	[M]
R2709	ERJ3GEYJ104V	100K 1/16W	[M]
R2710	ERJ3GEYJ224V	220K 1/16W	[M]
R2711	ERJ3GEYJ101V	100 1/16W	[M]
R2712	ERDS1FVJ220T	22 1/2W	[M]
R2713	ERJ3GEYJ104V	100K 1/16W	[M]
R2714	ERJ3GEYJ124V	120K 1/16W	[M]
R2715	ERJ3GEYJ103V	10K 1/16W	[M]
R2801	ERJ3GEYJ103V	10K 1/16W	[M]
R2802	ERJ3GEYJ101V	100 1/16W	[M]
R2803	ERJ3GEYJ103V	10K 1/16W	[M]
R2804	ERJ3GEYJ473V	47K 1/16W	[M]
R2805	ERJ3GEYJ473V	47K 1/16W	[M]
R2806	ERJ3GEYJ103V	10K 1/16W	[M]
R2807	ERJ3GEYJ103V	10K 1/16W	[M]
R2810	ERJ3GEYJ223V	22K 1/16W	[M]
R2811	ERJ3GEY0R00V	0 1/16W	[M]
R2817	ERJ3GEYJ104V	100K 1/16W	[M]
R2818	ERJ3GEYJ104V	100K 1/16W	[M]
R2819	ERJ3GEYJ104V	100K 1/16W	[M]
R2820	ERJ3GEYJ104V	100K 1/16W	[M]
R2821	ERJ3GEYJ104V	100K 1/16W	[M]
R2822	ERJ3GEYJ104V	100K 1/16W	[M]
R2823	ERJ3GEYJ104V	100K 1/16W	[M]
R2824	ERJ3GEYJ104V	100K 1/16W	[M]
R2828	ERJ3GEYJ103V	10K 1/16W	[M]
R2832	ERJ3GEYJ103V	10K 1/16W	[M]
R2834	ERJ3GEYJ102V	1K 1/16W	[M]
R2841	ERJ3GEYJ103V	10K 1/16W	[M]
R2842	ERJ3GEYJ103V	10K 1/16W	[M]
R2843	ERJ3GEYJ102V	1K 1/16W	[M]
R2844	ERJ3GEYJ103V	10K 1/16W	[M]
R2845	ERJ3GEYJ103V	10K 1/16W	[M]
R2846	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2856	ERJ3GEYJ101V	100 1/16W	[M]
R2857	ERJ3GEYJ101V	100 1/16W	[M]
R2858	ERJ3GEYJ101V	100 1/16W	[M]
R2859	ERJ3GEYJ101V	100 1/16W	[M]
R2860	ERJ3GEYJ101V	100 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2861	ERJ3GEYJ101V	100 1/16W	[M]
R2862	ERJ3GEYJ101V	100 1/16W	[M]
R2867	ERJ3GEYJ104V	100K 1/16W	[M]
R2876	ERJ3GEYJ223V	22K 1/16W	[M]
R2877	ERJ3GEYJ223V	22K 1/16W	[M]
R2878	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2881	ERJ3GEYJ221V	220 1/16W	[M]
R2882	ERJ3GEYJ106V	10M 1/16W	[M]
R2883	ERJ3GEYJ334V	330K 1/16W	[M]
R2886	ERJ3GEYJ105V	1M 1/16W	[M]
R2891	ERJ3GEYJ473V	47K 1/16W	[M]
R2892	ERJ3GEY0R00V	0 1/16W	[M]
R2899	ERJ3GEYJ473V	47K 1/16W	[M]
R2901	ERJ3GEYJ103V	10K 1/16W	[M]
R2902	ERDS1FVJ120T	12 1/2W	[M]
R2903	ERDS1FVJ150T	15 1/2W	[M]
R2907	ERJ3GEYJ102V	1K 1/16W	[M]
R2908	ERJ3GEYJ331V	330 1/16W	[M]
R2909	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2910	ERJ3GEYJ331V	330 1/16W	[M]
R2911	ERJ3GEY0R00V	0 1/16W	[M]
R2912	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2913	ERJ3GEY0R00V	0 1/16W	[M]
R2914	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2915	ERJ3GEY0R00V	0 1/16W	[M]
R2916	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2917	ERJ3GEY0R00V	0 1/16W	[M]
R2918	ERJ3GEYJ103V	10K 1/16W	[M]
R2919	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2920	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2921	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2922	ERJ3GEYJ103V	10K 1/16W	[M]
R2923	ERJ3GEY0R00V	0 1/16W	[M]
R2924	ERJ3GEYJ103V	10K 1/16W	[M]
R2925	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2926	ERJ3GEY0R00V	0 1/16W	[M]
R2927	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2928	ERJ3GEYJ103V	10K 1/16W	[M]
R2929	ERJ3GEYJ103V	10K 1/16W	[M]
R2930	ERJ3GEYJ103V	10K 1/16W	[M]
R2931	ERJ3GEYJ103V	10K 1/16W	[M]
R2932	ERJ3GEY0R00V	0 1/16W	[M]
R2933	ERJ3GEY0R00V	0 1/16W	[M]
R2936	ERJ3GEYJ102V	1K 1/16W	[M]
R2937	ERJ3GEYJ103V	10K 1/16W	[M]
R2938	ERJ3GEYJ123V	12K 1/16W	[M]
R2939	ERJ3GEYJ223V	22K 1/16W	[M]
R2940	ERJ3GEYJ221V	220 1/16W	[M]
R2941	ERJ3GEYJ123V	12K 1/16W	[M]
R2942	ERJ3GEYJ223V	22K 1/16W	[M]
R2943	ERJ3GEYJ103V	10K 1/16W	[M]
R2944	ERJ3GEYJ103V	10K 1/16W	[M]
R2945	ERJ3GEYJ473V	47K 1/16W	[M]
R2946	ERJ3GEYJ473V	47K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2952	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2953	ERJ3GEYJ103V	10K 1/16W	[M]
R2954	ERDS1FVJ270T	27 1/2W	[M]
R2961	ERJ3GEYJ102V	1K 1/16W	[M]
R2962	ERJ3GEYJ102V	1K 1/16W	[M]
R2963	ERJ3GEYJ104V	100K 1/16W	[M]
R2964	ERJ3GEYJ102V	1K 1/16W	[M]
R2976	ERJ3GEY0R00V	0 1/16W	[M]
R2977	ERJ3GEY0R00V	0 1/16W	[M]
R5036	ERJ3GEYJ334V	330K 1/16W	[M]
R5077	ERJ3GEYJ563V	56K 1/16W	[M]
R5245	ERJ3GEYJ332V	3.3K 1/16W	[M]
R5246	ERJ3GEYJ153V	15K 1/16W	[M]
R5247	ERJ3GEYJ332V	3.3K 1/16W	[M]
R5248	ERJ3GEYJ153V	15K 1/16W	[M]
R5249	ERJ3GEYJ683V	68K 1/16W	[M]
R5250	ERJ3GEYJ683V	68K 1/16W	[M]
R5251	ERJ3GEYJ154V	150K 1/16W	[M]
R5252	ERJ3GEYJ104V	100K 1/16W	[M]
R5253	ERDS1FVJ100T	10 1/2W	[M]
R5254	ERDS1FVJ100T	10 1/2W	[M]
R5255	ERDS1FVJ100T	10 1/2W	[M]
R5256	ERDS1FVJ100T	10 1/2W	[M]
R5445	ERJ3GEYJ332V	3.3K 1/16W	[M]
R5446	ERJ3GEYJ153V	15K 1/16W	[M]
R5447	ERJ3GEYJ332V	3.3K 1/16W	[M]
R5448	ERJ3GEYJ153V	15K 1/16W	[M]
R5449	ERJ3GEYJ683V	68K 1/16W	[M]
R5450	ERJ3GEYJ683V	68K 1/16W	[M]
R5451	ERJ3GEYJ563V	56K 1/16W	[M]
R5452	ERJ3GEYJ224V	220K 1/16W	[M]
R5453	ERDS1FVJ100T	10 1/2W	[M]
R5454	ERDS1FVJ100T	10 1/2W	[M]
R5455	ERDS1FVJ100T	10 1/2W	[M]
R5456	ERDS1FVJ100T	10 1/2W	[M]
R5457	ERDS1FVJ270T	27 1/2W	[M]
R5635	ERJ3GEYJ104V	100K 1/16W	[M]
R5669	ERJ3GEYJ272V	2.7K 1/16W	[M]
R5670	ERJ3GEYJ563V	56K 1/16W	[M]
R5671	ERJ3GEYJ334V	330K 1/16W	[M]
R5673	ERDS1FVJ100T	10 1/2W	[M]
R5678	ERDS1FVJ100T	10 1/2W	[M]
R5734	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5769	ERJ3GEYJ563V	56K 1/16W	[M]
R5770	ERJ3GEYJ104V	100K 1/16W	[M]
R5771	ERJ3GEYJ274V	270K 1/16W	[M]
R5772	ERJ3GEYJ223V	22K 1/16W	[M]
R5773	ERDS1FVJ100T	10 1/2W	[M]
R5777	ERJ3GEYJ563V	56K 1/16W	[M]
R5778	ERDS1FVJ100T	10 1/2W	[M]
R5801	ERJ3GEYJ103V	10K 1/16W	[M]
R5802	ERJ3GEYJ223V	22K 1/16W	[M]
R5803	ERJ3GEY0R00V	0 1/16W	[M]
R5804	ERJ3GEYJ473V	47K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R5805	ERJ3GEYJ473V	47K 1/16W	[M]
R5806	ERJ3GEYJ104V	100K 1/16W	[M]
R5807	ERDS1FVJ331T	330 1/2W	[M]
R5808	ERDS1FVJ331T	330 1/2W	[M]
R5809	ERDS1FVJ331T	330 1/2W	[M]
R5810	ERJ3GEYJ272V	2.7K 1/16W	[M]
R5811	ERJ3GEYJ471V	470 1/16W	[M]
R5812	ERJ3GEYJ272V	2.7K 1/16W	[M]
R5813	ERJ3GEYJ332V	3.3K 1/16W	[M]
R5814	ERJ3GEYJ332V	3.3K 1/16W	[M]
R5815	ERDS1FVJ270T	27 1/2W	[M]
R5816	ERDS1FVJ270T	27 1/2W	[M]
R5822	ERJ3GEYJ332V	3.3K 1/16W	[M]
R5823	ERJ3GEYJ471V	470 1/16W	[M]
R5824	ERDS1FVJ2R2T	2.2 1/2W	[M]
R5825	ERDS1FVJ2R2T	2.2 1/2W	[M]
R5826	ERDS1FVJ2R2T	2.2 1/2W	[M]
R5827	ERDS1FVJ2R2T	2.2 1/2W	[M]
R5828	ERJ3GEYJ103V	10K 1/16W	[M]
R5829	ERDS1FVJ331T	330 1/2W	[M]
R5830	ERJ3GEYJ122V	1.2K 1/16W	[M]
R5831	ERJ3GEYJ222V	2.2K 1/16W	[M]
R5834	ERDS1FVJ150T	15 1/2W	[M]
R5841	ERDS1FVJ331T	330 1/2W	[M]
R5843	ERDS1FVJ6R8T	6.8 1/2W	[M]
R5844	ERDS1FVJ6R8T	6.8 1/2W	[M]
R5845	ERDS1FVJ6R8T	6.8 1/2W	[M]
R5846	ERDS1FVJ6R8T	6.8 1/2W	[M]
R5848	ERDS1FVJ6R8T	6.8 1/2W	[M]
R5853	ERJ3GEYJ224V	220K 1/16W	[M]
R5854	ERJ3GEYJ103V	10K 1/16W	[M]
R5855	ERJ3GEYJ223V	22K 1/16W	[M]
R5856	ERJ3GEYJ103V	10K 1/16W	[M]
R5857	ERJ3GEYJ223V	22K 1/16W	[M]
R5862	ERJ3GEY0R00V	0 1/16W	[M]
R5882	ERJ3GEYJ151V	150 1/16W	[M]
R5897	ERDS1FVJ220T	22 1/2W	[M]
R5951	ERDS2TJ332T	3.3K 1/4W	[M]
R5952	ERDS2TJ222T	2.2K 1/4W	[M]
R5953	ERDS2TJ151T	150 1/4W	[M]
R5954	ERDS1FVJ100T	10 1/2W	[M]
R5955	ERDS1FVJ100T	10 1/2W	[M]
R5956	ERDS1FVJ100T	10 1/2W	[M]
R5957	ERDS2TJ103T	10K 1/4W	[M]
R5958	ERDS2TJ103T	10K 1/4W	[M]
R5960	ERDS2TJ472T	4.7K 1/4W	[M]
R5961	ERDS2TJ151T	150 1/4W	[M]
R5965	ERDS2TJ123T	12K 1/4W	[M]
R6102	ERDS2TJ102T	1K 1/4W	[M]
R6103	ERDS2TJ102T	1K 1/4W	[M]
R6104	ERDS2TJ122T	1.2K 1/4W	[M]
R6105	ERDS2TJ182T	1.8K 1/4W	[M]
R6106	ERDS2TJ222T	2.2K 1/4W	[M]
R6107	ERDS2TJ272T	2.7K 1/4W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R6108	ERDS2TJ472T	4.7K 1/4W	[M]
R6109	ERDS2TJ682T	6.8K 1/4W	[M]
R6110	ERDS2TJ103T	10K 1/4W	[M]
R6111	ERDS2TJ223T	22K 1/4W	[M]
R6199	ERDS2TJ103T	10K 1/4W	[M]
R6202	ERDS2TJ102T	1K 1/4W	[M]
R6203	ERDS2TJ102T	1K 1/4W	[M]
R6204	ERDS2TJ122T	1.2K 1/4W	[M]
R6205	ERDS2TJ182T	1.8K 1/4W	[M]
R6206	ERDS2TJ222T	2.2K 1/4W	[M]
R6207	ERDS2TJ272T	2.7K 1/4W	[M]
R6208	ERDS2TJ472T	4.7K 1/4W	[M]
R6209	ERDS2TJ682T	6.8K 1/4W	[M]
R6210	ERDS2TJ103T	10K 1/4W	[M]
R6302	ERDS2TJ102T	1K 1/4W	[M]
R6303	ERDS2TJ102T	1K 1/4W	[M]
R6304	ERDS2TJ122T	1.2K 1/4W	[M]
R6305	ERDS2TJ182T	1.8K 1/4W	[M]
R6306	ERDS2TJ222T	2.2K 1/4W	[M]
R6307	ERDS2TJ272T	2.7K 1/4W	[M]
R6308	ERDS2TJ472T	4.7K 1/4W	[M]
R6309	ERDS2TJ682T	6.8K 1/4W	[M]
R6310	ERDS2TJ103T	10K 1/4W	[M]
R6399	ERDS2TJ103T	10K 1/4W	[M]
R6401	ERDS2TJ103T	10K 1/4W	[M]
R6402	ERDS2TJ103T	10K 1/4W	[M]
R6403	ERDS2TJ2R7T	2.7 1/4W	[M]
R6404	ERDS2TJ2R7T	2.7 1/4W	[M]
R6405	ERDS2TJ274T	270K 1/4W	[M]
R6406	ERDS2TJ274T	270K 1/4W	[M]
R6411	ERDS2TJ223T	22K 1/4W	[M]
R6412	ERDS2TJ102T	1K 1/4W	[M]
R6415	ERDS2TJ223T	22K 1/4W	[M]
R6416	ERDS2TJ102T	1K 1/4W	[M]
R6421	ERDS2TJ103T	10K 1/4W	[M]
R6425	ERDS2TJ103T	10K 1/4W	[M]
R6456	ERDS2TJ392T	3.9K 1/4W	[M]
R6457	ERDS2TJ392T	3.9K 1/4W	[M]
R6458	ERDS2TJ472T	4.7K 1/4W	[M]
R6491	ERDS2TJ473T	47K 1/4W	[M]
R6492	ERDS2TJ473T	47K 1/4W	[M]
R6493	ERDS2TJ103T	10K 1/4W	[M]
R6601	ERDS2TJ471T	470 1/4W	[M]
R6602	ERDS2TJ471T	470 1/4W	[M]
R6603	ERDS2TJ221T	220 1/4W	[M]
R6604	ERDS2TJ221T	220 1/4W	[M]
R6611	ERDS2TJ153T	15K 1/4W	[M]
R6631	ERD2FCVG470T	47 1/4W	[M]
R6632	ERD2FCVG470T	47 1/4W	[M]
R6641	ERDS1FVJ120T	12 1/2W	[M]
R6642	ERDS1FVJ120T	12 1/2W	[M]
R6643	ERDS1FVJ120T	12 1/2W	[M]
R6644	ERDS1FVJ120T	12 1/2W	[M]
R7102	ERJ3GEYJ472V	4.7K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R7104	ERJ3GEYJ102V	1K 1/16W	[M]
R7105	ERJ3GEYJ393V	39K 1/16W	[M]
R7106	ERJ3GEYJ102V	1K 1/16W	[M]
R7144	ERJ3GEYJ473V	47K 1/16W	[M]
R7211	ERJ3GEYJ823V	82K 1/16W	[M]
R7212	ERJ3GEYJ821V	820 1/16W	[M]
R7214	ERJ3GEYJ681V	680 1/16W	[M]
R7217	ERJ3GEYJ102V	1K 1/16W	[M]
R7218	ERJ3GEYJ102V	1K 1/16W	[M]
R7220	ERJ3GEYJ105V	1M 1/16W	[M]
R7221	ERJ3GEYJ101V	100 1/16W	[M]
R7253	ERJ3GEYJ100V	10 1/16W	[M]
R7254	ERJ3GEYJ102V	1K 1/16W	[M]
R7315	ERJ3GEYJ272V	2.7K 1/16W	[M]
R7323	ERJ3GEYJ562V	5.6K 1/16W	[M]
R7325	ERJ3GEYJ561V	560 1/16W	[M]
R7327	ERJ3GEYJ152V	1.5K 1/16W	[M]
R7328	ERJ3GEYJ183V	18K 1/16W	[M]
R7329	ERJ3GEYJ152V	1.5K 1/16W	[M]
R7331	ERJ3GEYJ223V	22K 1/16W	[M]
R7335	ERJ3GEYJ101V	100 1/16W	[M]
R7336	ERJ3GEYJ100V	10 1/16W	[M]
R7339	ERJ3GEYJ102V	1K 1/16W	[M]
R7349	ERJ3GEYJ153V	15K 1/16W	[M]
R7601	ERJ3GEYJ4R7V	4.7 1/16W	[M]
R7650	ERJ3GEYJ5R6V	5.6 1/16W	[M]
		CAPACITORS	
C1	ECEA1CKA101B	100 16V	[M]
C2	F1D1E103A001	0.01 25V	[M]
C1002	ECEA1HKN2R2B	2.2 50V	[M]
C1006	ECEA1HKA010B	1 50V	[M]
C1007	F0A2A472A034	4700P 100V	[M]
C1008	ECEA1HKA010B	1 50V	[M]
C1009	ECEA1CKA470B	47 16V	[M]
C1010	ECA1EM101B	100 25V	[M]
C1011	ECQV1H473JZ3	0.047 50V	[M]
C1012	ECJ1VB1H102K	1000P 50V	[M]
C1013	ECJ1VB1H102K	1000P 50V	[M]
C1014	ECJ1VB1H102K	1000P 50V	[M]
C1015	ECJ1VB1H102K	1000P 50V	[M]
C1016	ECJ1VB1H222K	2200P 50V	[M]
C1017	ECJ1VB1H222K	2200P 50V	[M]
C1018	ECJ1VB1H103K	0.01 50V	[M]
C1019	ECJ1VB1H102K	1000P 50V	[M]
C1020	ECJ1VB1H471K	470P 50V	[M]
C1021	ECJ1VB1H471K	470P 50V	[M]
C1022	ECJ1VB1H102K	1000P 50V	[M]
C1023	ECJ1VB1H102K	1000P 50V	[M]
C1026	ECEA0JKA470B	47 6.3V	[M]
C1027	ECJ1VB1H102K	1000P 50V	[M]
C1030	ECEA1AKA101B	100 10V	[M]
C1031	ECA1AM101B	100 10V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C1032	**F1C1C183A023**	**0.018 16V**	**[M]**
C1033	**F1C1C183A023**	**0.018 16V**	**[M]**
C1034	**ECEA1HKA3R3B**	**3.3 50V**	**[M]**
C1035	**ECEA1HKA3R3B**	**3.3 50V**	**[M]**
C1036	**ECJ1VB1C333K**	**0.033 16V**	**[M]**
C1037	**ECEA1HKA3R3B**	**3.3 50V**	**[M]**
C1038	**ECJ1VB1H221K**	**220P 50V**	**[M]**
C1039	**ECJ1VB1H221K**	**220P 50V**	**[M]**
C1040	**ECEA1CKA100B**	**10 16V**	**[M]**
C1041	**ECEA1CKA100B**	**10 16V**	**[M]**
C1042	**ECEA1CKA220B**	**22 16V**	**[M]**
C1043	**ECEA1HKA4R7B**	**4.7 50V**	**[M]**
C1044	**ECEA1AKA330B**	**33 10V**	**[M]**
C1045	**ECEA1AKA220B**	**22 10V**	**[M]**
C1046	**ECA1CM221B**	**220 16V**	**[M]**
C1049	**ECJ1VB1H332K**	**3300P 50V**	**[M]**
C1050	**ECJ1VB1H332K**	**3300P 50V**	**[M]**
C1056	**ECEA1CKA100B**	**10 16V**	**[M]**
C1057	**ECJ1VB1H102K**	**1000P 50V**	**[M]**
C1058	**ECJ1VB1H102K**	**1000P 50V**	**[M]**
C1059	**ECJ1VB1H103K**	**0.01 50V**	**[M]**
C2101	**ECJ1VB1C105K**	**1 16V**	**[M]**
C2102	**ECJ1VB1C104K**	**0.1 16V**	**[M]**
C2103	**ECJ1VB1H102K**	**1000P 50V**	**[M]**
C2106	**ECJ1VB1H332K**	**3300P 50V**	**[M]**
C2107	**ECJ1VB1C104K**	**0.1 16V**	**[M]**
C2108	**ECJ1VB1H102K**	**1000P 50V**	**[M]**
C2111	**ECJ1VB1C104K**	**0.1 16V**	**[M]**
C2112	**ECJ1VB1H152K**	**1500P 50V**	**[M]**
C2114	**ECJ1VB1H103K**	**0.01 50V**	**[M]**
C2116	**ECJ1VB1H681K**	**680P 50V**	**[M]**
C2117	**ECJ1VC1H101K**	**100P 50V**	**[M]**
C2118	**ECJ1VB1C104K**	**0.1 16V**	**[M]**
C2119	**ECJ1VB1H102K**	**1000P 50V**	**[M]**
C2120	**ECJ1VB1C105K**	**1 16V**	**[M]**
C2121	**ECJ1VB1C104K**	**0.1 16V**	**[M]**
C2126	**ECJ1VB1C104K**	**0.1 16V**	**[M]**
C2131	**ECUV1C224KBV**	**0.22 16V**	**[M]**
C2136	**ECUV1C224KBV**	**0.22 16V**	**[M]**
C2141	**ECJ1VB1C105K**	**1 16V**	**[M]**
C2142	**ECJ1VB1C105K**	**1 16V**	**[M]**
C2151	**ECA1CM100B**	**10 16V**	**[M]**
C2166	**ECJ1VB1H102K**	**1000P 50V**	**[M]**
C2181	**ECJ1VB1H822K**	**8200P 50V**	**[M]**
C2182	**ECJ1VB1H822K**	**8200P 50V**	**[M]**
C2183	**ECJ1VB1C105K**	**1 16V**	**[M]**
C2184	**ECJ1VB1H152K**	**1500P 50V**	**[M]**
C2191	**ERJ3GEY0R00V**	**0 1/16W**	**[M]**
C2192	**ERJ3GEY0R00V**	**0 1/16W**	**[M]**
C2193	**ECJ1VB1C104K**	**0.1 16V**	**[M]**
C2194	**ECEA1CKA100B**	**10 16V**	**[M]**
C2201	**ECJ1VB1C105K**	**1 16V**	**[M]**
C2202	**ECJ1VB1C104K**	**0.1 16V**	**[M]**
C2203	**ECJ1VB1H102K**	**1000P 50V**	**[M]**

Ref. No.	Part No.	Part Name & Description	Remarks
C2206	ECJ1VB1H332K	3300P 50V	[M]
C2207	ECJ1VB1C104K	0.1 16V	[M]
C2208	ECJ1VB1H102K	1000P 50V	[M]
C2211	ECJ1VB1C104K	0.1 16V	[M]
C2212	ECJ1VB1H152K	1500P 50V	[M]
C2214	ECJ1VB1H103K	0.01 50V	[M]
C2216	ECJ1VB1H681K	680P 50V	[M]
C2217	ECJ1VC1H101K	100P 50V	[M]
C2218	ECJ1VB1C104K	0.1 16V	[M]
C2219	ECJ1VB1H102K	1000P 50V	[M]
C2220	ECJ1VB1C105K	1 16V	[M]
C2221	ECJ1VB1C104K	0.1 16V	[M]
C2226	ECJ1VB1C104K	0.1 16V	[M]
C2231	ECJ1VB1C683K	0.068 16V	[M]
C2236	ECJ1VB1C683K	0.068 16V	[M]
C2241	ECJ1VB1C105K	1 16V	[M]
C2242	ECJ1VB1C105K	1 16V	[M]
C2245	ECA1CM100B	10 16V	[M]
C2251	ECA1CM100B	10 16V	[M]
C2266	ECJ1VB1H102K	1000P 50V	[M]
C2281	ECJ1VB1H822K	8200P 50V	[M]
C2282	ECJ1VB1H822K	8200P 50V	[M]
C2283	ECJ1VB1C105K	1 16V	[M]
C2284	ECJ1VB1H152K	1500P 50V	[M]
C2291	ERJ3GEY0R00V	0 1/16W	[M]
C2292	ERJ3GEY0R00V	0 1/16W	[M]
C2293	ECJ1VB1C104K	0.1 16V	[M]
C2294	ECEA1CKA100B	10 16V	[M]
C2301	ECJ1VC1H100J	10P 50V	[M]
C2302	ECJ1VC1H470J	47P 50V	[M]
C2311	ECJ1VB1A184K	0.18 10V	[M]
C2312	ECJ1VB1A154K	0.15 10V	[M]
C2331	ECJ1VB1C105K	1 16V	[M]
C2332	ERJ3GEY0R00V	0 1/16W	[M]
C2334	ECUV1C224KBV	0.22 16V	[M]
C2401	ECJ1VC1H100J	10P 50V	[M]
C2402	ECJ1VC1H470J	47P 50V	[M]
C2411	ECJ1VB1A184K	0.18 10V	[M]
C2412	ECJ1VB1A154K	0.15 10V	[M]
C2501	ECEA1HKN2R2B	2.2 50V	[M]
C2511	ECJ1VB1H223K	0.022 50V	[M]
C2512	ECJ1VB1A474K	0.47 10V	[M]
C2513	ECJ1VB1C104K	0.1 16V	[M]
C2520	ECJ1VB1H103K	0.01 50V	[M]
C2521	ECJ1VB1H103K	0.01 50V	[M]
C2522	ECJ1VB1C105K	1 16V	[M]
C2523	ECJ1VB1C105K	1 16V	[M]
C2525	ECJ1VB1C105K	1 16V	[M]
C2526	ECJ1VB1H221K	220P 50V	[M]
C2527	ECJ1VB1C105K	1 16V	[M]
C2551	ECA1CM100B	10 16V	[M]
C2552	ECJ1VC1H101K	100P 50V	[M]
C2553	ECJ1VB1H103K	0.01 50V	[M]
C2554	ECJ1VB1C105K	1 16V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C2555	**ECJ1VC1H101K**	**100P 50V**	**[M]**
C2556	**ECJ1VB1H103K**	**0.01 50V**	**[M]**
C2557	**ECJ1VB1H103K**	**0.01 50V**	**[M]**
C2558	**ECJ1VB1A154K**	**0.15 10V**	**[M]**
C2559	**ECJ1VC1H470J**	**47P 50V**	**[M]**
C2560	**ECJ1VB1C105K**	**1 16V**	**[M]**
C2561	**ECJ1VB1C105K**	**1 16V**	**[M]**
C2581	**ECA1AM330B**	**33 10V**	**[M]**
C2582	**ECA1CM101B**	**100 16V**	**[M]**
C2583	**ECUV1C224KBV**	**0.22 16V**	**[M]**
C2584	**ECJ1VB1H221K**	**220P 50V**	**[M]**
C2585	**ECJ1VB1H221K**	**220P 50V**	**[M]**
C2588	**ECJ1VB1C104K**	**0.1 16V**	**[M]**
C2601	**ECJ1VB1H103K**	**0.01 50V**	**[M]**
C2602	**ECA1CM101B**	**100 16V**	**[M]**
C2603	**ECJ1VB1H103K**	**0.01 50V**	**[M]**
C2604	**ECJ1VB1H102K**	**1000P 50V**	**[M]**
C2606	**ECJ1VB1H103K**	**0.01 50V**	**[M]**
C2607	**ECJ1VB1E473K**	**0.047 25V**	**[M]**
C2608	**ECJ1VC1H080D**	**8P 50V**	**[M]**
C2609	**ECJ1VB1H102K**	**1000P 50V**	**[M]**
C2610	**ECJ1VB1H103K**	**0.01 50V**	**[M]**
C2611	**ECEA1HKA4R7B**	**4.7 50V**	**[M]**
C2612	**ECJ1VB1H103K**	**0.01 50V**	**[M]**
C2613	**ECJ1VB1H102K**	**1000P 50V**	**[M]**
C2614	**ECEA1HKA3R3B**	**3.3 50V**	**[M]**
C2615	**ECEA1HKA4R7B**	**4.7 50V**	**[M]**
C2616	**ECJ1VB1C333K**	**0.033 16V**	**[M]**
C2617	**ECJ1VB1H103K**	**0.01 50V**	**[M]**
C2618	**ECJ1VB1H103K**	**0.01 50V**	**[M]**
C2619	**F0A2A681A010**	**680P 100V**	**[M]**
C2620	**ECEA1CKA100B**	**10 16V**	**[M]**
C2621	**ECEA1HKAR47B**	**0.47 50V**	**[M]**
C2622	**ECEA1HKA010B**	**1 50V**	**[M]**
C2623	**ECEA1HKA010B**	**1 50V**	**[M]**
C2624	**ECJ1VC1H101K**	**100P 50V**	**[M]**
C2625	**ECEA1CKA220B**	**22 16V**	**[M]**
C2626	**ECJ2VF1C105Z**	**1 16V**	**[M]**
C2627	**ECEA1CKA220B**	**22 16V**	**[M]**
C2629	**ECA0JM101B**	**100 6.3V**	**[M]**
C2630	**ECA0JM101B**	**100 6.3V**	**[M]**
C2631	**ECJ1VC1H101J**	**100P 50V**	**[M]**
C2632	**ECJ1VB1H102K**	**1000P 50V**	**[M]**
C2633	**ECJ1VC1H120J**	**12P 50V**	**[M]**
C2634	**ECJ1VC1H120J**	**12P 50V**	**[M]**
C2636	**ECJ1VB1H102K**	**1000P 50V**	**[M]**
C2637	**ECJ1VB1H332K**	**3300P 50V**	**[M]**
C2638	**ECJ1VB1H103K**	**0.01 50V**	**[M]**
C2639	**ECEA1HKA4R7B**	**4.7 50V**	**[M]**
C2641	**ECEA1HKA010B**	**1 50V**	**[M]**
C2642	**ECEA1HKA010B**	**1 50V**	**[M]**
C2643	**ECJ1VB1H472K**	**4700P 50V**	**[M]**
C2644	**ECJ1VB1H472K**	**4700P 50V**	**[M]**
C2647	**ECJ1VB1H102K**	**1000P 50V**	**[M]**

Ref. No.	Part No.	Part Name & Description	Remarks
C2648	ECJ1VB1H103K	0.01 50V	[M]
C2649	ECJ1VF1C104Z	0.1 16V	[M]
C2701	ECJ1VB1H103K	0.01 50V	[M]
C2702	ECA1CM221B	220 16V	[M]
C2703	ECJ1VB1H103K	0.01 50V	[M]
C2704	ECJ1VB1H103K	0.01 50V	[M]
C2705	ECA1CM100B	10 16V	[M]
C2706	ECJ1VB1H103K	0.01 50V	[M]
C2707	ECEA1AKN100B	10 10V	[M]
C2708	ECA1CM101B	100 16V	[M]
C2751	ECJ1VB1C104K	0.1 16V	[M]
C2753	ECJ1VB1C104K	0.1 16V	[M]
C2811	ECJ1VC1H101K	100P 50V	[M]
C2812	ECJ1VC1H101K	100P 50V	[M]
C2813	ECJ1VC1H101K	100P 50V	[M]
C2814	ECJ1VC1H101K	100P 50V	[M]
C2815	ECJ1VC1H101K	100P 50V	[M]
C2816	ECJ1VC1H101K	100P 50V	[M]
C2817	ECJ1VC1H101K	100P 50V	[M]
C2818	ECJ1VC1H101K	100P 50V	[M]
C2819	ECJ1VC1H101K	100P 50V	[M]
C2820	ECJ1VC1H101K	100P 50V	[M]
C2821	ECJ1VC1H101K	100P 50V	[M]
C2831	ECJ1VB1C223K	0.022 16V	[M]
C2832	ECJ1VB1H331K	330P 50V	[M]
C2833	ECJ1VB1H331K	330P 50V	[M]
C2840	ECJ1VC1H180J	18P 50V	[M]
C2841	ECJ1VC1H180J	18P 50V	[M]
C2851	ECJ1VB1C104K	0.1 16V	[M]
C2852	ECA1CM101B	100 16V	[M]
C2853	ECJ1VB1C104K	0.1 16V	[M]
C2854	ECA1CM101B	100 16V	[M]
C2856	ECJ1VB1C105K	1 16V	[M]
C2857	ECEA1HKA2R2B	2.2 50V	[M]
C2901	ECJ1VB1C104K	0.1 16V	[M]
C2902	ECA1CM100B	10 16V	[M]
C2903	ECJ1VB1H103K	0.01 50V	[M]
C2904	ECA1CM101B	100 16V	[M]
C2905	ECA1CM101B	100 16V	[M]
C2906	ECJ1VB1H102K	1000P 50V	[M]
C2907	ECJ1VB1H471K	470P 50V	[M]
C2936	ECJ1VF1C474Z	0.47 16V	[M]
C2951	ECJ1VB1H103K	0.01 50V	[M]
C2952	ECJ1VB1H103K	0.01 50V	[M]
C2961	ECJ1VC1H101K	100P 50V	[M]
C2962	ECJ1VC1H101K	100P 50V	[M]
C2963	ECJ1VC1H470J	47P 50V	[M]
C2964	ECA1CM101B	100 16V	[M]
C2965	ECJ1VB1H102K	1000P 50V	[M]
C2966	ECJ1VB1C104K	0.1 16V	[M]
C2967	ECJ1VC1H470J	47P 50V	[M]
C2968	ECJ1VB1H561K	560P 50V	[M]
C2969	ECA1CM100B	10 16V	[M]
C2970	ECJ1VB1H331K	330P 50V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C2971	ECA1CM100B	10 16V	[M]
C2976	ECA1CM100B	10 16V	[M]
C2977	ECA1CM101B	100 16V	[M]
C2996	ECUV1C224KBV	0.22 16V	[M]
C2997	ECUV1C224KBV	0.22 16V	[M]
C2998	ECJ1VB1C104K	0.1 16V	[M]
C2999	ECJ1VB1C104K	0.1 16V	[M]
C5015	ECJ1VB1H103K	0.01 50V	[M]
C5018	ECA2AM100B	10 100V	[M]
C5019	ECA2AM100B	10 100V	[M]
C5077	ECJ1VC1H390K	39P 50V	[M]
C5240	ECJ1VB1H222K	2200P 50V	[M]
C5241	ECJ1VC1H390K	39P 50V	[M]
C5242	ECJ1VB1H222K	2200P 50V	[M]
C5243	ECJ1VC1H390K	39P 50V	[M]
C5244	ECJ1VB1H104K	0.1 50V	[M]
C5245	ECJ1VB1H104K	0.1 50V	[M]
C5246	ECJ1VB1H103K	0.01 50V	[M]
C5247	ECJ1VB1H103K	0.01 50V	[M]
C5248	ECJ1VB1H103K	0.01 50V	[M]
C5249	ECJ1VB1H104K	0.1 50V	[M]
C5250	ECJ1VB1H104K	0.1 50V	[M]
C5252	ECJ1VB1C105K	1 16V	[M]
C5440	ECJ1VB1H222K	2200P 50V	[M]
C5441	ECJ1VC1H390K	39P 50V	[M]
C5442	ECJ1VB1H222K	2200P 50V	[M]
C5443	ECJ1VC1H390K	39P 50V	[M]
C5444	ECJ1VB1H104K	0.1 50V	[M]
C5445	ECJ1VB1H104K	0.1 50V	[M]
C5446	ECJ1VB1H103K	0.01 50V	[M]
C5447	ECJ1VB1H103K	0.01 50V	[M]
C5448	ECJ1VB1H103K	0.01 50V	[M]
C5449	ECJ1VB1H104K	0.1 50V	[M]
C5450	ECJ1VB1H104K	0.1 50V	[M]
C5451	ECJ1VB1C105K	1 16V	[M]
C5658	ECJ1VB1H222K	2200P 50V	[M]
C5660	ECJ1VB1H104K	0.1 50V	[M]
C5661	ECJ1VB1H332K	3300P 50V	[M]
C5662	ECJ1VB1H104K	0.1 50V	[M]
C5758	ECJ1VB1H222K	2200P 50V	[M]
C5760	ECJ1VB1H104K	0.1 50V	[M]
C5761	ECJ1VB1H332K	3300P 50V	[M]
C5762	ECJ1VB1H104K	0.1 50V	[M]
C5777	ECJ1VC1H390K	39P 50V	[M]
C5801	ECJ1VB1H103K	0.01 50V	[M]
C5802	ECEA0JKA221B	220 6.3V	[M]
C5803	ECJ1VB1H102K	1000P 50V	[M]
C5804	ECJ1VB1H103K	0.01 50V	[M]
C5805	ECA1CM101B	100 16V	[M]
C5806	ECJ1VB1H103K	0.01 50V	[M]
C5807	ECEA1CKA100B	10 16V	[M]
C5808	ECEA1CKA100B	10 16V	[M]
C5809	ECJ1VB1H103K	0.01 50V	[M]
C5810	ECA1EM101B	100 25V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C5811	ECJ1VB1H103K	0.01 50V	[M]
C5812	ECA1HM330B	33 50V	[M]
C5813	ECEA1EKA100B	10 25V	[M]
C5820	ECA1HM222B	2200 50V	[M]
C5838	ECEA1HKA2R2B	2.2 50V	[M]
C5840	ECA1HM222B	2200 50V	[M]
C5864	ECJ1VB1H103K	0.01 50V	[M]
C5950	ECA1EM222B	2200 25V	[M]
C5951	F1B1H103A153	0.01 50V	[M]
C5952	ECA1AM470B	47 10V	[M]
C5953	F1B1H103A153	0.01 50V	[M]
C5954	F1B1H103A153	0.01 50V	[M]
C5955	ECA1HM220B	22 50V	[M]
C5956	ECA1HM470B	47 50V	[M]
C5957	ECA1HM100B	10 50V	[M]
C5958	F1B1H103A153	0.01 50V	[M]
C5959	F1B1H103A153	0.01 50V	[M]
C5960	ECQE2104KF3	0.1 250V	[M]
C5963	ECEA1VKA4R7B	4.7 35V	[M]
C5971	ECA1CM102B	1000 16V	[M]
C6481	ECEA0JKA470B	47 6.3V	[M]
C6491	F1D1H101A012	100P 50V	[M]
C6492	F1D1H101A012	100P 50V	[M]
C6551	F1D1E103A001	0.01 25V	[M]
C6552	F1D1E103A001	0.01 25V	[M]
C6553	F1D1E103A001	0.01 25V	[M]
C6601	F1D1H101A012	100P 50V	[M]
C6602	F1D1H102A012	1000P 50V	[M]
C6603	F1D1H101A012	100P 50V	[M]
C6604	F1D1H101A012	100P 50V	[M]
C6612	F1D1H330A006	33P 50V	[M]
C6621	F1D1H101A012	100P 50V	[M]
C6623	ECEA0JKA470B	47 6.3V	[M]
C6631	ECEA1VKA220B	22 35V	[M]
C6632	ECEA1VKA220B	22 35V	[M]
C6635	ECEA1HKA3R3B	3.3 50V	[M]
C6636	F1D1H101A012	100P 50V	[M]
C7102	ECJ1VB1A474K	0.47 10V	[M]
C7105	ECJ1VB1C104K	0.1 16V	[M]
C7106	ECJ1VB1C104K	0.1 16V	[M]
C7107	ECJ1VB1H223K	0.022 50V	[M]
C7110	ECJ1VB1H471K	470P 50V	[M]
C7142	ECJ1VB1H223K	0.022 50V	[M]
C7147	ECJ1VB1H391K	390P 50V	[M]
C7149	ECJ1VB1H392K	3900P 50V	[M]
C7155	ECJ1VB1C104K	0.1 16V	[M]
C7161	ECJ1VB1C104K	0.1 16V	[M]
C7166	ECJ1VB1H103K	0.01 50V	[M]
C7203	ECEA0JKA221I	220 6.3V	[M]
C7204	ECJ1VB1C104K	0.1 16V	[M]
C7216	ECJ1VB1H681K	680P 50V	[M]
C7217	ECJ1VB1C104K	0.1 16V	[M]
C7218	ECJ1VB1C823K	0.082 16V	[M]
C7223	ECEA0JKA101I	100 6.3V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C7224	ECJ1VB1C104K	0.1 16V	[M]
C7225	ECJ1VB1H102K	1000P 50V	[M]
C7226	ECJ1VB1H102K	1000P 50V	[M]
C7230	ECJ1VB1C104K	0.1 16V	[M]
C7231	ECEA0JKA221I	220 6.3V	[M]
C7232	ECEA0JKA221I	220 6.3V	[M]
C7233	ECJ1VF1C104Z	0.1 16V	[M]
C7234	ECEA1CKA100I	10 16V	[M]
C7235	ECEA1CKA100I	10 16V	[M]
C7241	ECJ1VB1H102K	1000P 50V	[M]
C7243	ECJ1VF1C104Z	0.1 16V	[M]
C7244	ECJ1VB1C153K	0.015 16V	[M]
C7253	ECJ1VB1H471K	470P 50V	[M]
C7263	ECJ1VB1C104K	0.1 16V	[M]
C7264	ECJ1VB1C104K	0.1 16V	[M]
C7315	ECJ1VB1A224K	0.22 10V	[M]
C7334	ECEA1AKA221I	220 10V	[M]
C7335	ECJ1VF1C104Z	0.1 16V	[M]
C7338	ECJ1VB1A224K	0.22 10V	[M]
C7339	ECJ1VB1H103K	0.01 50V	[M]
C7352	ECJ1VB1H103K	0.01 50V	[M]
C7601	ECEA0JKA330I	33 6.3V	[M]
C7613	ECJ1VB1C104K	0.1 16V	[M]
C7614	ECEA0JKA101I	100 6.3V	[M]
C7625	ECEA0JKA221I	220 6.3V	[M]
C7626	ECJ1VB1C104K	0.1 16V	[M]
C7670	ECJ1VB1C104K	0.1 16V	[M]

23.5. Packing Materials & Accessories Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		PACKING MATERIALS	
P1	RPGX1374	PACKING CASE	[M]EG
P1	RPGX1375	PACKING CASE	[M]E
P1	RPGX1376	PACKING CASE	[M]EB
P2	RPNX0323	POLYFOAM (MAIN SET)	[M]
P3	RPFX0007	MIRAMAT BAG	[M]
		ACCESSORIES	
A1	N2QAHB000053	REMOTE CONTROL	[M]
A1-1	RKK-HTR0283	R/C BATTERY COVER	[M]
A2	RJA0019-2X	AC CORD	[M]EG/E ⚠
A2	RJA0053-3X	AC CORD	[M]EB ⚠
A3	RQT7837-B	O/I BOOK (En)	[M]EB/E
A3	RQT7887-E	O/I BOOK (Sp/Po/Cz)	[M]E
A3	RQT7888-D	O/I BOOK (Ge/It/Fr)	[M]EG
A3	RQT7889-H	O/I BOOK (Du/Da/Sw)	[M]EG
A4	RSA0007-L	FM ANTENNA	[M]
A5	N1DAAAA00001	AM LOOP ANTENNA	[M]
A6	SJP9009	ANTENNA ADAPTER	[M]EB

23.6. Packaging

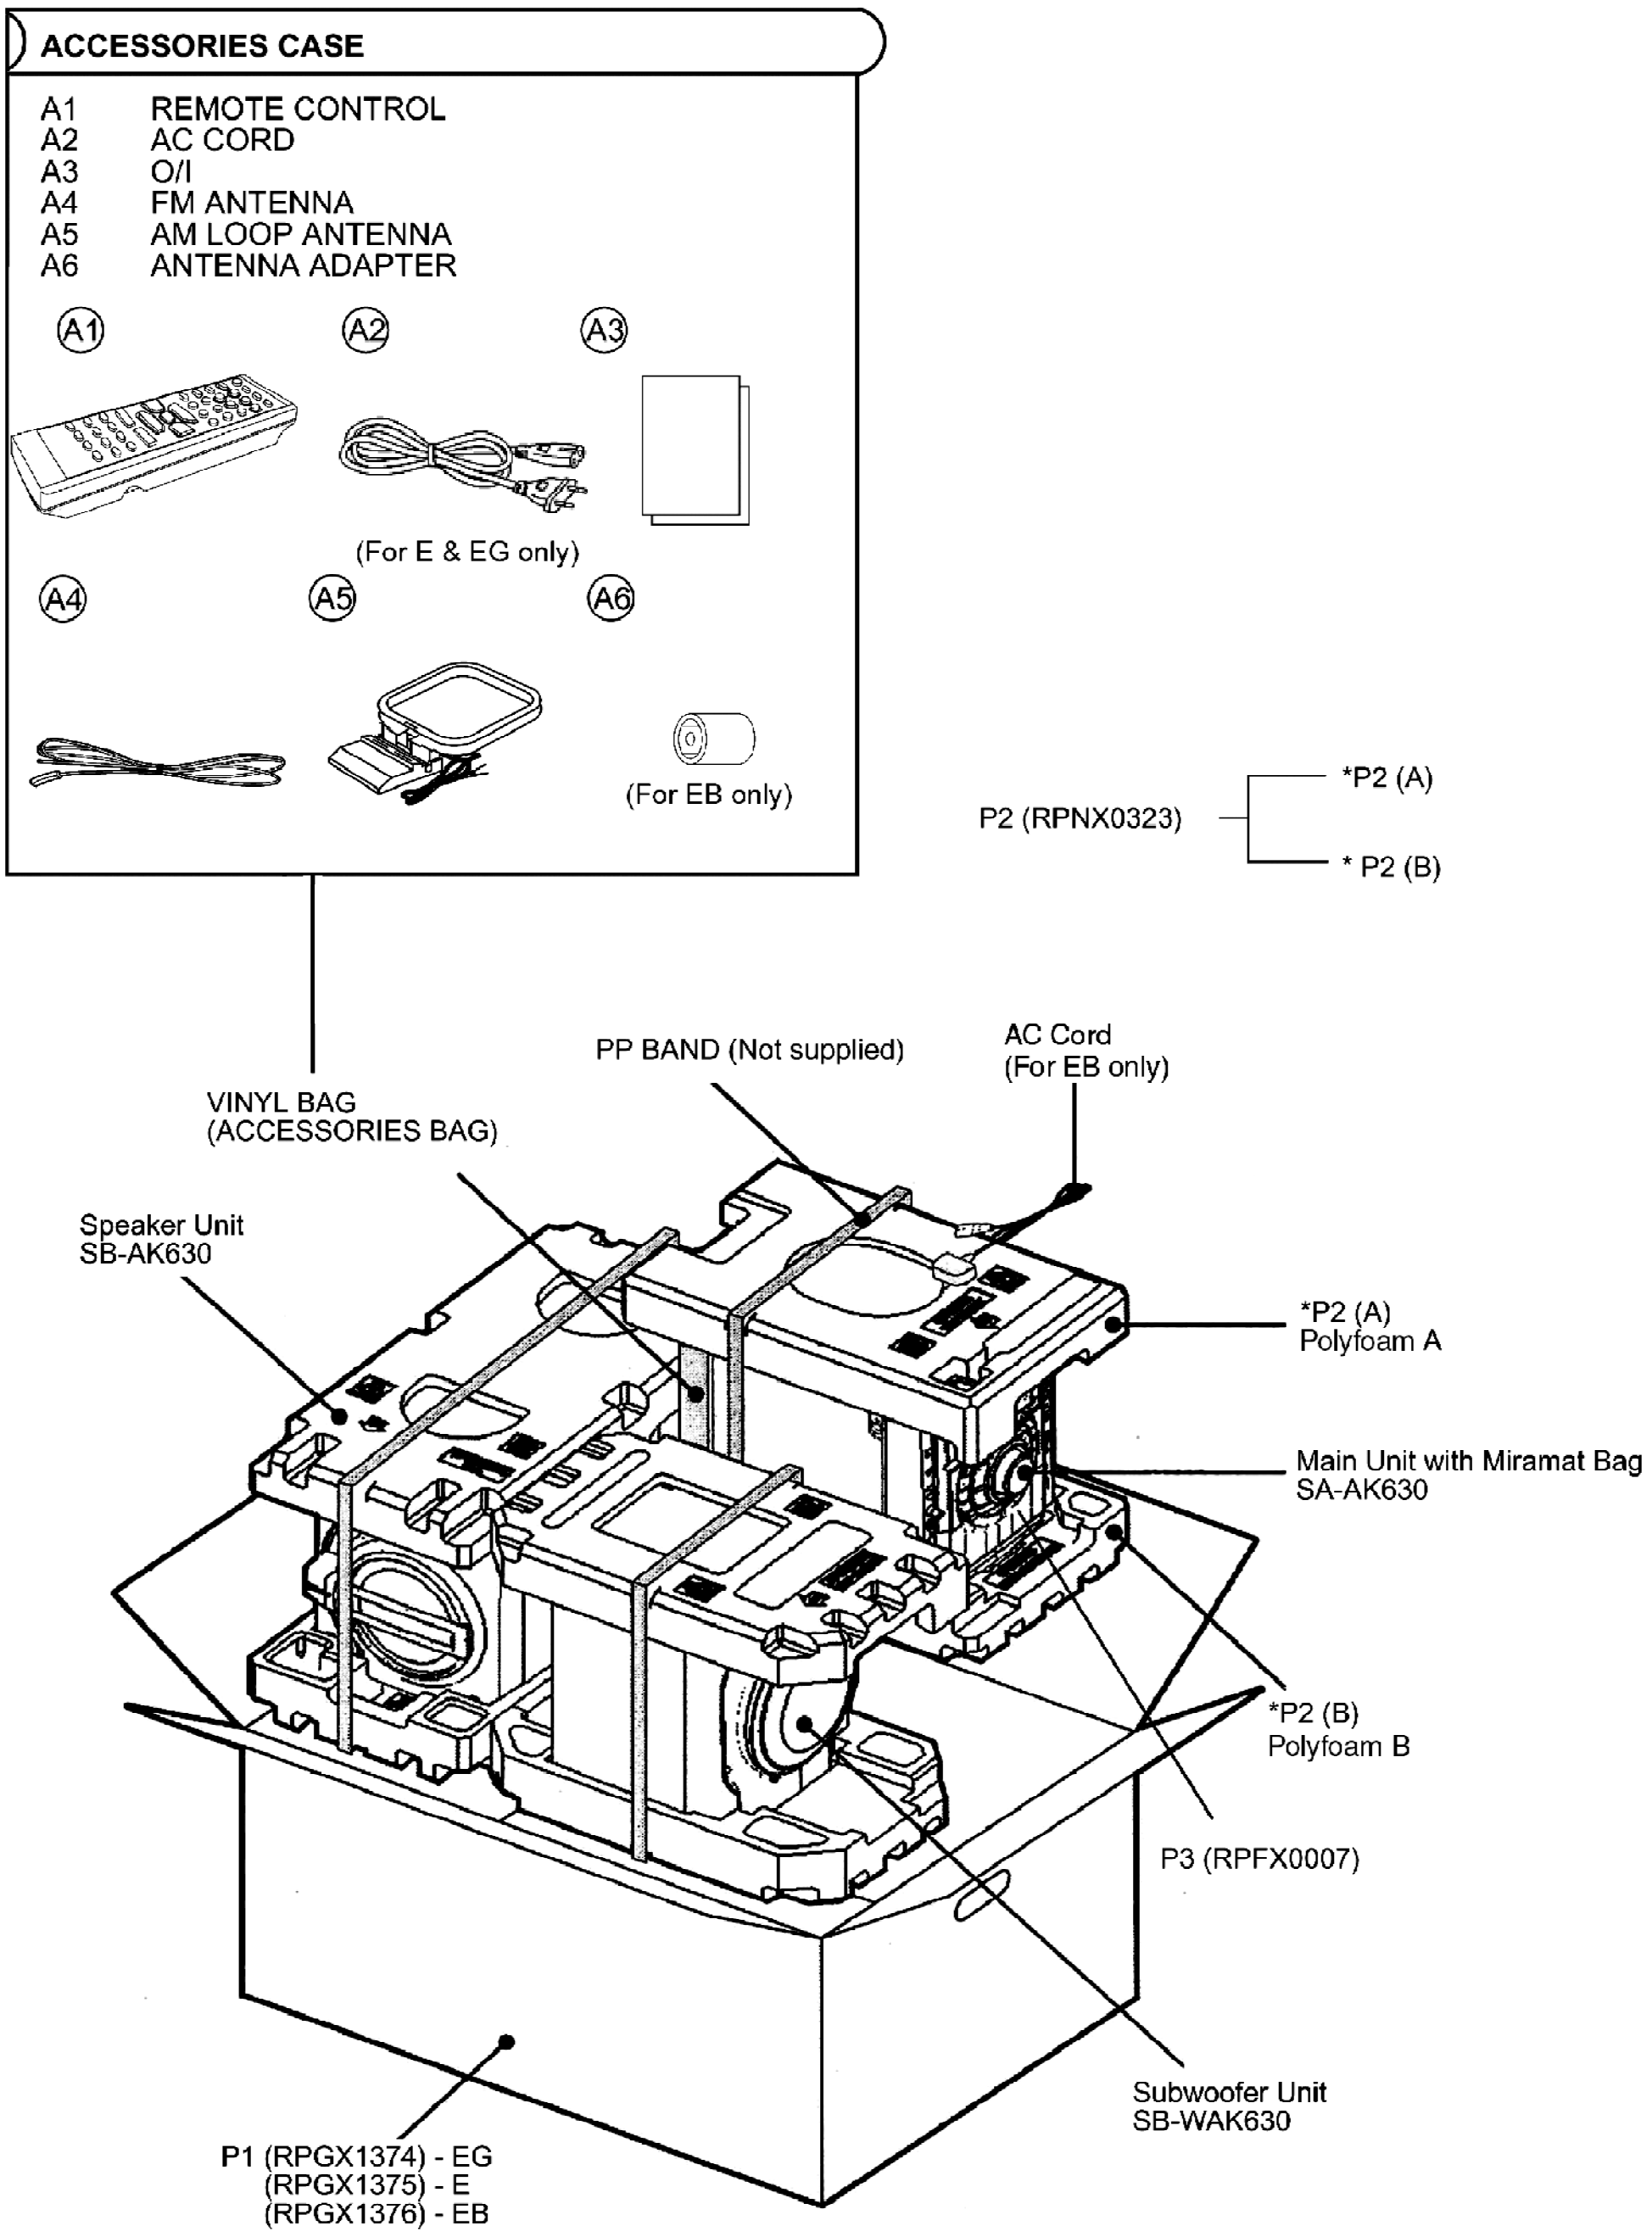
ACCESSORIES CASE
A1 REMOTE CONTROL
A2 AC CORD
A3 O/I
A4 FM ANTENNA
A5 AM LOOP ANTENNA
A6 ANTENNA ADAPTER
A1
A2
A3
(For E & EG only)
A4
A5
A6
(For EB only)
P2 (RPNX0323)
*P2 (A)
* P2 (B)
PP BAND (Not supplied)
AC Cord
(For EB only)
VINYL BAG
(ACCESSORIES BAG)
Speaker Unit
SB-AK630
*P2 (A)
Polyfoam A
Main Unit with Miramat Bag
SA-AK630
*P2 (B)
Polyfoam B
P3 (RPFX0007)
Subwoofer Unit
SB-WAK630
P1 (RPGX1374) - EG
(RPGX1375) - E
(RPGX1376) - EB

B MAIN P.C.B (REPX0442M)

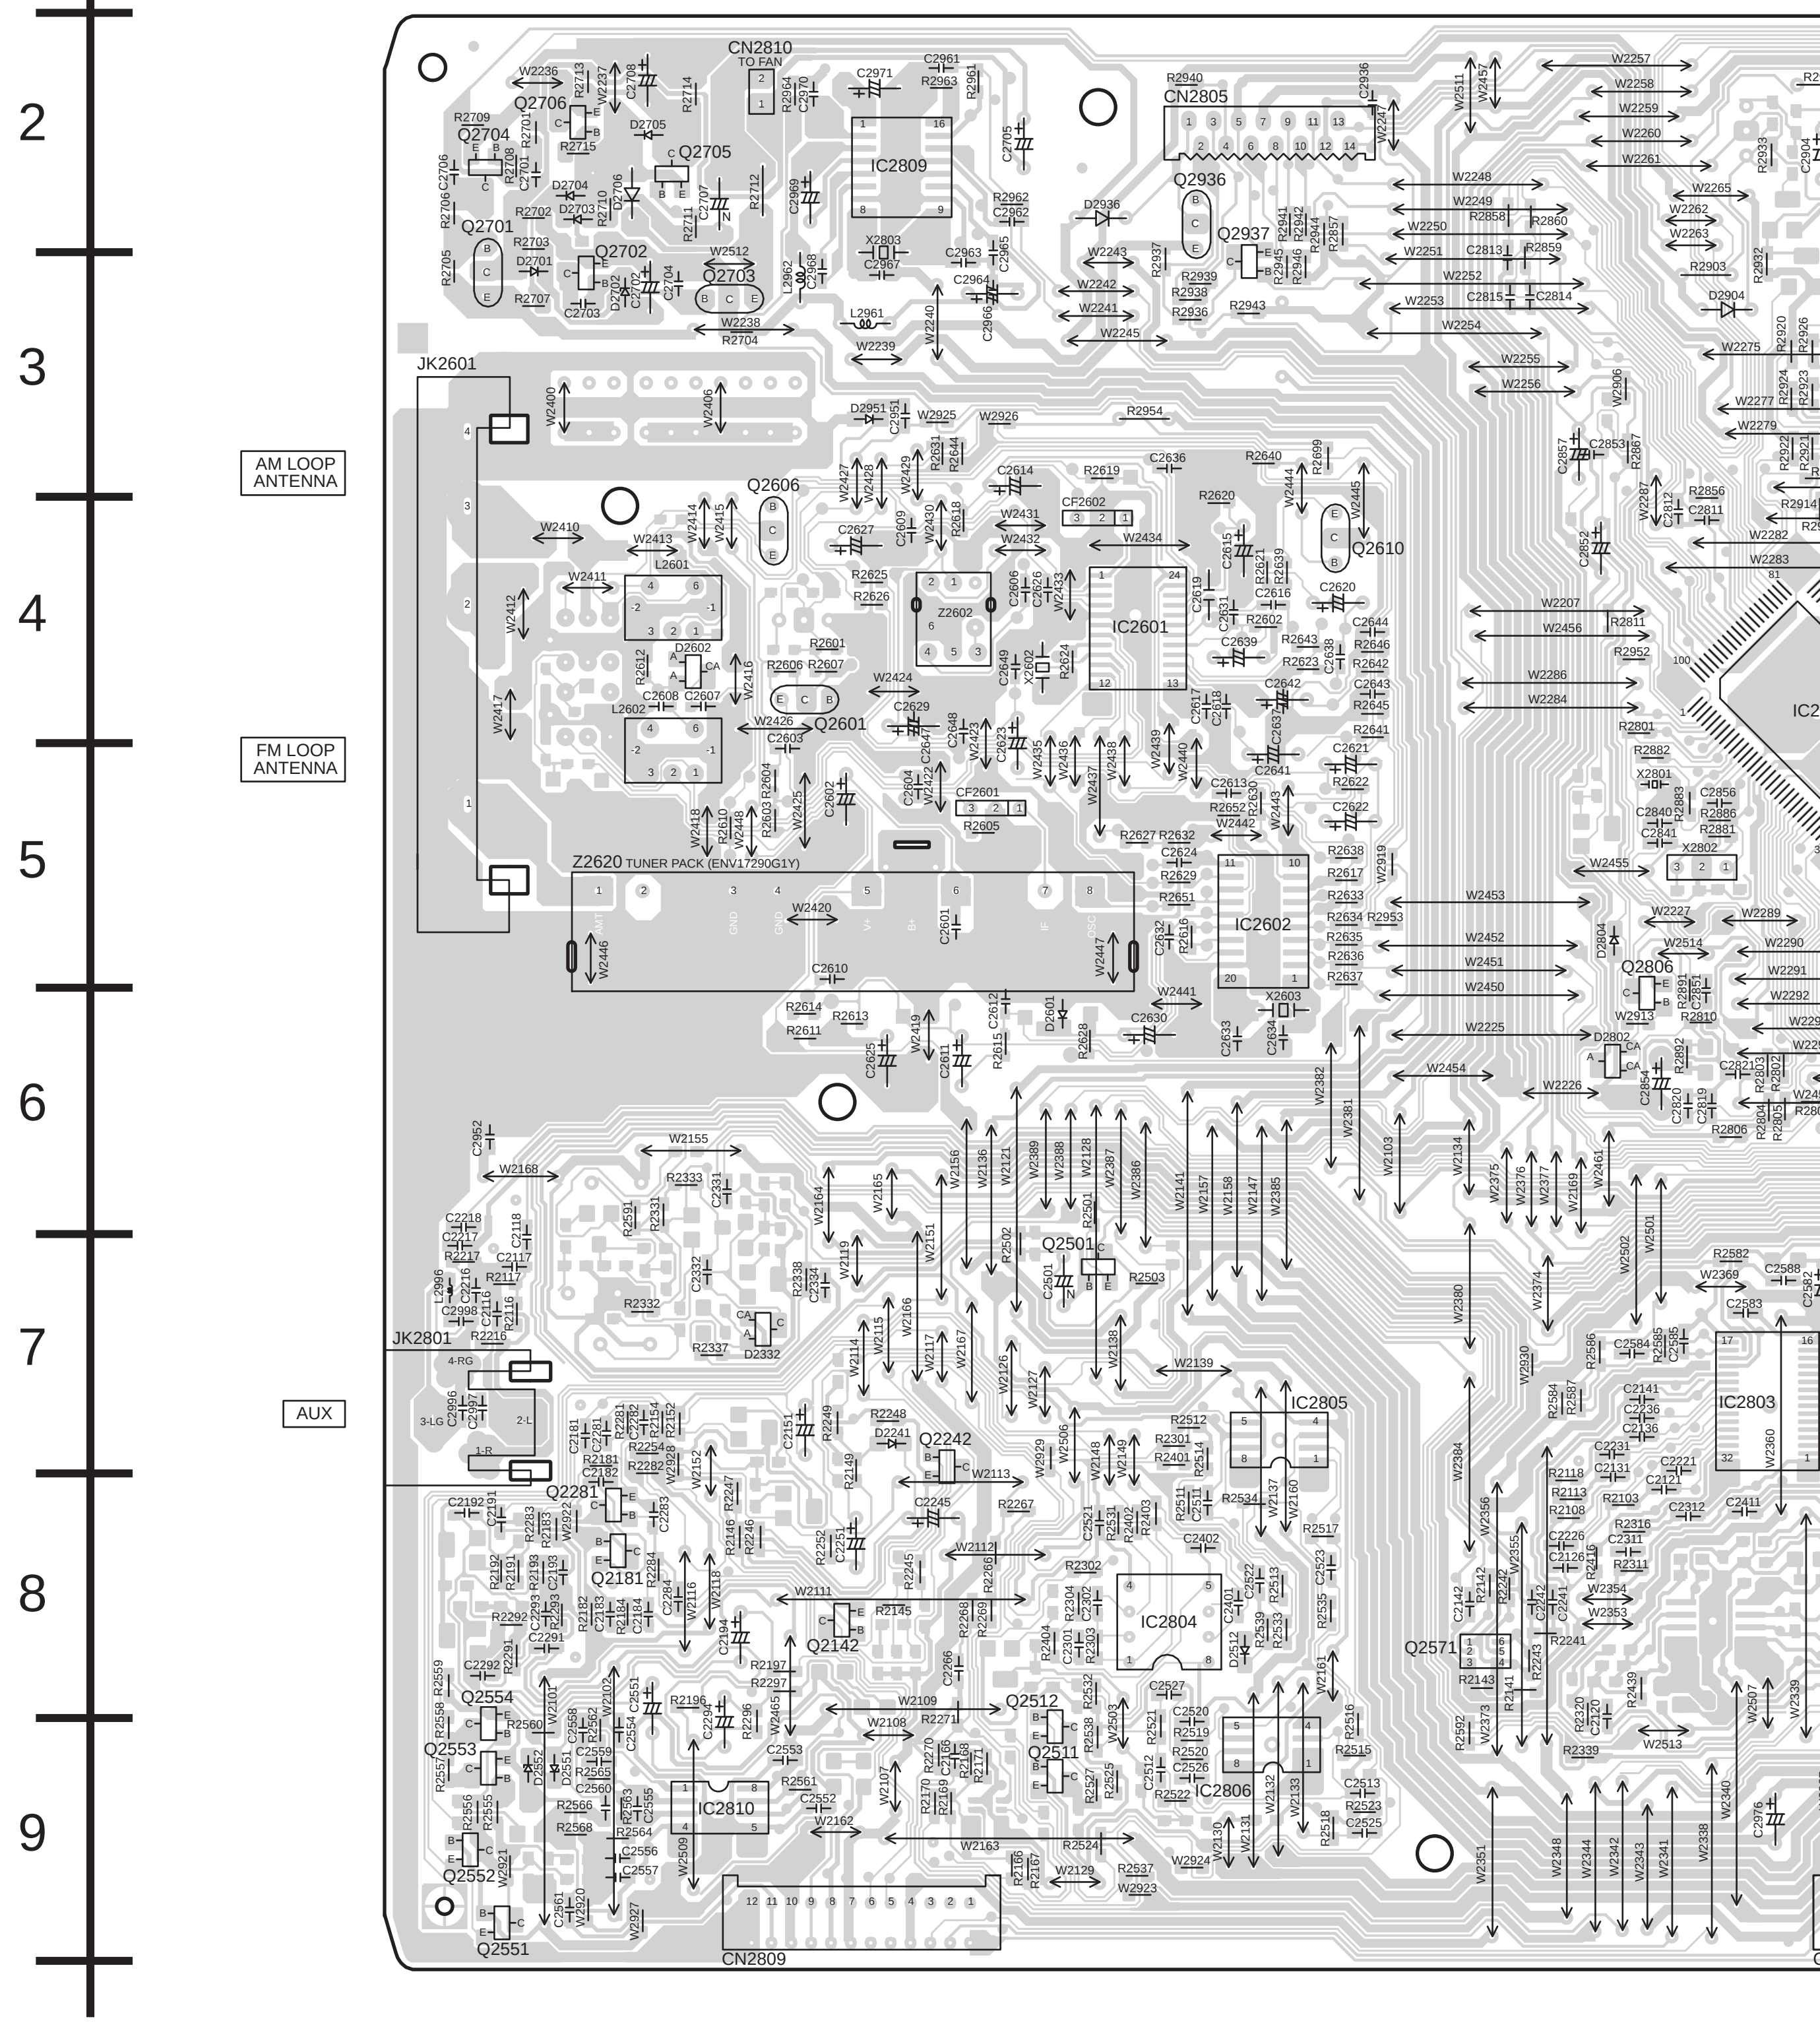
A
B
C
D
E
F
G
1
2
3
4
5
6
7
8
9
CN2810
TO FAN
IC2809
CN2805
Q2936
Q2937
Q2701
Q2702
Q2703
Q2704
Q2705
Q2706
JK2601
AM LOOP ANTENNA
FM LOOP ANTENNA
Q2606
L2601
L2602
D2602
Q2601
Z2602
CF2602
IC2601
Q2610
X2602
X2603
CF2601
Z2620 TUNER PACK (ENV17290G1Y)
AMT
GND
GND
V+
B+
IF
OSC
IC2602
Q2806
X2801
X2802
D2802
D2804
JK2801
AUX
4-RG
3-LG
2-L
1-R
Q2501
D2332
Q2242
Q2281
Q2181
Q2142
IC2805
IC2804
IC2803
Q2571
Q2554
Q2553
Q2552
Q2551
IC2810
Q2512
Q2511
IC2806
CN2809
D2241
D2601
D2904
D2936
D2951
X2803
L2961
L2962

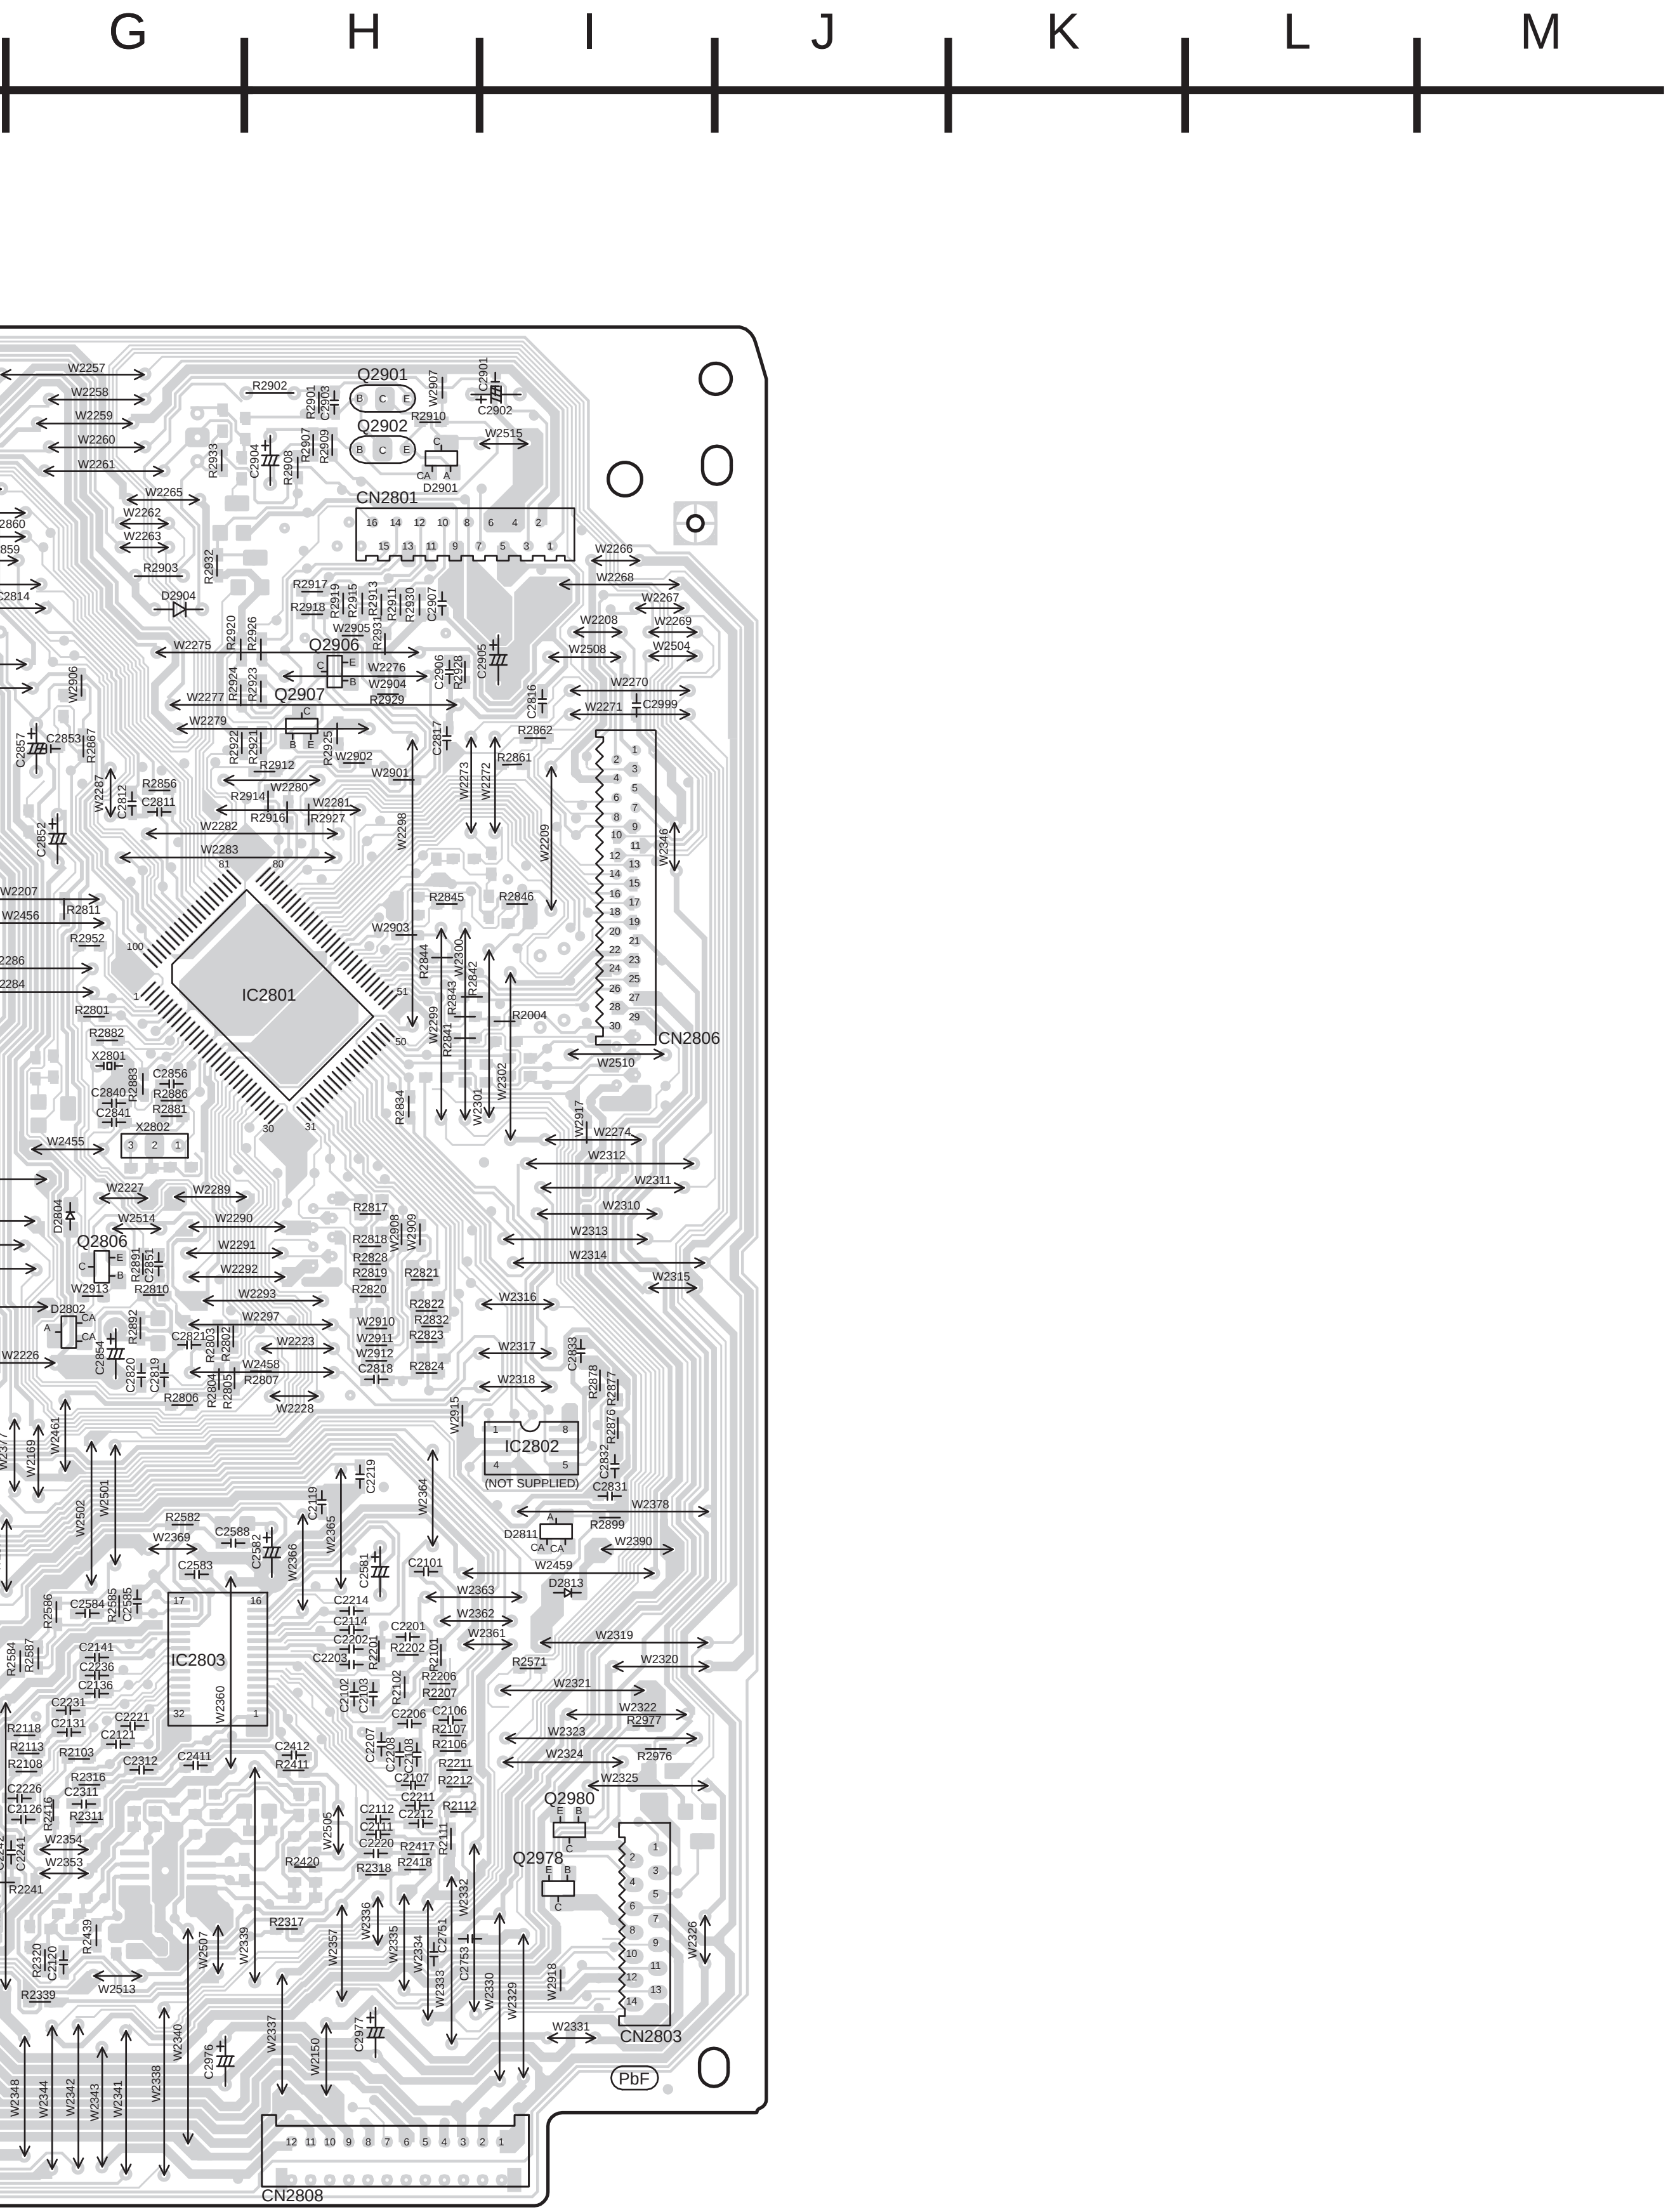
G
H
I
J
K
L
M
Q2901
Q2902
D2901
CN2801
D2904
Q2906
Q2907
CN2806
IC2801
X2801
X2802
D2804
Q2806
D2802
IC2802
(NOT SUPPLIED)
D2811
D2813
IC2803
Q2980
Q2978
CN2803
CN2808
PbF

C PANEL P.C.B (REPX0474D)

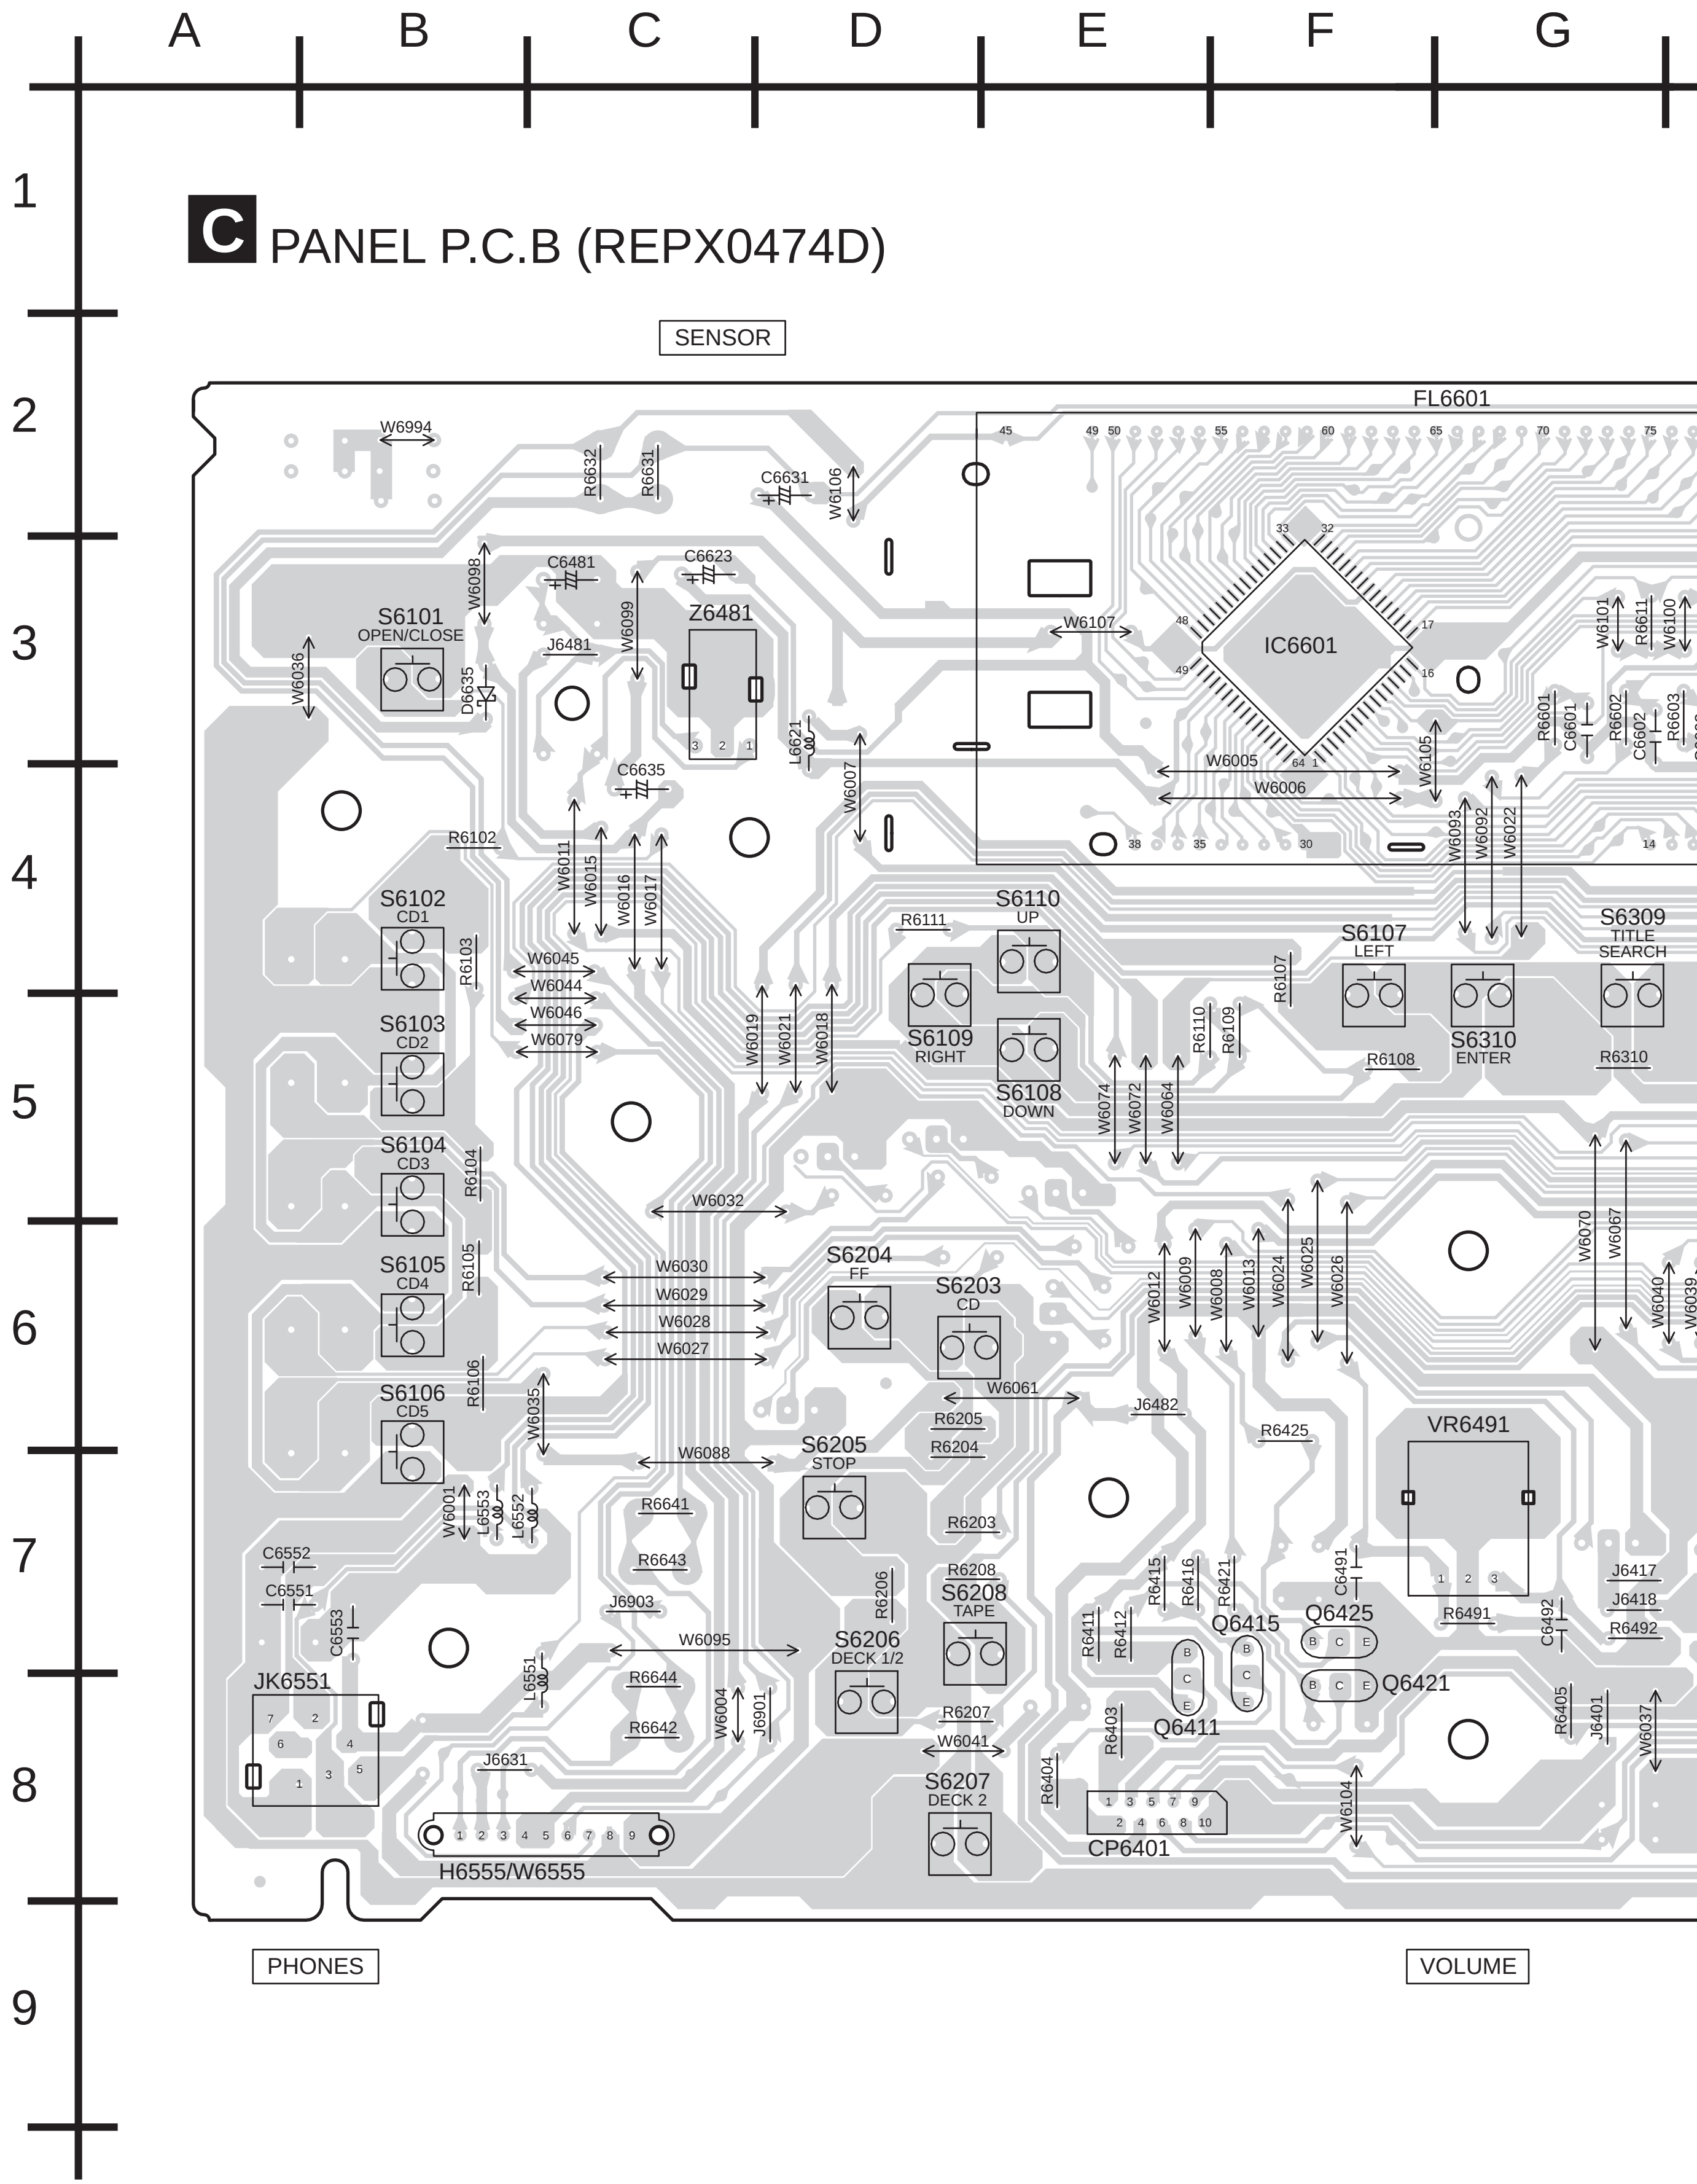
A
B
C
D
E
F
G
1
2
3
4
5
6
7
8
9
SENSOR
FL6601
W6994
R6632
R6631
C6631
W6106
C6481
C6623
W6098
W6099
Z6481
S6101
OPEN/CLOSE
J6481
W6036
D6635
L6621
W6107
IC6601
W6101
R6611
W6100
R6601
C6601
R6602
C6602
R6603
W6105
W6005
W6006
C6635
W6007
R6102
W6011
W6015
W6016
W6017
W6093
W6092
W6022
S6102
CD1
R6103
R6111
S6110
UP
S6107
LEFT
S6309
TITLE
SEARCH
W6045
W6044
W6046
W6079
S6109
RIGHT
S6108
DOWN
W6019
W6021
W6018
R6107
R6110
R6109
R6108
S6310
ENTER
R6310
S6103
CD2
W6074
W6072
W6064
S6104
CD3
R6104
W6032
W6070
W6067
S6105
CD4
R6105
W6030
W6029
W6028
W6027
S6204
FF
S6203
CD
W6012
W6009
W6008
W6013
W6024
W6025
W6026
W6040
W6039
S6106
CD5
R6106
W6035
W6061
J6482
R6205
R6204
R6425
VR6491
W6088
S6205
STOP
W6001
L6553
L6552
R6641
R6203
R6643
C6552
C6551
C6553
R6206
R6208
S6208
TAPE
R6415
R6416
R6421
C6491
J6417
J6418
J6903
Q6415
Q6425
R6491
C6492
R6492
R6411
R6412
B
C
E
W6095
S6206
DECK 1/2
L6551
JK6551
R6644
Q6421
Q6411
R6405
J6401
W6037
W6004
J6901
R6642
R6207
R6403
W6041
J6631
R6404
S6207
DECK 2
W6104
CP6401
H6555/W6555
PHONES
VOLUME

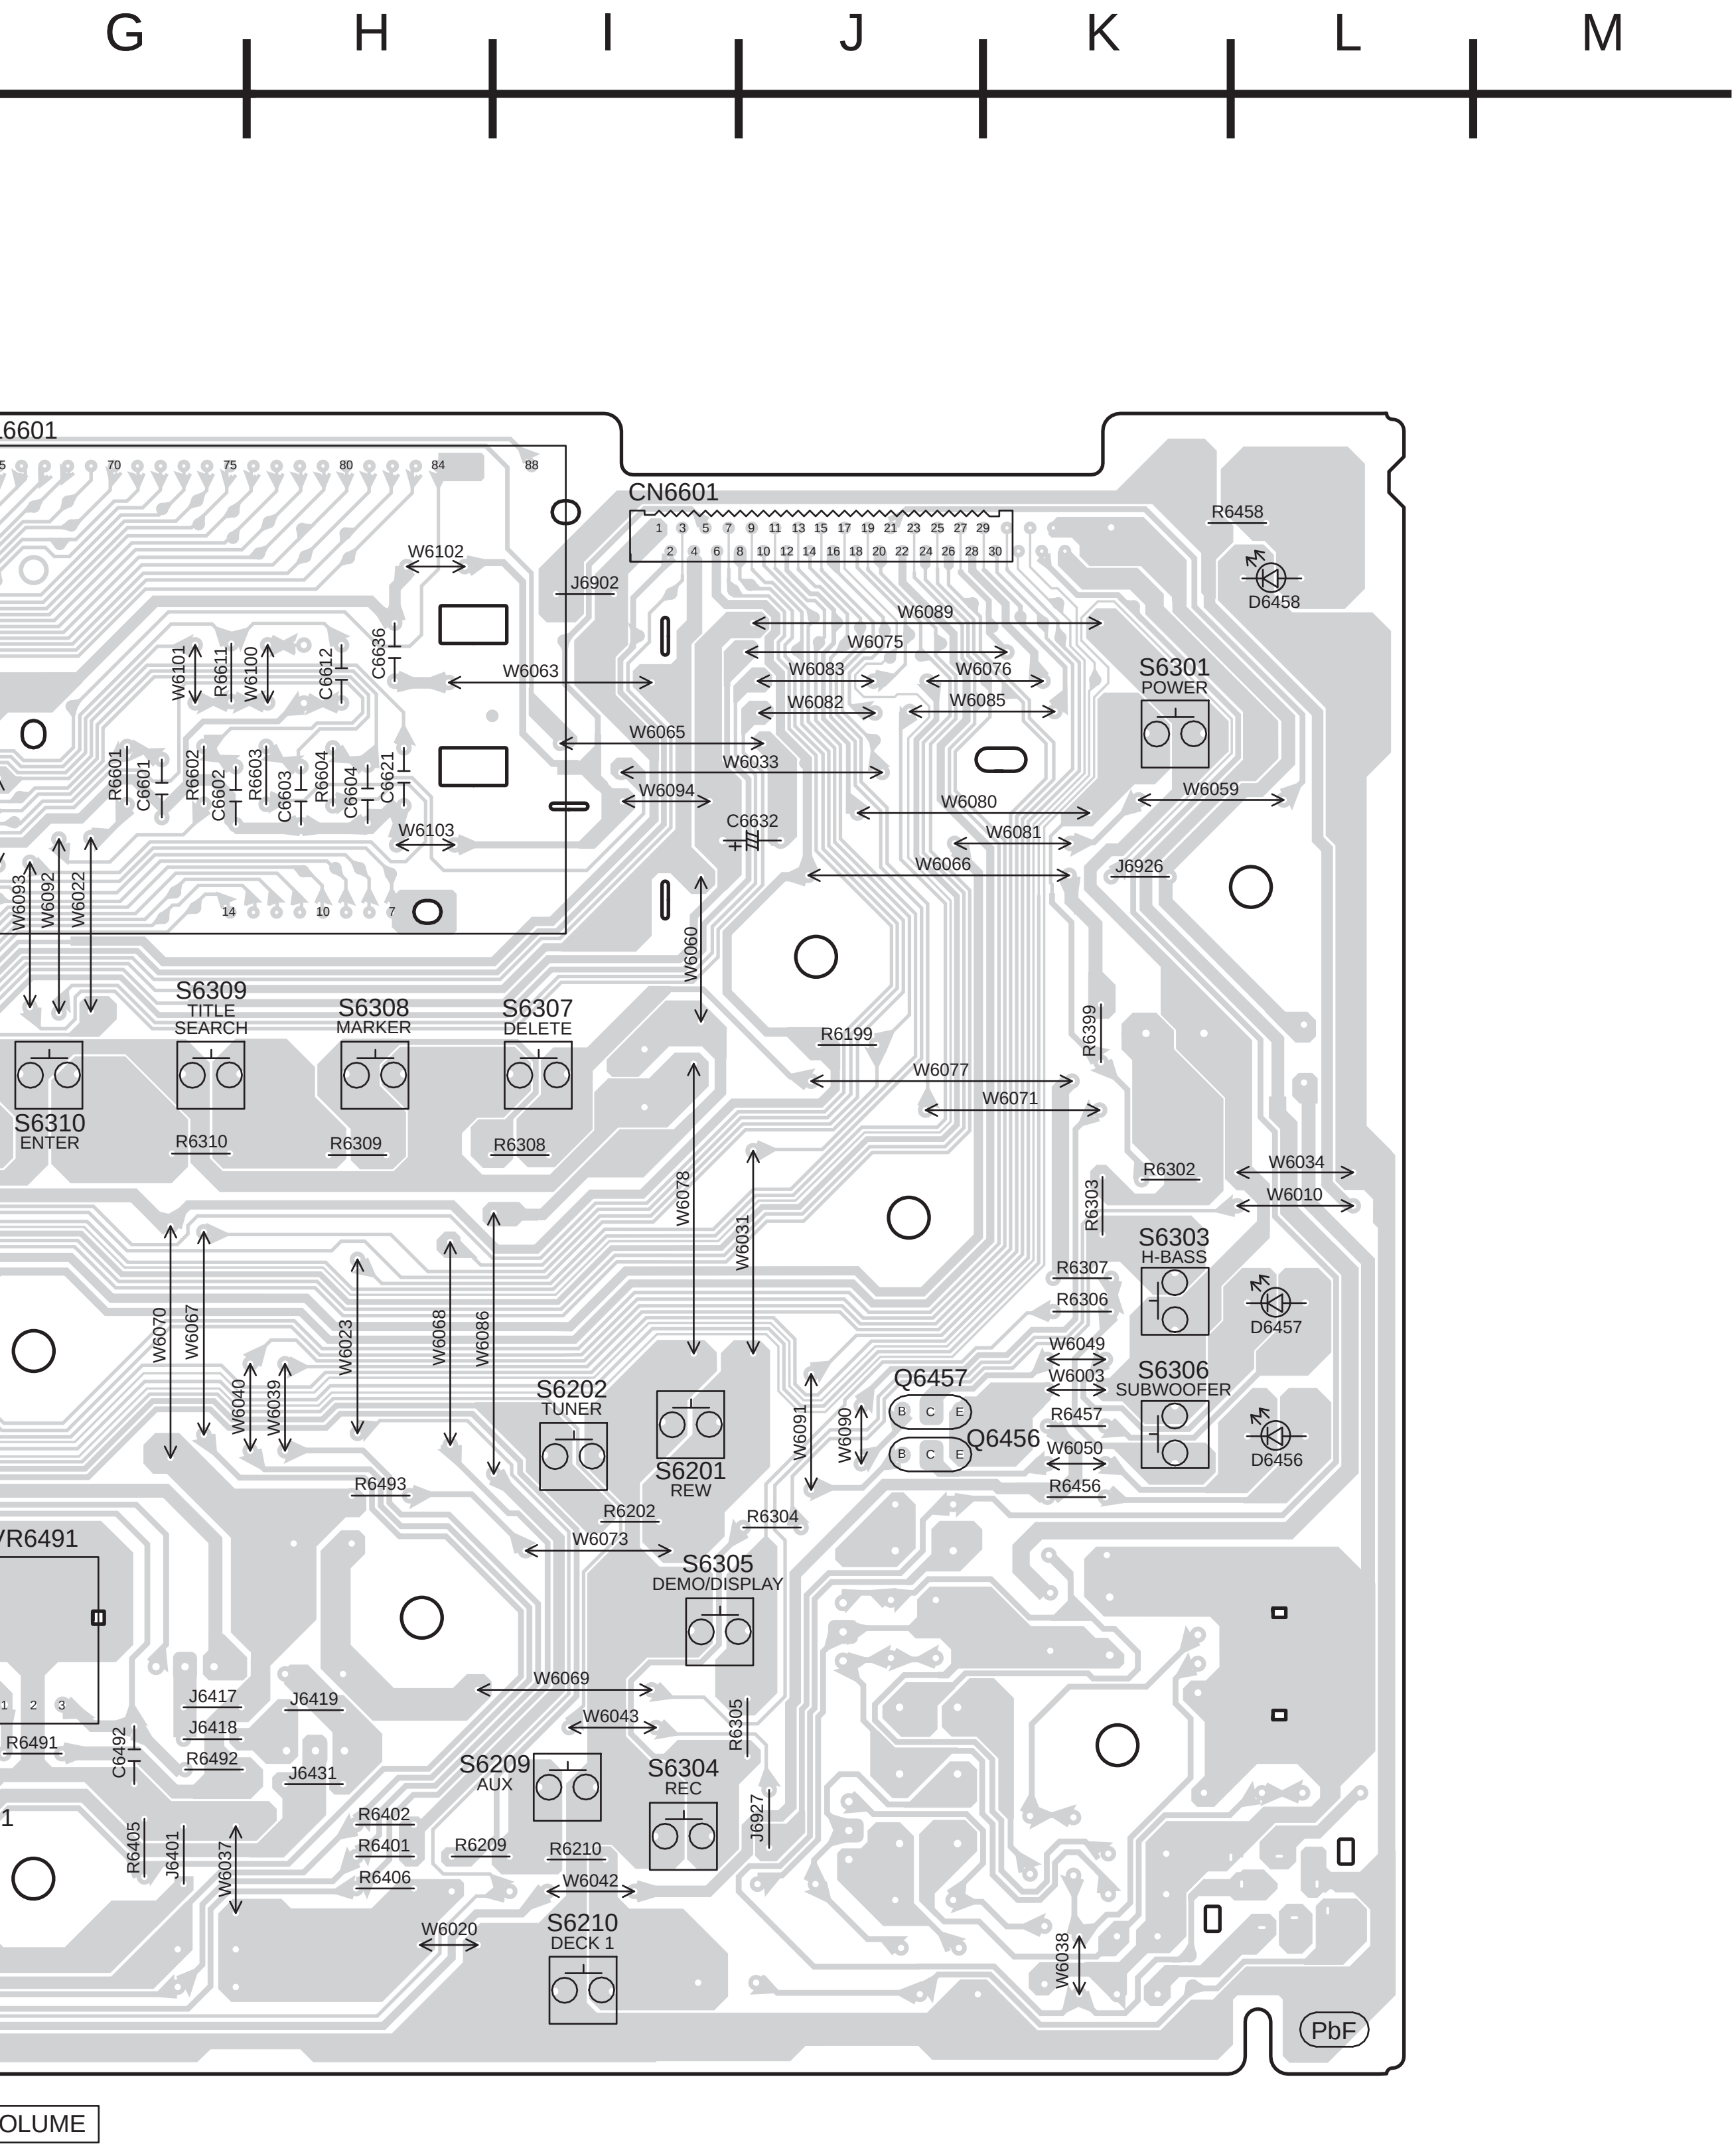
G
H
I
J
K
L
M
L6601
70
75
80
84
88
14
10
7
CN6601
1 3 5 7 9 11 13 15 17 19 21 23 25 27 29
2 4 6 8 10 12 14 16 18 20 22 24 26 28 30
W6102
J6902
C6636
W6101
R6611
W6100
C6612
W6063
R6601
C6601
R6602
C6602
R6603
C6603
R6604
C6604
C6621
W6103
W6093
W6092
W6022
W6089
W6075
W6083
W6076
W6082
W6085
W6065
W6033
W6094
C6632
W6080
W6081
W6066
W6060
R6458
D6458
S6301
POWER
W6059
J6926
S6309
TITLE
SEARCH
S6308
MARKER
S6307
DELETE
S6310
ENTER
R6310
R6309
R6308
R6199
W6077
W6071
R6399
R6303
R6302
W6034
W6010
W6078
W6031
S6303
H-BASS
R6307
R6306
D6457
W6049
W6003
S6306
SUBWOOFER
R6457
W6050
R6456
D6456
Q6457
Q6456
B C E
B C E
W6091
W6090
W6070
W6067
W6040
W6039
W6023
W6068
W6086
S6202
TUNER
S6201
REW
R6493
R6202
R6304
W6073
S6305
DEMO/DISPLAY
VR6491
1 2 3
R6491
C6492
J6417
J6418
R6492
J6419
J6431
W6069
W6043
R6305
S6209
AUX
S6304
REC
J6927
R6402
R6401
R6406
R6209
R6210
W6042
R6405
J6401
W6037
W6020
S6210
DECK 1
W6038
PbF
1
OLUME

H POWER P.C.B (REPX0447B)

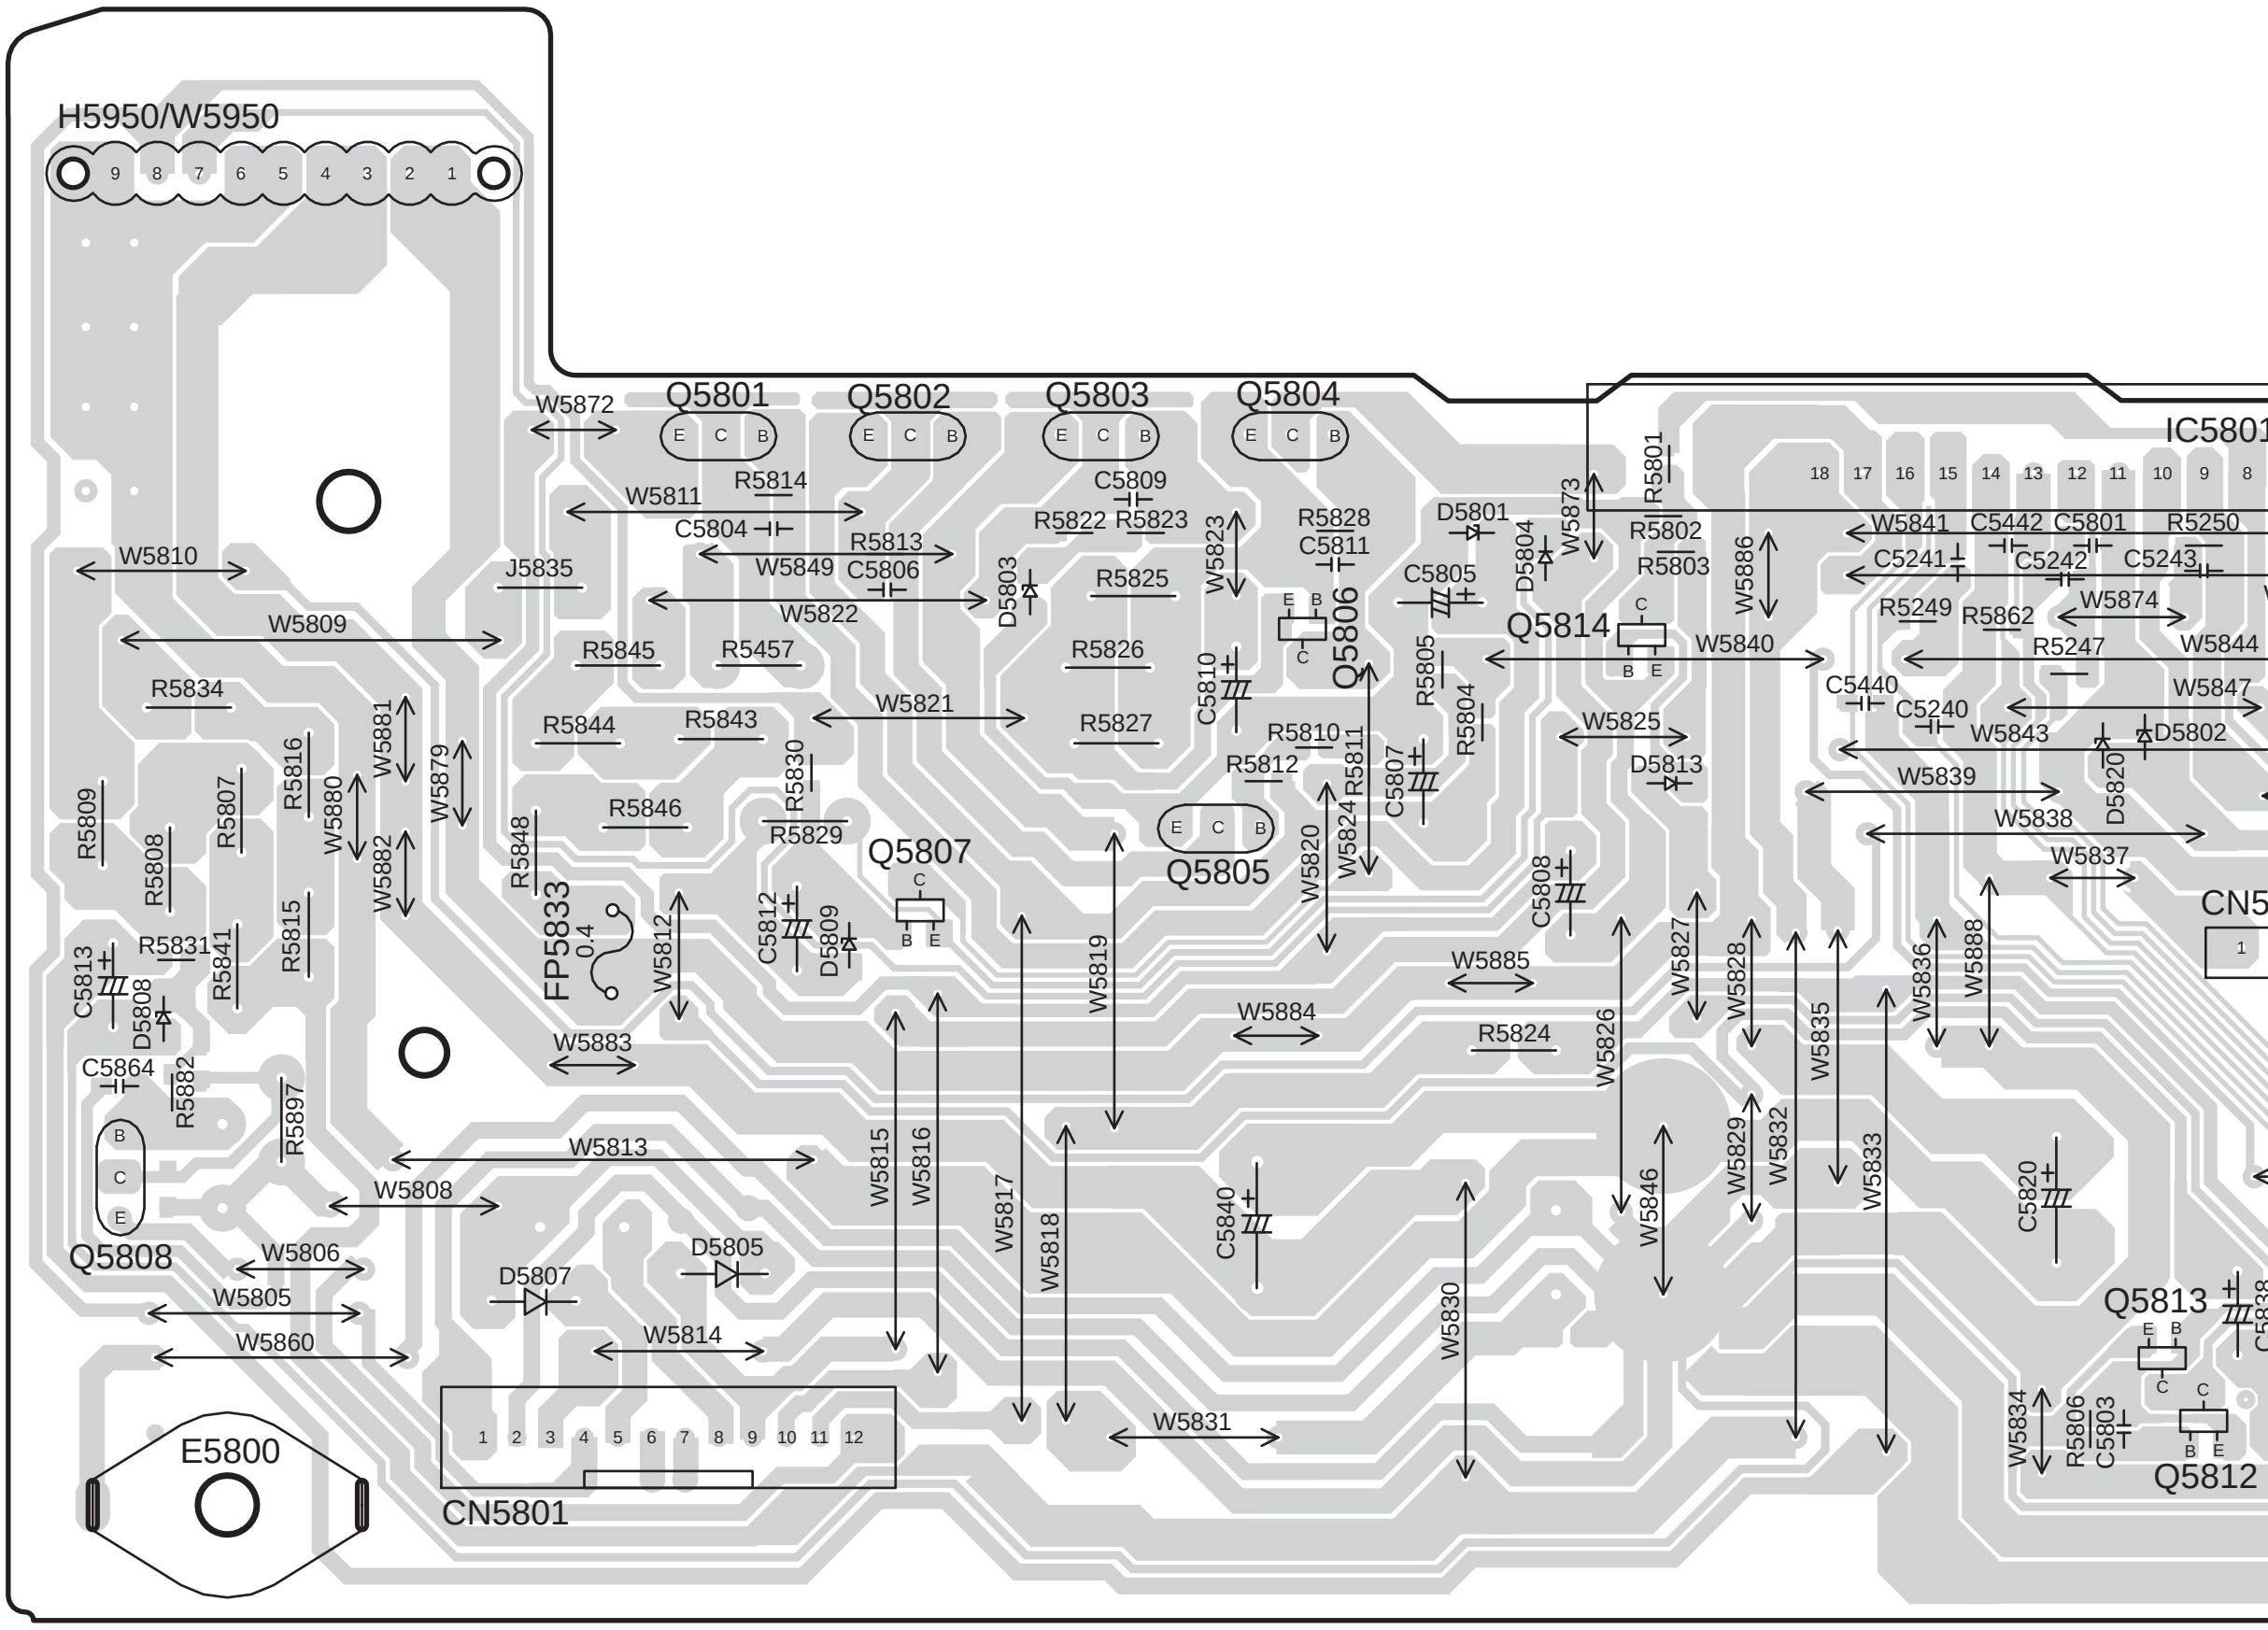
A B C D E F G
1 2 3 4 5 6
H5950/W5950
9 8 7 6 5 4 3 2 1
W5872
Q5801
Q5802
Q5803
Q5804
IC5801
E C B
R5814
W5811
C5804
W5849
R5813
C5806
W5822
C5809
R5822
R5823
D5803
R5825
R5826
R5827
R5828
C5811
D5801
D5804
W5873
R5801
R5802
R5803
W5823
C5805
Q5806
Q5814
W5886
W5840
W5841
C5442
C5801
R5250
C5241
C5242
C5243
R5249
R5862
W5874
R5247
W5844
C5440
C5240
W5847
W5843
D5802
D5820
W5839
W5838
W5837
W5810
J5835
W5809
R5845
R5457
W5821
R5834
R5844
R5843
C5810
R5810
R5812
R5811
R5805
R5804
C5807
W5825
D5813
R5809
R5808
R5807
R5816
W5881
W5880
W5879
W5882
R5846
R5830
R5829
R5848
Q5807
Q5805
W5820
W5824
C5808
FP5833
0.4
W5812
C5812
D5809
W5819
W5885
W5884
R5824
W5827
W5828
W5826
W5835
W5836
W5888
CN5
R5831
R5841
R5815
C5813
D5808
C5864
R5882
R5897
W5883
W5813
W5815
W5816
W5817
W5818
C5840
W5846
W5829
W5832
W5833
C5820
Q5808
B C E
W5808
W5806
W5805
W5860
D5807
D5805
W5814
W5830
Q5813
W5834
R5806
C5803
Q5812
W5831
E5800
1 2 3 4 5 6 7 8 9 10 11 12
CN5801

L SUB-POWER P.C.B (REPX0447B)

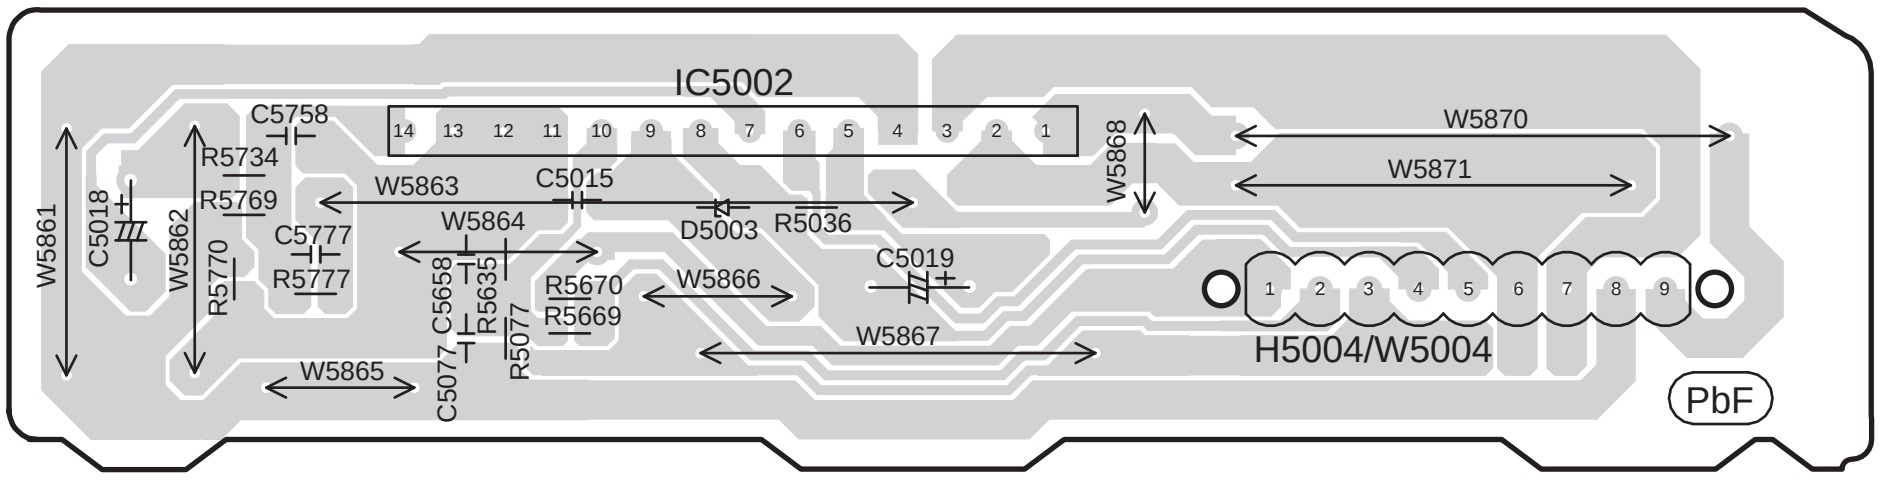
7 8 9
IC5002
14 13 12 11 10 9 8 7 6 5 4 3 2 1
C5758
R5734
R5769
W5868
W5870
W5871
W5863
C5015
D5003
R5036
W5864
C5777
R5777
C5018
W5861
W5862
R5770
C5658
R5635
R5077
C5077
R5670
R5669
W5866
C5019
W5867
W5865
1 2 3 4 5 6 7 8 9
H5004/W5004
PbF

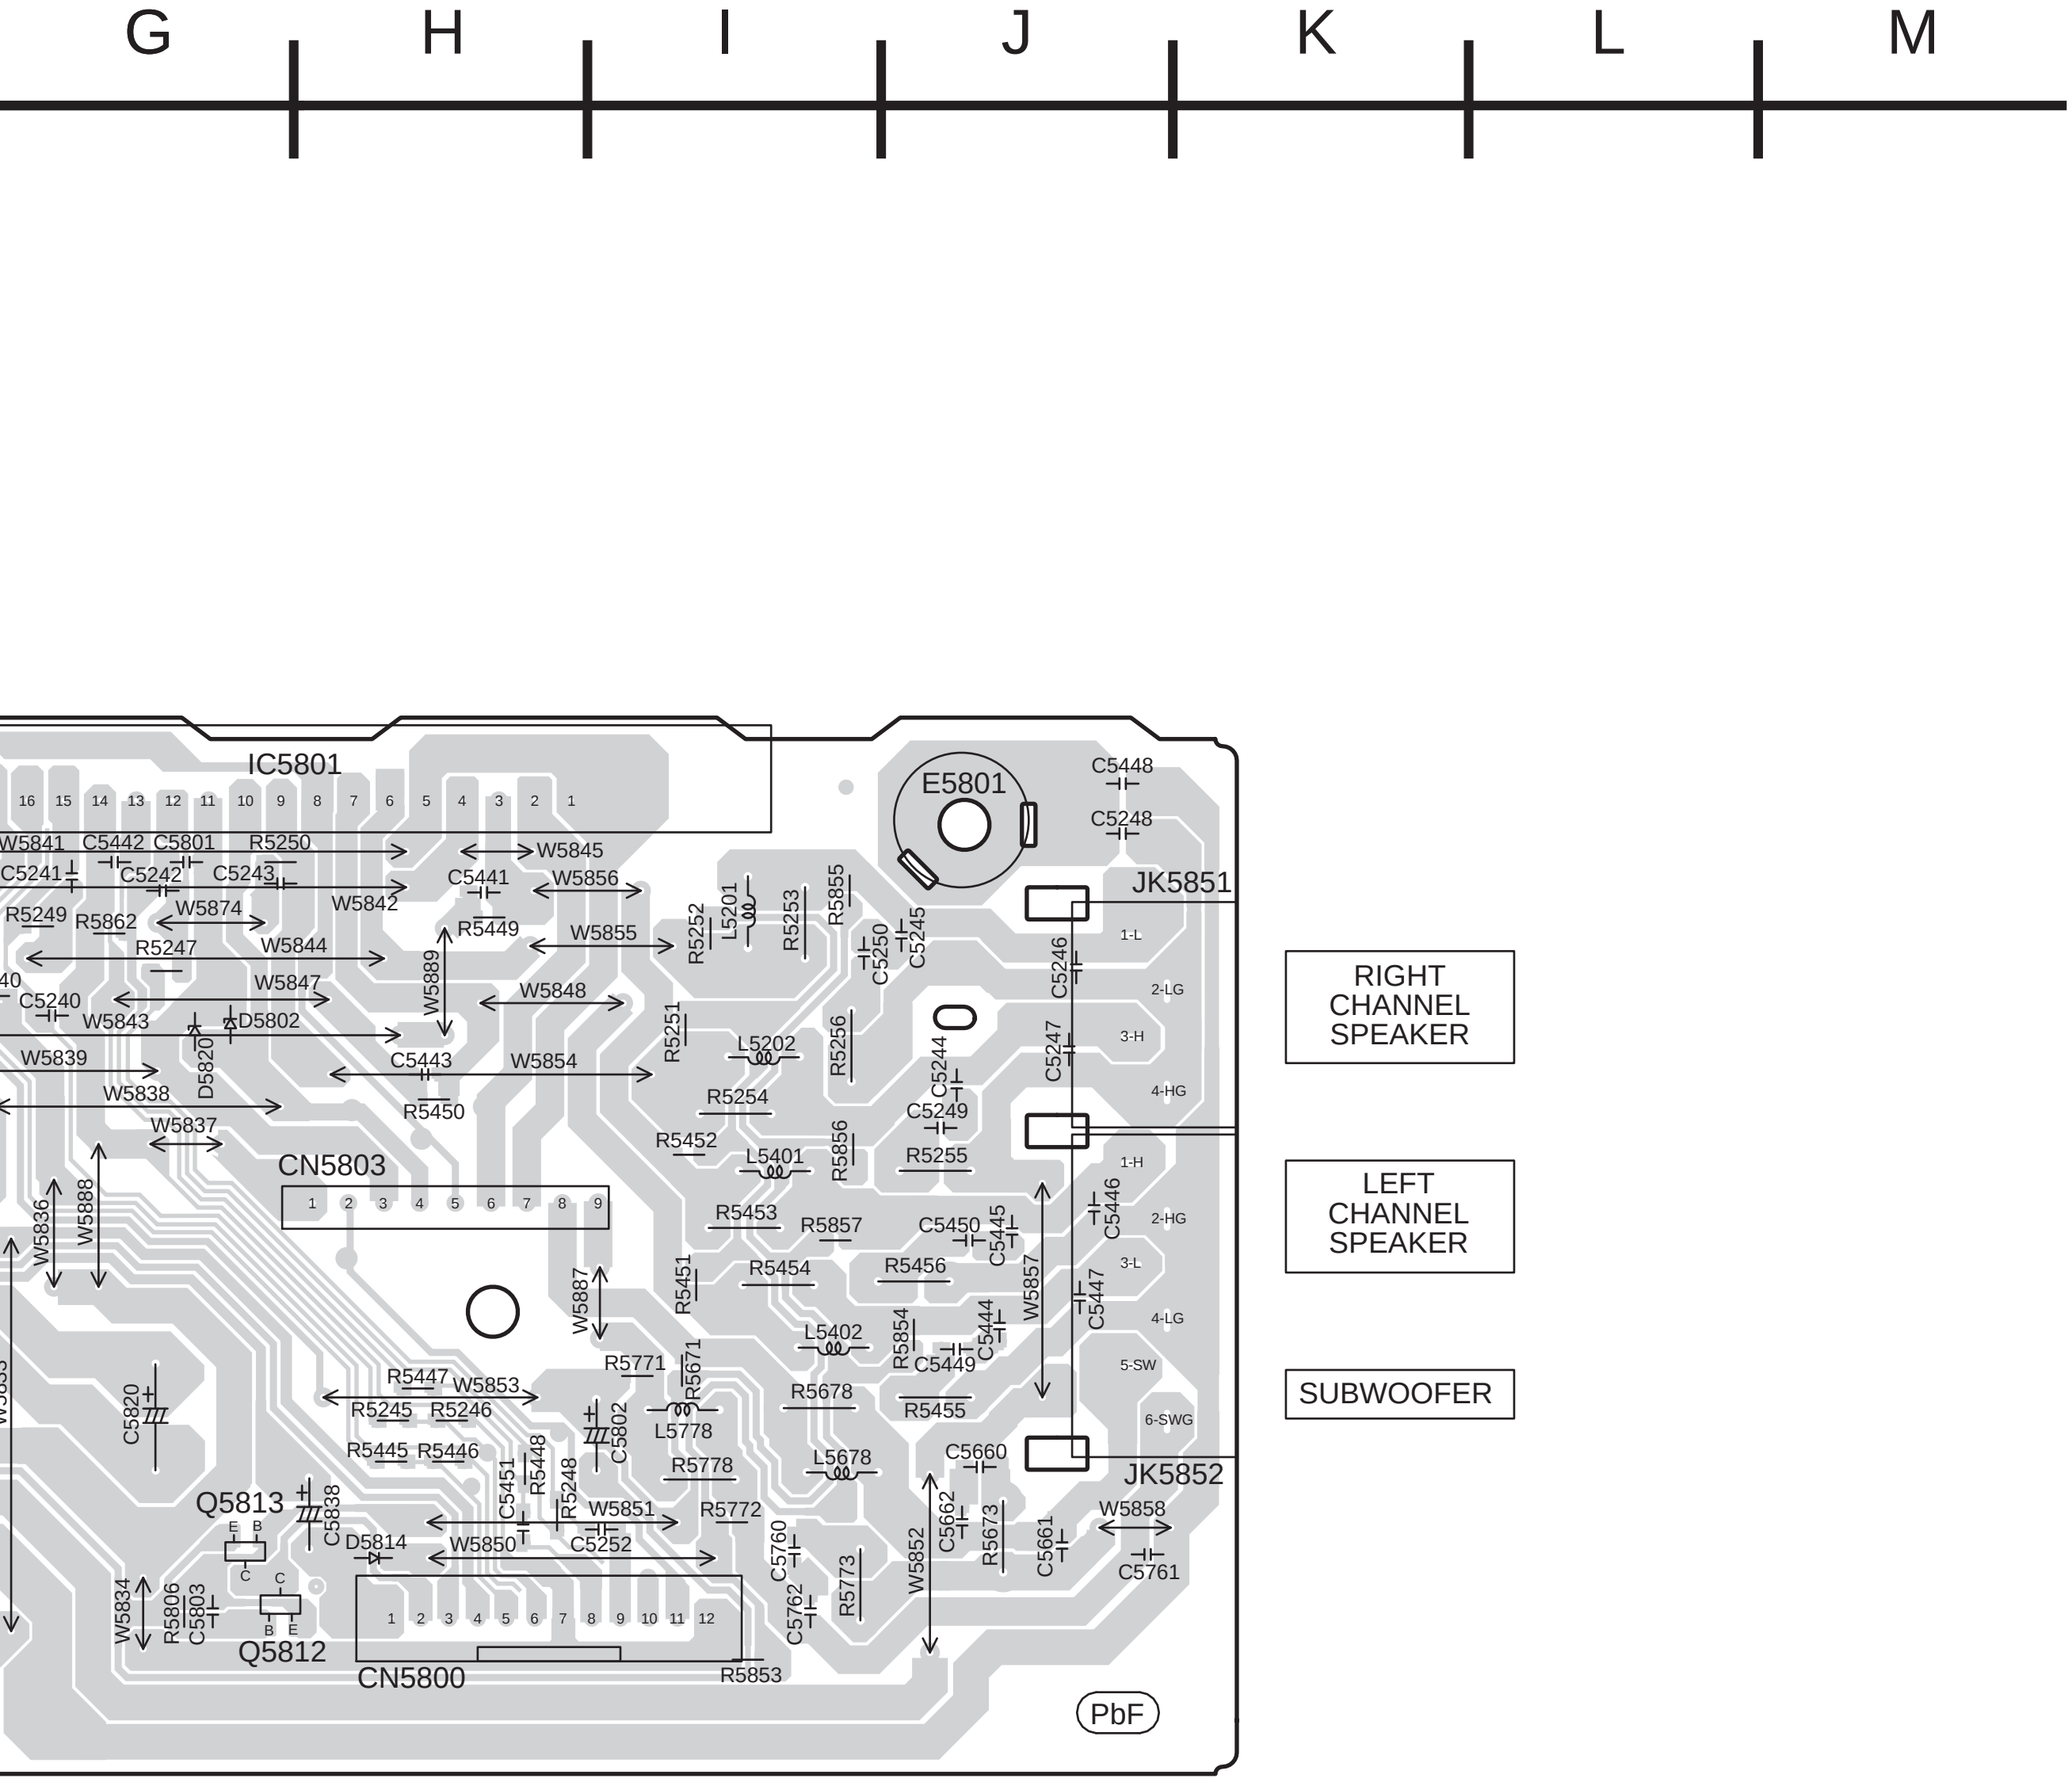
G
H
I
J
K
L
M
IC5801
E5801
C5448
C5248
JK5851
JK5852
RIGHT CHANNEL SPEAKER
LEFT CHANNEL SPEAKER
SUBWOOFER
1-L
2-LG
3-H
4-HG
1-H
2-HG
3-L
4-LG
5-SW
6-SWG
W5841
C5442
C5801
R5250
W5845
C5241
C5242
C5243
C5441
W5856
W5842
R5249
R5862
W5874
R5449
W5855
R5247
W5844
W5847
W5848
W5889
C5240
W5843
D5802
D5820
W5839
C5443
W5854
W5838
R5450
W5837
CN5803
W5836
W5888
R5252
L5201
R5253
R5855
C5250
C5245
C5246
R5251
L5202
R5256
C5244
C5247
R5254
C5249
R5452
L5401
R5856
R5255
R5453
R5857
C5450
C5445
C5446
R5454
R5456
W5857
W5887
R5451
C5447
L5402
R5854
C5444
C5449
R5771
R5671
R5678
R5447
W5853
R5245
R5246
L5778
C5802
R5455
C5820
R5445
R5446
C5451
R5448
R5248
R5778
L5678
C5660
Q5813
C5838
W5851
R5772
C5662
R5673
W5858
D5814
W5850
C5252
C5760
W5852
C5661
C5761
R5773
W5834
R5806
C5803
C5762
Q5812
CN5800
R5853
PbF

A
B
C
D
E
F
G
1
2
3
4
5
6
7
8
9

A CD SERVO P.C.B (REPX0443A)

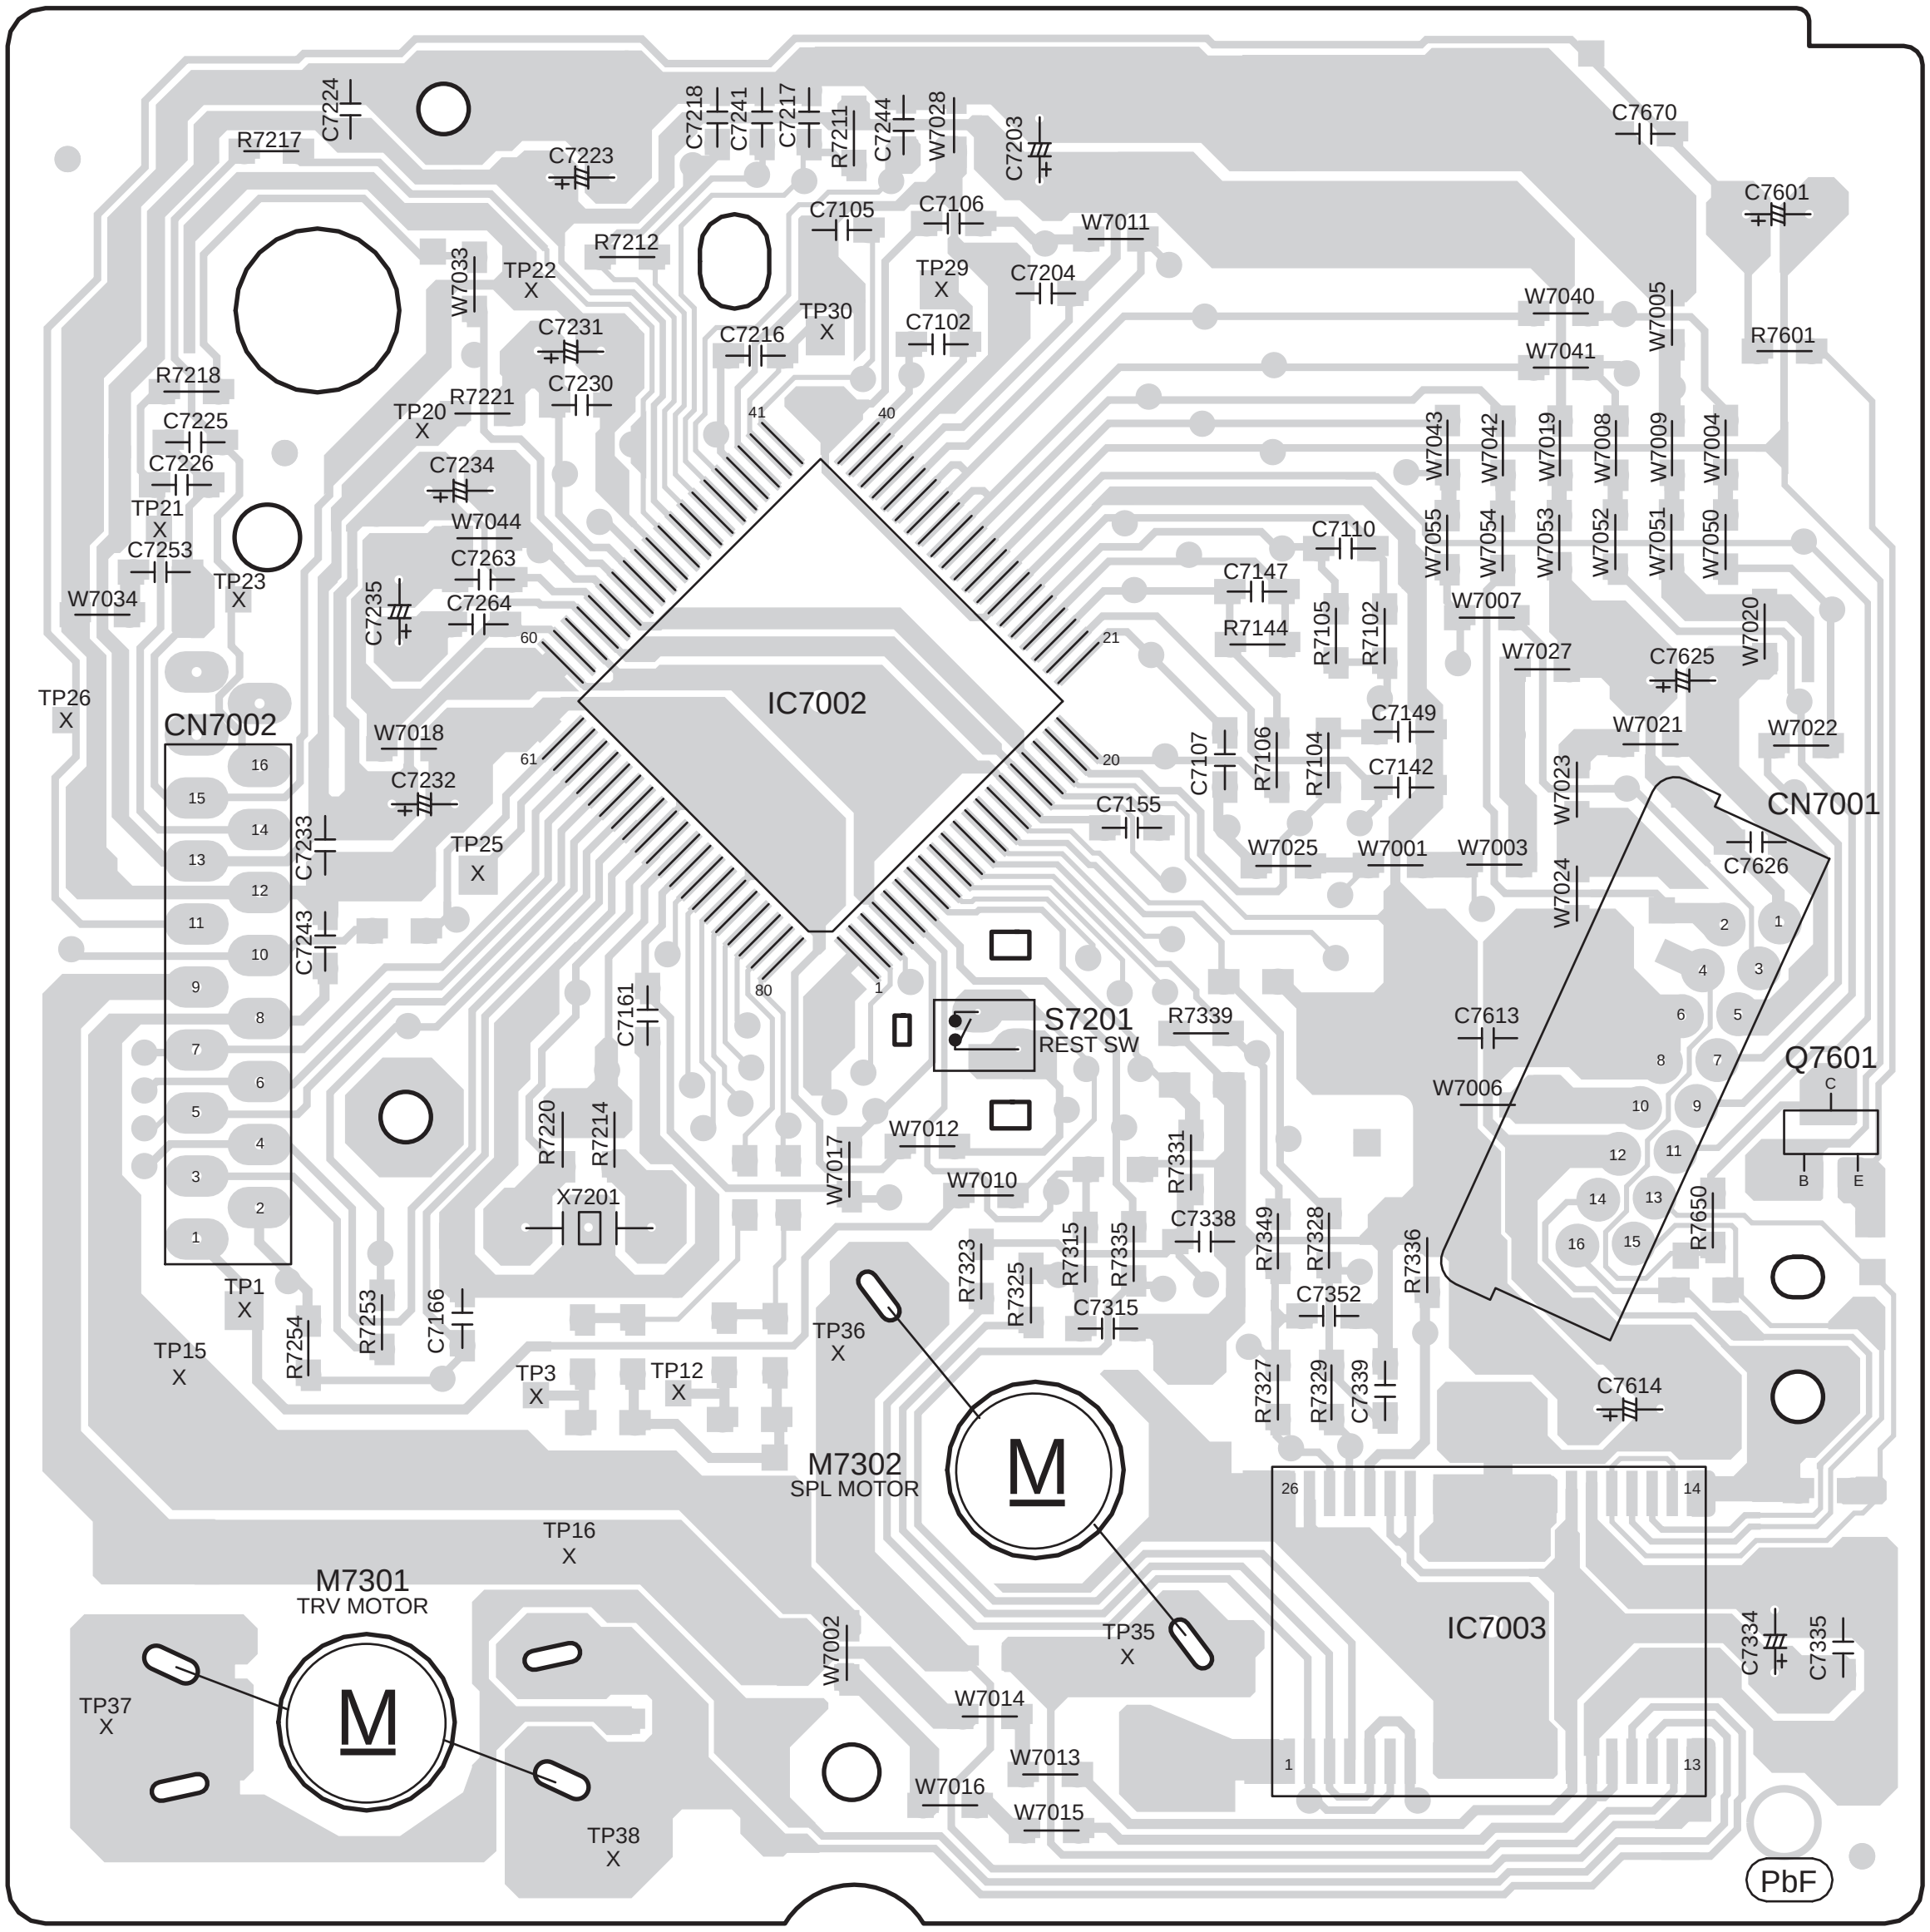
C7224
R7217
C7223
C7218
C7241
C7217
R7211
C7244
W7028
C7203
C7670
C7601
R7212
W7033
TP22
X
C7105
C7106
W7011
TP29
X
C7204
C7231
C7216
TP30
X
C7102
W7040
W7005
R7601
W7041
R7218
C7230
R7221
TP20
X
41
40
C7225
C7226
C7234
W7043
W7042
W7019
W7008
W7009
W7004
TP21
X
W7044
C7110
W7055
W7054
W7053
W7052
W7051
W7050
C7253
C7263
TP23
X
C7147
W7034
C7235
C7264
R7144
R7105
R7102
W7007
60
21
W7027
C7625
W7020
TP26
X
IC7002
C7149
CN7002
W7018
C7107
R7106
R7104
C7142
W7021
W7022
61
20
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1
C7232
W7023
CN7001
C7233
C7155
TP25
X
W7025
W7001
W7003
C7626
W7024
C7243
80
1
S7201
REST SW
R7339
C7161
C7613
Q7601
C
B
E
W7006
R7220
R7214
W7012
W7017
W7010
R7331
X7201
R7650
C7338
R7349
R7328
R7315
R7335
TP1
X
R7323
R7325
R7336
C7352
C7166
TP36
X
C7315
R7254
R7253
TP15
X
TP3
X
TP12
X
R7327
R7329
C7339
C7614
M
M7302
SPL MOTOR
26
14
TP16
X
M7301
TRV MOTOR
IC7003
C7334
C7335
TP35
X
W7002
W7014
TP37
X
M
W7013
1
13
W7016
W7015
TP38
X
PbF

A B C D E F G

1

D TRANSFORMER P.C.B (REPX0468F)

2

CAUTION
RISK OF ELECTRIC SHOCK
AC VOLTAGE LINE.
PLEASE DO NOT TOUCH THIS P.C.B

3

4

5

6

7

8

9

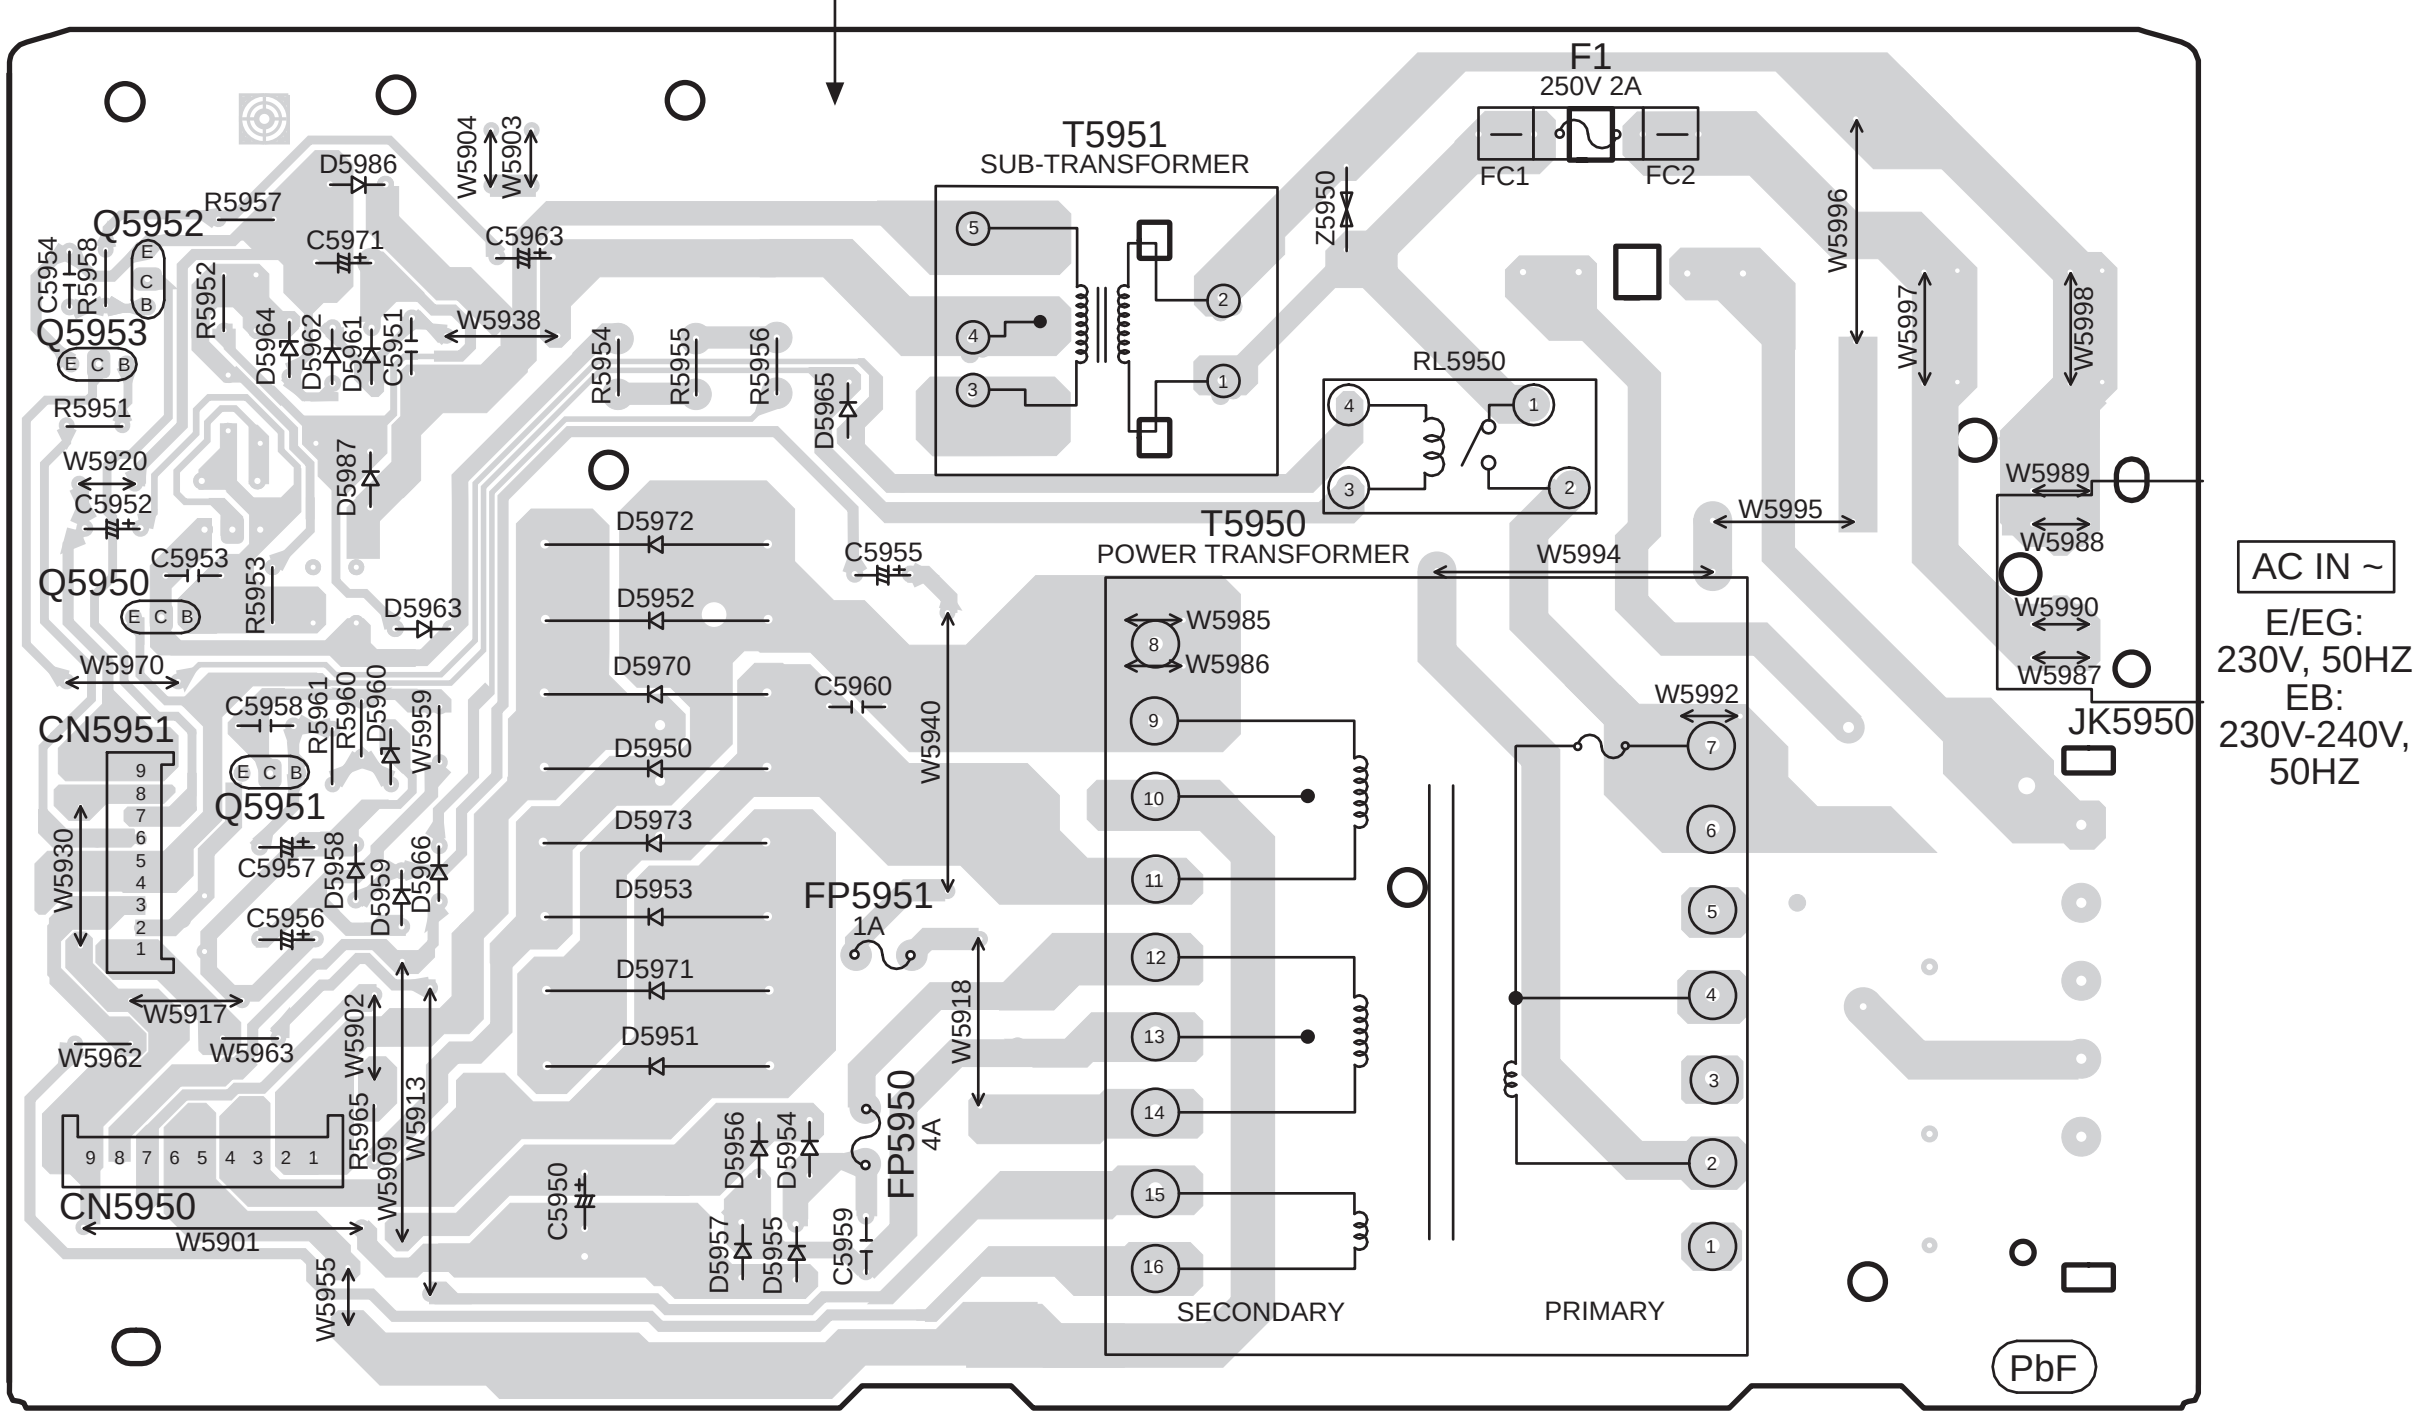
F1
250V 2A
FC1
FC2
T5951
SUB-TRANSFORMER
Z5950
W5996
W5997
W5998
RL5950
T5950
POWER TRANSFORMER
W5994
W5995
W5989
W5988
W5990
W5987
AC IN ~
E/EG:
230V, 50HZ
EB:
230V-240V,
50HZ
JK5950
W5985
W5986
W5992
SECONDARY
PRIMARY
PbF
D5986
W5904
W5903
R5957
Q5952
C5954
R5958
C5971
C5963
R5952
Q5953
D5964
D5962
D5961
C5951
W5938
R5954
R5955
R5956
D5965
R5951
W5920
C5952
D5987
C5953
Q5950
R5953
D5963
D5972
D5952
D5970
D5950
D5973
D5953
D5971
D5951
C5955
C5960
W5940
FP5951
1A
W5918
FP5950
4A
W5970
CN5951
C5958
R5961
R5960
D5960
W5959
Q5951
W5930
C5957
D5958
D5959
D5966
C5956
W5917
W5962
W5963
W5902
W5913
R5965
W5909
CN5950
W5901
W5955
C5950
D5956
D5954
D5957
D5955
C5959
E C B

SCHEMATIC DIAGRAM - 1

—— : +B SIGNAL LINE ▨ : CD-DA SIGNAL LINE

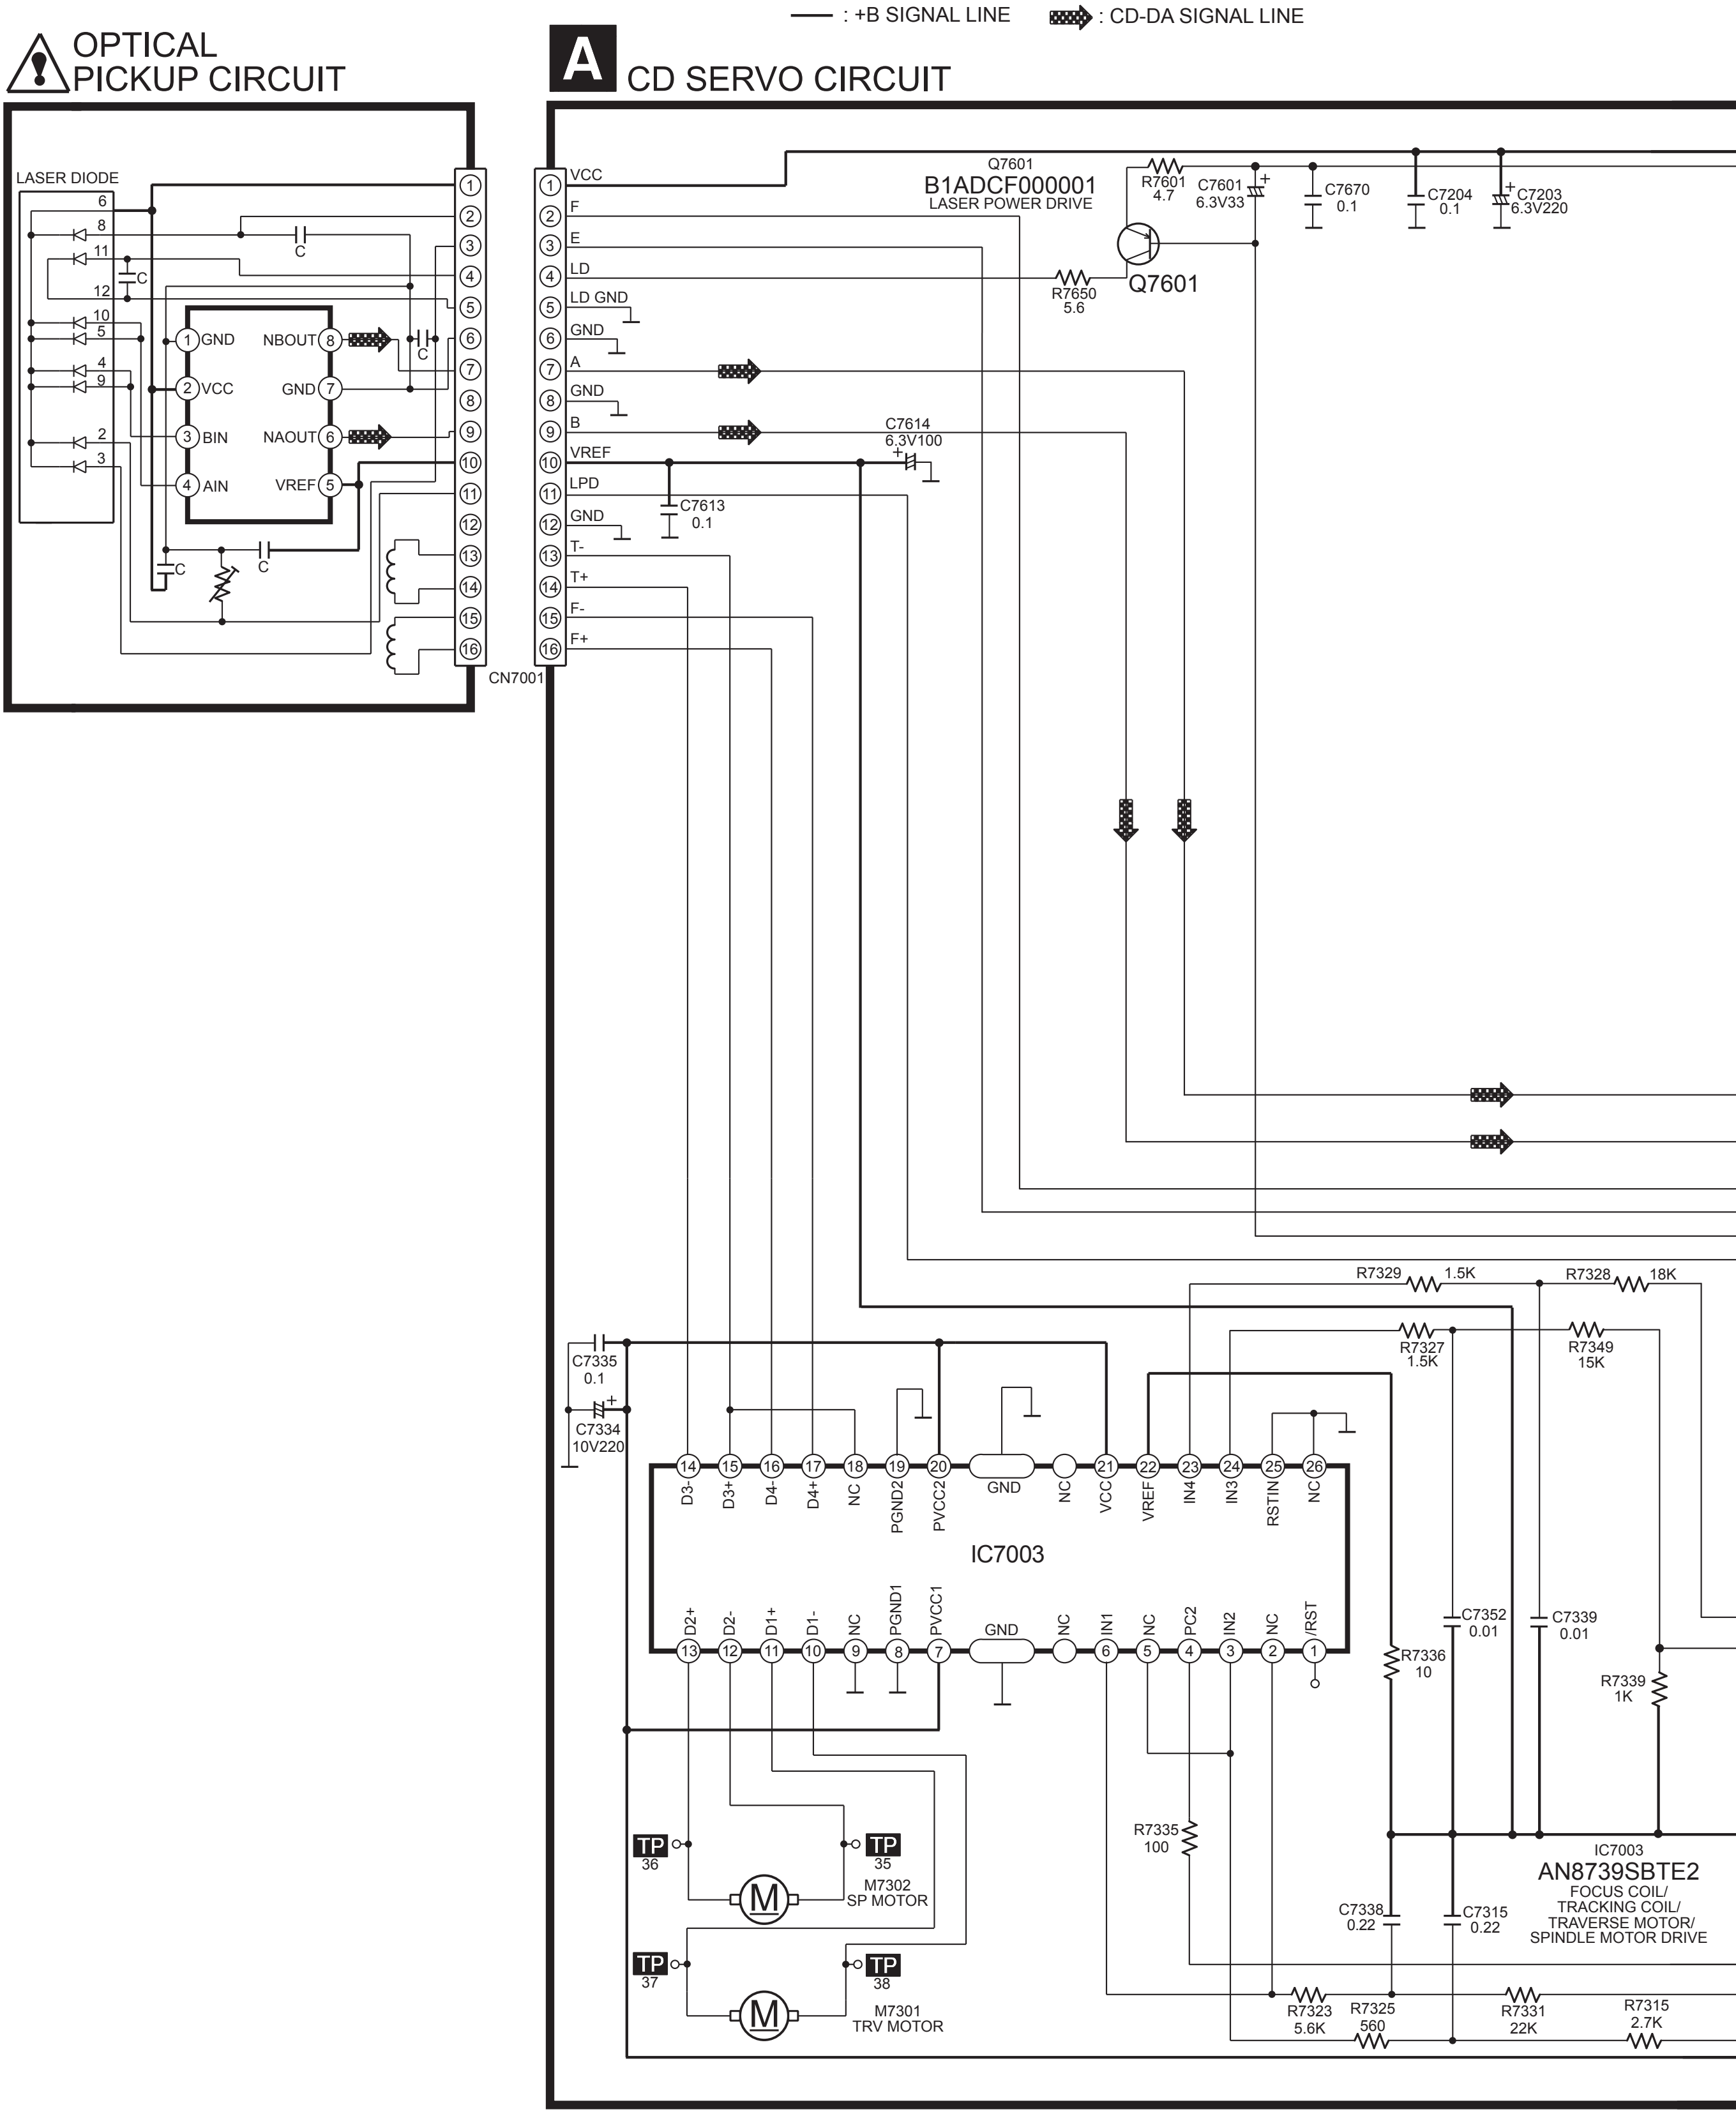
OPTICAL PICKUP CIRCUIT
A
CD SERVO CIRCUIT
LASER DIODE
6
8
11
12
10
5
4
9
2
3
C
C
C
C
C
1 GND
2 VCC
3 BIN
4 AIN
NBOUT 8
GND 7
NAOUT 6
VREF 5
CN7001
VCC
F
E
LD
LD GND
GND
A
GND
B
VREF
LPD
GND
T-
T+
F-
F+
Q7601
B1ADCF000001
LASER POWER DRIVE
R7601
4.7
C7601
6.3V33
C7670
0.1
C7204
0.1
C7203
6.3V220
R7650
5.6
Q7601
C7614
6.3V100
C7613
0.1
R7329
1.5K
R7328
18K
R7327
1.5K
R7349
15K
C7335
0.1
C7334
10V220
D3-
D3+
D4-
D4+
NC
PGND2
PVCC2
GND
NC
VCC
VREF
IN4
IN3
RSTIN
NC
IC7003
D2+
D2-
D1+
D1-
NC
PGND1
PVCC1
GND
NC
IN1
NC
PC2
IN2
NC
/RST
C7352
0.01
C7339
0.01
R7336
10
R7339
1K
R7335
100
IC7003
AN8739SBTE2
FOCUS COIL/
TRACKING COIL/
TRAVERSE MOTOR/
SPINDLE MOTOR DRIVE
C7338
0.22
C7315
0.22
TP
36
TP
35
M
M7302
SP MOTOR
TP
37
TP
38
M
M7301
TRV MOTOR
R7323
5.6K
R7325
560
R7331
22K
R7315
2.7K

SCHEMATIC DIAGRAM - 2

— : +B SIGNAL LINE ⇨ : CD-DA SIGNAL LINE ⇨ : CD SIGNAL LINE

A CD SERVO CIRCUIT

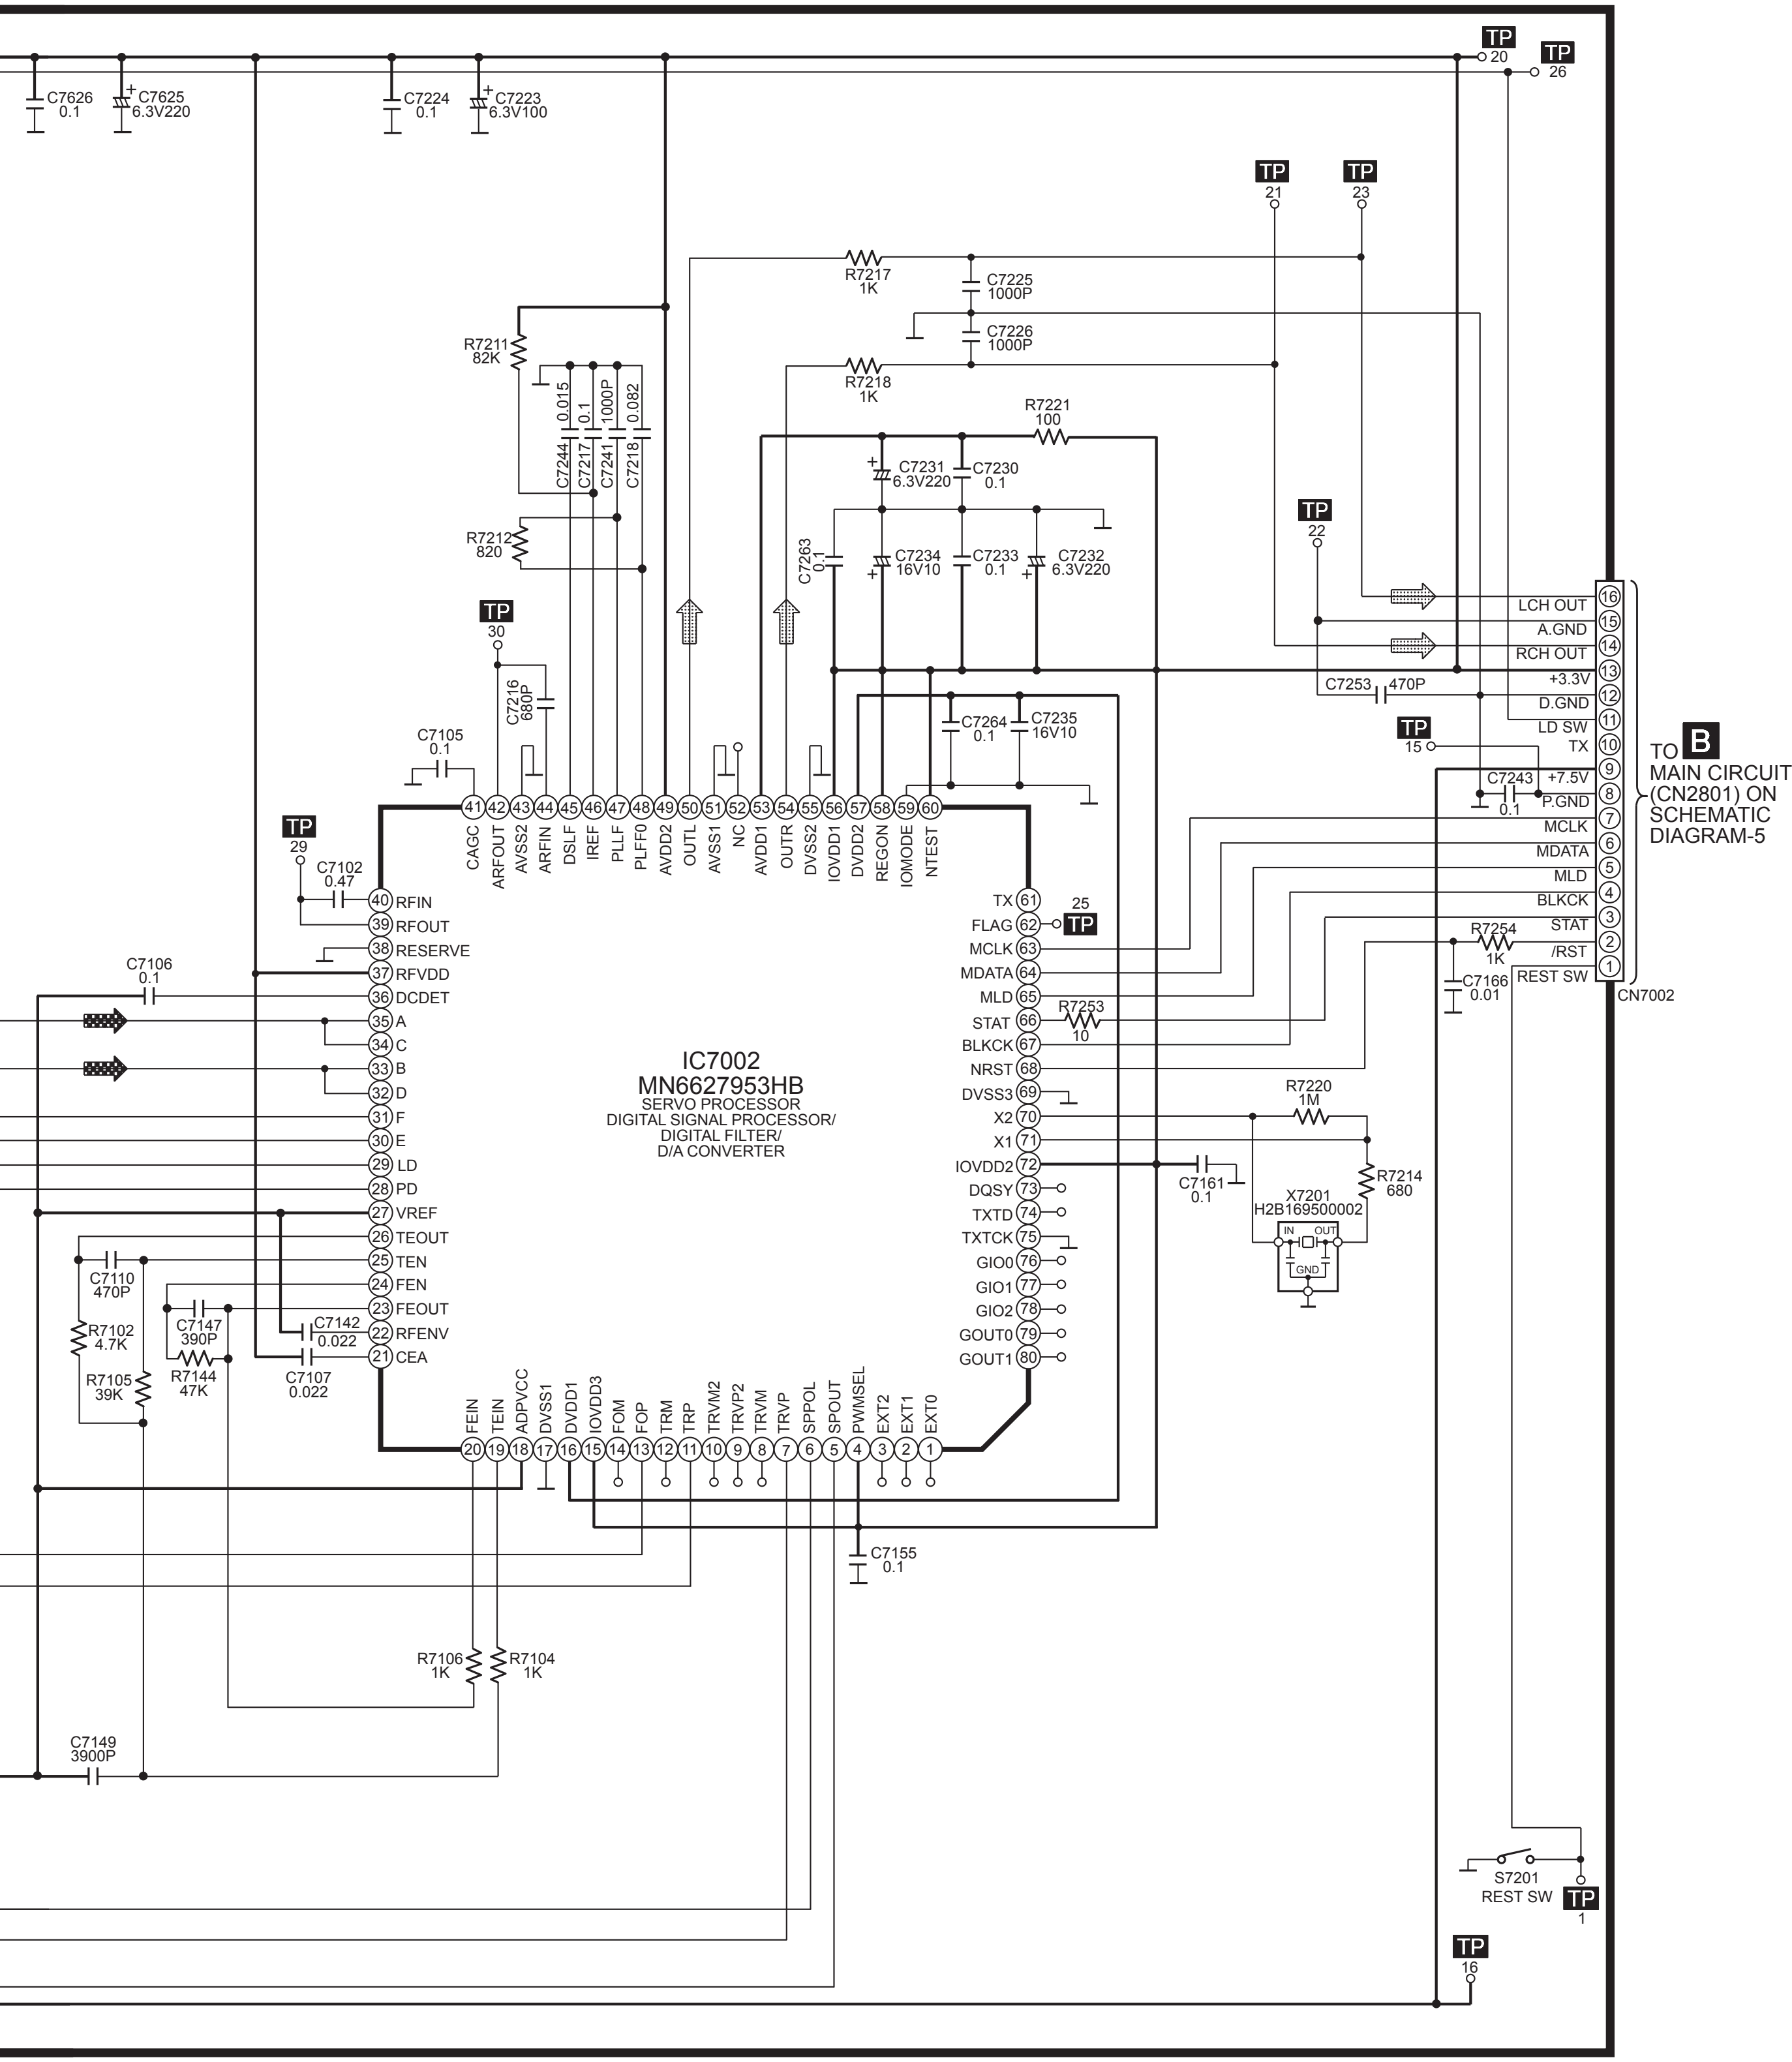

C7626 0.1
C7625 6.3V220
C7224 0.1
C7223 6.3V100
TP 20
TP 26
TP 21
TP 23
R7217 1K
C7225 1000P
C7226 1000P
R7218 1K
R7211 82K
C7244 0.015
C7217 0.1
C7241 1000P
C7218 0.082
R7212 820
R7221 100
C7231 6.3V220
C7230 0.1
C7263 0.1
C7234 16V10
C7233 0.1
C7232 6.3V220
TP 22
TP 30
C7216 680P
C7105 0.1
C7264 0.1
C7235 16V10
C7253 470P
TP 15
C7243 0.1
TP 29
C7102 0.47
C7106 0.1
TP 25
R7254 1K
C7166 0.01
R7253 10
IC7002
MN6627953HB
SERVO PROCESSOR
DIGITAL SIGNAL PROCESSOR/
DIGITAL FILTER/
D/A CONVERTER
1 EXT0
2 EXT1
3 EXT2
4 PWMSEL
5 SPOUT
6 SPPOL
7 TRVP
8 TRVM
9 TRVP2
10 TRVM2
11 TRP
12 TRM
13 FOP
14 FOM
15 IOVDD3
16 DVDD1
17 DVSS1
18 ADPVCC
19 TEIN
20 FEIN
21 CEA
22 RFENV
23 FEOUT
24 FEN
25 TEN
26 TEOUT
27 VREF
28 PD
29 LD
30 E
31 F
32 D
33 B
34 C
35 A
36 DCDET
37 RFVDD
38 RESERVE
39 RFOUT
40 RFIN
41 CAGC
42 ARFOUT
43 AVSS2
44 ARFIN
45 DSLF
46 IREF
47 PLLF
48 PLLF0
49 AVDD2
50 OUTL
51 AVSS1
52 NC
53 AVDD1
54 OUTR
55 DVSS2
56 IOVDD1
57 DVDD2
58 REGON
59 IOMODE
60 NTEST
61 TX
62 FLAG
63 MCLK
64 MDATA
65 MLD
66 STAT
67 BLKCK
68 NRST
69 DVSS3
70 X2
71 X1
72 IOVDD2
73 DQSY
74 TXTD
75 TXTCK
76 GIO0
77 GIO1
78 GIO2
79 GOUT0
80 GOUT1
R7220 1M
R7214 680
C7161 0.1
X7201
H2B169500002
IN OUT GND
C7110 470P
R7102 4.7K
R7105 39K
C7147 390P
R7144 47K
C7142 0.022
C7107 0.022
C7155 0.1
R7106 1K
R7104 1K
C7149 3900P
16 LCH OUT
15 A.GND
14 RCH OUT
13 +3.3V
12 D.GND
11 LD SW
10 TX
9 +7.5V
8 P.GND
7 MCLK
6 MDATA
5 MLD
4 BLKCK
3 STAT
2 /RST
1 REST SW
CN7002
TO B MAIN CIRCUIT (CN2801) ON SCHEMATIC DIAGRAM-5
S7201
REST SW
TP 1
TP 16

SCHEMATIC DIAGRAM - 3

B MAIN (TUNER) CIRCUIT

— : +B SIGNAL LINE
⇨ : FM/AM SIGNAL LINE
⇨ : FM SIGNAL LINE
▯▯⇨ : FM OSC SIGNAL LINE
➡ : AM SIGNAL LINE
▮▮➡ : AM OSC SIGNAL LINE

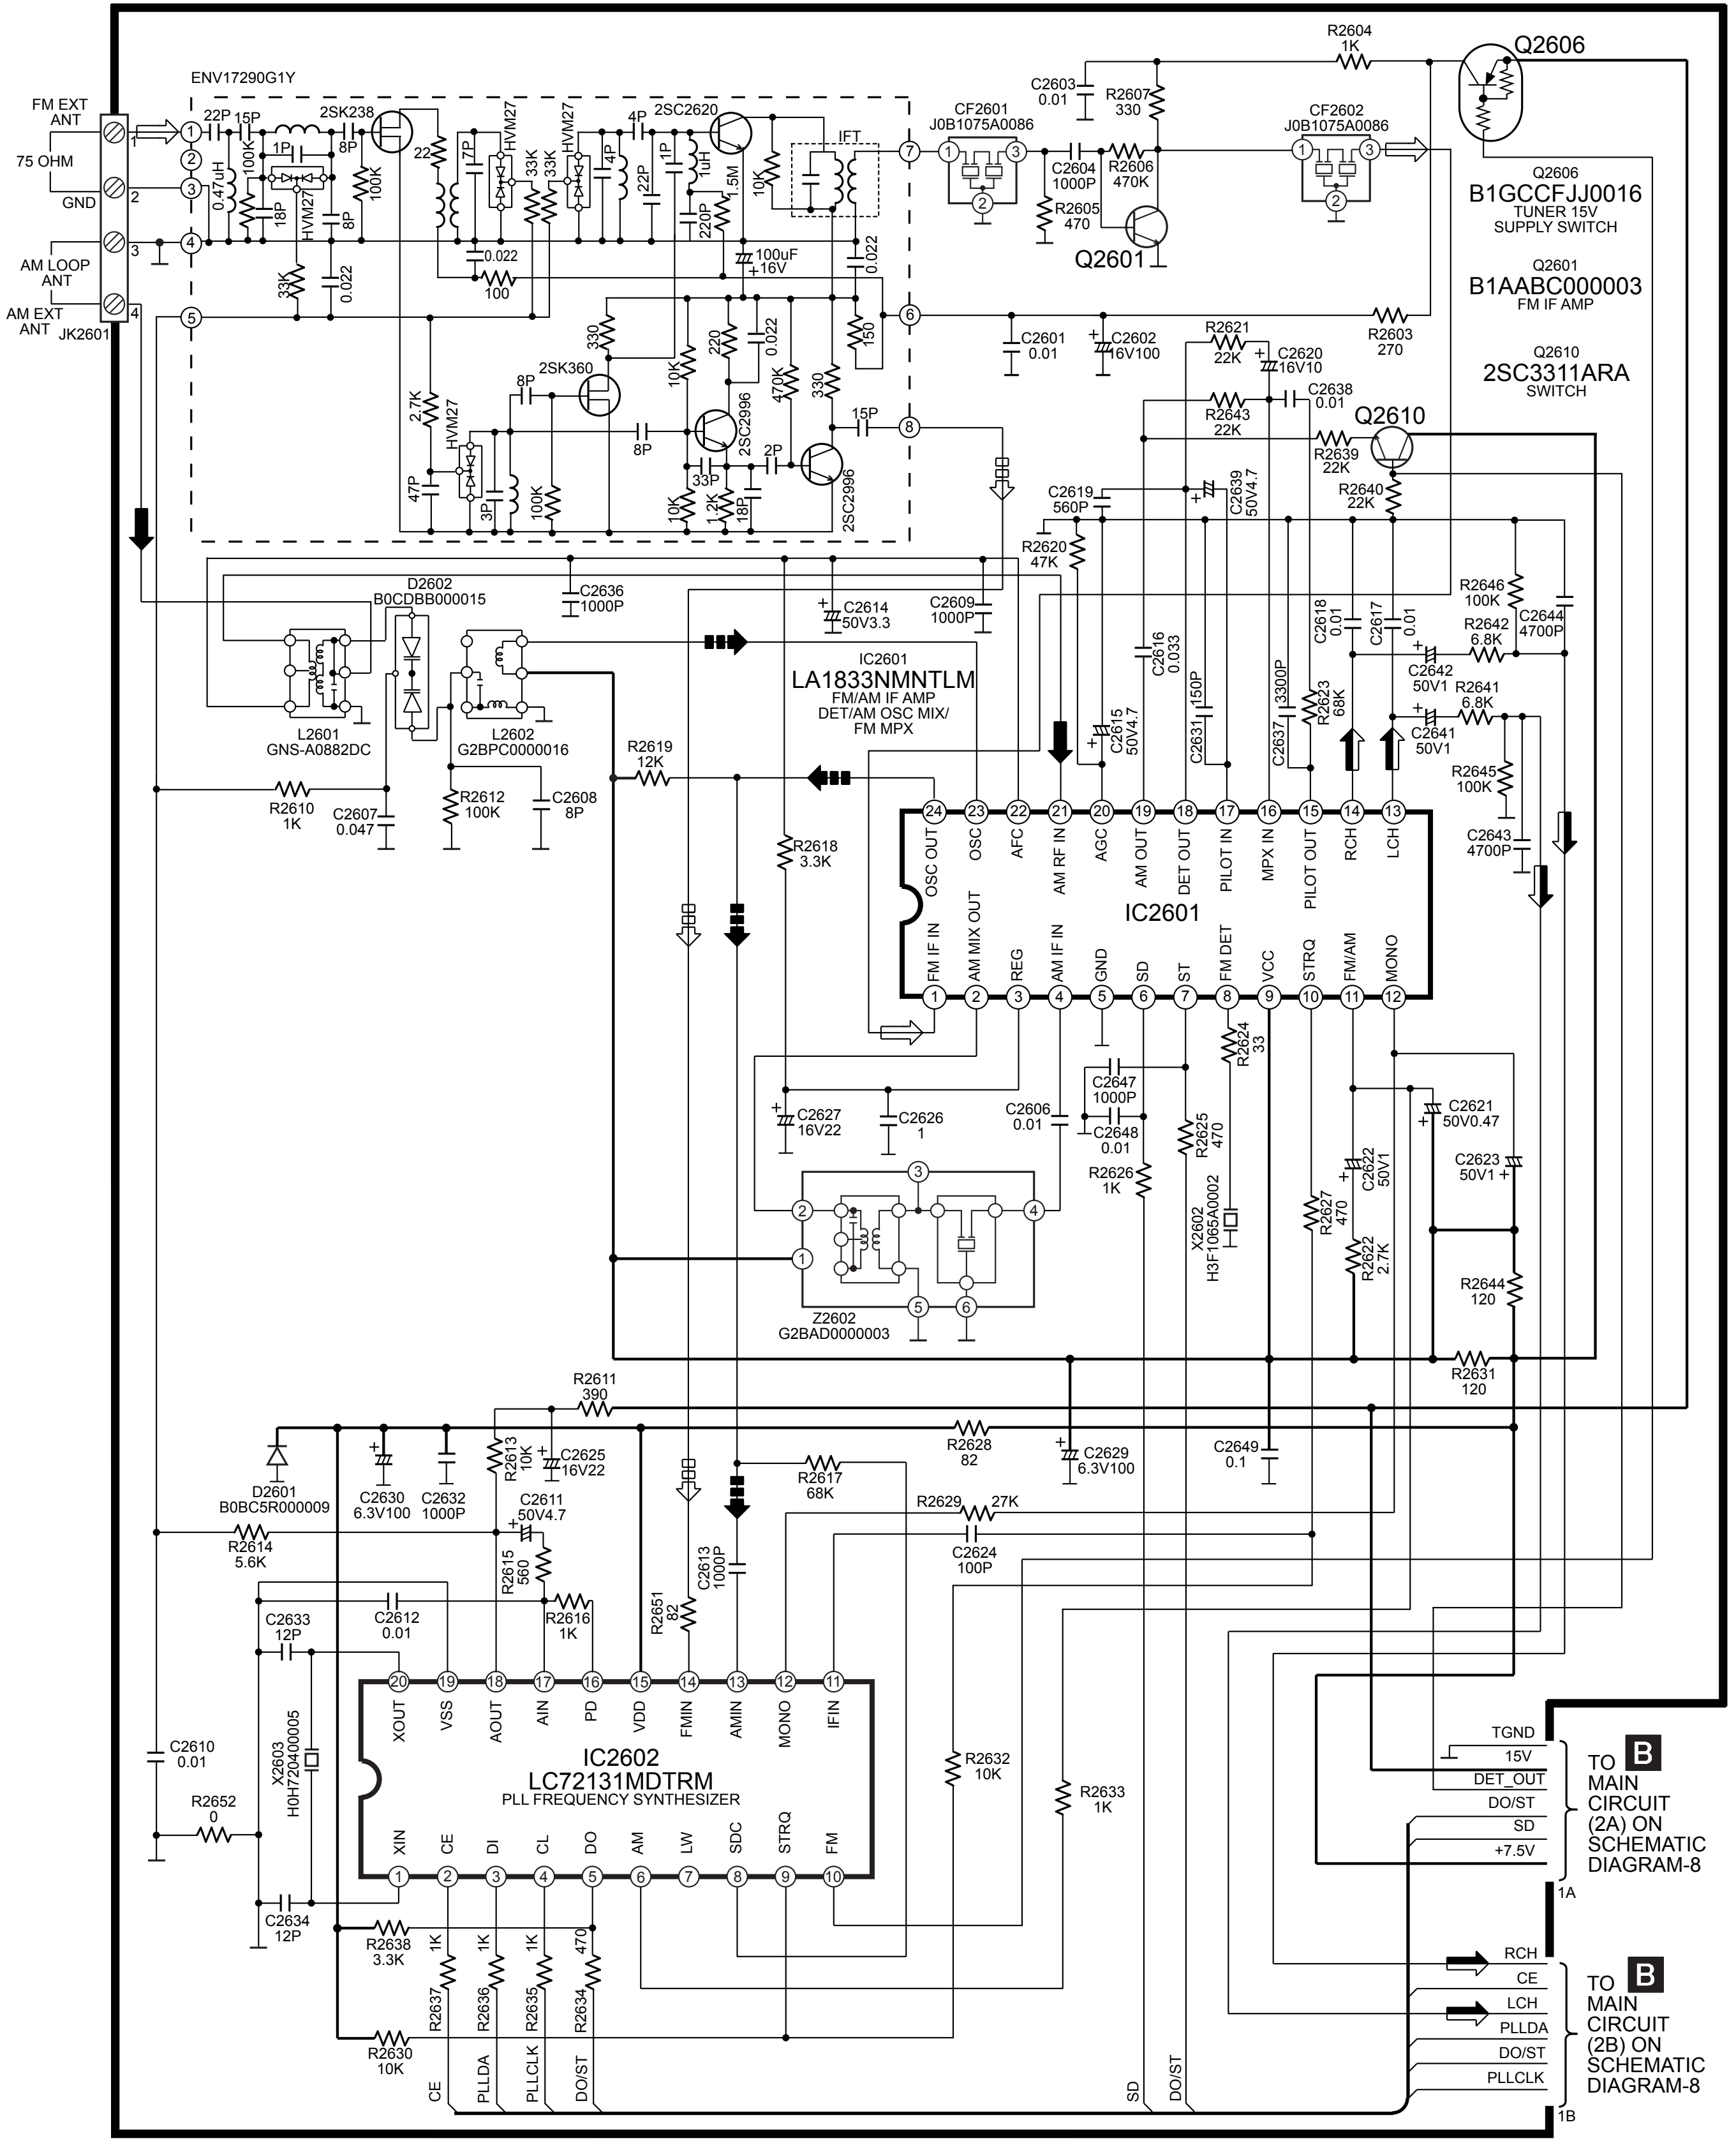

FM EXT ANT
75 OHM
GND
AM LOOP ANT
AM EXT ANT
JK2601
ENV17290G1Y
22P
15P
2SK238
8P
1P
0.47uH
100K
18P
HVM27
33K
0.022
100
HVM27
33K
22
7P
4P
2SC2620
22P
1P
1uH
1.5M
220P
10K
IFT
100uF 16V
0.022
150
330
2SK360
220
0.022
470K
330
15P
10K
2SC2996
8P
2P
2SC2996
2.7K
HVM27
47P
3P
100K
33P
10K
1.2K
18P
C2603 0.01
R2607 330
R2604 1K
Q2606
CF2601 J0B1075A0086
C2604 1000P
R2606 470K
R2605 470
Q2601
CF2602 J0B1075A0086
Q2606 B1GCCFJ0016 TUNER 15V SUPPLY SWITCH
Q2601 B1AABC000003 FM IF AMP
Q2610 2SC3311ARA SWITCH
C2601 0.01
C2602 16V100
R2603 270
R2621 22K
C2620 16V10
R2643 22K
C2638 0.01
Q2610
R2639 22K
R2640 22K
C2619 560P
C2639 50V4.7
R2620 47K
D2602 B0CDBB000015
C2636 1000P
C2614 50V3.3
C2609 1000P
R2646 100K
C2644 4700P
R2642 6.8K
C2642 50V1
C2618 0.01
C2617 0.01
IC2601 LA1833NMNTLM FM/AM IF AMP DET/AM OSC MIX/ FM MPX
C2616 0.033
C2615 50V4.7
C2631 150P
C2637 3300P
R2623 68K
R2641 6.8K
C2641 50V1
R2645 100K
C2643 4700P
L2601 GNS-A0882DC
L2602 G2BPC0000016
R2619 12K
R2610 1K
C2607 0.047
R2612 100K
C2608 8P
R2618 3.3K
OSC OUT
OSC
AFC
AM RF IN
AGC
AM OUT
DET OUT
PILOT IN
MPX IN
PILOT OUT
RCH
LCH
IC2601
FM IF IN
AM MIX OUT
REG
AM IF IN
GND
SD
ST
FM DET
VCC
STRQ
FM/AM
MONO
C2627 16V22
C2626 1
C2606 0.01
C2647 1000P
C2648 0.01
R2624 33
R2625 470
R2626 1K
X2602 H3F1065A0002
C2621 50V0.47
C2622 50V1
C2623 50V1
R2627 470
R2622 2.7K
R2644 120
Z2602 G2BAD0000003
R2631 120
R2611 390
R2628 82
C2629 6.3V100
C2649 0.1
D2601 B0BC5R000009
C2630 6.3V100
C2632 1000P
R2613 10K
C2625 16V22
C2611 50V4.7
R2617 68K
R2629 27K
C2624 100P
R2614 5.6K
R2615 560
R2616 1K
C2633 12P
C2612 0.01
R2651 82
C2613 1000P
XOUT
VSS
AOUT
AIN
PD
VDD
FMIN
AMIN
MONO
IFIN
IC2602 LC72131MDTRM PLL FREQUENCY SYNTHESIZER
C2610 0.01
R2652 0
X2603 H0H720400005
R2632 10K
R2633 1K
XIN
CE
DI
CL
DO
AM
LW
SDC
STRQ
FM
C2634 12P
R2638 3.3K
R2637 1K
R2636 1K
R2635 1K
R2634 470
R2630 10K
CE
PLLDA
PLLCLK
DO/ST
SD
DO/ST
TGND
15V
DET_OUT
DO/ST
SD
+7.5V
TO B MAIN CIRCUIT (2A) ON SCHEMATIC DIAGRAM-8
1A
RCH
CE
LCH
PLLDA
DO/ST
PLLCLK
TO B MAIN CIRCUIT (2B) ON SCHEMATIC DIAGRAM-8
1B

SCHEMATIC DIAGRAM - 4

—— : +B SIGNAL LINE
– – : -B SIGNAL LINE
⇨ : PLAYBACK SIGNAL LINE
⇨ : RECORD SIGNAL LINE
⇨ : AUX SIGNAL LINE
⇨ : MAIN SIGNAL LINE

B MAIN CIRCUIT

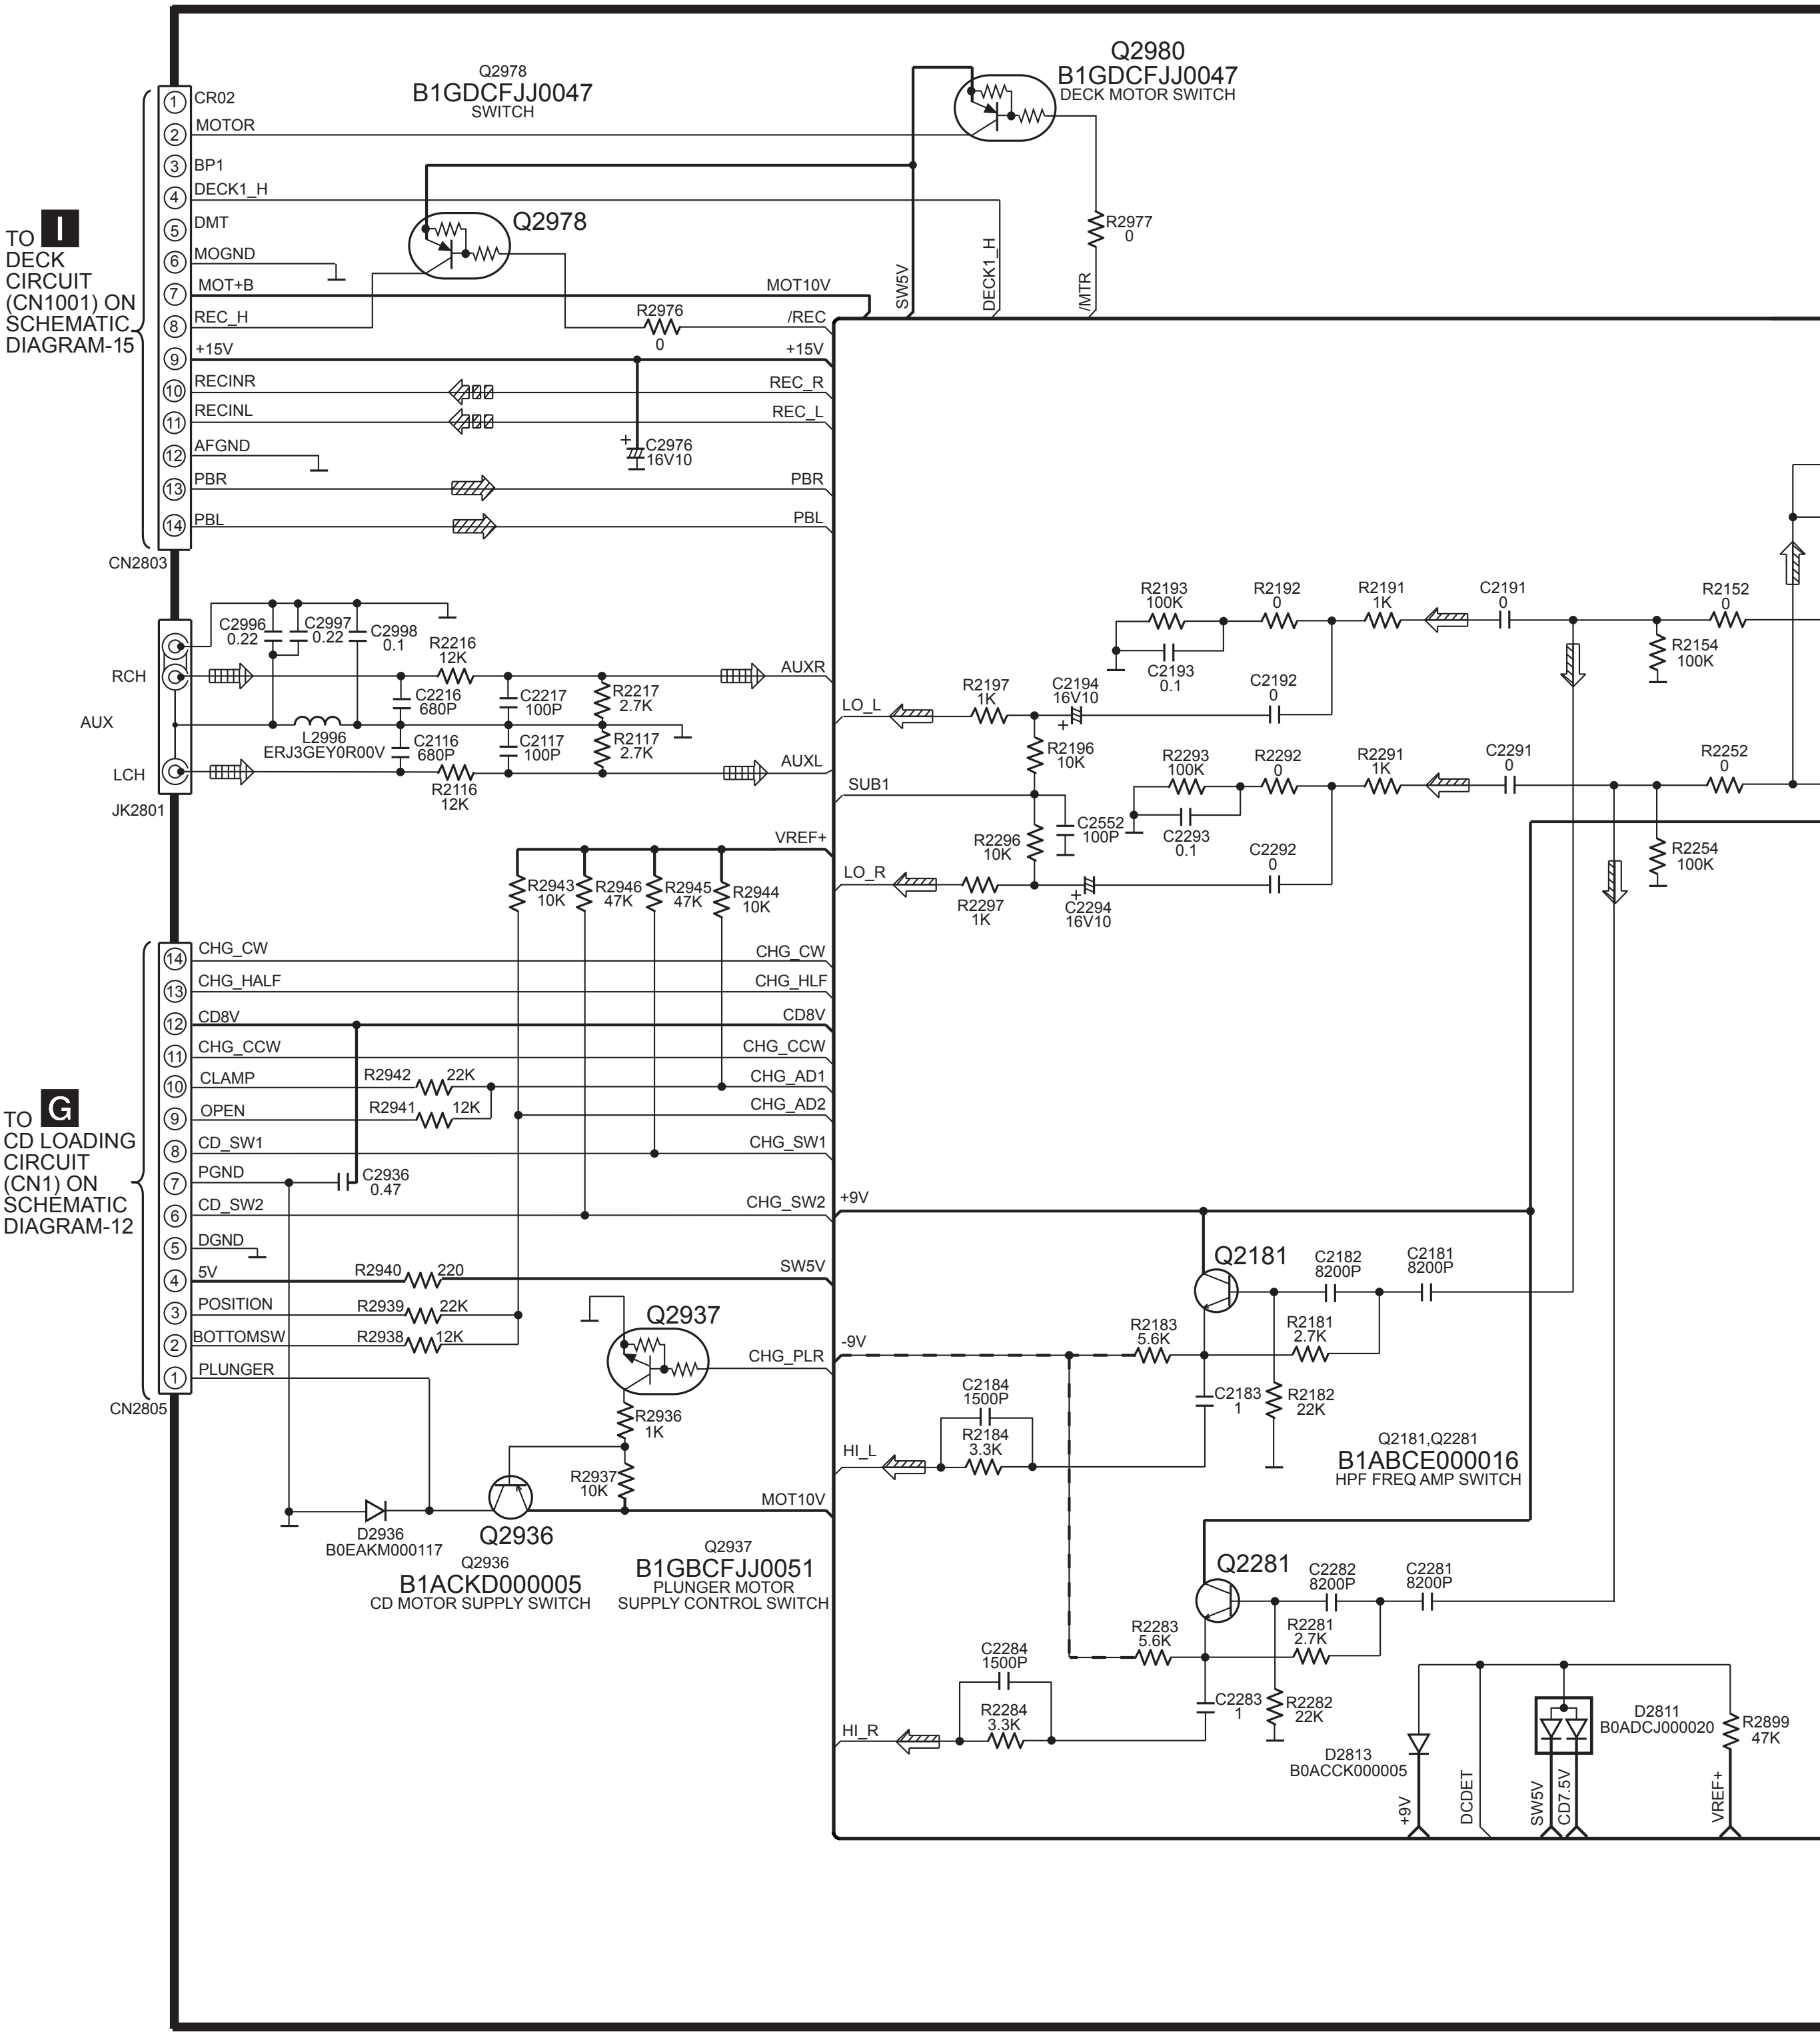
Q2978
B1GDCFJJ0047
SWITCH
Q2980
B1GDCFJJ0047
DECK MOTOR SWITCH
TO I DECK CIRCUIT (CN1001) ON SCHEMATIC DIAGRAM-15
① CR02
② MOTOR
③ BP1
④ DECK1_H
⑤ DMT
⑥ MOGND
⑦ MOT+B
⑧ REC_H
⑨ +15V
⑩ RECINR
⑪ RECINL
⑫ AFGND
⑬ PBR
⑭ PBL
CN2803
Q2978
R2977
0
SW5V
DECK1_H
/MTR
MOT10V
R2976
0
/REC
+15V
REC_R
REC_L
C2976
16V10
PBR
PBL
C2996
0.22
C2997
0.22
C2998
0.1
R2216
12K
RCH
AUX
LCH
JK2801
C2216
680P
C2217
100P
R2217
2.7K
AUXR
L2996
ERJ3GEY0R00V
C2116
680P
C2117
100P
R2117
2.7K
R2116
12K
AUXL
VREF+
R2943
10K
R2946
47K
R2945
47K
R2944
10K
R2193
100K
R2192
0
R2191
1K
C2191
0
R2152
0
R2154
100K
C2193
0.1
C2192
0
R2197
1K
C2194
16V10
LO_L
R2196
10K
SUB1
R2293
100K
R2292
0
R2291
1K
C2291
0
R2252
0
C2552
100P
C2293
0.1
R2296
10K
C2292
0
R2254
100K
LO_R
R2297
1K
C2294
16V10
TO G CD LOADING CIRCUIT (CN1) ON SCHEMATIC DIAGRAM-12
⑭ CHG_CW
⑬ CHG_HALF
⑫ CD8V
⑪ CHG_CCW
⑩ CLAMP
⑨ OPEN
⑧ CD_SW1
⑦ PGND
⑥ CD_SW2
⑤ DGND
④ 5V
③ POSITION
② BOTTOMSW
① PLUNGER
CN2805
CHG_CW
CHG_HLF
CD8V
CHG_CCW
CHG_AD1
CHG_AD2
CHG_SW1
CHG_SW2
SW5V
CHG_PLR
MOT10V
R2942
22K
R2941
12K
C2936
0.47
R2940
220
R2939
22K
R2938
12K
Q2937
R2936
1K
R2937
10K
D2936
B0EAKM000117
Q2936
Q2936
B1ACKD000005
CD MOTOR SUPPLY SWITCH
Q2937
B1GBCFJJ0051
PLUNGER MOTOR
SUPPLY CONTROL SWITCH
+9V
-9V
HI_L
HI_R
Q2181
C2182
8200P
C2181
8200P
R2183
5.6K
R2181
2.7K
C2184
1500P
R2184
3.3K
C2183
1
R2182
22K
Q2181,Q2281
B1ABCE000016
HPF FREQ AMP SWITCH
Q2281
C2282
8200P
C2281
8200P
R2283
5.6K
R2281
2.7K
C2284
1500P
R2284
3.3K
C2283
1
R2282
22K
D2811
B0ADCJ000020
R2899
47K
D2813
B0ACCK000005
+9V
DCDET
SW5V
CD7.5V
VREF+

SCHEMATIC DIAGRAM - 5

— : +B SIGNAL LINE
- - : -B SIGNAL LINE
⇨ : CD SIGNAL LINE
⇨ : MAIN SIGNAL LINE

B MAIN CIRCUIT

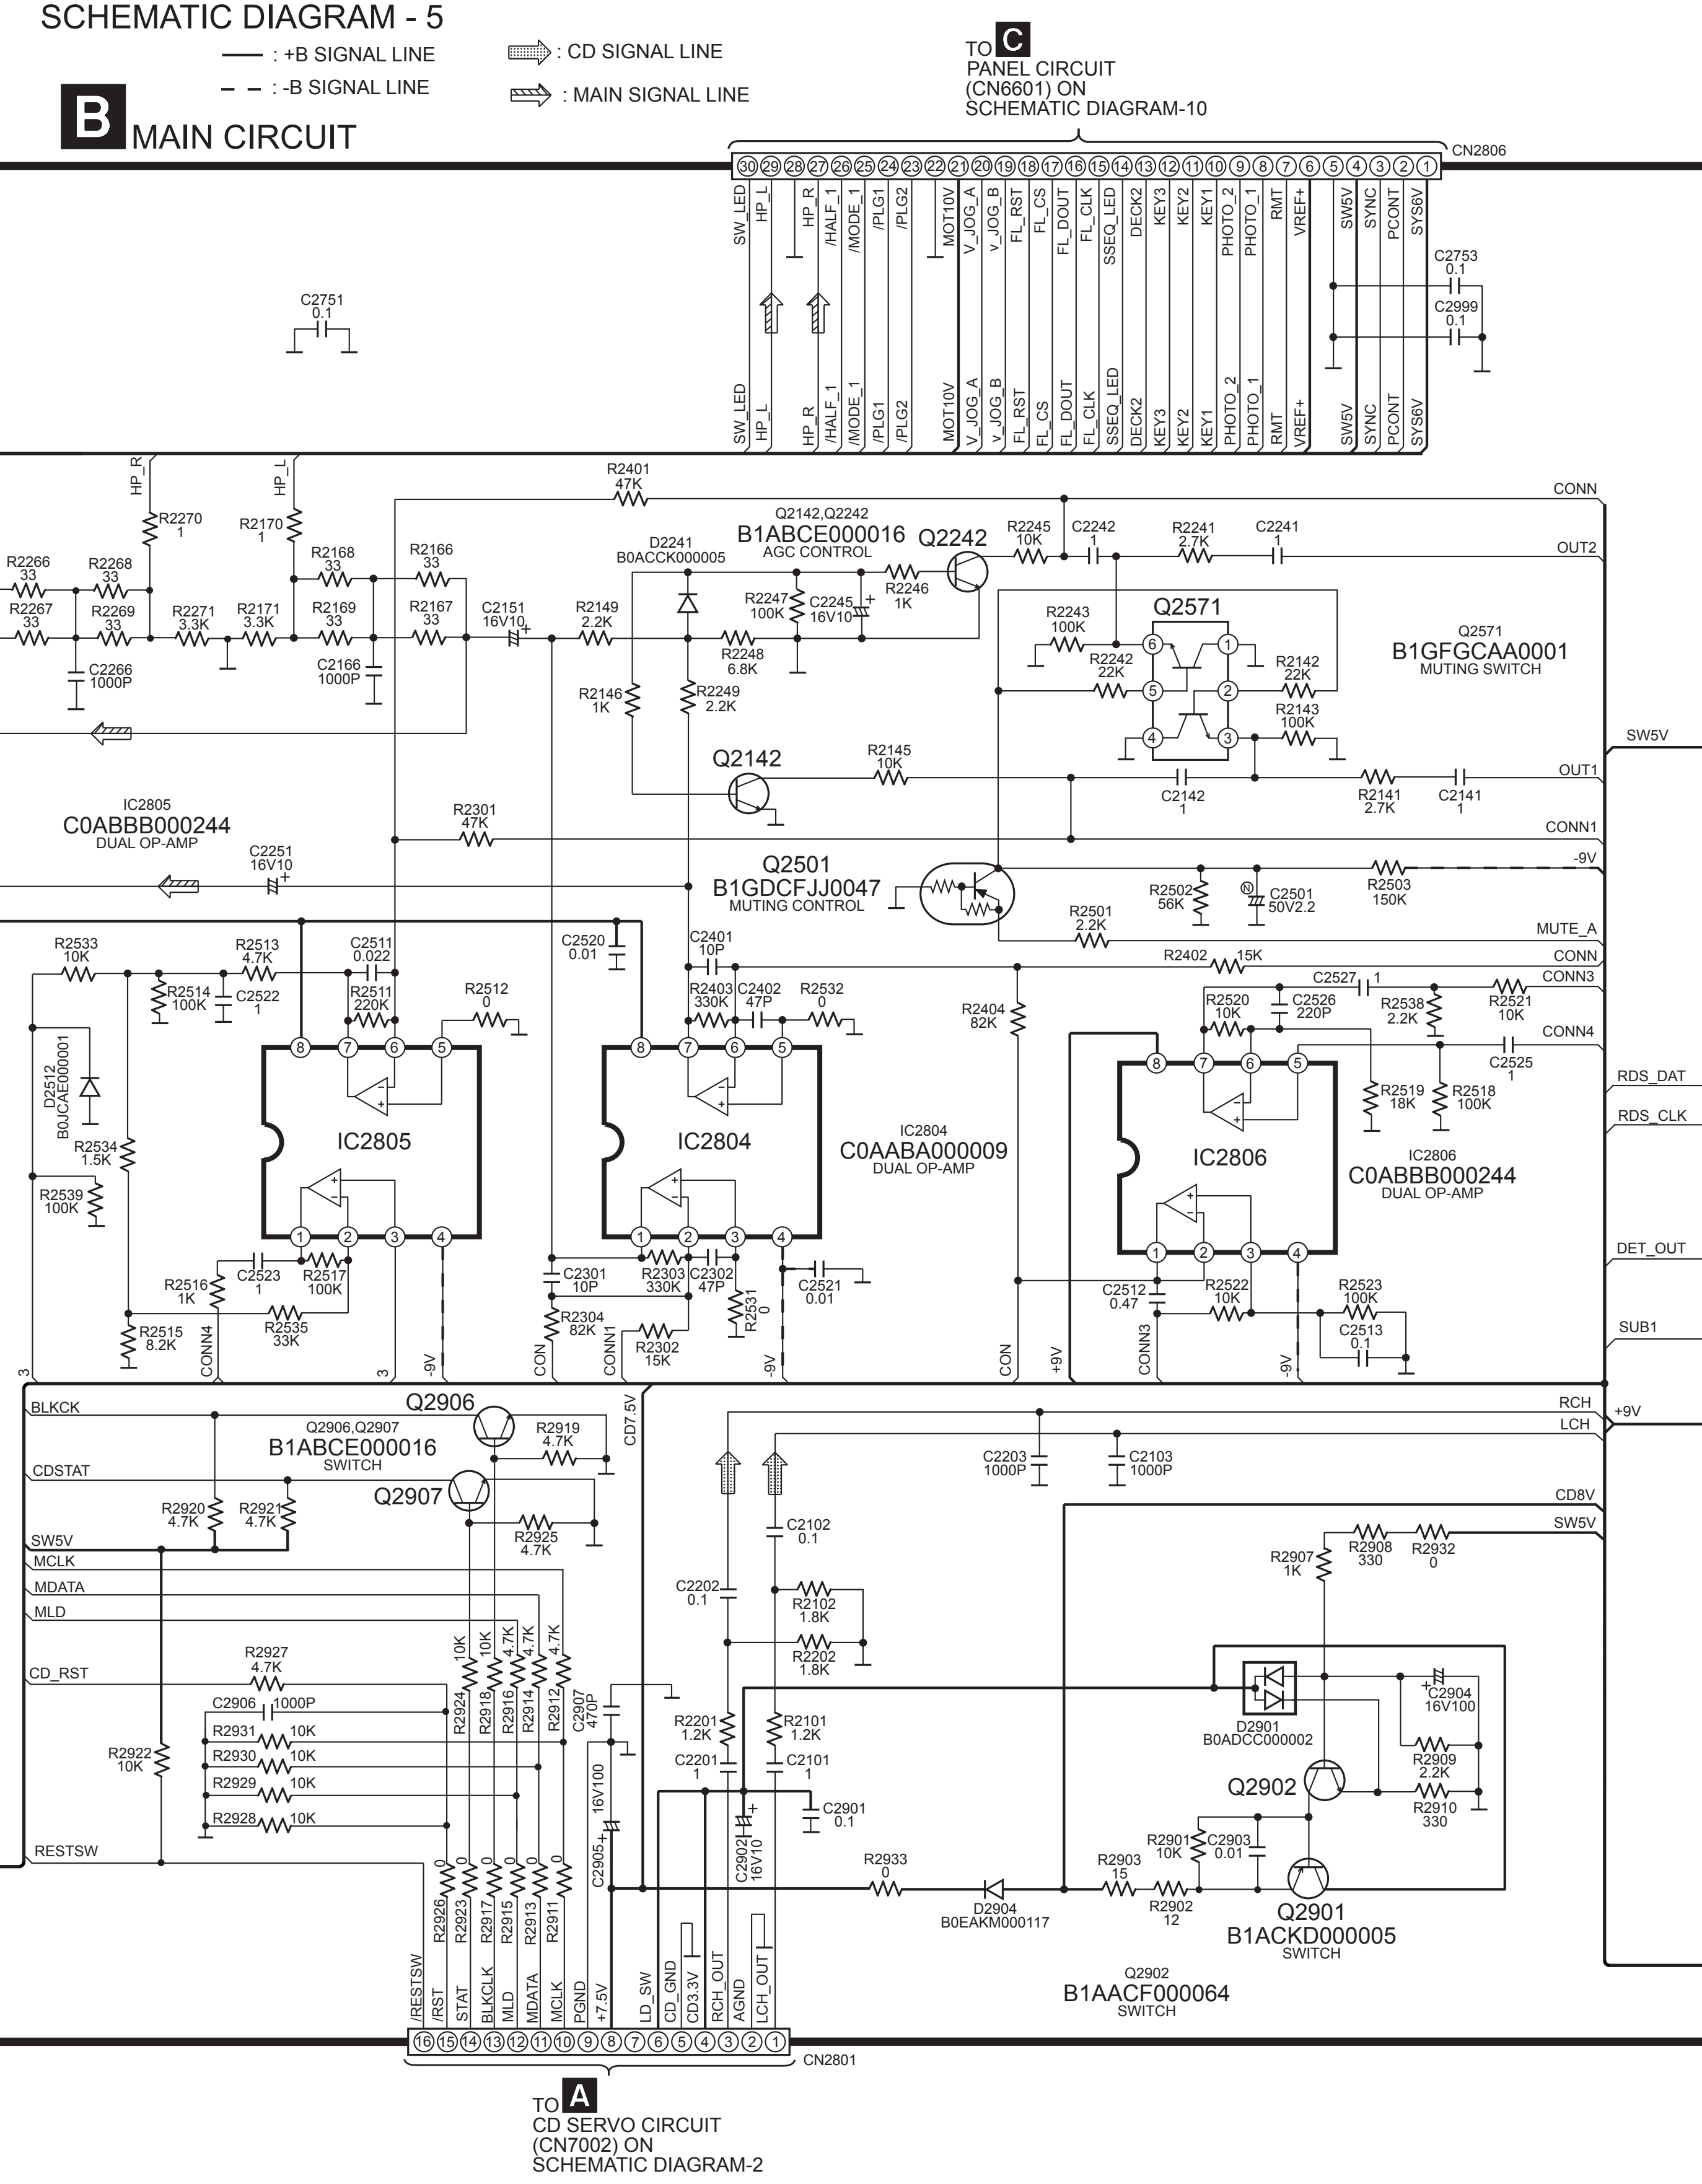
TO C
PANEL CIRCUIT
(CN6601) ON
SCHEMATIC DIAGRAM-10
CN2806
SW_LED
HP_L
HP_R
/HALF_1
/MODE_1
/PLG1
/PLG2
MOT10V
V_JOG_A
v_JOG_B
FL_RST
FL_CS
FL_DOUT
FL_CLK
SSEQ_LED
DECK2
KEY3
KEY2
KEY1
PHOTO_2
PHOTO_1
RMT
VREF+
SW5V
SYNC
PCONT
SYS6V
C2753 0.1
C2999 0.1
C2751 0.1
HP_R
HP_L
R2270 1
R2170 1
R2266 33
R2268 33
R2267 33
R2269 33
R2271 3.3K
R2171 3.3K
R2168 33
R2169 33
R2166 33
R2167 33
C2266 1000P
C2166 1000P
C2151 16V10
R2149 2.2K
R2401 47K
Q2142,Q2242
B1ABCE000016
AGC CONTROL
Q2242
D2241
B0ACCK000005
R2247 100K
C2245 16V10
R2246 1K
R2248 6.8K
R2146 1K
R2249 2.2K
R2245 10K
C2242 1
R2241 2.7K
C2241 1
CONN
OUT2
Q2571
R2243 100K
R2242 22K
R2142 22K
R2143 100K
Q2571
B1GFGCAA0001
MUTING SWITCH
SW5V
Q2142
R2145 10K
C2142 1
R2141 2.7K
C2141 1
OUT1
CONN1
IC2805
C0ABBB000244
DUAL OP-AMP
R2301 47K
C2251 16V10
Q2501
B1GDCFJJ0047
MUTING CONTROL
R2502 56K
C2501 50V2.2
R2503 150K
-9V
R2501 2.2K
MUTE_A
R2402 15K
CONN
CONN3
R2533 10K
R2513 4.7K
C2511 0.022
C2520 0.01
C2401 10P
R2514 100K
C2522 1
R2511 220K
R2512 0
R2403 330K
C2402 47P
R2532 0
R2404 82K
R2520 10K
C2526 220P
C2527 1
R2538 2.2K
R2521 10K
CONN4
C2525 1
D2512
B0JCAE000001
IC2805
IC2804
IC2804
C0AABA000009
DUAL OP-AMP
IC2806
IC2806
C0ABBB000244
DUAL OP-AMP
R2519 18K
R2518 100K
RDS_DAT
RDS_CLK
R2534 1.5K
R2539 100K
DET_OUT
R2516 1K
C2523 1
R2517 100K
R2515 8.2K
R2535 33K
CONN4
-9V
C2301 10P
R2303 330K
C2302 47P
R2531 0
C2521 0.01
R2304 82K
R2302 15K
CON
CONN1
-9V
CON
+9V
C2512 0.47
R2522 10K
R2523 100K
C2513 0.1
CONN3
-9V
SUB1
BLKCK
Q2906
Q2906,Q2907
B1ABCE000016
SWITCH
R2919 4.7K
CD7.5V
CDSTAT
Q2907
R2920 4.7K
R2921 4.7K
R2925 4.7K
SW5V
MCLK
MDATA
MLD
CD_RST
R2927 4.7K
C2906 1000P
R2931 10K
R2930 10K
R2929 10K
R2928 10K
R2922 10K
RESTSW
R2924 10K
R2918 10K
R2916 4.7K
R2914 4.7K
R2912 4.7K
C2907 470P
C2905 16V100
R2926 0
R2923 0
R2917 0
R2915 0
R2913 0
R2911 0
RCH
LCH
+9V
C2203 1000P
C2103 1000P
C2102 0.1
C2202 0.1
R2102 1.8K
R2202 1.8K
R2201 1.2K
R2101 1.2K
C2201 1
C2101 1
C2902 16V10
C2901 0.1
R2933 0
D2904
B0EAKM000117
CD8V
SW5V
R2907 1K
R2908 330
R2932 0
D2901
B0ADCC000002
C2904 16V100
R2909 2.2K
Q2902
R2910 330
R2901 10K
C2903 0.01
R2903 15
R2902 12
Q2901
B1ACKD000005
SWITCH
Q2902
B1AACF000064
SWITCH
/RESTSW
/RST
STAT
BLKCLK
MLD
MDATA
MCLK
PGND
+7.5V
LD_SW
CD_GND
CD3.3V
RCH_OUT
AGND
LCH_OUT
CN2801
TO A
CD SERVO CIRCUIT
(CN7002) ON
SCHEMATIC DIAGRAM-2

SCHEMATIC DIAGRAM - 6

—— : +B SIGNAL LINE　　– – : -B SIGNAL LINE

B MAIN CIRCUIT

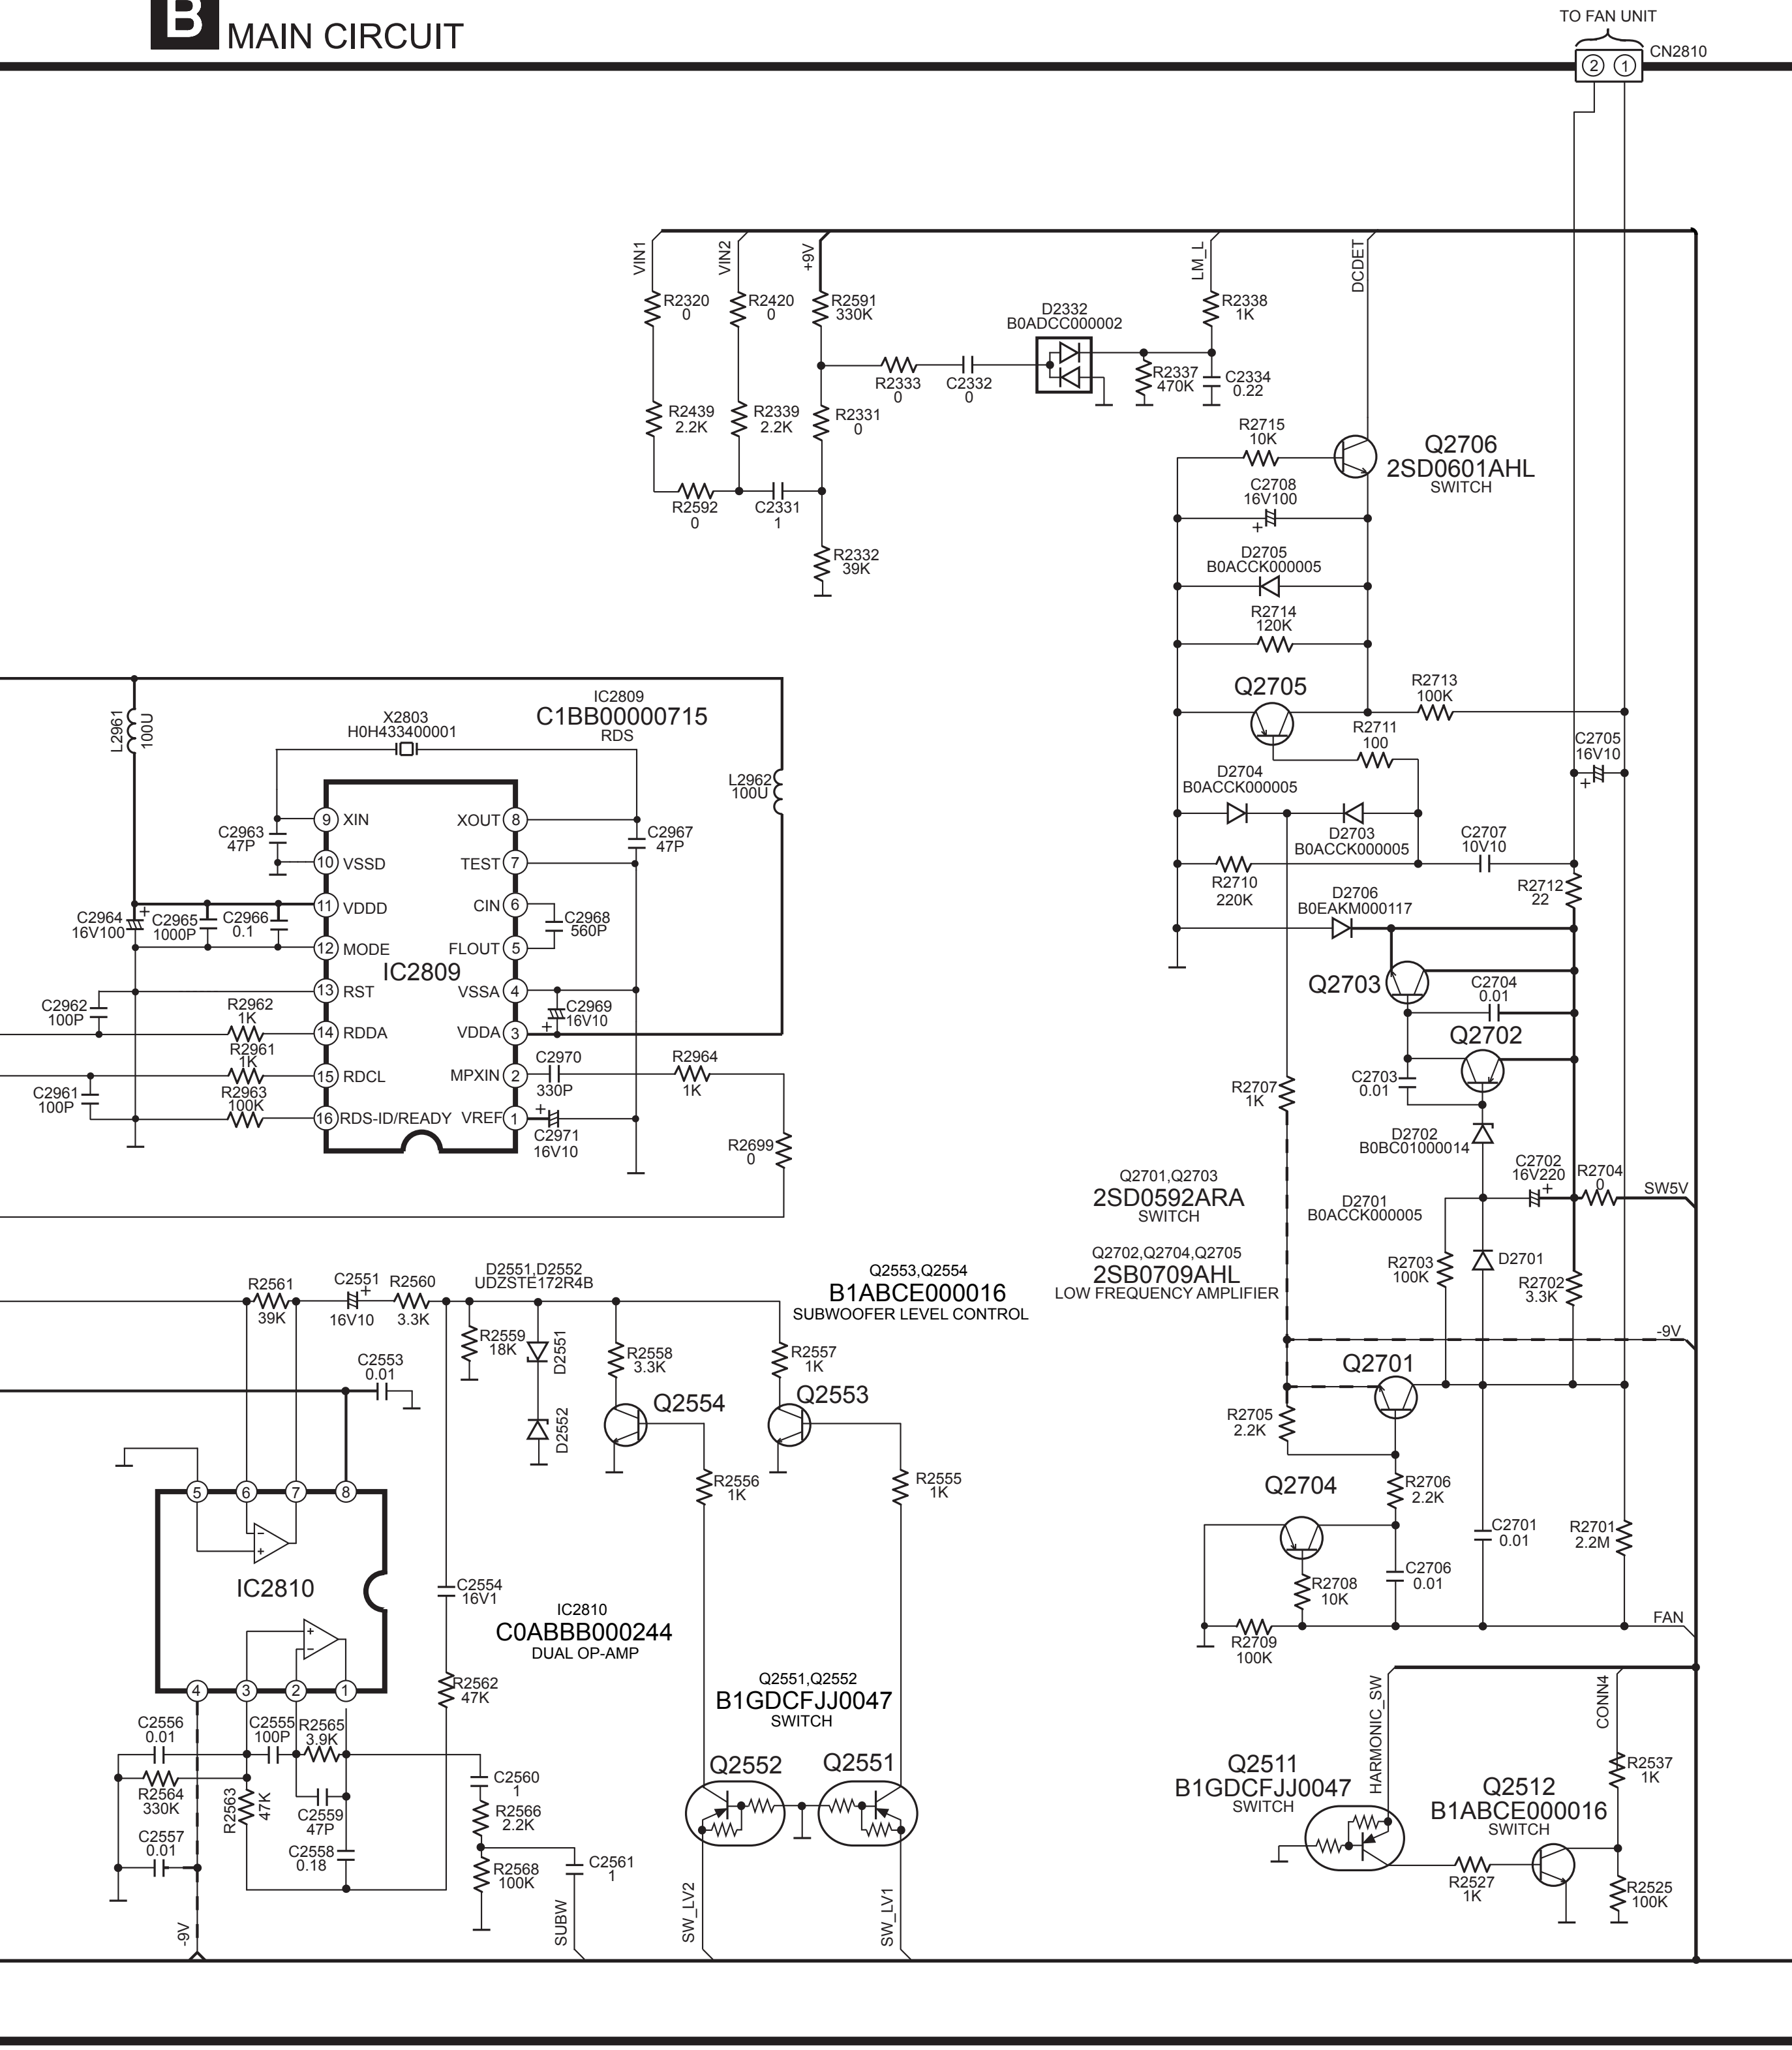

TO FAN UNIT
CN2810
2
1
VIN1
VIN2
+9V
LM_L
DCDET
R2320 0
R2420 0
R2591 330K
D2332 B0ADCC000002
R2338 1K
R2333 0
C2332 0
R2337 470K
C2334 0.22
R2439 2.2K
R2339 2.2K
R2331 0
R2715 10K
Q2706 2SD0601AHL SWITCH
R2592 0
C2331 1
C2708 16V100
R2332 39K
D2705 B0ACCK000005
R2714 120K
Q2705
R2713 100K
R2711 100
C2705 16V10
D2704 B0ACCK000005
D2703 B0ACCK000005
C2707 10V10
R2710 220K
R2712 22
D2706 B0EAKM000117
Q2703
C2704 0.01
Q2702
C2703 0.01
R2707 1K
D2702 B0BC01000014
C2702 16V220
R2704 0
SW5V
Q2701,Q2703 2SD0592ARA SWITCH
D2701 B0ACCK000005
Q2702,Q2704,Q2705 2SB0709AHL LOW FREQUENCY AMPLIFIER
R2703 100K
D2701
R2702 3.3K
-9V
Q2701
R2705 2.2K
Q2704
R2706 2.2K
C2701 0.01
R2701 2.2M
R2708 10K
C2706 0.01
R2709 100K
FAN
L2961 100U
X2803 H0H433400001
IC2809 C1BB00000715 RDS
L2962 100U
C2963 47P
C2967 47P
9 XIN
10 VSSD
11 VDDD
12 MODE
13 RST
14 RDDA
15 RDCL
16 RDS-ID/READY
XOUT 8
TEST 7
CIN 6
FLOUT 5
VSSA 4
VDDA 3
MPXIN 2
VREF 1
IC2809
C2968 560P
C2964 16V100
C2965 1000P
C2966 0.1
C2969 16V10
C2962 100P
R2962 1K
R2961 1K
C2970 330P
R2964 1K
C2961 100P
R2963 100K
C2971 16V10
R2699 0
R2561 39K
C2551 16V10
R2560 3.3K
D2551,D2552 UDZSTE172R4B
Q2553,Q2554 B1ABCE000016 SUBWOOFER LEVEL CONTROL
R2559 18K
D2551
R2558 3.3K
R2557 1K
C2553 0.01
Q2554
Q2553
D2552
5 6 7 8
4 3 2 1
IC2810
R2556 1K
R2555 1K
C2554 16V1
IC2810 C0ABBB000244 DUAL OP-AMP
R2562 47K
Q2551,Q2552 B1GDCFJJ0047 SWITCH
C2556 0.01
C2555 100P
R2565 3.9K
C2560 1
R2564 330K
R2563 47K
C2559 47P
R2566 2.2K
Q2552
Q2551
C2557 0.01
C2558 0.18
R2568 100K
C2561 1
-9V
SUBW
SW_LV2
SW_LV1
HARMONIC_SW
CONN4
Q2511 B1GDCFJJ0047 SWITCH
R2537 1K
Q2512 B1ABCE000016 SWITCH
R2527 1K
R2525 100K

SCHEMATIC DIAGRAM - 7

B MAIN CIRCUIT

—— : +B SIGNAL LINE

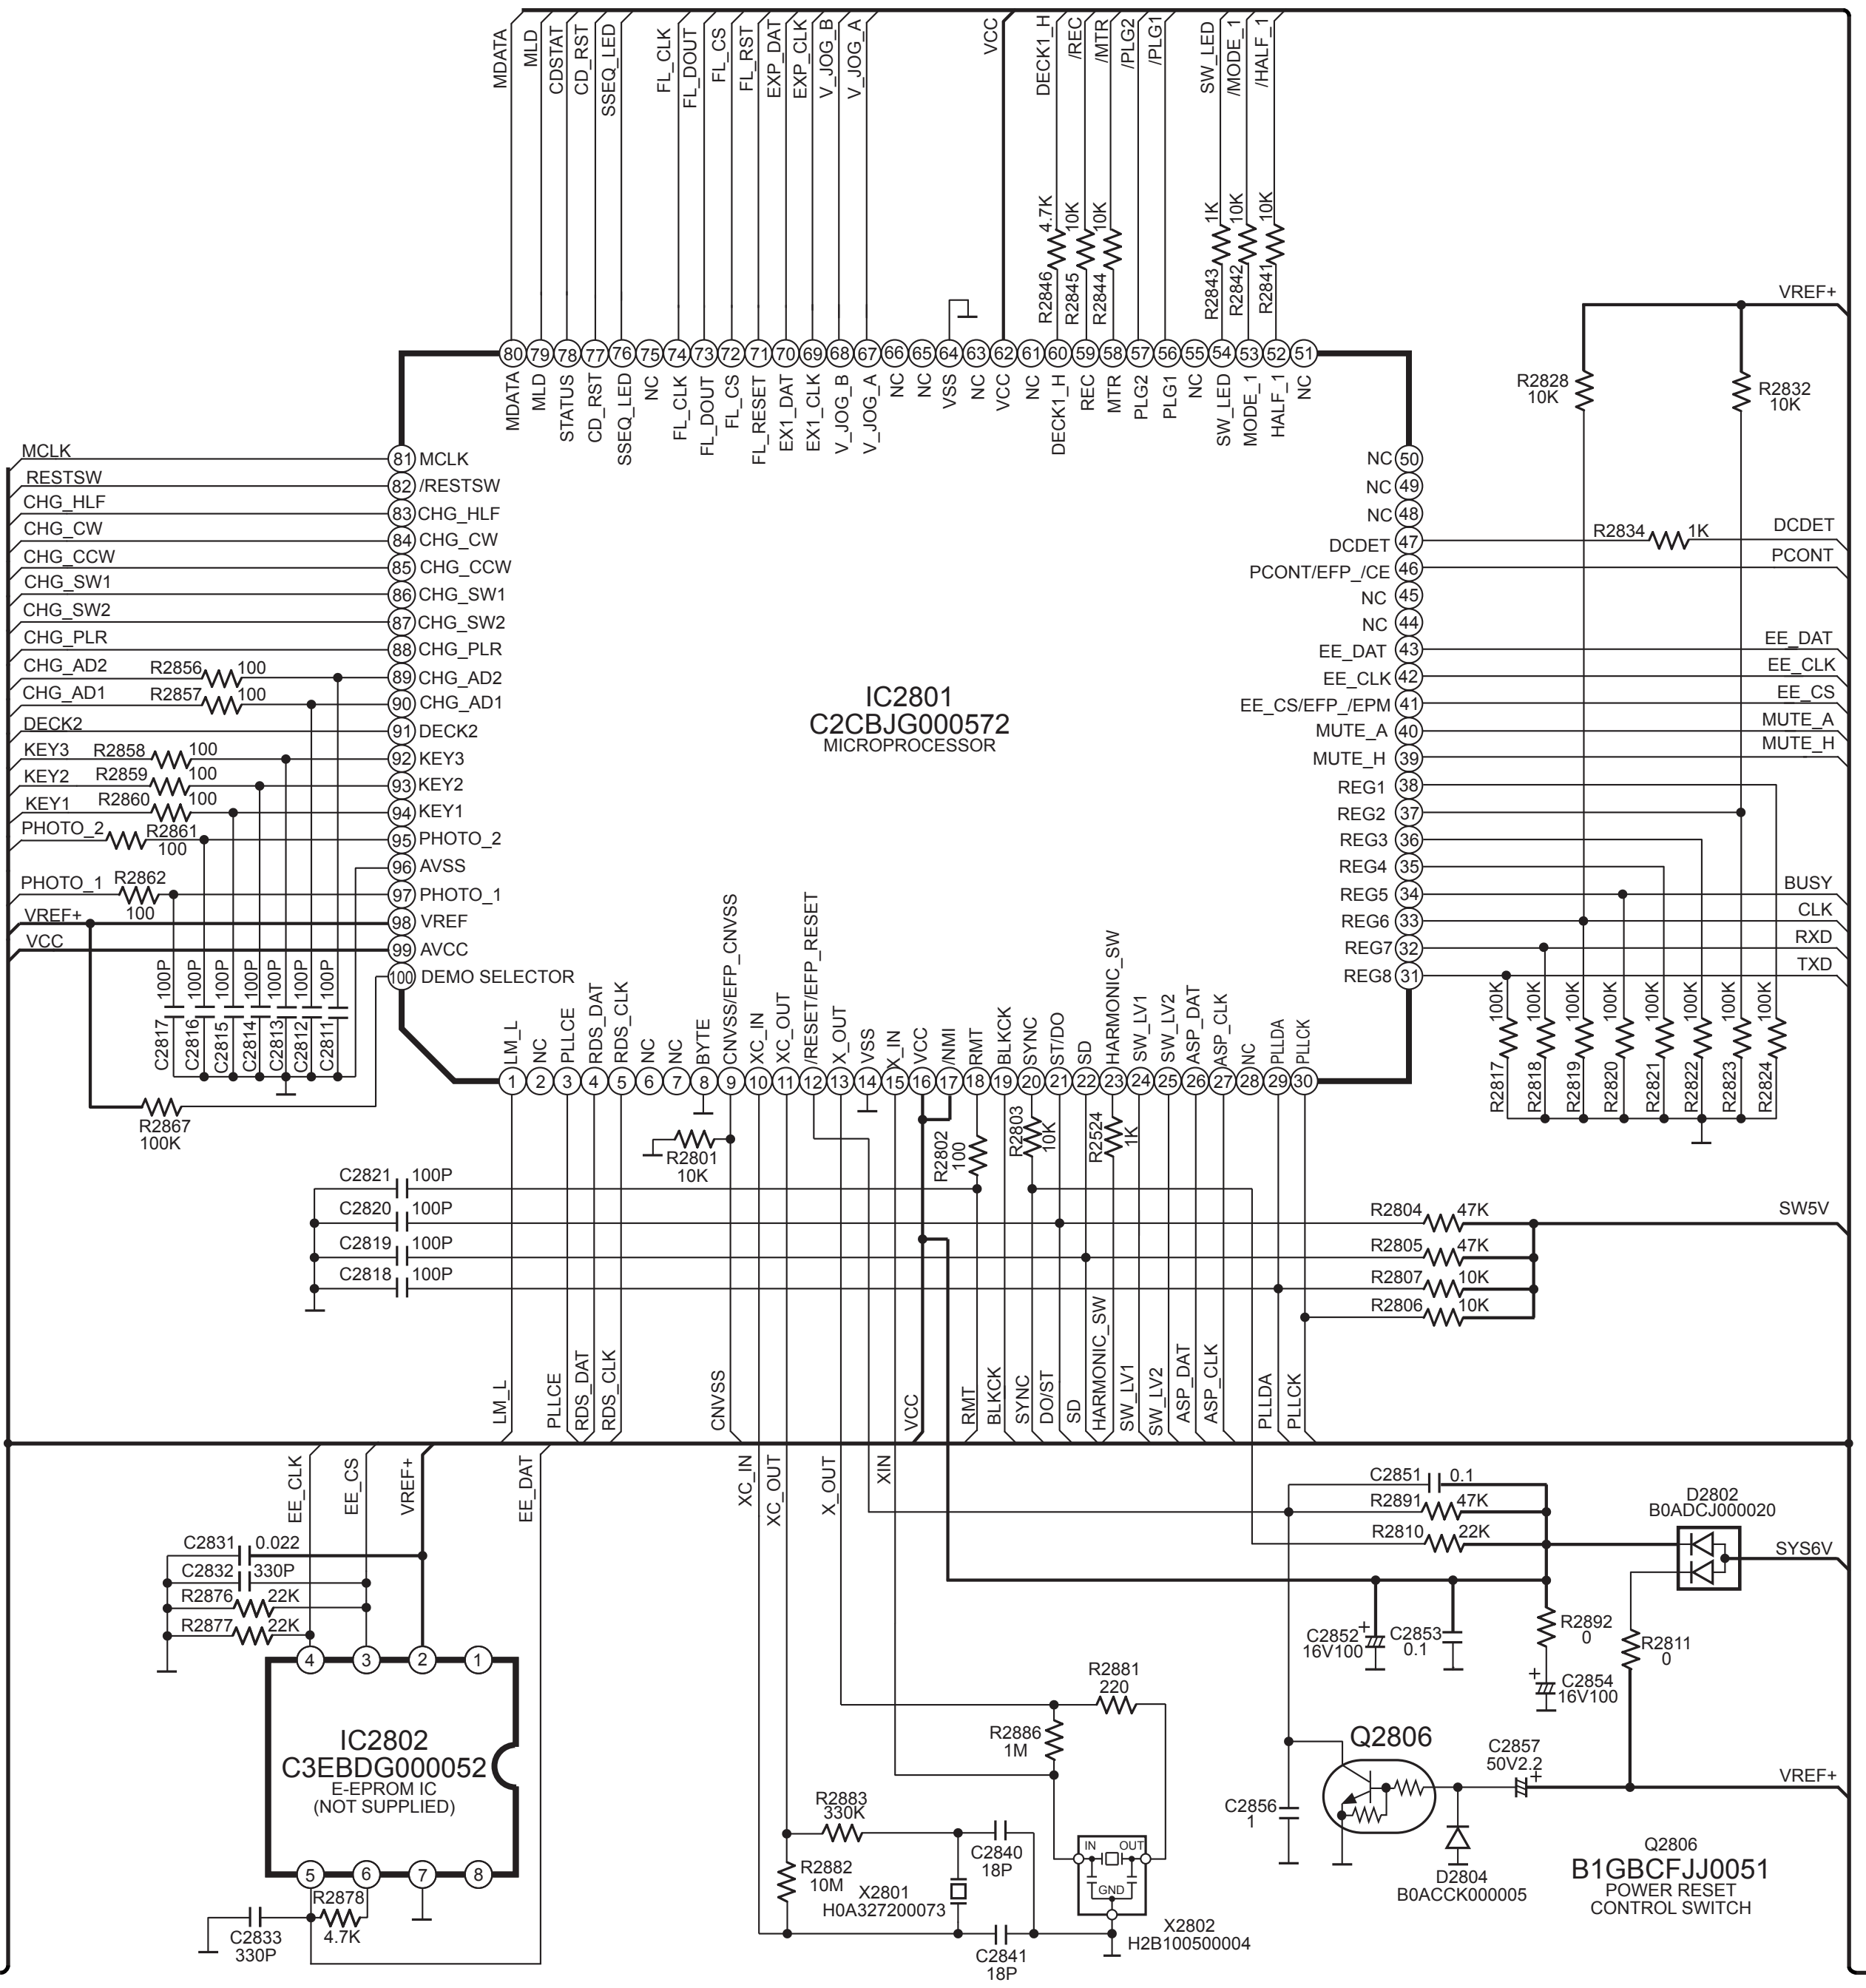

IC2801
C2CBJG000572
MICROPROCESSOR
MDATA
MLD
CDSTAT
CD_RST
SSEQ_LED
FL_CLK
FL_DOUT
FL_CS
FL_RST
EXP_DAT
EXP_CLK
V_JOG_B
V_JOG_A
VCC
DECK1_H
/REC
/MTR
/PLG2
/PLG1
SW_LED
/MODE_1
/HALF_1
R2846 4.7K
R2845 10K
R2844 10K
R2843 1K
R2842 10K
R2841 10K
VREF+
80 MDATA
79 MLD
78 STATUS
77 CD_RST
76 SSEQ_LED
75 NC
74 FL_CLK
73 FL_DOUT
72 FL_CS
71 FL_RESET
70 EX1_DAT
69 EX1_CLK
68 V_JOG_B
67 V_JOG_A
66 NC
65 NC
64 VSS
63 NC
62 VCC
61 NC
60 DECK1_H
59 REC
58 MTR
57 PLG2
56 PLG1
55 NC
54 SW_LED
53 MODE_1
52 HALF_1
51 NC
R2828 10K
R2832 10K
MCLK
RESTSW
CHG_HLF
CHG_CW
CHG_CCW
CHG_SW1
CHG_SW2
CHG_PLR
CHG_AD2
CHG_AD1
DECK2
KEY3
KEY2
KEY1
PHOTO_2
PHOTO_1
VREF+
VCC
R2856 100
R2857 100
R2858 100
R2859 100
R2860 100
R2861 100
R2862 100
81 MCLK
82 /RESTSW
83 CHG_HLF
84 CHG_CW
85 CHG_CCW
86 CHG_SW1
87 CHG_SW2
88 CHG_PLR
89 CHG_AD2
90 CHG_AD1
91 DECK2
92 KEY3
93 KEY2
94 KEY1
95 PHOTO_2
96 AVSS
97 PHOTO_1
98 VREF
99 AVCC
100 DEMO SELECTOR
C2817 100P
C2816 100P
C2815 100P
C2814 100P
C2813 100P
C2812 100P
C2811 100P
R2867 100K
NC 50
NC 49
NC 48
DCDET 47
PCONT/EFP_/CE 46
NC 45
NC 44
EE_DAT 43
EE_CLK 42
EE_CS/EFP_/EPM 41
MUTE_A 40
MUTE_H 39
REG1 38
REG2 37
REG3 36
REG4 35
REG5 34
REG6 33
REG7 32
REG8 31
R2834 1K
DCDET
PCONT
EE_DAT
EE_CLK
EE_CS
MUTE_A
MUTE_H
BUSY
CLK
RXD
TXD
R2817 100K
R2818 100K
R2819 100K
R2820 100K
R2821 100K
R2822 100K
R2823 100K
R2824 100K
1 LM_L
2 NC
3 PLLCE
4 RDS_DAT
5 RDS_CLK
6 NC
7 NC
8 BYTE
9 CNVSS/EFP_CNVSS
10 XC_IN
11 XC_OUT
12 /RESET/EFP_RESET
13 X_OUT
14 VSS
15 X_IN
16 VCC
17 /NMI
18 RMT
19 BLKCK
20 SYNC
21 ST/DO
22 SD
23 HARMONIC_SW
24 SW_LV1
25 SW_LV2
26 ASP_DAT
27 ASP_CLK
28 NC
29 PLLDA
30 PLLCK
R2801 10K
R2802 100
R2803 10K
R2524 1K
C2821 100P
C2820 100P
C2819 100P
C2818 100P
R2804 47K
R2805 47K
R2807 10K
R2806 10K
SW5V
LM_L
PLLCE
RDS_DAT
RDS_CLK
CNVSS
VCC
RMT
BLKCK
SYNC
DO/ST
SD
HARMONIC_SW
SW_LV1
SW_LV2
ASP_DAT
ASP_CLK
PLLDA
PLLCK
EE_CLK
EE_CS
VREF+
EE_DAT
XC_IN
XC_OUT
X_OUT
XIN
C2831 0.022
C2832 330P
R2876 22K
R2877 22K
IC2802
C3EBDG000052
E-EPROM IC
(NOT SUPPLIED)
R2878 4.7K
C2833 330P
R2881 220
R2886 1M
R2883 330K
R2882 10M
C2840 18P
C2841 18P
X2801
H0A327200073
X2802
H2B100500004
IN
OUT
GND
C2851 0.1
R2891 47K
R2810 22K
D2802
B0ADCJ000020
SYS6V
C2852 16V100
C2853 0.1
R2892 0
C2854 16V100
R2811 0
Q2806
C2856 1
C2857 50V2.2
D2804
B0ACCK000005
VREF+
Q2806
B1GBCFJJ0051
POWER RESET
CONTROL SWITCH

SCHEMATIC DIAGRAM - 8

—— : +B SIGNAL LINE
– – : -B SIGNAL LINE
⇨ : AUX SIGNAL LINE
⇨ : CD SIGNAL LINE
➡ : FM/AM SIGNAL LINE
⇨ : MAIN SIGNAL LINE
⇨ : PLAYBACK SIGNAL LINE
⇨ : RECORD SIGNAL LINE

B MAIN CIRCUIT

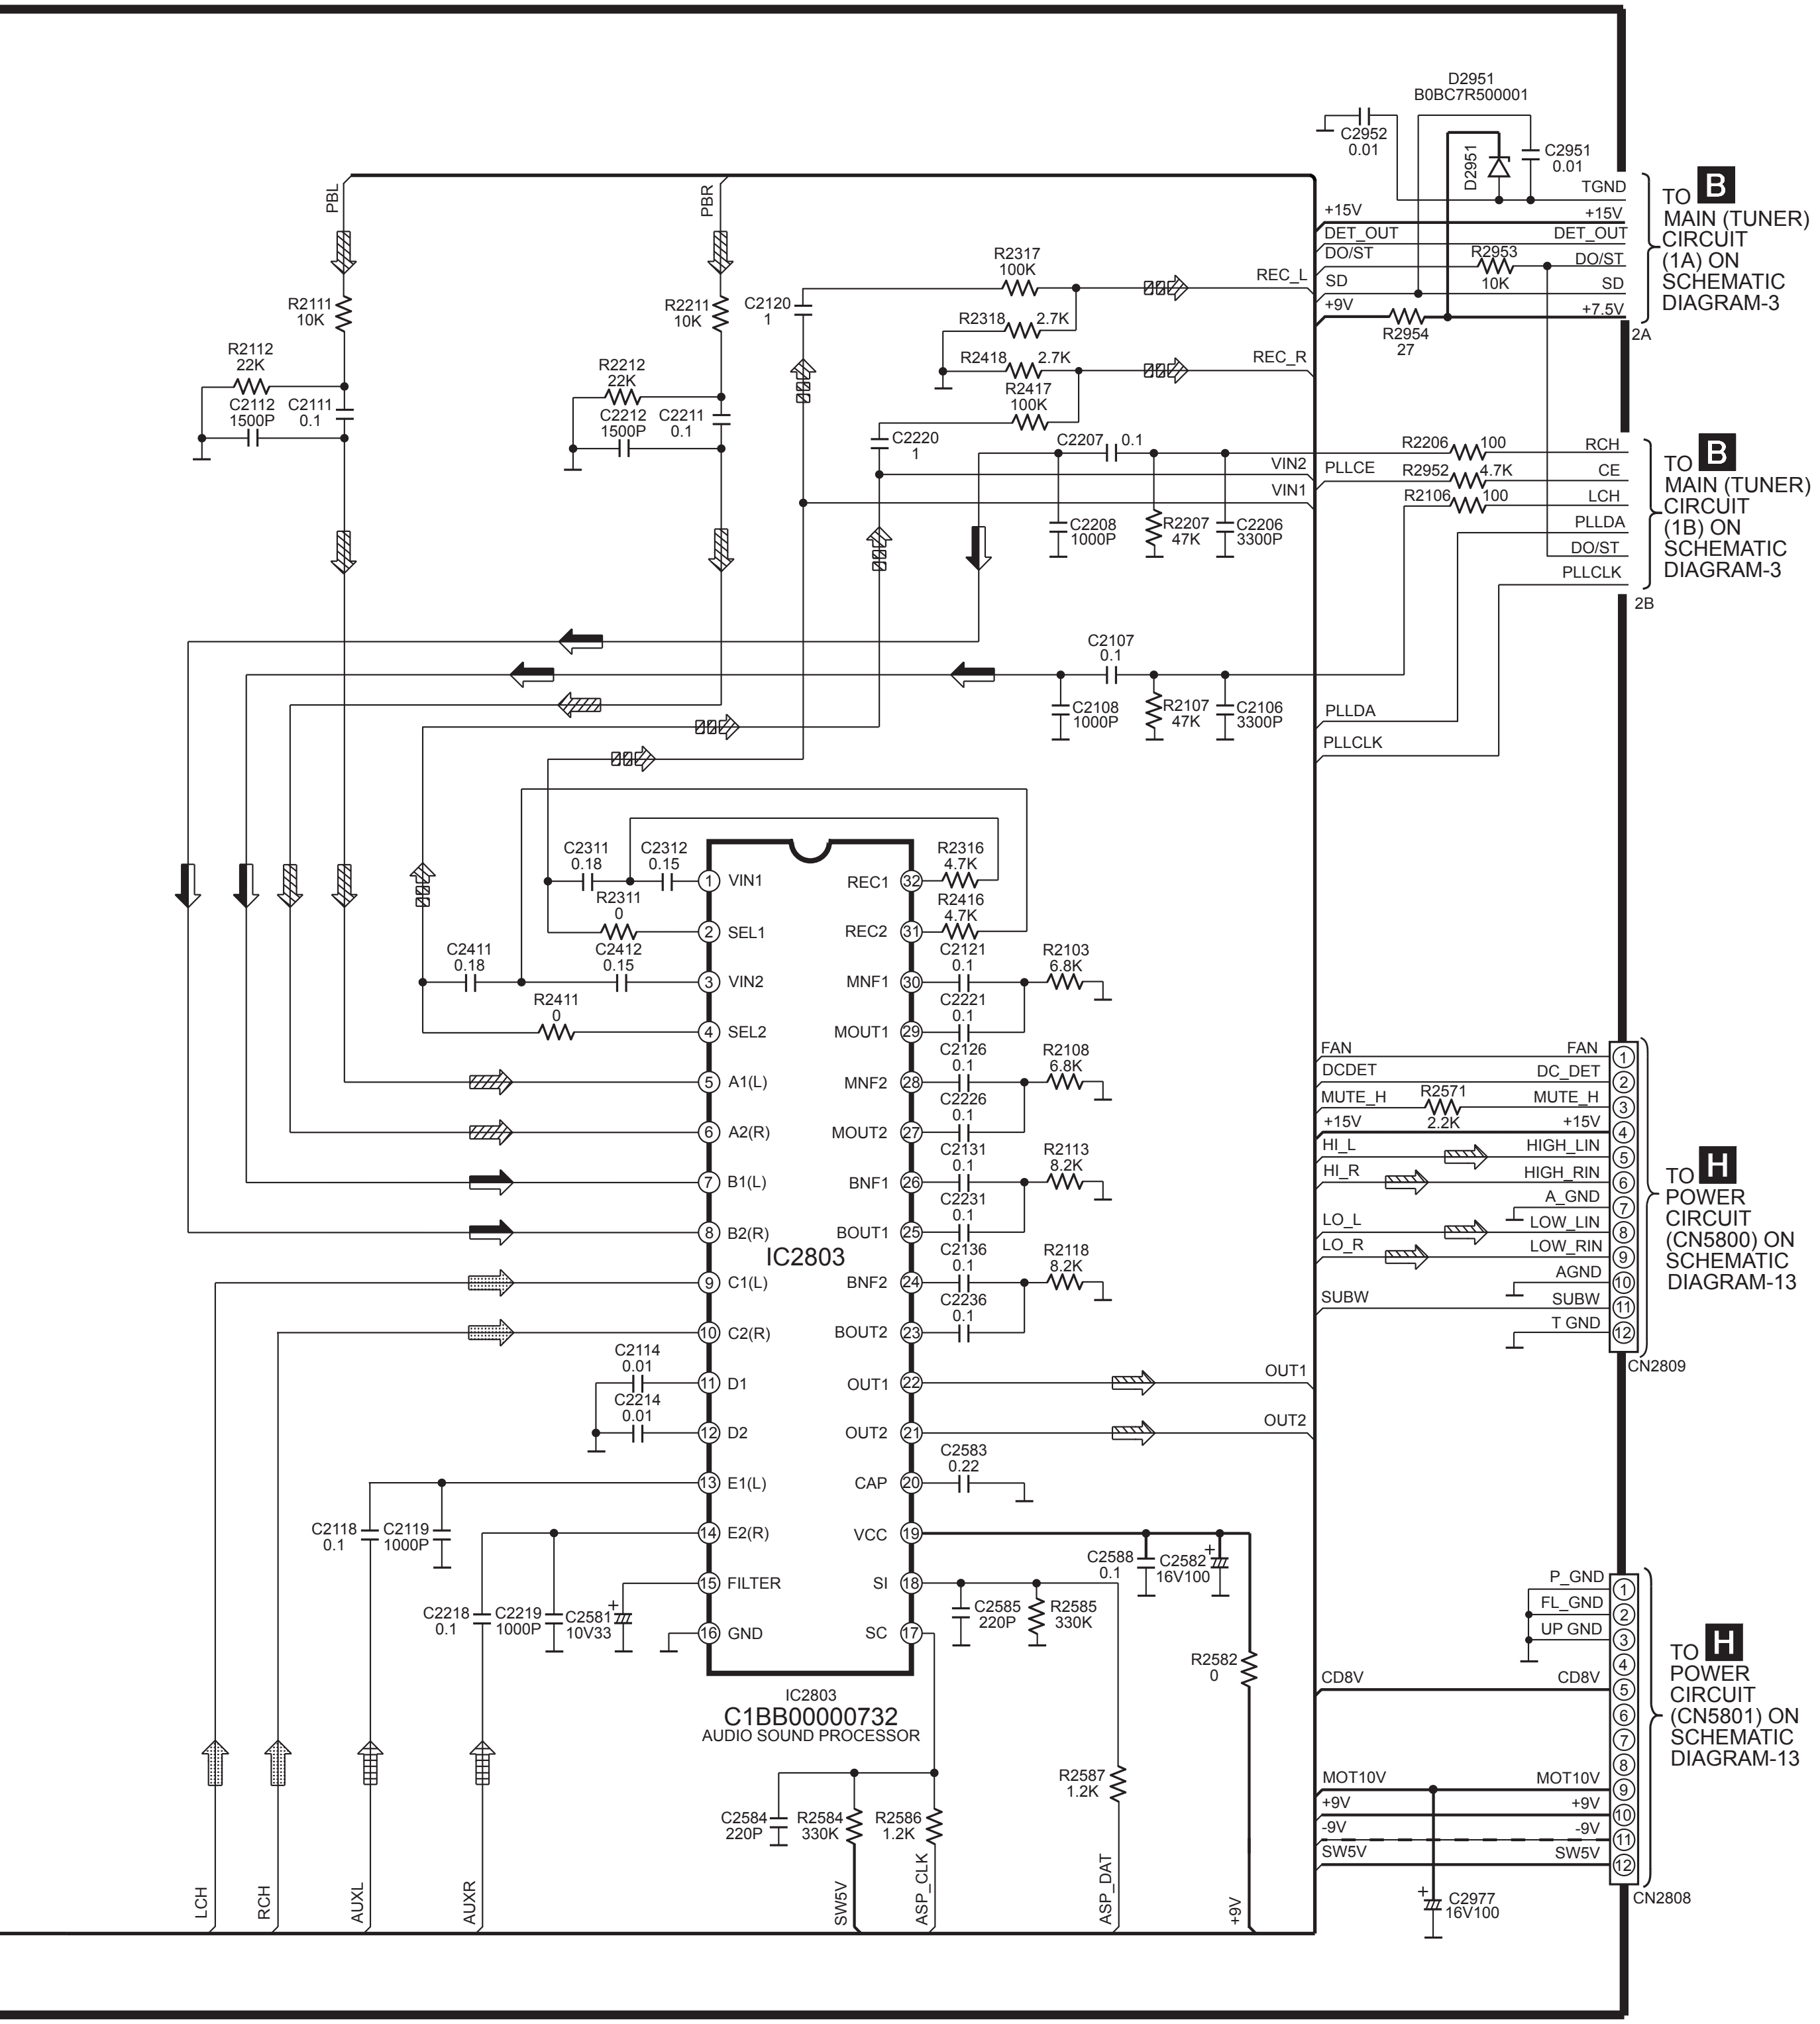

D2951
B0BC7R500001
C2952 0.01
C2951 0.01
D2951
TGND
+15V
DET_OUT
DO/ST
SD
+9V
+15V
DET_OUT
DO/ST
SD
+7.5V
R2953 10K
R2954 27
2A
TO B MAIN (TUNER) CIRCUIT (1A) ON SCHEMATIC DIAGRAM-3
PBL
PBR
R2111 10K
R2112 22K
C2112 1500P
C2111 0.1
R2211 10K
R2212 22K
C2212 1500P
C2211 0.1
C2120 1
R2317 100K
R2318 2.7K
R2418 2.7K
R2417 100K
REC_L
REC_R
C2220 1
C2207 0.1
VIN2
VIN1
PLLCE
R2206 100
R2952 4.7K
R2106 100
RCH
CE
LCH
PLLDA
DO/ST
PLLCLK
2B
TO B MAIN (TUNER) CIRCUIT (1B) ON SCHEMATIC DIAGRAM-3
C2208 1000P
R2207 47K
C2206 3300P
C2107 0.1
C2108 1000P
R2107 47K
C2106 3300P
PLLDA
PLLCLK
C2311 0.18
C2312 0.15
R2311 0
C2411 0.18
C2412 0.15
R2411 0
R2316 4.7K
R2416 4.7K
C2121 0.1
C2221 0.1
R2103 6.8K
C2126 0.1
C2226 0.1
R2108 6.8K
C2131 0.1
C2231 0.1
R2113 8.2K
C2136 0.1
C2236 0.1
R2118 8.2K
1 VIN1
2 SEL1
3 VIN2
4 SEL2
5 A1(L)
6 A2(R)
7 B1(L)
8 B2(R)
9 C1(L)
10 C2(R)
11 D1
12 D2
13 E1(L)
14 E2(R)
15 FILTER
16 GND
32 REC1
31 REC2
30 MNF1
29 MOUT1
28 MNF2
27 MOUT2
26 BNF1
25 BOUT1
24 BNF2
23 BOUT2
22 OUT1
21 OUT2
20 CAP
19 VCC
18 SI
17 SC
IC2803
C2114 0.01
C2214 0.01
C2118 0.1
C2119 1000P
C2218 0.1
C2219 1000P
C2581 10V33
C2583 0.22
C2588 0.1
C2582 16V100
C2585 220P
R2585 330K
R2582 0
R2587 1.2K
C2584 220P
R2584 330K
R2586 1.2K
IC2803
C1BB00000732
AUDIO SOUND PROCESSOR
OUT1
OUT2
LCH
RCH
AUXL
AUXR
SW5V
ASP_CLK
ASP_DAT
+9V
FAN
DCDET
MUTE_H
+15V
HI_L
HI_R
LO_L
LO_R
SUBW
R2571 2.2K
FAN
DC_DET
MUTE_H
+15V
HIGH_LIN
HIGH_RIN
A_GND
LOW_LIN
LOW_RIN
AGND
SUBW
T GND
CN2809
TO H POWER CIRCUIT (CN5800) ON SCHEMATIC DIAGRAM-13
P_GND
FL_GND
UP GND
CD8V
CD8V
MOT10V
+9V
-9V
SW5V
MOT10V
+9V
-9V
SW5V
C2977 16V100
CN2808
TO H POWER CIRCUIT (CN5801) ON SCHEMATIC DIAGRAM-13

SCHEMATIC DIAGRAM - 9

C PANEL CIRCUIT

—— : +B SIGNAL LINE
– – : -B SIGNAL LINE
⇨ : MAIN SIGNAL LINE

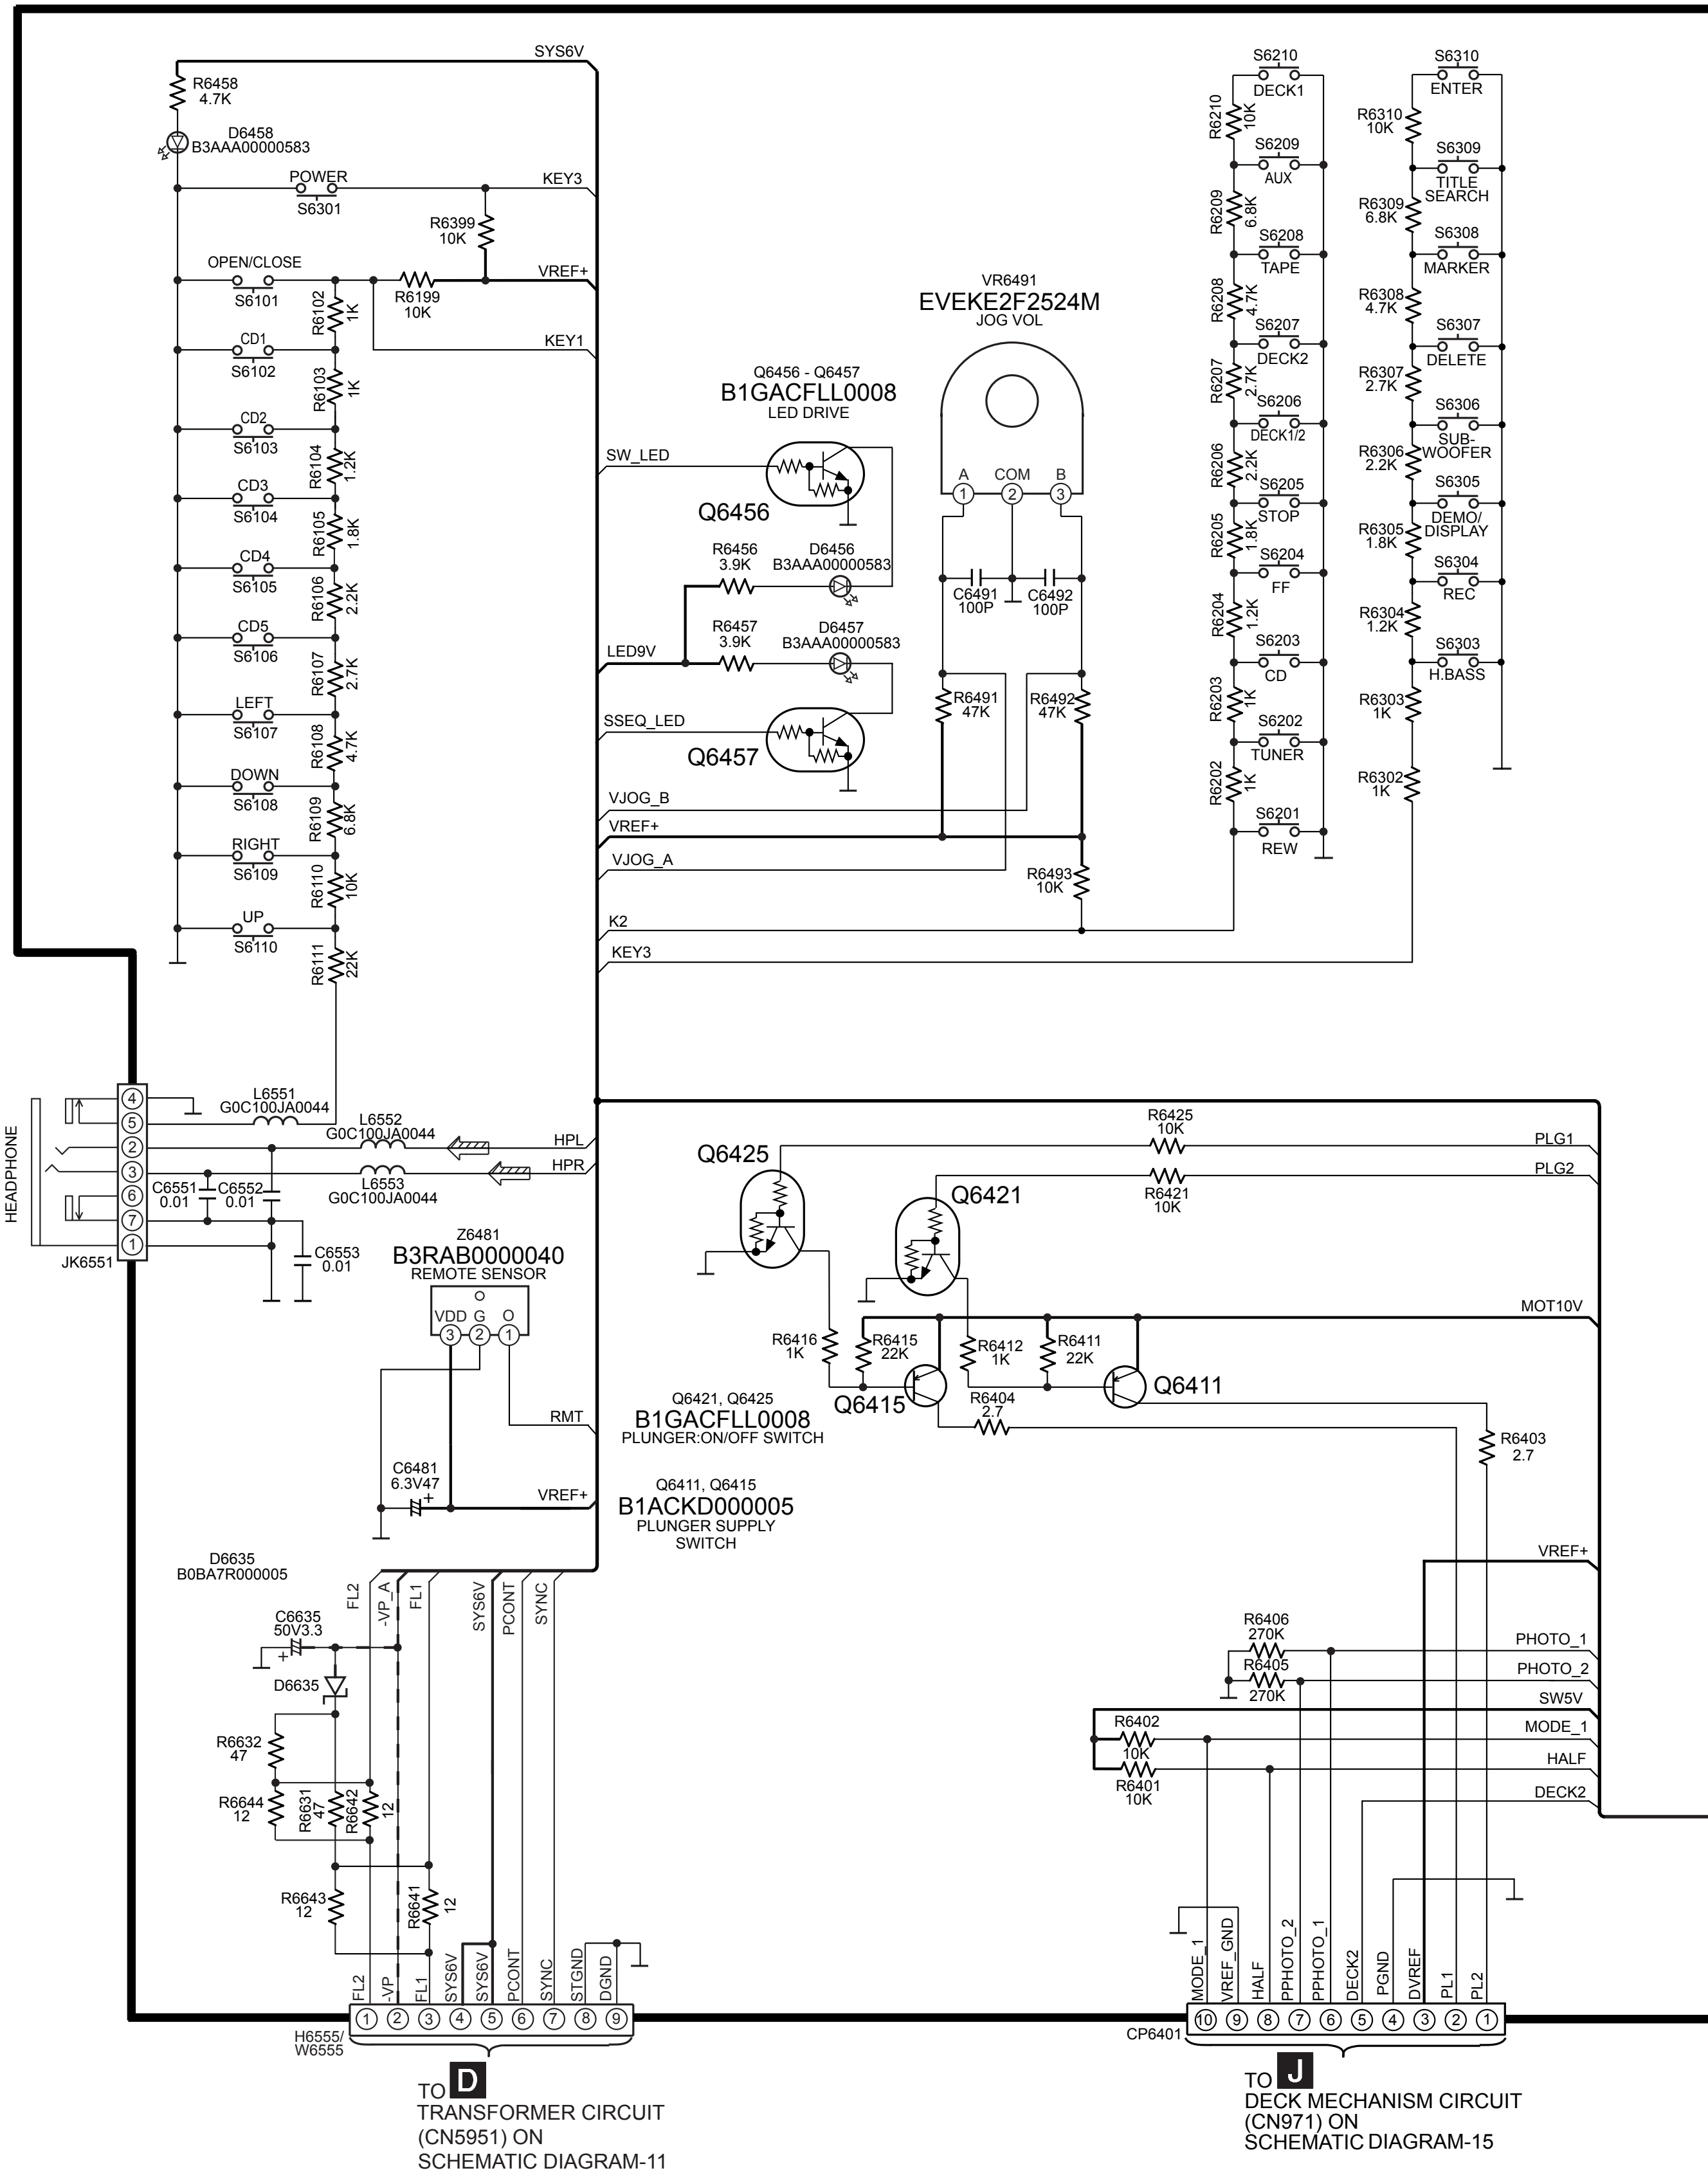

SYS6V
R6458
4.7K
D6458
B3AAA00000583
POWER
S6301
KEY3
R6399
10K
OPEN/CLOSE
S6101
R6199
10K
VREF+
R6102
1K
CD1
S6102
KEY1
R6103
1K
CD2
S6103
R6104
1.2K
CD3
S6104
R6105
1.8K
CD4
S6105
R6106
2.2K
CD5
S6106
R6107
2.7K
LEFT
S6107
R6108
4.7K
DOWN
S6108
R6109
6.8K
RIGHT
S6109
R6110
10K
UP
S6110
R6111
22K
Q6456 - Q6457
B1GACFLL0008
LED DRIVE
SW_LED
Q6456
R6456
3.9K
D6456
B3AAA00000583
LED9V
R6457
3.9K
D6457
B3AAA00000583
SSEQ_LED
Q6457
VJOG_B
VREF+
VJOG_A
K2
KEY3
VR6491
EVEKE2F2524M
JOG VOL
A
COM
B
C6491
100P
C6492
100P
R6491
47K
R6492
47K
R6493
10K
S6210
DECK1
R6210
10K
S6209
AUX
R6209
6.8K
S6208
TAPE
R6208
4.7K
S6207
DECK2
R6207
2.7K
S6206
DECK1/2
R6206
2.2K
S6205
STOP
R6205
1.8K
S6204
FF
R6204
1.2K
S6203
CD
R6203
1K
S6202
TUNER
R6202
1K
S6201
REW
S6310
ENTER
R6310
10K
S6309
TITLE SEARCH
R6309
6.8K
S6308
MARKER
R6308
4.7K
S6307
DELETE
R6307
2.7K
S6306
SUB-WOOFER
R6306
2.2K
S6305
DEMO/DISPLAY
R6305
1.8K
S6304
REC
R6304
1.2K
S6303
H.BASS
R6303
1K
R6302
1K
HEADPHONE
JK6551
L6551
G0C100JA0044
L6552
G0C100JA0044
L6553
G0C100JA0044
HPL
HPR
C6551
0.01
C6552
0.01
C6553
0.01
Z6481
B3RAB0000040
REMOTE SENSOR
VDD G O
RMT
C6481
6.3V47
VREF+
Q6425
Q6421
R6425
10K
PLG1
R6421
10K
PLG2
MOT10V
R6416
1K
R6415
22K
R6412
1K
R6411
22K
Q6415
Q6411
R6404
2.7
R6403
2.7
Q6421, Q6425
B1GACFLL0008
PLUNGER:ON/OFF SWITCH
Q6411, Q6415
B1ACKD000005
PLUNGER SUPPLY SWITCH
VREF+
R6406
270K
R6405
270K
PHOTO_1
PHOTO_2
SW5V
R6402
10K
R6401
10K
MODE_1
HALF
DECK2
D6635
B0BA7R000005
C6635
50V3.3
D6635
R6632
47
R6644
12
R6631
47
R6642
12
R6643
12
R6641
12
FL2
-VP_A
FL1
SYS6V
PCONT
SYNC
FL2
-VP
FL1
SYS6V
SYS6V
PCONT
SYNC
STGND
DGND
H6555/
W6555
MODE_1
VREF_GND
HALF
PPHOTO_2
PPHOTO_1
DECK2
PGND
DVREF
PL1
PL2
CP6401
TO D
TRANSFORMER CIRCUIT
(CN5951) ON
SCHEMATIC DIAGRAM-11
TO J
DECK MECHANISM CIRCUIT
(CN971) ON
SCHEMATIC DIAGRAM-15

SCHEMATIC DIAGRAM - 10

C PANEL CIRCUIT

—— : +B SIGNAL LINE　　– – : -B SIGNAL LINE　　⇨ : MAIN SIGNAL LINE

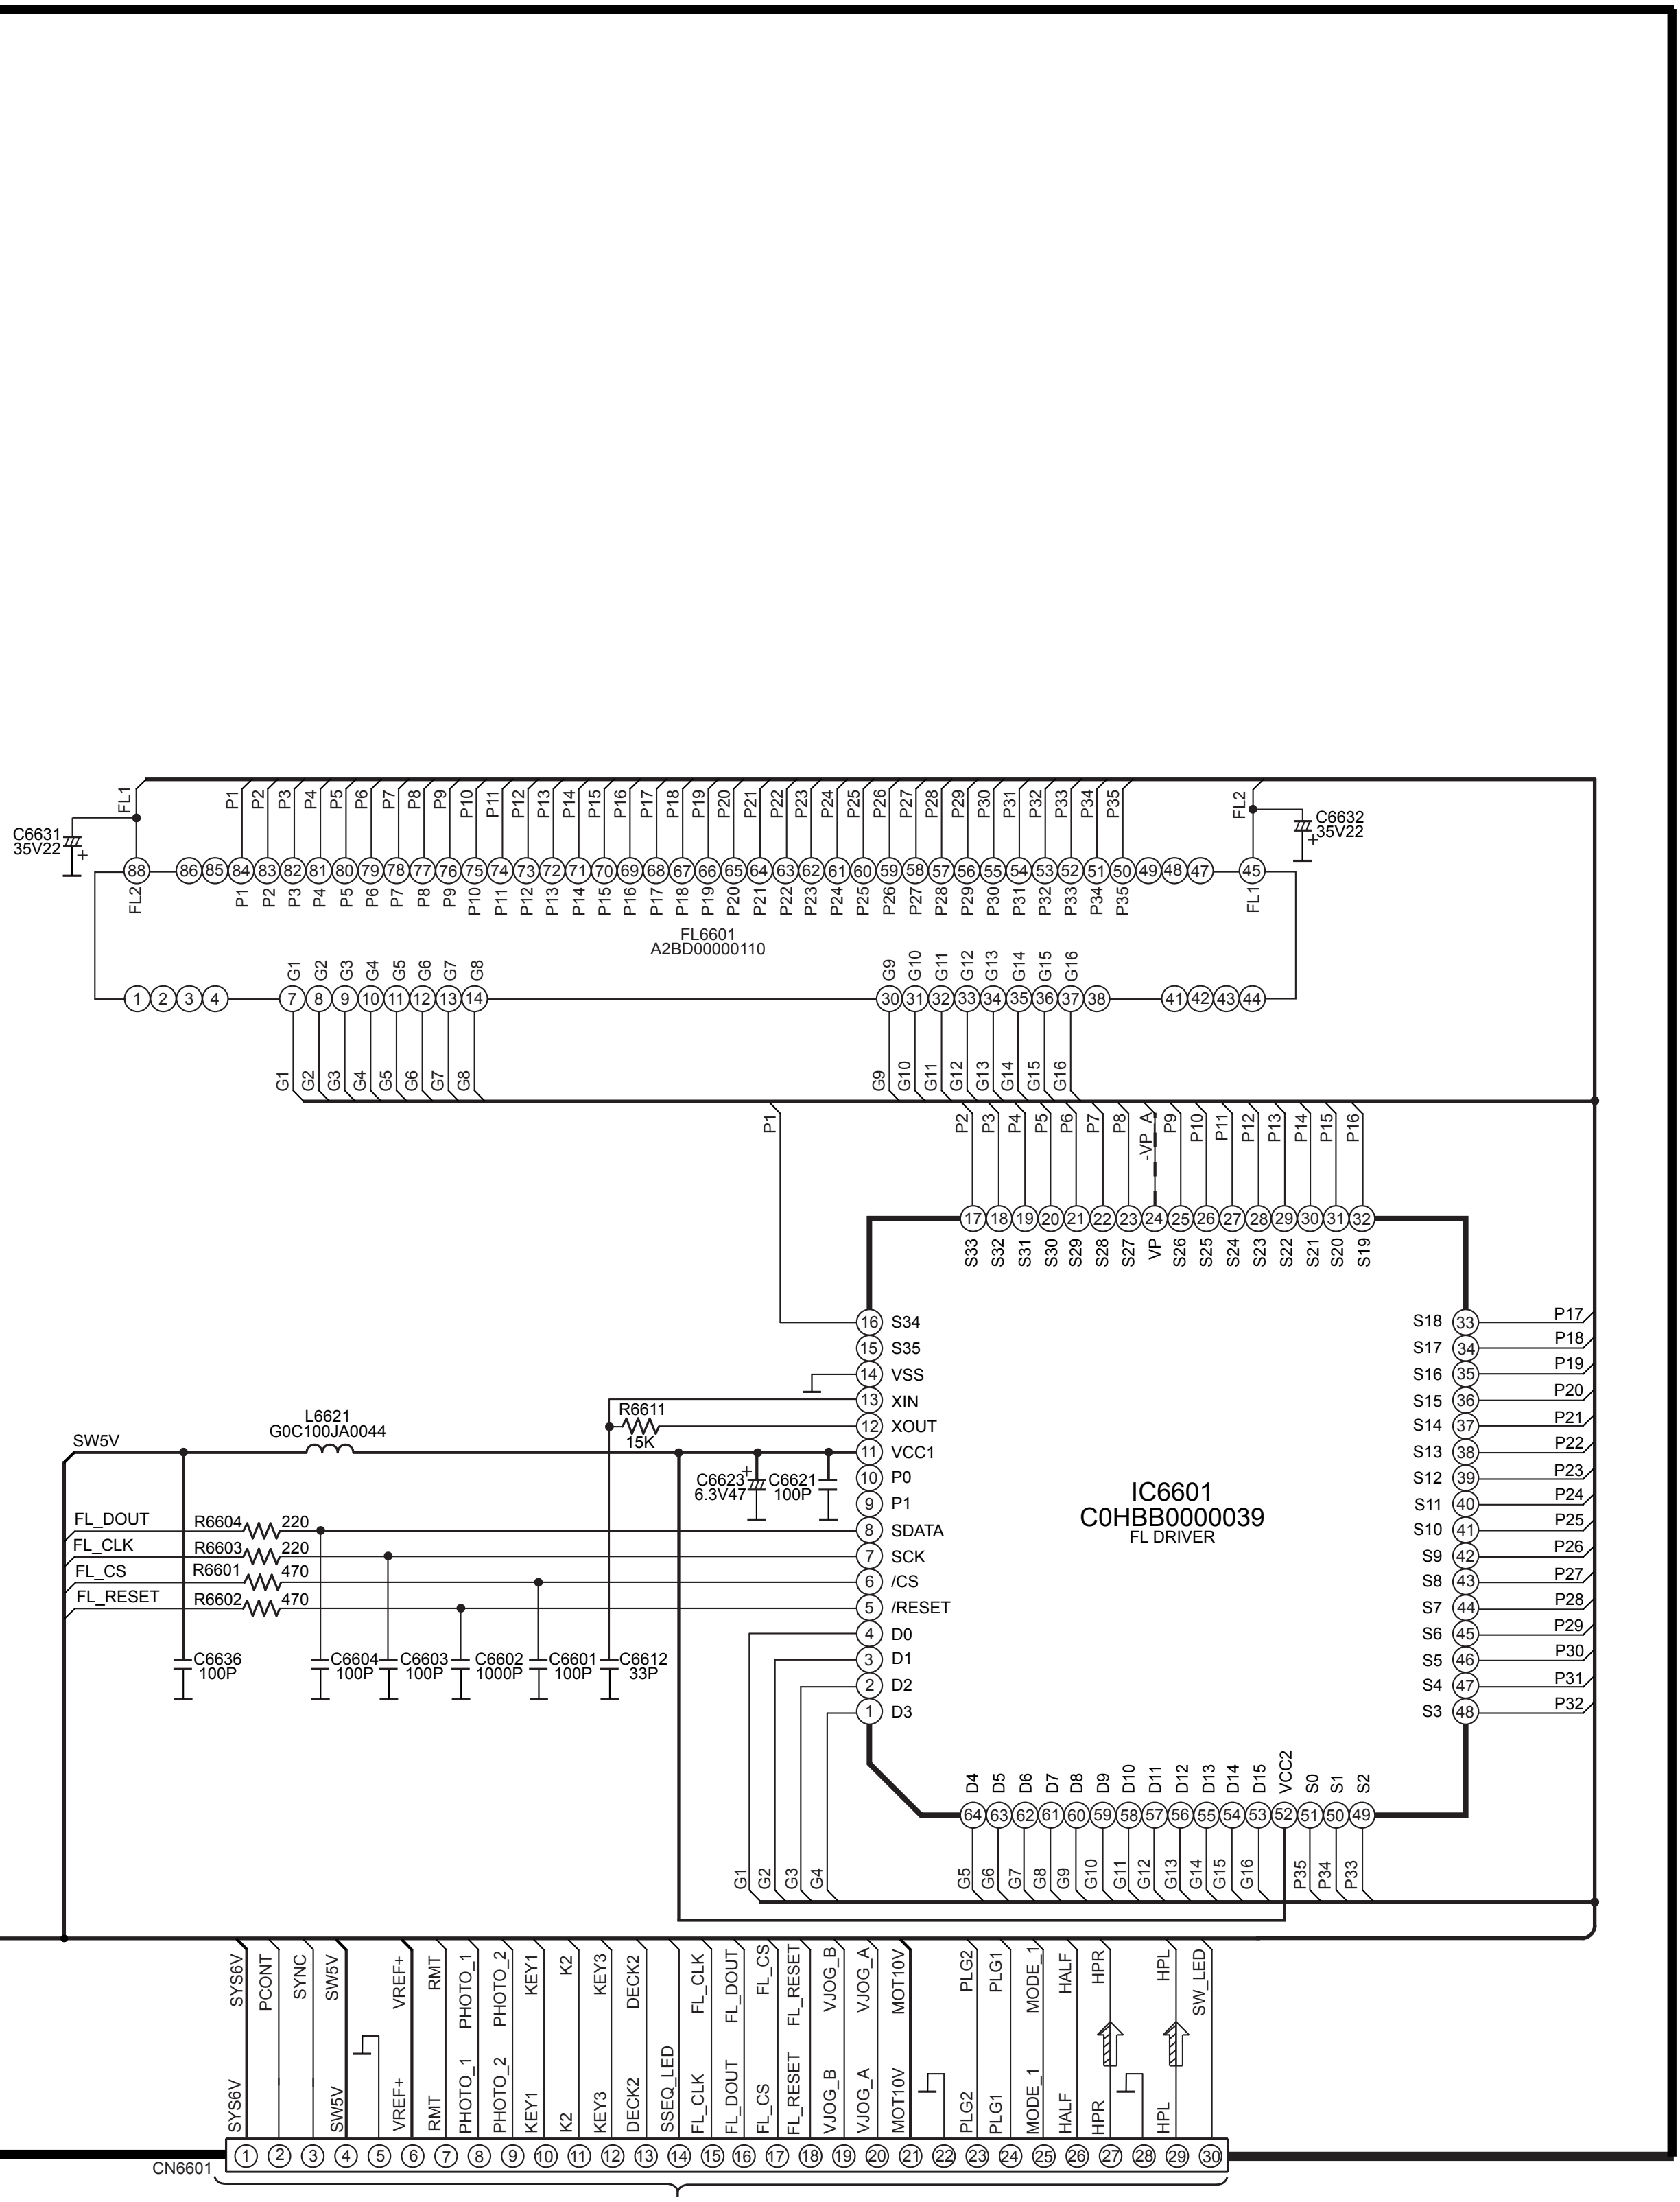

FL6601
A2BD00000110
C6631
35V22
C6632
35V22
FL1
FL2
P1 P2 P3 P4 P5 P6 P7 P8 P9 P10 P11 P12 P13 P14 P15 P16 P17 P18 P19 P20 P21 P22 P23 P24 P25 P26 P27 P28 P29 P30 P31 P32 P33 P34 P35
G1 G2 G3 G4 G5 G6 G7 G8 G9 G10 G11 G12 G13 G14 G15 G16
-VP_A
IC6601
C0HBB0000039
FL DRIVER
S34
S35
VSS
XIN
XOUT
VCC1
P0
P1
SDATA
SCK
/CS
/RESET
D0
D1
D2
D3
S33 S32 S31 S30 S29 S28 S27 VP S26 S25 S24 S23 S22 S21 S20 S19
S18 S17 S16 S15 S14 S13 S12 S11 S10 S9 S8 S7 S6 S5 S4 S3
D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 VCC2 S0 S1 S2
L6621
G0C100JA0044
SW5V
R6611
15K
C6623
6.3V47
C6621
100P
FL_DOUT
FL_CLK
FL_CS
FL_RESET
R6604 220
R6603 220
R6601 470
R6602 470
C6636 100P
C6604 100P
C6603 100P
C6602 1000P
C6601 100P
C6612 33P
SYS6V
PCONT
SYNC
SW5V
VREF+
RMT
PHOTO_1
PHOTO_2
KEY1
K2
KEY3
DECK2
SSEQ_LED
FL_CLK
FL_DOUT
FL_CS
FL_RESET
VJOG_B
VJOG_A
MOT10V
PLG2
PLG1
MODE_1
HALF
HPR
HPL
SW_LED
CN6601

TO **B**
MAIN CIRCUIT
(CN2806) ON
SCHEMATIC
DIAGRAM-5

SCHEMATIC DIAGRAM - 11

—— : +B SIGNAL LINE   – – : -B SIGNAL LINE

D TRANSFORMER CIRCUIT

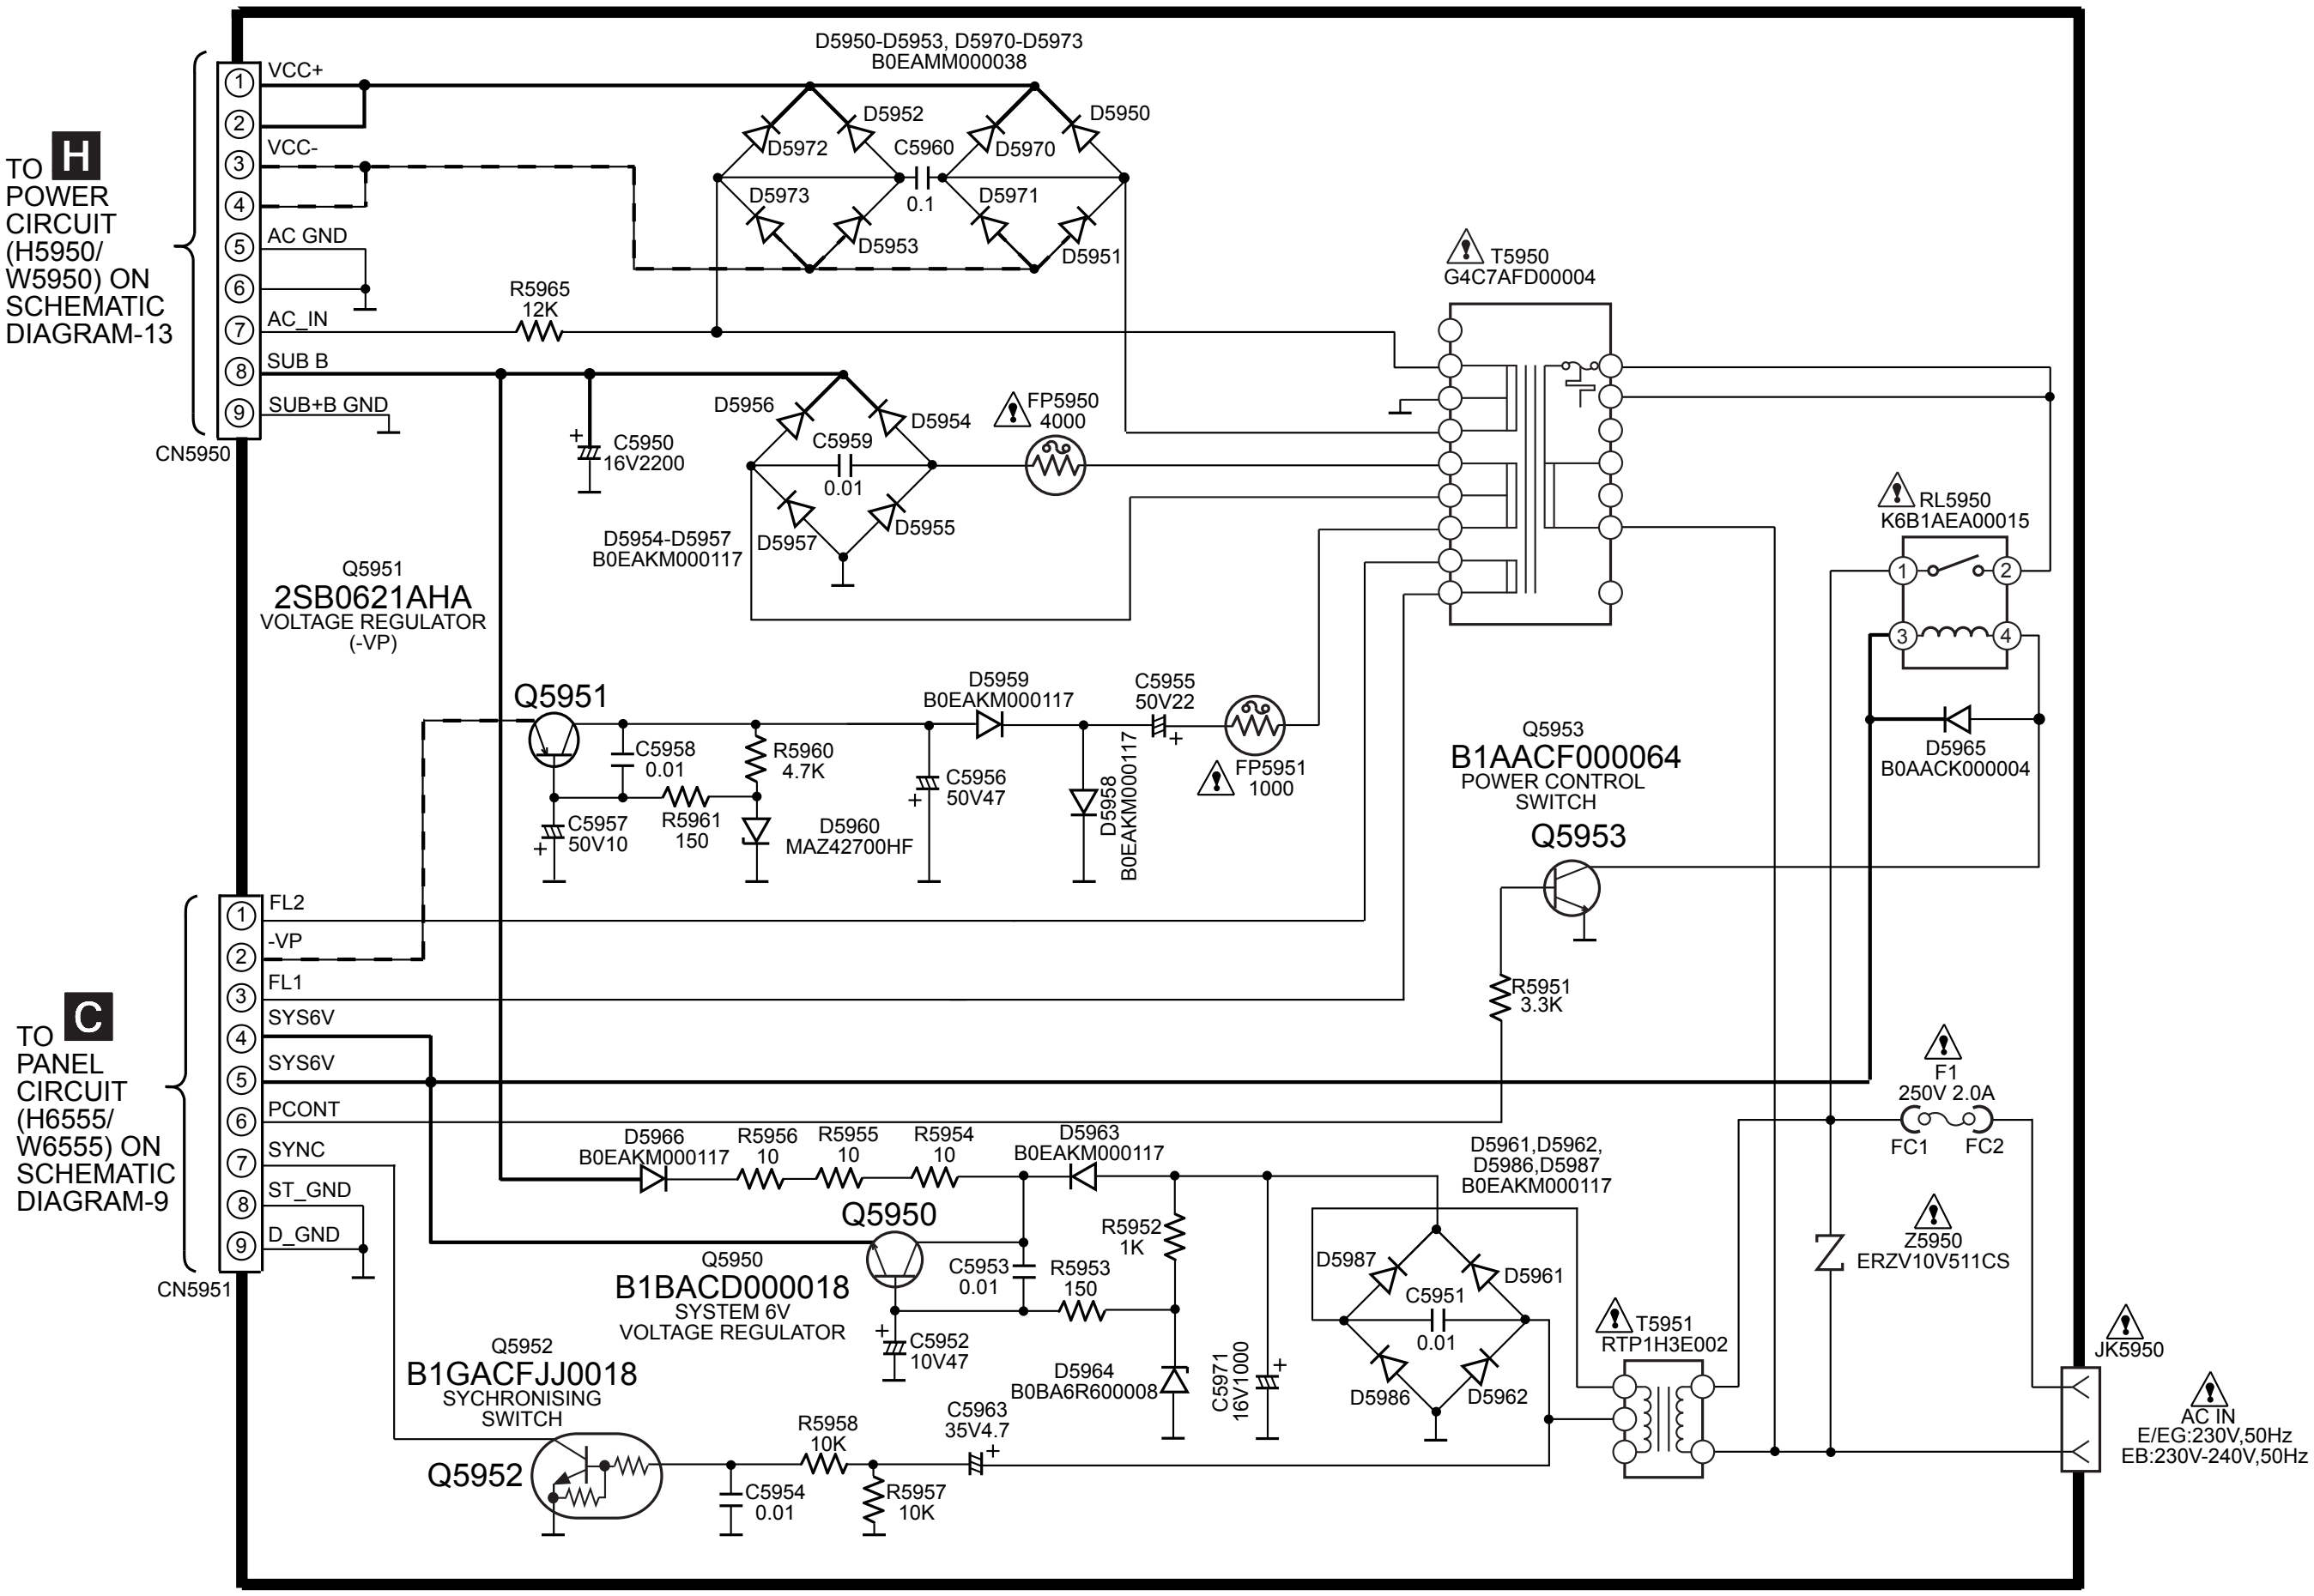
TO H POWER CIRCUIT (H5950/ W5950) ON SCHEMATIC DIAGRAM-13
CN5950
① VCC+
②
③ VCC-
④
⑤ AC GND
⑥
⑦ AC_IN
⑧ SUB B
⑨ SUB+B GND
D5950-D5953, D5970-D5973
B0EAMM000038
D5952
D5950
D5972
C5960
D5970
D5973
0.1
D5971
D5953
D5951
R5965
12K
T5950
G4C7AFD00004
D5956
D5954
FP5950
4000
C5950
16V2200
C5959
0.01
D5957
D5955
D5954-D5957
B0EAKM000117
RL5950
K6B1AEA00015
Q5951
2SB0621AHA
VOLTAGE REGULATOR
(-VP)
Q5951
C5958
0.01
R5960
4.7K
D5959
B0EAKM000117
C5955
50V22
FP5951
1000
C5956
50V47
D5958
B0EAKM000117
C5957
50V10
R5961
150
D5960
MAZ42700HF
Q5953
B1AACF000064
POWER CONTROL
SWITCH
Q5953
D5965
B0AACK000004
TO C PANEL CIRCUIT (H6555/ W6555) ON SCHEMATIC DIAGRAM-9
CN5951
① FL2
② -VP
③ FL1
④ SYS6V
⑤ SYS6V
⑥ PCONT
⑦ SYNC
⑧ ST_GND
⑨ D_GND
R5951
3.3K
F1
250V 2.0A
FC1
FC2
D5966
B0EAKM000117
R5956
10
R5955
10
R5954
10
D5963
B0EAKM000117
D5961,D5962,
D5986,D5987
B0EAKM000117
Q5950
R5952
1K
Z5950
ERZV10V511CS
Q5950
B1BACD000018
SYSTEM 6V
VOLTAGE REGULATOR
C5953
0.01
R5953
150
D5987
D5961
C5951
0.01
C5952
10V47
D5964
B0BA6R600008
C5971
16V1000
T5951
RTP1H3E002
D5986
D5962
JK5950
AC IN
E/EG:230V,50Hz
EB:230V-240V,50Hz
Q5952
B1GACFJJ0018
SYCHRONISING
SWITCH
R5958
10K
C5963
35V4.7
Q5952
C5954
0.01
R5957
10K

SCHEMATIC DIAGRAM - 12

—— : +B SIGNAL LINE   – – : -B SIGNAL LINE

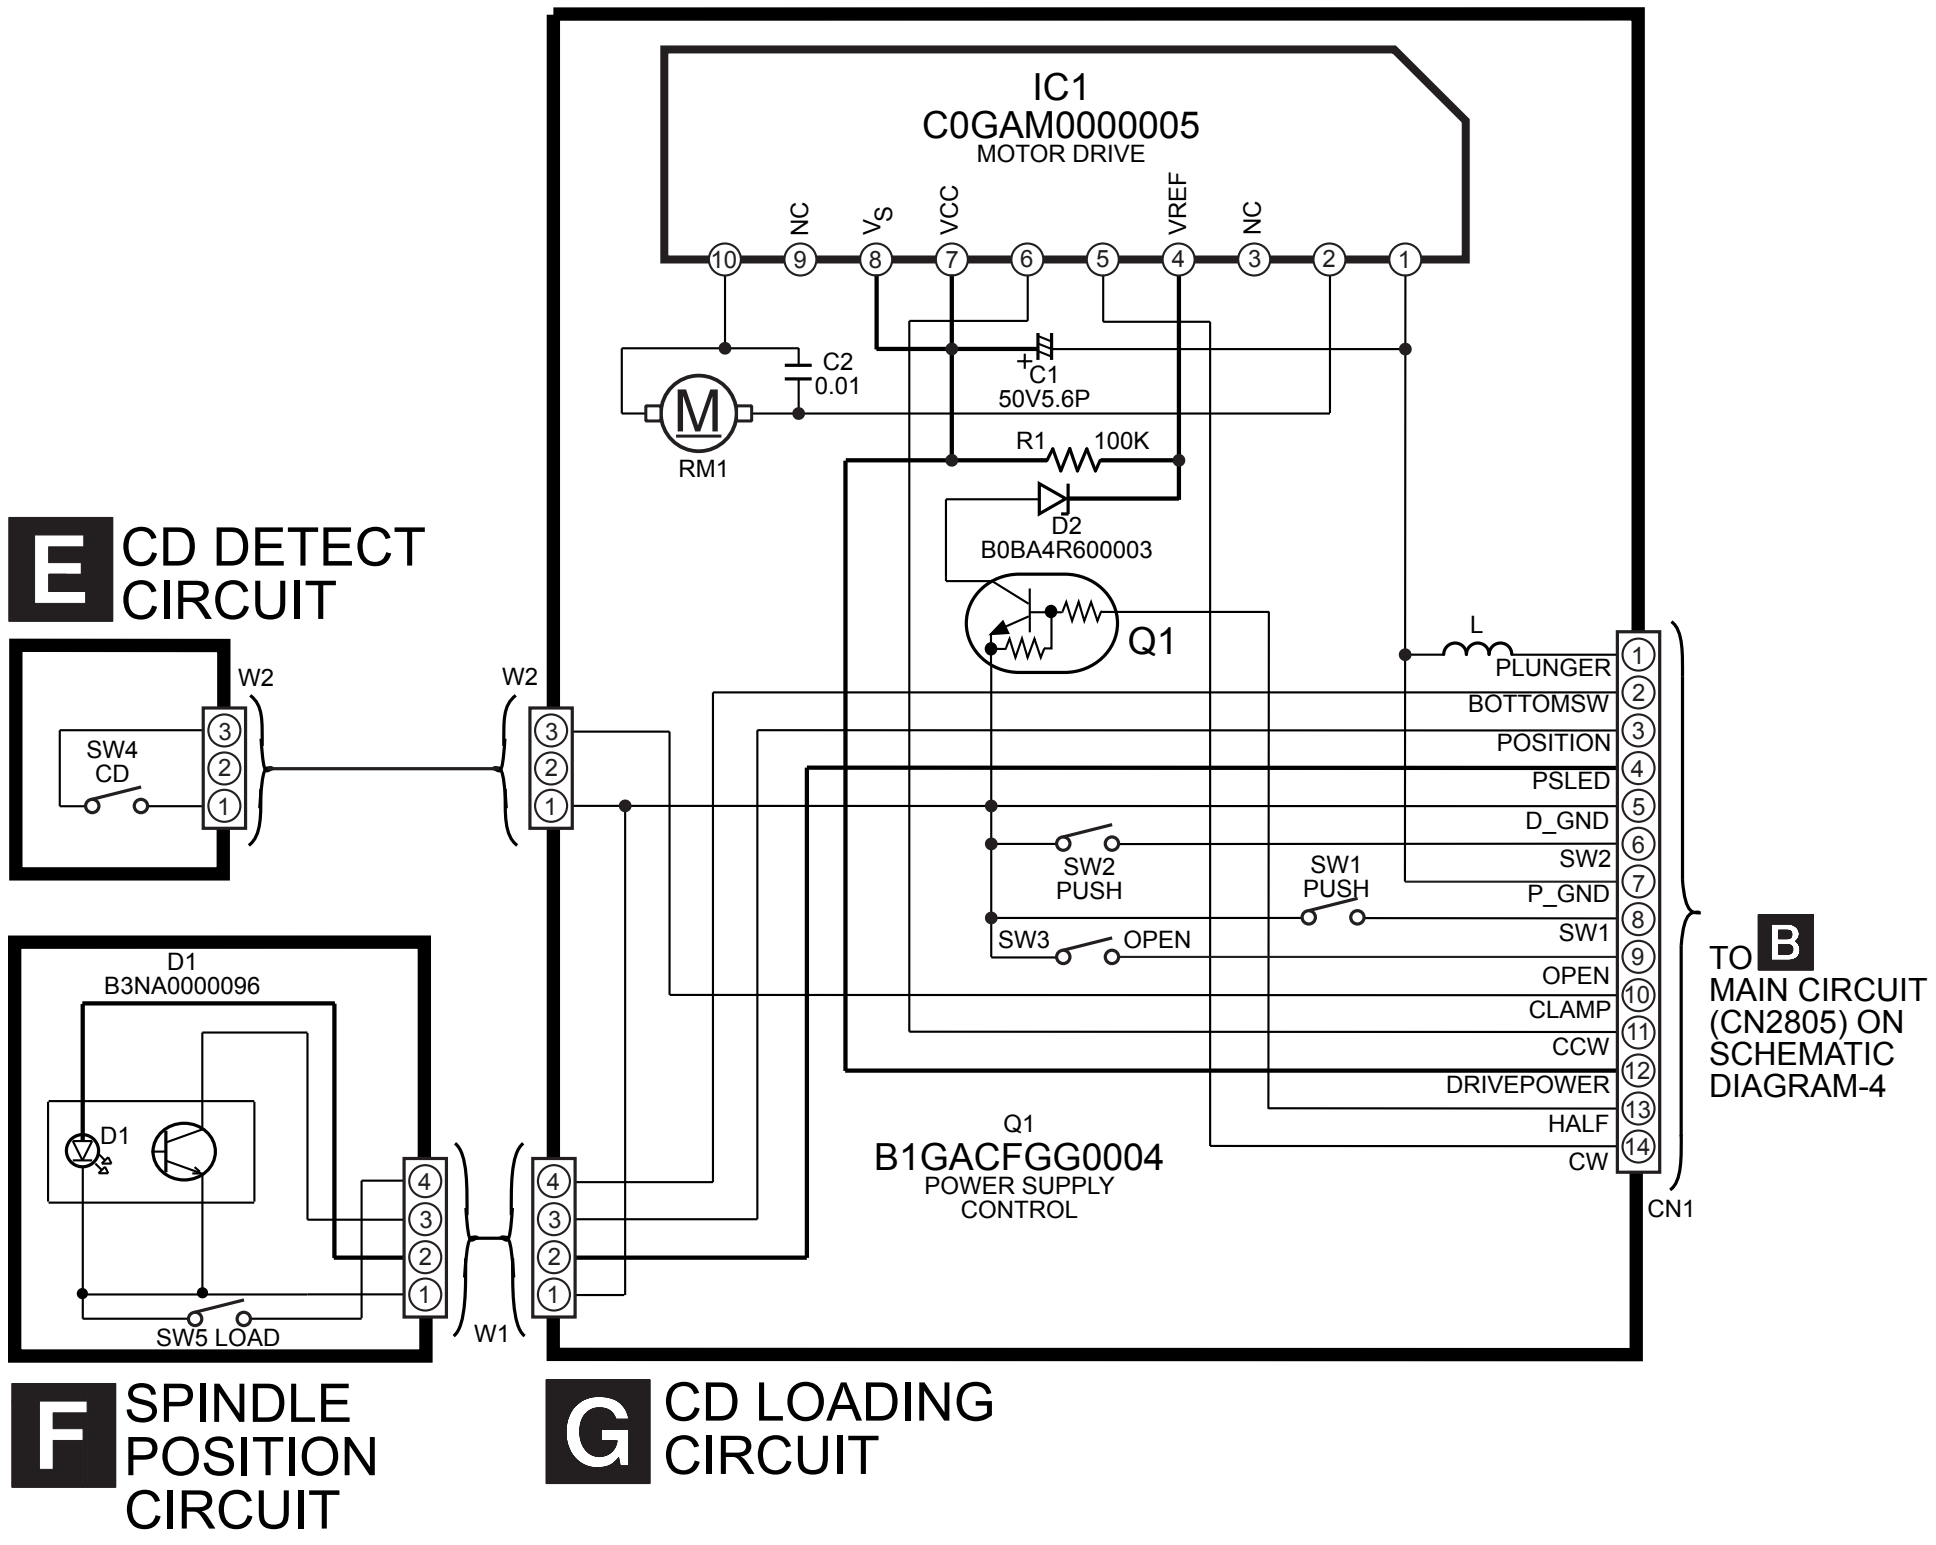

IC1
C0GAM0000005
MOTOR DRIVE
NC
VS
VCC
VREF
NC
C2
0.01
C1
50V5.6P
RM1
R1
100K
D2
B0BA4R600003
Q1
L
PLUNGER
BOTTOMSW
POSITION
PSLED
D_GND
SW2
P_GND
SW1
OPEN
CLAMP
CCW
DRIVEPOWER
HALF
CW
CN1
SW2
PUSH
SW1
PUSH
SW3
OPEN
Q1
B1GACFGG0004
POWER SUPPLY
CONTROL
TO B
MAIN CIRCUIT
(CN2805) ON
SCHEMATIC
DIAGRAM-4
E CD DETECT CIRCUIT
W2
SW4
CD
W2
D1
B3NA0000096
D1
SW5 LOAD
W1
F SPINDLE POSITION CIRCUIT
G CD LOADING CIRCUIT

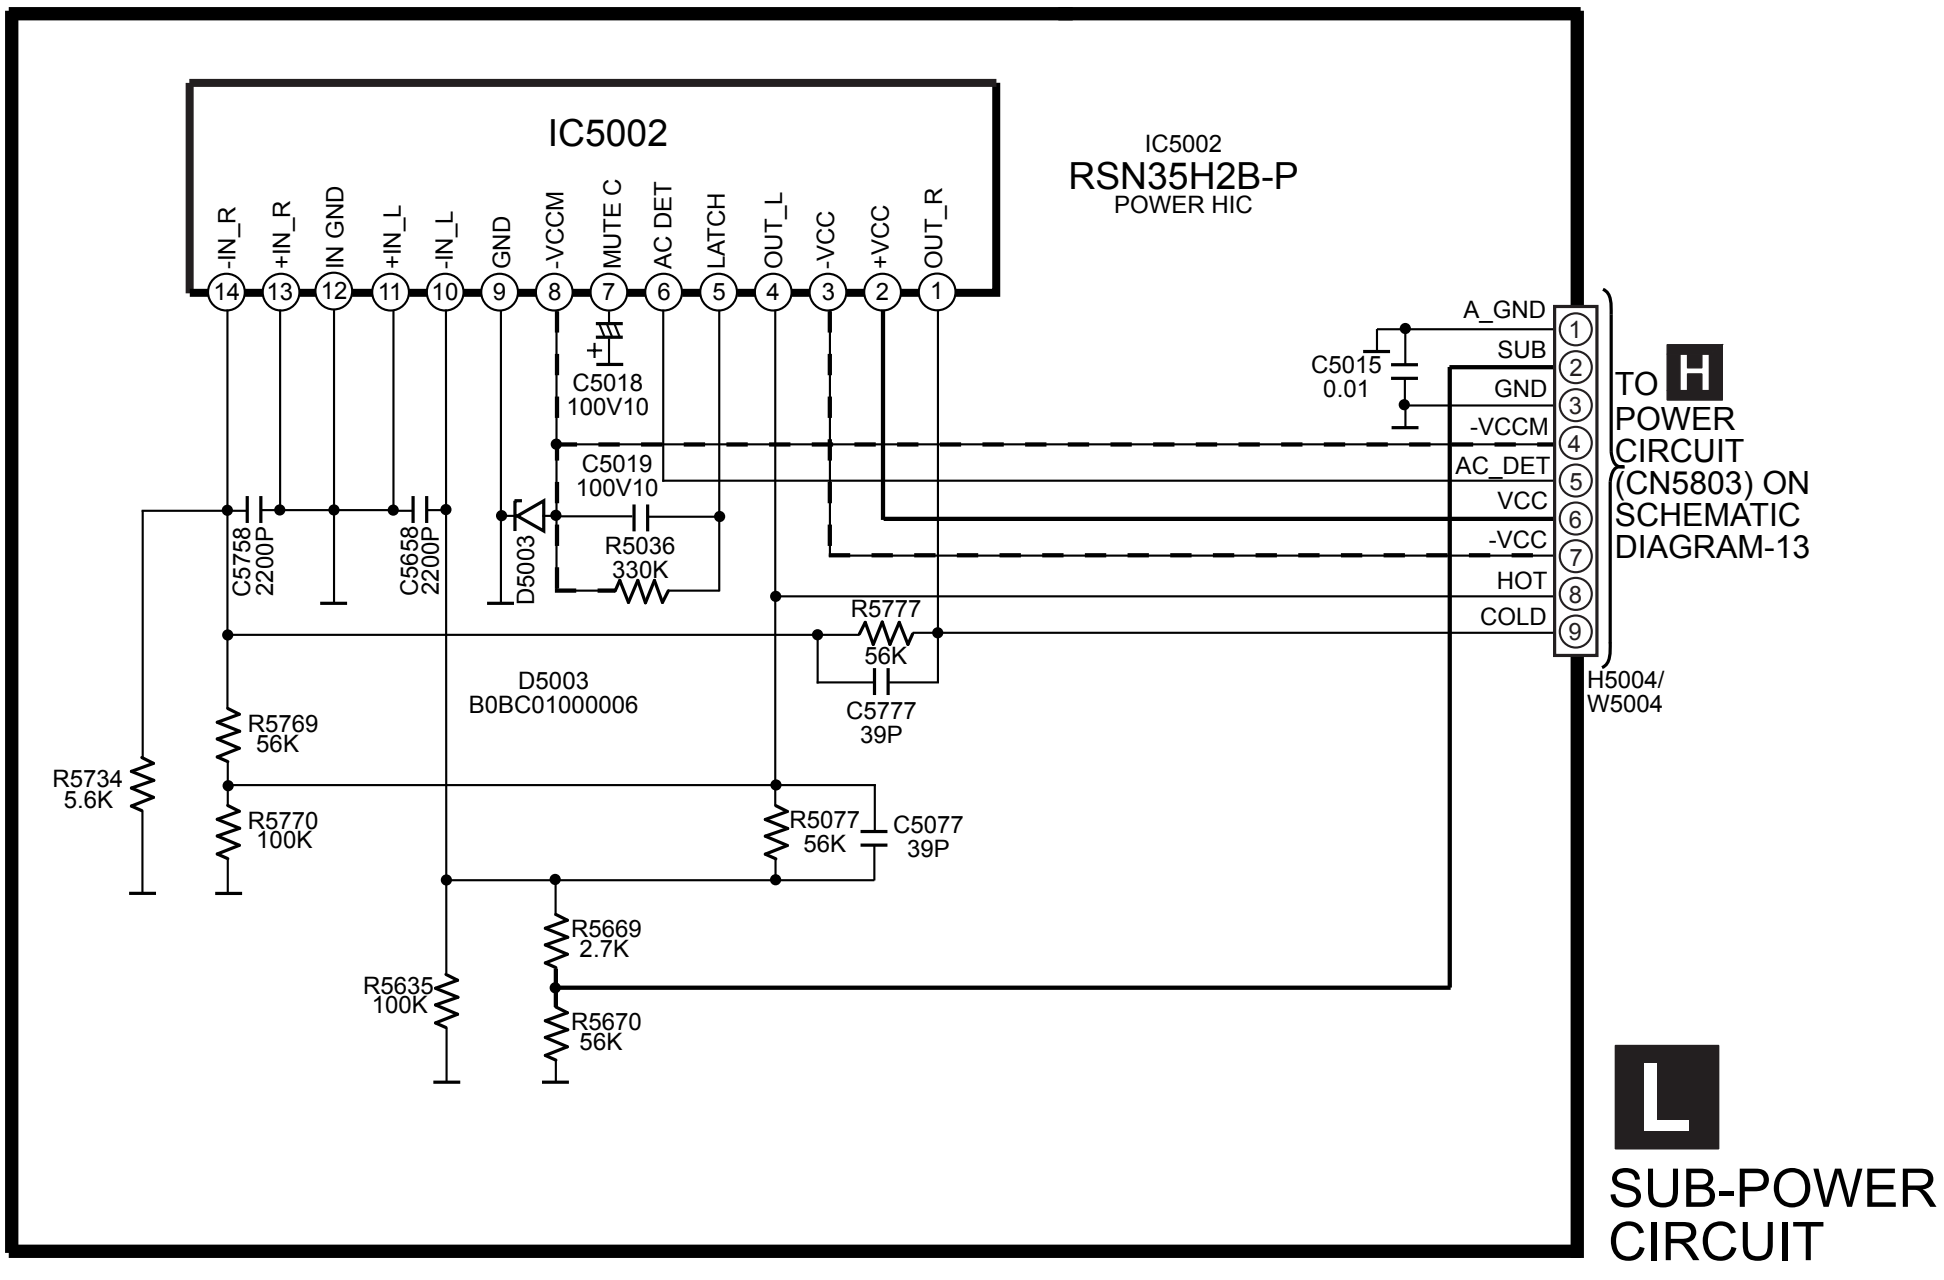

IC5002
-IN_R
+IN_R
IN GND
+IN_L
-IN_L
GND
-VCCM
MUTE C
AC DET
LATCH
OUT_L
-VCC
+VCC
OUT_R
IC5002
RSN35H2B-P
POWER HIC
C5018
100V10
C5019
100V10
C5758
2200P
C5658
2200P
D5003
R5036
330K
R5777
56K
C5777
39P
D5003
B0BC01000006
R5769
56K
R5734
5.6K
R5770
100K
R5077
56K
C5077
39P
R5669
2.7K
R5635
100K
R5670
56K
C5015
0.01
A_GND
SUB
GND
-VCCM
AC_DET
VCC
-VCC
HOT
COLD
H5004/
W5004
TO H
POWER
CIRCUIT
(CN5803) ON
SCHEMATIC
DIAGRAM-13
L
SUB-POWER
CIRCUIT

SCHEMATIC DIAGRAM - 13

H POWER CIRCUIT

—— : +B SIGNAL LINE   – – : -B SIGNAL LINE   ⇨ : MAIN SIGNAL LINE

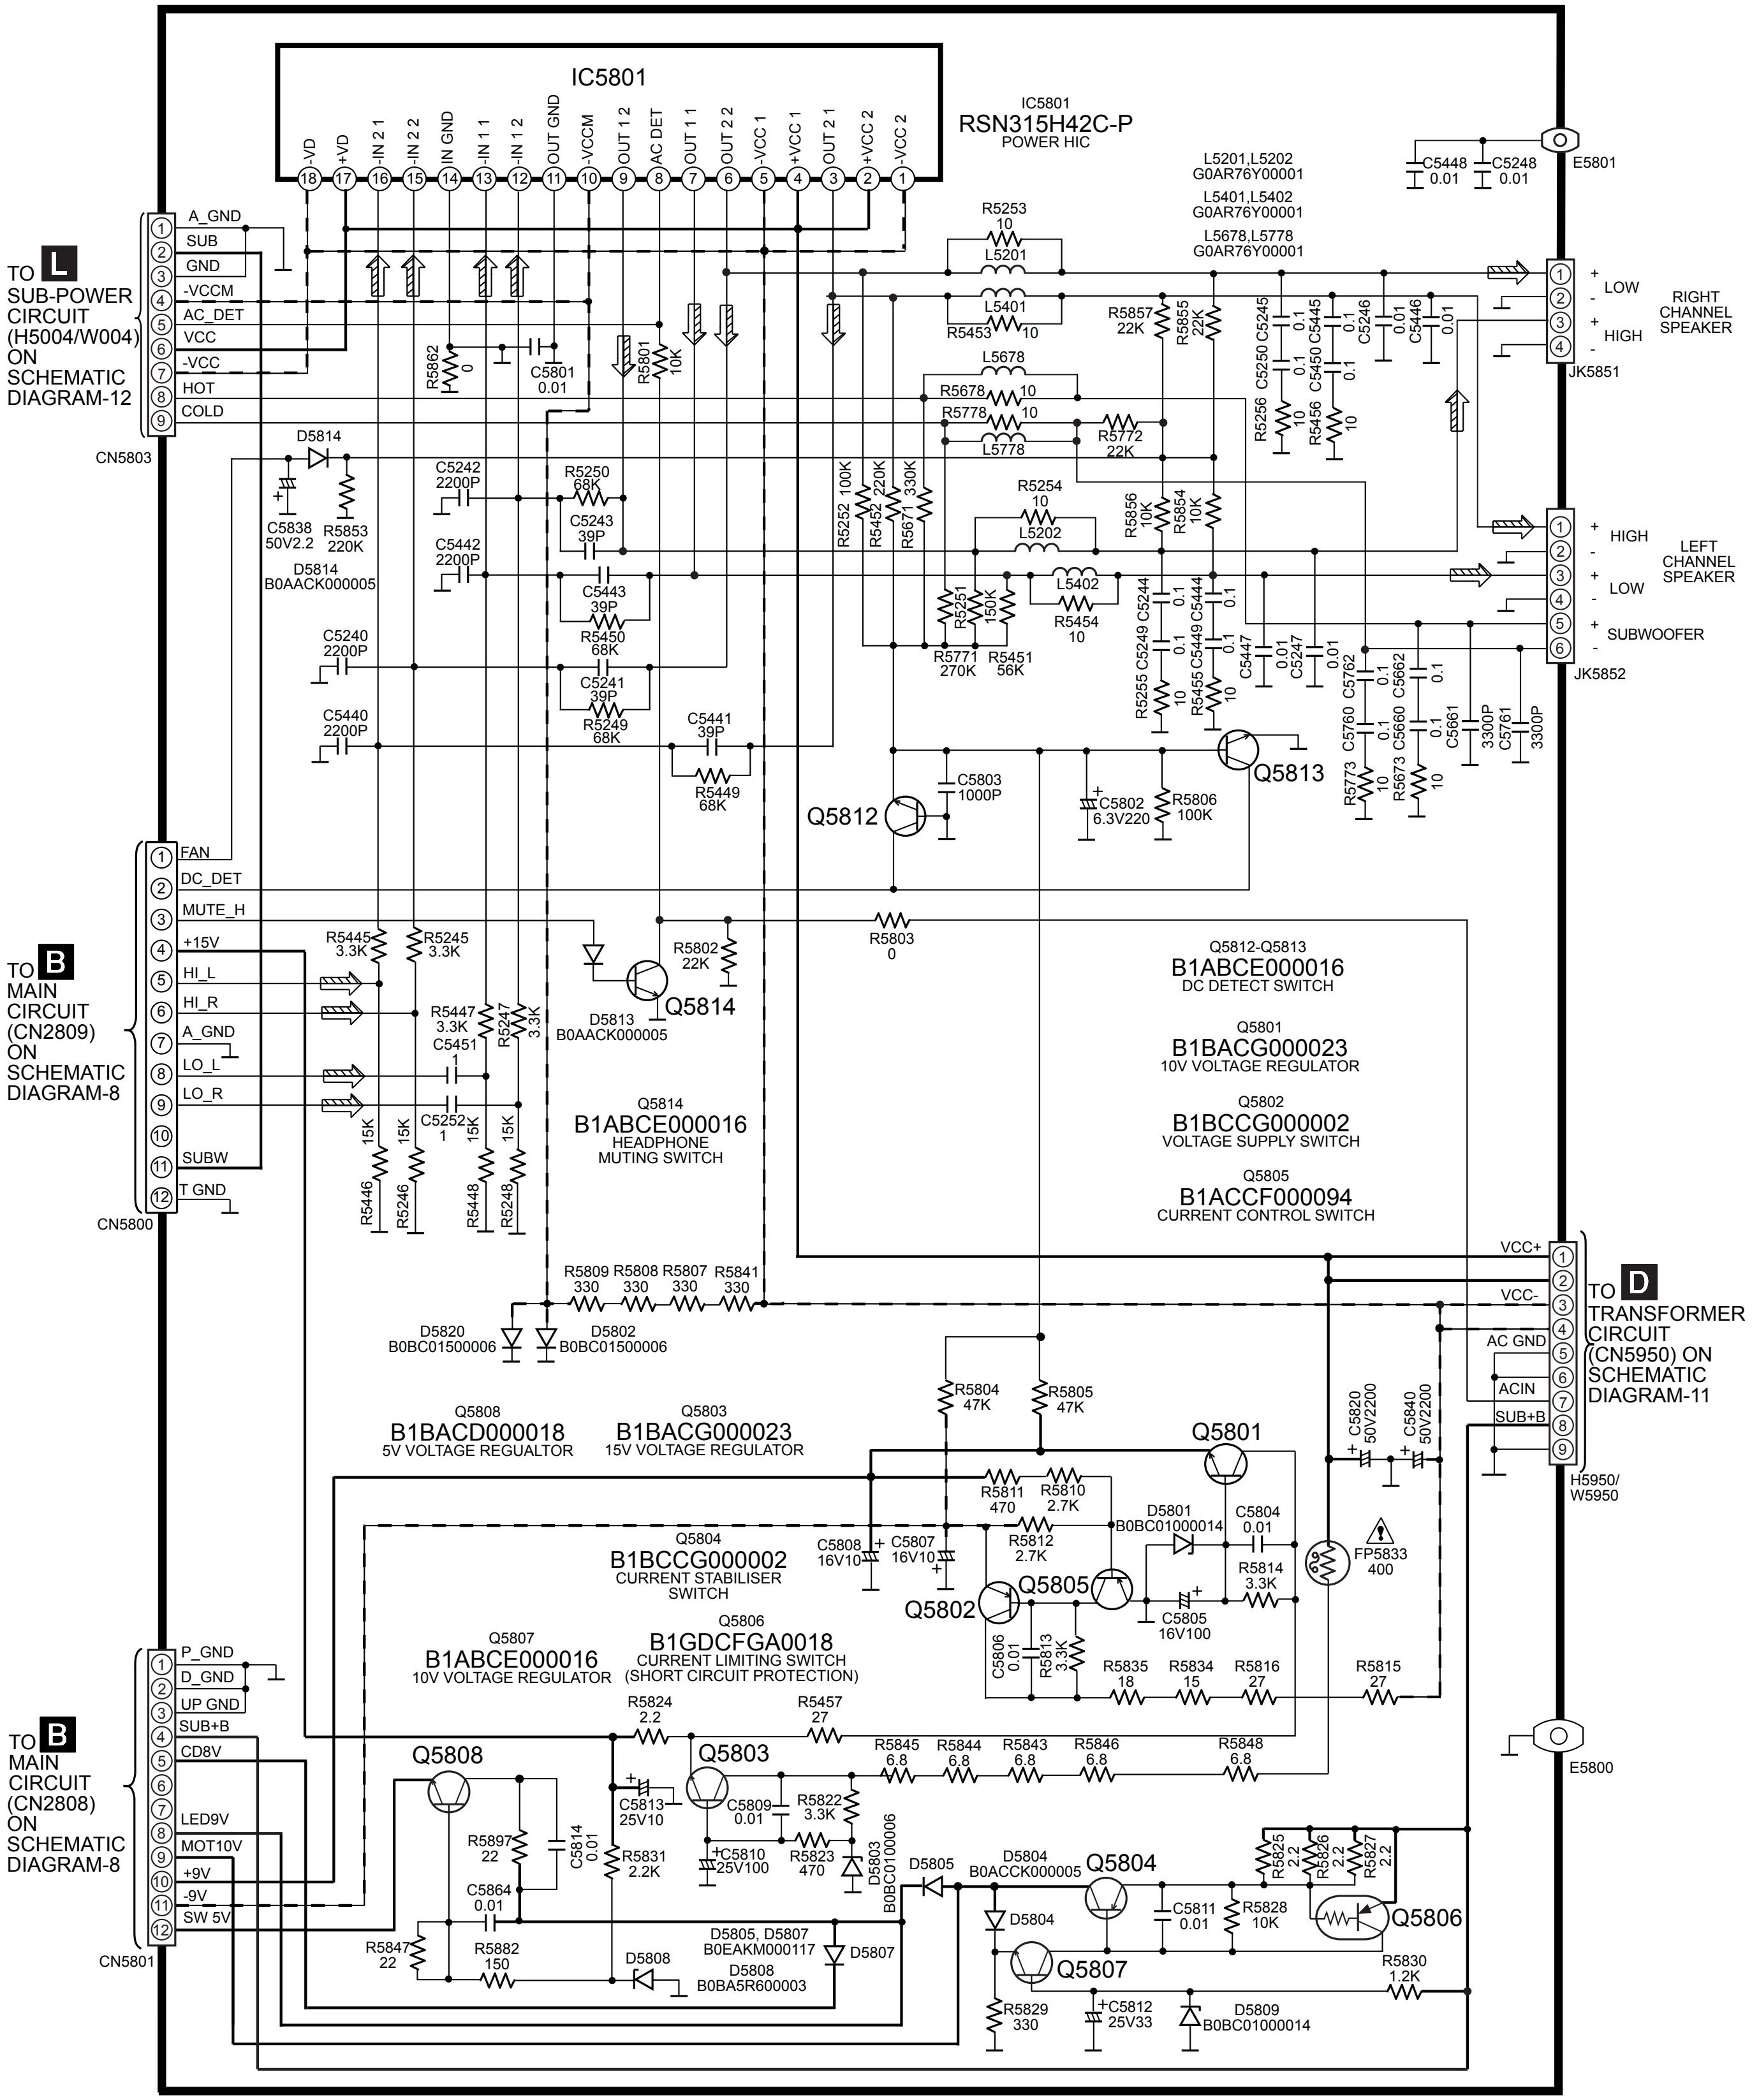
IC5801
IC5801
RSN315H42C-P
POWER HIC
-VD 18
+VD 17
-IN 2 1 16
-IN 2 2 15
IN GND 14
-IN 1 1 13
-IN 1 2 12
OUT GND 11
-VCCM 10
OUT 1 2 9
AC DET 8
OUT 1 1 7
OUT 2 2 6
-VCC 1 5
+VCC 1 4
OUT 2 1 3
+VCC 2 2
-VCC 2 1
TO L SUB-POWER CIRCUIT (H5004/W004) ON SCHEMATIC DIAGRAM-12
CN5803
1 A_GND
2 SUB
3 GND
4 -VCCM
5 AC_DET
6 VCC
7 -VCC
8 HOT
9 COLD
D5814
C5838 50V2.2
R5853 220K
D5814 B0AACK000005
R5862 0
C5801 0.01
R5801 10K
C5242 2200P
C5442 2200P
C5240 2200P
C5440 2200P
R5250 68K
C5243 39P
C5443 39P
R5450 68K
C5241 39P
R5249 68K
C5441 39P
R5449 68K
R5253 10
L5201
L5401
R5453 10
L5201,L5202 G0AR76Y00001
L5401,L5402 G0AR76Y00001
L5678,L5778 G0AR76Y00001
L5678
R5678 10
R5778 10
L5778
R5772 22K
R5857 22K
R5855 22K
C5245 0.1
C5445 0.1
C5246 0.01
C5446 0.01
C5250 0.1
C5450 0.1
R5256 10
R5456 10
C5448 0.01
C5248 0.01
E5801
JK5851
1 + LOW
2 -
3 + HIGH
4 -
RIGHT CHANNEL SPEAKER
R5252 100K
R5452 220K
R5671 330K
R5254 10
L5202
L5402
R5454 10
R5856 10K
R5854 10K
R5251 150K
R5771 270K
R5451 56K
C5244 0.1
C5444 0.1
C5249 0.1
C5449 0.1
R5255 10
R5455 10
C5447 0.01
C5247 0.01
C5762 0.1
C5662 0.1
C5760 0.1
C5660 0.1
C5661 3300P
C5761 3300P
R5773 10
R5673 10
JK5852
1 + HIGH
2 -
3 + LOW
4 -
5 + SUBWOOFER
6 -
LEFT CHANNEL SPEAKER
C5803 1000P
C5802 6.3V220
R5806 100K
Q5812
Q5813
TO B MAIN CIRCUIT (CN2809) ON SCHEMATIC DIAGRAM-8
CN5800
1 FAN
2 DC_DET
3 MUTE_H
4 +15V
5 HI_L
6 HI_R
7 A_GND
8 LO_L
9 LO_R
10
11 SUBW
12 T GND
R5445 3.3K
R5245 3.3K
R5447 3.3K
R5247 3.3K
C5451 1
C5252 1
R5446 15K
R5246 15K
R5448 15K
R5248 15K
D5813 B0AACK000005
R5802 22K
Q5814
R5803 0
Q5814 B1ABCE000016 HEADPHONE MUTING SWITCH
Q5812-Q5813 B1ABCE000016 DC DETECT SWITCH
Q5801 B1BACG000023 10V VOLTAGE REGULATOR
Q5802 B1BCCG000002 VOLTAGE SUPPLY SWITCH
Q5805 B1ACCF000094 CURRENT CONTROL SWITCH
R5809 330
R5808 330
R5807 330
R5841 330
D5820 B0BC01500006
D5802 B0BC01500006
TO D TRANSFORMER CIRCUIT (CN5950) ON SCHEMATIC DIAGRAM-11
H5950/W5950
1 VCC+
2
3 VCC-
4
5 AC GND
6
7 ACIN
8 SUB+B
9
C5820 50V2200
C5840 50V2200
FP5833 400
Q5808 B1BACD000018 5V VOLTAGE REGUALTOR
Q5803 B1BACG000023 15V VOLTAGE REGULATOR
R5804 47K
R5805 47K
Q5801
R5811 470
R5810 2.7K
D5801 B0BC01000014
C5804 0.01
C5808 16V10
C5807 16V10
R5812 2.7K
Q5805
R5814 3.3K
Q5802
C5805 16V100
Q5804 B1BCCG000002 CURRENT STABILISER SWITCH
Q5806 B1GDCFGA0018 CURRENT LIMITING SWITCH (SHORT CIRCUIT PROTECTION)
Q5807 B1ABCE000016 10V VOLTAGE REGULATOR
C5806 0.01
R5813 3.3K
R5835 18
R5834 15
R5816 27
R5815 27
TO B MAIN CIRCUIT (CN2808) ON SCHEMATIC DIAGRAM-8
CN5801
1 P_GND
2 D_GND
3 UP GND
4 SUB+B
5 CD8V
6
7
8 LED9V
9 MOT10V
10 +9V
11 -9V
12 SW 5V
R5824 2.2
R5457 27
E5800
Q5808
Q5803
R5845 6.8
R5844 6.8
R5843 6.8
R5846 6.8
R5848 6.8
C5813 25V10
C5809 0.01
R5822 3.3K
R5897 22
C5814 0.01
R5831 2.2K
C5810 25V100
R5823 470
D5803 B0BC0100006
D5805
D5804 B0ACCK000025
Q5804
R5825 2.2
R5826 2.2
R5827 2.2
C5864 0.01
C5811 0.01
R5828 10K
Q5806
D5804
R5847 22
R5882 150
D5808
D5805, D5807 B0EAKM000117
D5808 B0BA5R600003
D5807
Q5807
R5830 1.2K
R5829 330
C5812 25V33
D5809 B0BC01000014

SCHEMATIC DIAGRAM -14

— : +B SIGNAL LINE
▨⇨ : PLAYBACK SIGNAL LINE
▨▨⇦ : RECORD SIGNAL LINE

I DECK CIRCUIT

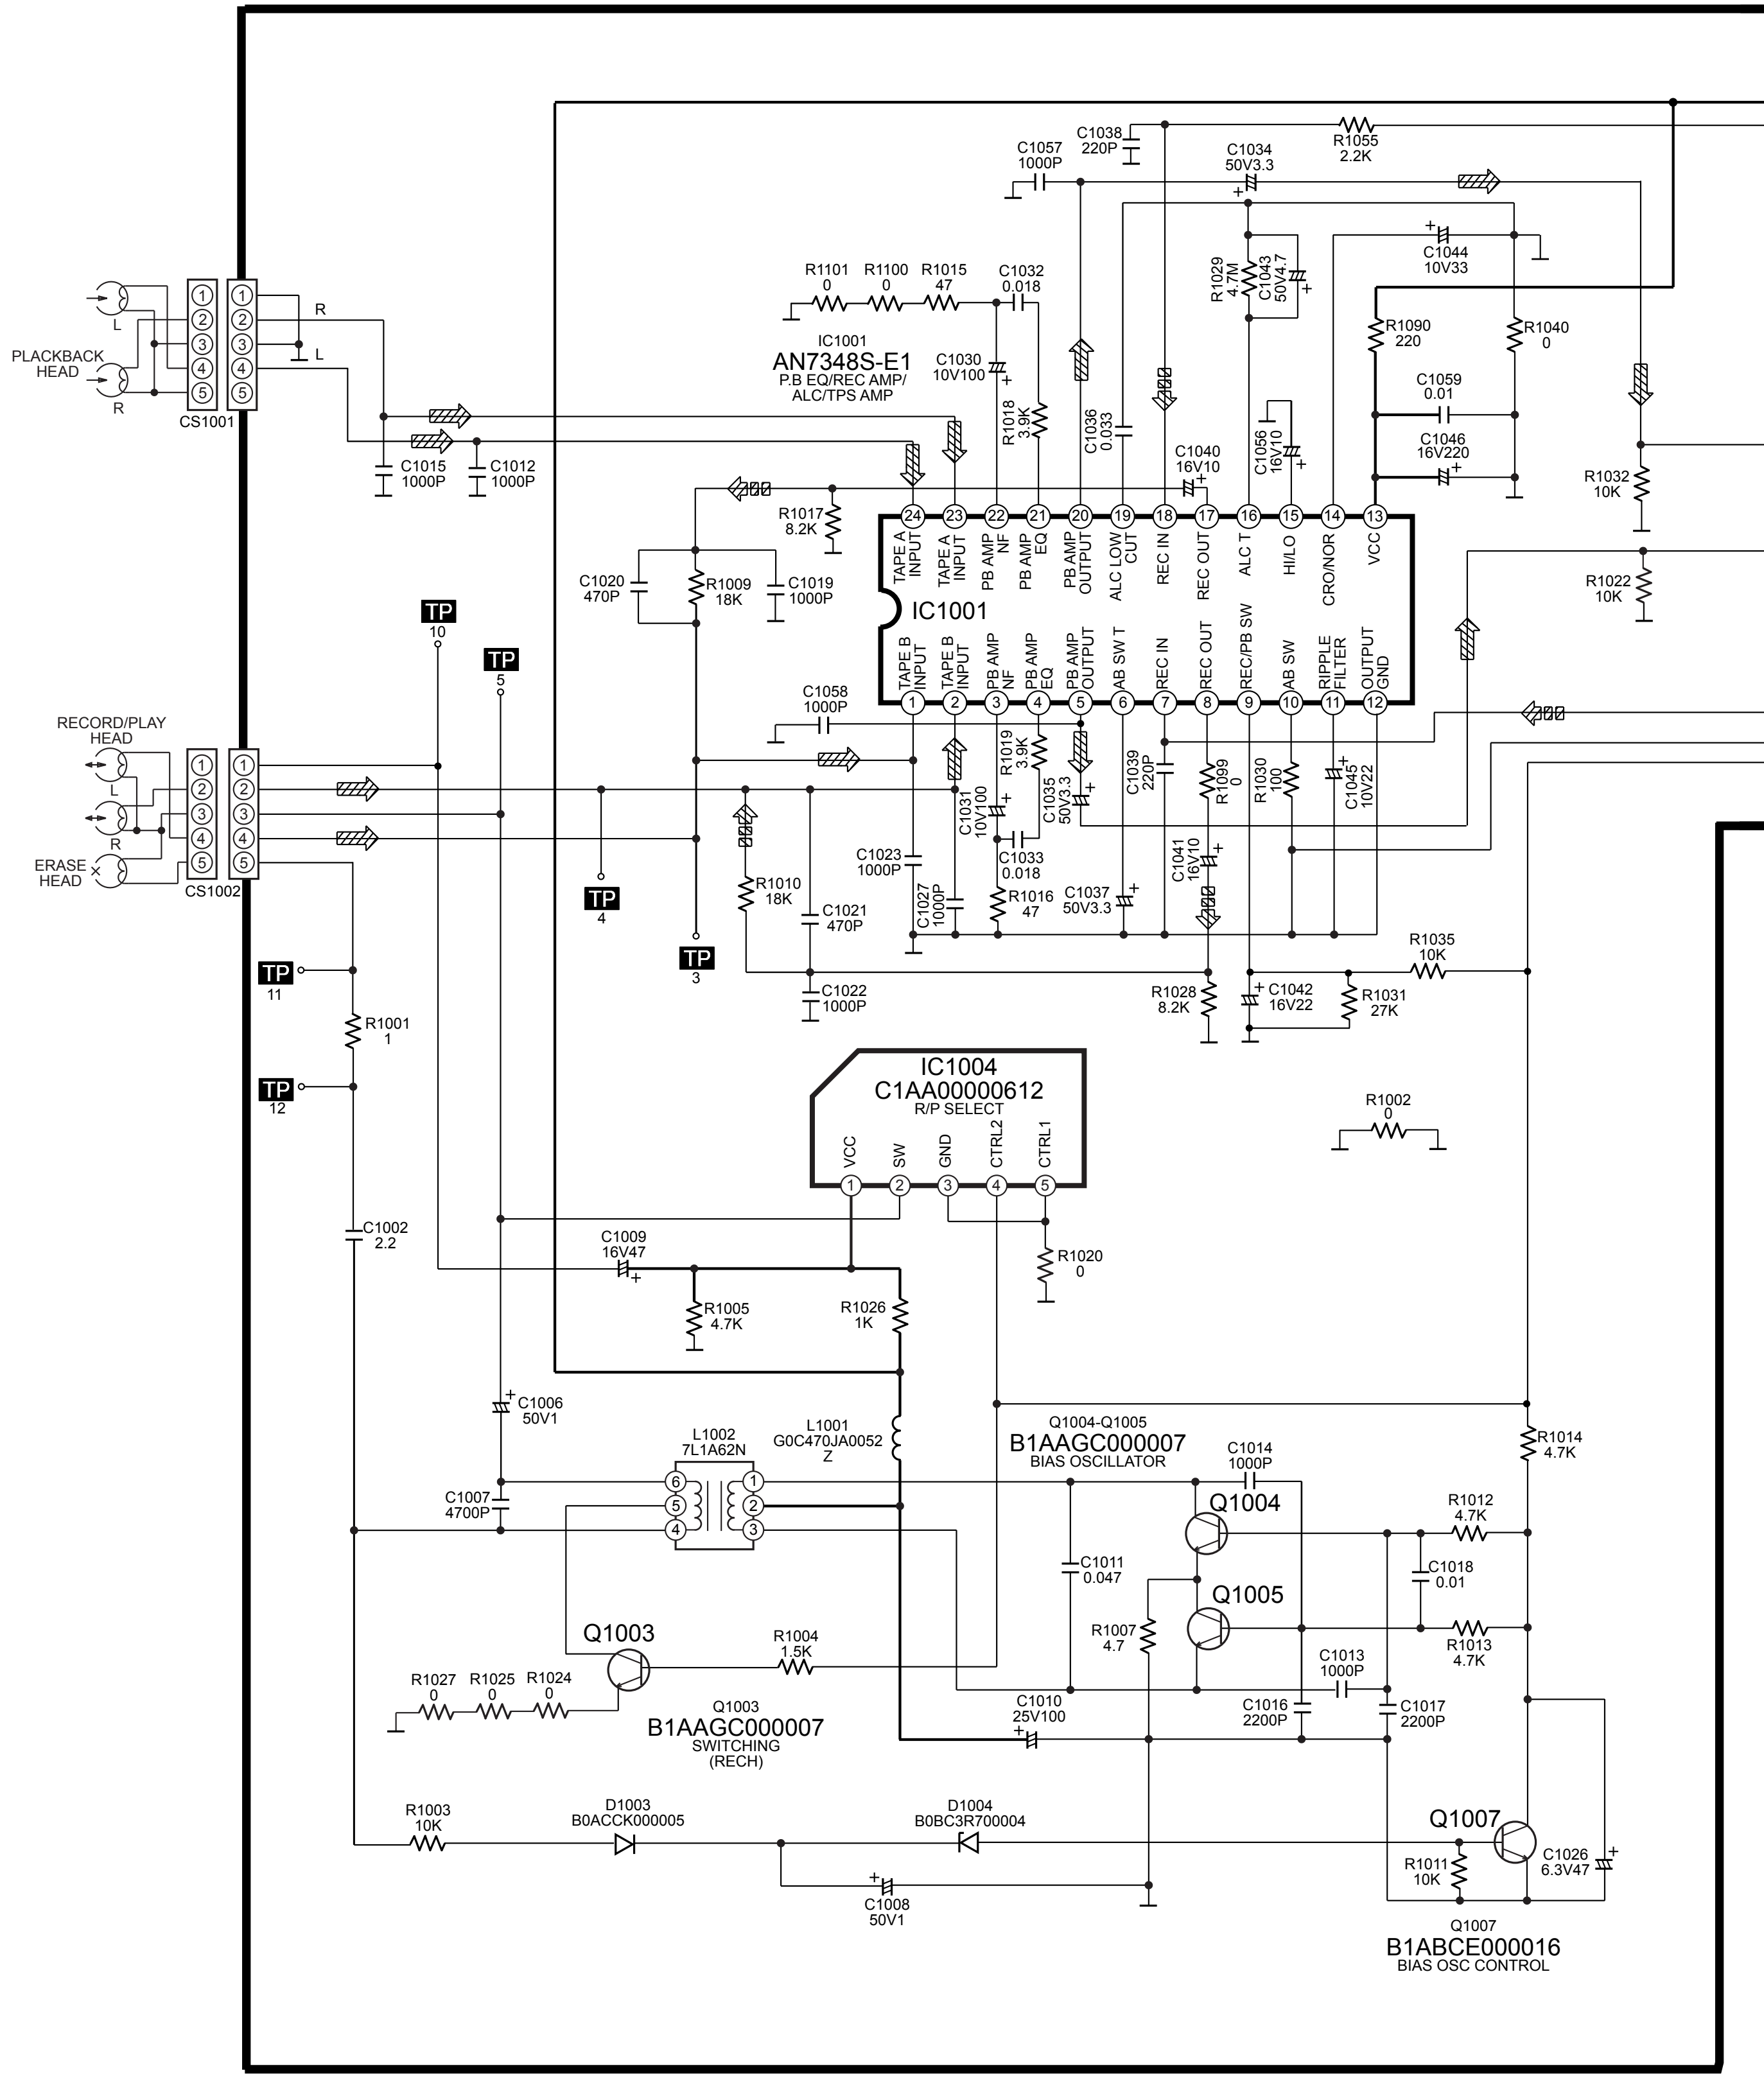
PLACKBACK HEAD
L
R
CS1001
C1015 1000P
C1012 1000P
R1101 0
R1100 0
R1015 47
C1032 0.018
IC1001
AN7348S-E1
P.B EQ/REC AMP/ ALC/TPS AMP
C1030 10V100
R1018 3.9K
C1057 1000P
C1038 220P
C1036 0.033
C1034 50V3.3
R1055 2.2K
R1029 4.7M
C1043 50V4.7
C1044 10V33
C1040 16V10
C1056 16V10
R1090 220
R1040 0
C1059 0.01
C1046 16V220
R1032 10K
R1017 8.2K
C1020 470P
R1009 18K
C1019 1000P
R1022 10K
TAPE A INPUT
TAPE A INPUT
PB AMP NF
PB AMP EQ
PB AMP OUTPUT
ALC LOW CUT
REC IN
REC OUT
ALC T
HI/LO
CRO/NOR
VCC
IC1001
TAPE B INPUT
TAPE B INPUT
PB AMP NF
PB AMP EQ
PB AMP OUTPUT
AB SW T
REC IN
REC OUT
REC/PB SW
AB SW
RIPPLE FILTER
OUTPUT GND
TP 10
TP 5
TP 4
TP 3
TP 11
TP 12
RECORD/PLAY HEAD
ERASE HEAD
CS1002
C1058 1000P
R1019 3.9K
C1031 10V100
C1035 50V3.3
C1039 220P
R1099 0
R1030 100
C1045 10V22
C1033 0.018
C1023 1000P
C1027 1000P
R1016 47
C1037 50V3.3
C1041 16V10
R1010 18K
C1021 470P
C1022 1000P
R1028 8.2K
C1042 16V22
R1031 27K
R1035 10K
R1001 1
IC1004
C1AA00000612
R/P SELECT
VCC
SW
GND
CTRL2
CTRL1
R1002 0
R1020 0
C1002 2.2
C1009 16V47
R1005 4.7K
R1026 1K
C1006 50V1
L1002 7L1A62N
L1001 G0C470JA0052 Z
Q1004-Q1005
B1AAGC000007
BIAS OSCILLATOR
C1014 1000P
Q1004
Q1005
R1014 4.7K
C1007 4700P
C1011 0.047
R1012 4.7K
C1018 0.01
R1007 4.7
R1013 4.7K
Q1003
R1004 1.5K
C1013 1000P
R1027 0
R1025 0
R1024 0
Q1003
B1AAGC000007
SWITCHING (RECH)
C1010 25V100
C1016 2200P
C1017 2200P
R1003 10K
D1003 B0ACCK000005
D1004 B0BC3R700004
C1008 50V1
Q1007
R1011 10K
C1026 6.3V47
Q1007
B1ABCE000016
BIAS OSC CONTROL

SCHEMATIC DIAGRAM - 15

—— : +B SIGNAL LINE

▨⇨ : PLAYBACK SIGNAL LINE

▯▯▯⇨ : RECORD SIGNAL LINE

I DECK CIRCUIT

TO B
MAIN CIRCUIT (CN2803) ON
SCHEMATIC DIAGRAM-4

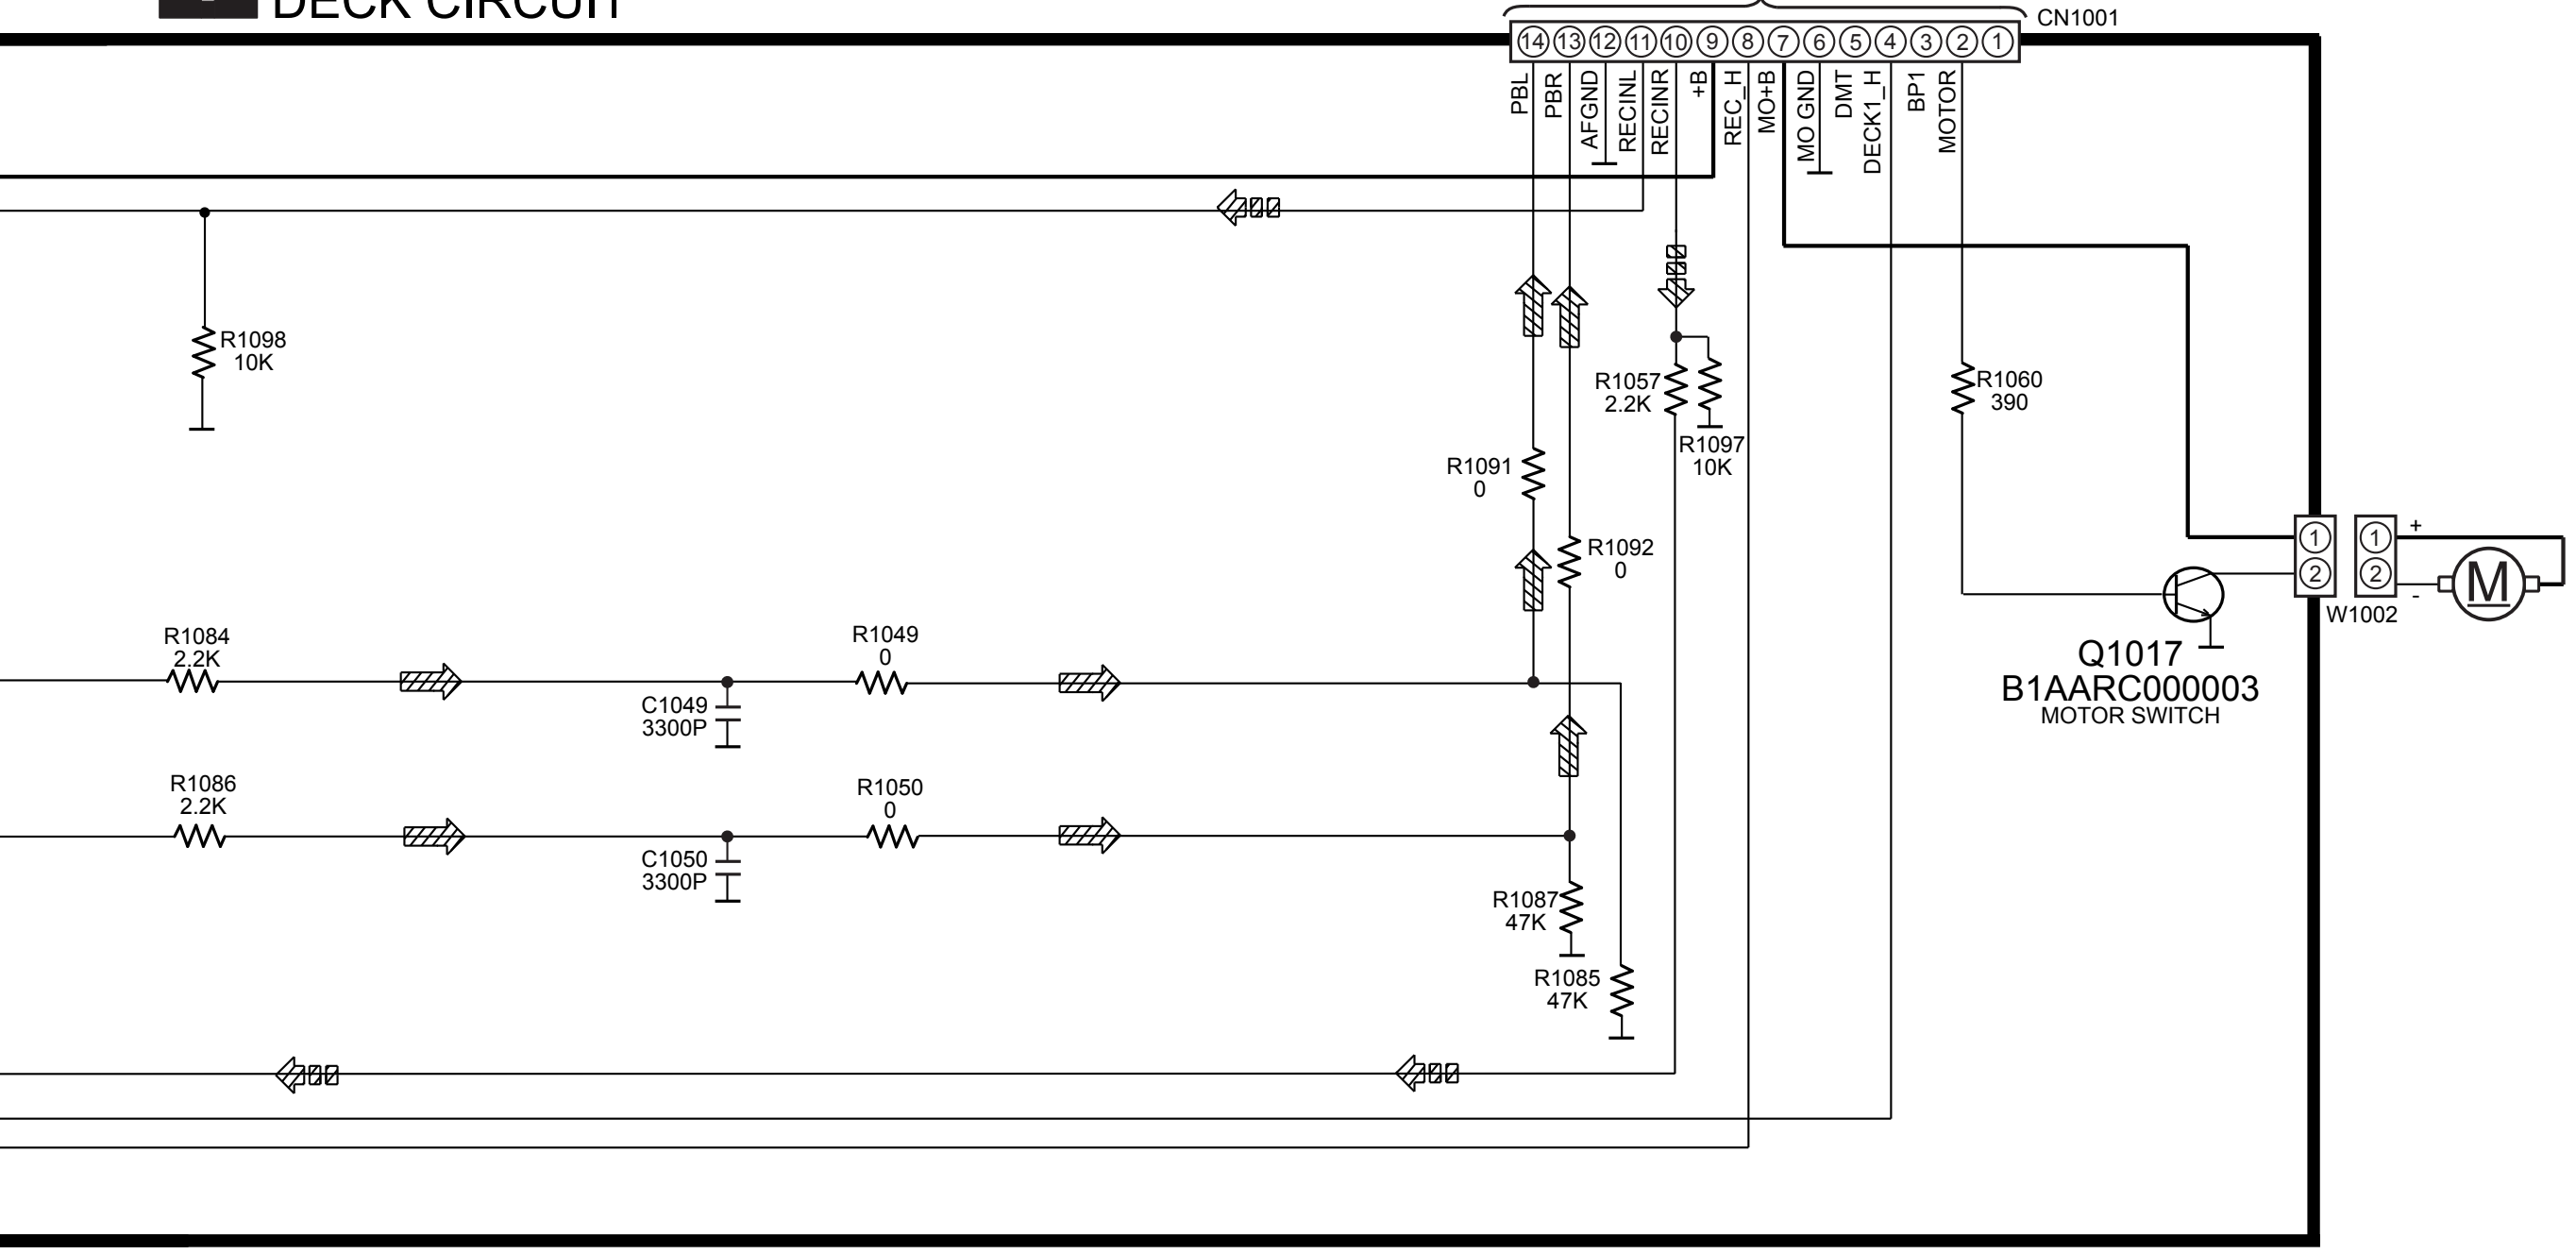
CN1001
⑭ ⑬ ⑫ ⑪ ⑩ ⑨ ⑧ ⑦ ⑥ ⑤ ④ ③ ② ①
PBL
PBR
AFGND
RECINL
RECINR
+B
REC_H
MO+B
MO GND
DMT
DECK1_H
BP1
MOTOR
R1098
10K
R1057
2.2K
R1097
10K
R1060
390
R1091
0
R1092
0
R1084
2.2K
R1049
0
C1049
3300P
R1086
2.2K
R1050
0
C1050
3300P
R1087
47K
R1085
47K
W1002
+
-
M
Q1017
B1AARC000003
MOTOR SWITCH

J DECK MECHANISM CIRCUIT

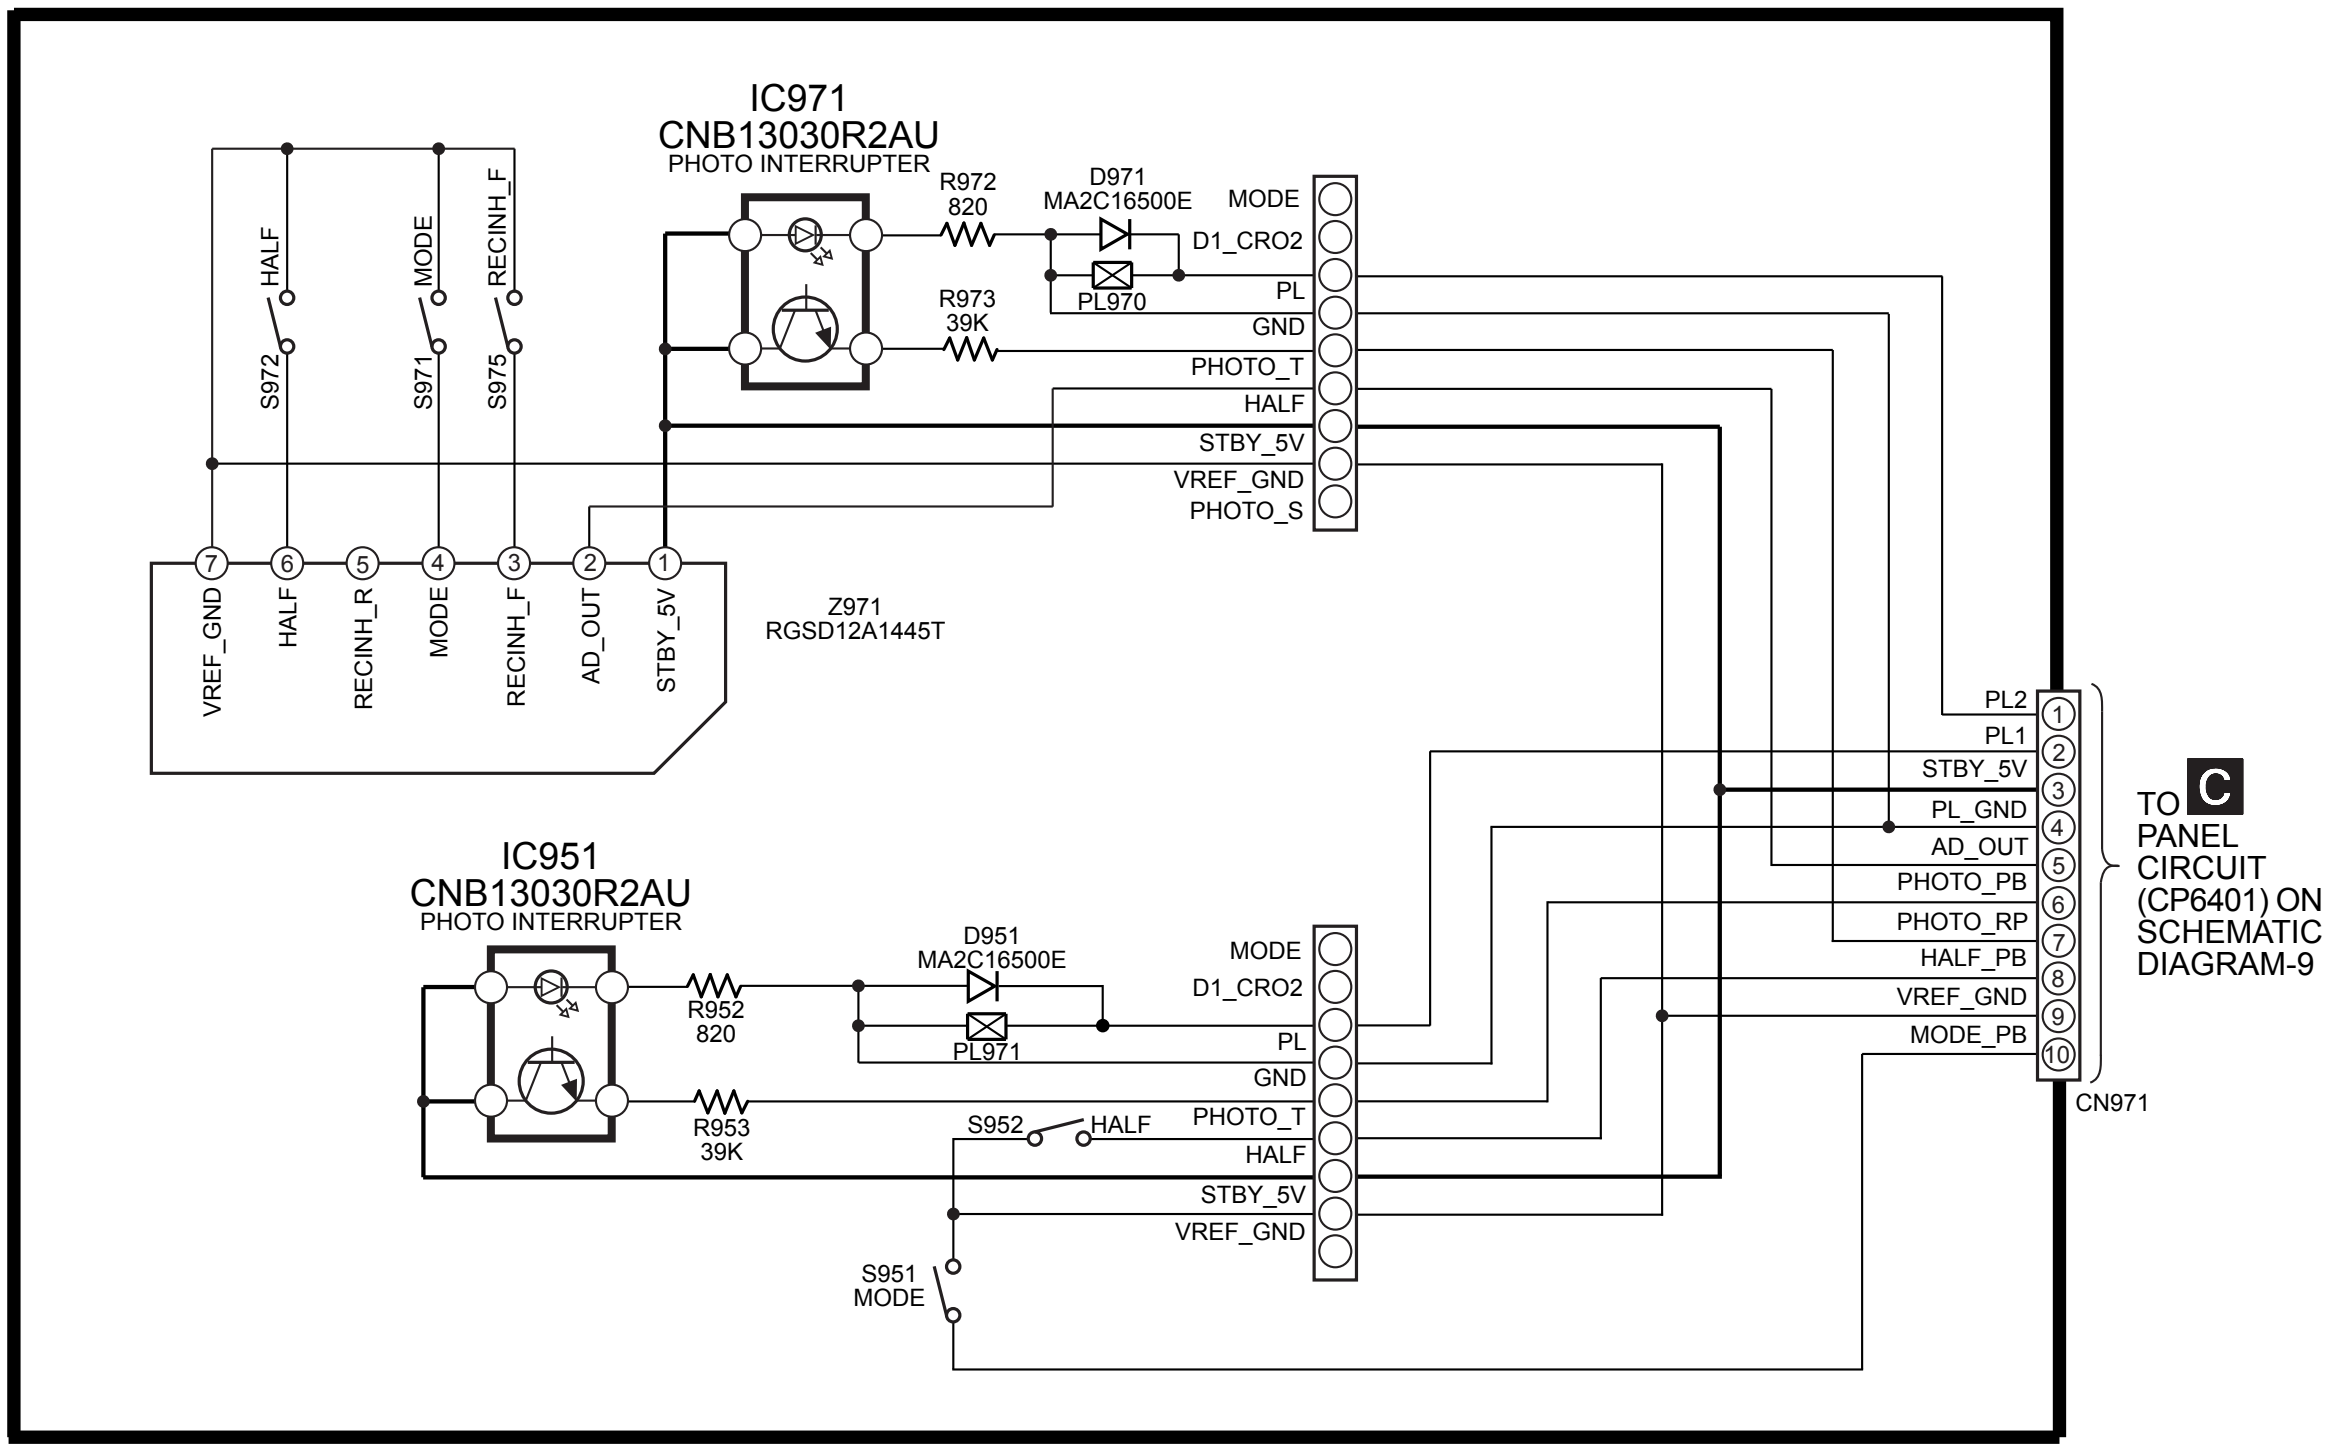
IC971
CNB13030R2AU
PHOTO INTERRUPTER
R972
820
D971
MA2C16500E
PL970
R973
39K
MODE
D1_CRO2
PL
GND
PHOTO_T
HALF
STBY_5V
VREF_GND
PHOTO_S
HALF
S972
MODE
S971
RECINH_F
S975
⑦ ⑥ ⑤ ④ ③ ② ①
VREF_GND
HALF
RECINH_R
MODE
RECINH_F
AD_OUT
STBY_5V
Z971
RGSD12A1445T
IC951
CNB13030R2AU
PHOTO INTERRUPTER
R952
820
D951
MA2C16500E
PL971
R953
39K
S952
HALF
S951
MODE
MODE
D1_CRO2
PL
GND
PHOTO_T
HALF
STBY_5V
VREF_GND
PL2
PL1
STBY_5V
PL_GND
AD_OUT
PHOTO_PB
PHOTO_RP
HALF_PB
VREF_GND
MODE_PB
① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩
CN971
TO C
PANEL
CIRCUIT
(CP6401) ON
SCHEMATIC
DIAGRAM-9

Main P.C.B.

Ref No.	IC2601																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
REC	1.98	5.95	1.99	1.98	0	4.90	5.17	3.82	5.95	0	4.87	3.52	1.604	1.6	1.93	1.99	1.984	2.21	0	0.125
PLAY	1.98	5.95	1.99	1.97	0	4.74	5.15	3.82	5.95	0	4.86	3.52	1.59	1.595	1.93	1.989	1.981	2.20	0	0.125
STOP	1.99	5.96	1.99	1.98	0	4.92	5.17	3.83	5.95	0	4.87	3.52	1.59	1.6	1.93	1.99	1.981	2.20	0	0.125

Ref No.	IC2601																			
MODE	21	22	23	24																
REC	2.357	2.357	5.95	4.57																
PLAY	2.35	2.35	5.95	4.56																
STOP	2.35	2.35	5.95	4.57																

Ref No.	IC2602																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
REC	2.59	0	0	0	5.18	4.95	0	4.63	0	14.94	0	0	2.59	0	5.19	0	0	14.94	0	2.59
PLAY	2.57	0	0	0	5.16	4.86	0	4.55	0	15.18	0	0	2.59	5.19	5.19	0	0	15.23	0	2.58
STOP	2.57	0	0	0	5.16	4.86	0	4.55	0	15.18	0	0	2.59	5.19	5.19	0	0	15.23	0	2.58

Ref No.	IC2801																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
REC	0	0	0	0	0	0	0	0	0	0.669	0.69	5.25	2.68	0	2.6	0	0	5.25	3.1	5.20
PLAY	0	0	0	0	0	0	0	0	0	0.67	0.68	5.25	2.68	0	2.6	0	0	5.224	3.1	5.20
STOP	0	0	0	0	0	0	0	0	0	0.67	0.67	5.25	2.68	0	2.62	0	0	5.224	3.1	5.20

Ref No.	IC2801																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
REC	4.95	0	0	0	0	0	5.28	0	0	0	0	0	0	0	0	0	0	0	0	0
PLAY	4.95	0	0	0	0	0	5.26	0	0	0	0	0	0	0	0	0	0	0	0	0
STOP	4.95	0	0	0	0	0	5.26	0	0	0	0	0	0	0	0	0	0	5.224	0	0

Ref No.	IC2801																			
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
REC	0	0	0	0	0	5.18	5.16	0	0	0	0	0	4.79	0	0	0	0	0	5.25	0
PLAY	0	0	0	0	0	5.17	5.15	0	0	0	0	0	4.78	0	0	0	0	0	5.25	0
STOP	0	0	0	0	0	5.18	5.15	0	0	0	0	0	4.79	0	0	0	0	0	5.25	0

Ref No.	IC2801																			
MODE	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
REC	0	5.25	0	0	0	0	0	5.25	0	0	0	3.0	0.3	0	0	0	5.25	3.0	0	0.5
PLAY	0	5.25	0	0	0	0	0	5.25	0	0	0	3.0	0.31	0	0	0	5.25	3.0	0	0.5
STOP	0	5.25	0	0	0	0	0	5.25	0	0	0	3.1	0.3	0	0	0	5.25	3.1	0	0.5

Ref No.	IC2801																			
MODE	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
REC	4.91	0	0	5.24	5.25	0	0	0	0	3.65	5.25	1.24	5.25	5.23	4.38	0.59	0	5.25	5.25	5.18
PLAY	4.91	0	0	5.25	5.25	0	0	0	0	3.65	5.22	1.24	5.25	5.23	4.38	0.58	0	5.25	5.26	5.18
STOP	4.92	0	0	5.25	5.25	0	0	0	0	3.65	5.24	1.24	5.25	5.23	4.38	0.59	0	5.25	5.25	5.19

Ref No.	IC2803																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
REC	4.52	4.60	4.52	4.60	4.50	4.49	4.49	4.49	4.50	4.50	4.49	4.49	4.49	4.45	4.54	0	5.17	0	9.03	3.38
PLAY	4.52	4.60	4.50	4.61	4.52	4.50	4.50	4.50	4.50	4.50	4.50	4.50	4.50	4.50	4.54	0	5.20	0	9.02	3.38
STOP	0	5.27	0	0	0	0	0	0												

Ref No.	IC2803																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32								
REC	4.54	4.54	4.54	4.52	4.52	4.51	4.54	4.53	4.54	4.53	4.54	4.55								
PLAY	4.54	4.55	4.55	4.53	4.52	4.51	4.54	4.53	4.54	4.54	4.54	4.55								
STOP	4.54	4.55	4.55	4.53	4.52	4.57	4.54	4.53	4.54	4.54	4.54	4.55								

Ref No.	IC2805																			
MODE	1	2	3	4	5	6	7	8												
REC	0	0	0	-8.89	0	0	0	9.03												
PLAY	0	0	0	-8.90	0	0	0	9.03												
STOP	0	0	0	-8.90	0	0	0	9.05												

Ref No.	IC2806																			
MODE	1	2	3	4	5	6	7	8												
REC	0	0	0	0	0	0	0	9.05												
PLAY	0	0	0	0	0	0	0	9.04												
STOP	0	0	0	0	0	0	0	9.05												

Main P.C.B.

Ref No.	Q2601				Q2606				Q2701				Q2901				Q2902			
MODE	E/S	C/D	B/G		E/S	C/D	B/G		E/S	C/D	B/G		E/S	C/D	B/G		E/S	C/D	B/G	
REC	0	0	0		14.79	0	14.79		-8.92	-8.84	-8.18		5.54	3.28	6.5		2.98	5.56	2.4	
PLAY	0	0	0		15.17	0	15.20		-8.92	-8.81	-8.17		5.60	3.29	6.24		3.02	5.58	2.48	
STOP	0	0	0		15.26	0	15.22		-8.96	4.78	-8.95		7.08	3.3	7.65		3.04	7.08	2.5	

Main P.C.B.

Ref No.	Q2936																			
MODE	E/S	C/D	B/G																	
PLAY	9.92	0	9.94																	
PLAY	9.95	0	9.95																	
STOP	9.99	0	9.99																	

Transformer P.C.B.

Ref No.	Q5950				Q5951				Q5952				Q5953							
MODE	E/S	C/D	B/G		E/S	C/D	B/G		E/S	C/D	B/G		E/S	C/D	B/G					
REC	5.98	10.12	6.60		-25.86	-29.20	-26.50		-8.92	-8.84	-8.18		0	0.13	0.8					
PLAY	5.99	10.30	6.59		-25.85	-29.22	-26.50		-8.92	-8.81	-8.17		0	0.13	0.8					
STOP	5.99	10.25	6.59		-25.85	-29.22	-26.50		-8.96	4.78	-8.95		0	0.13	0.8					

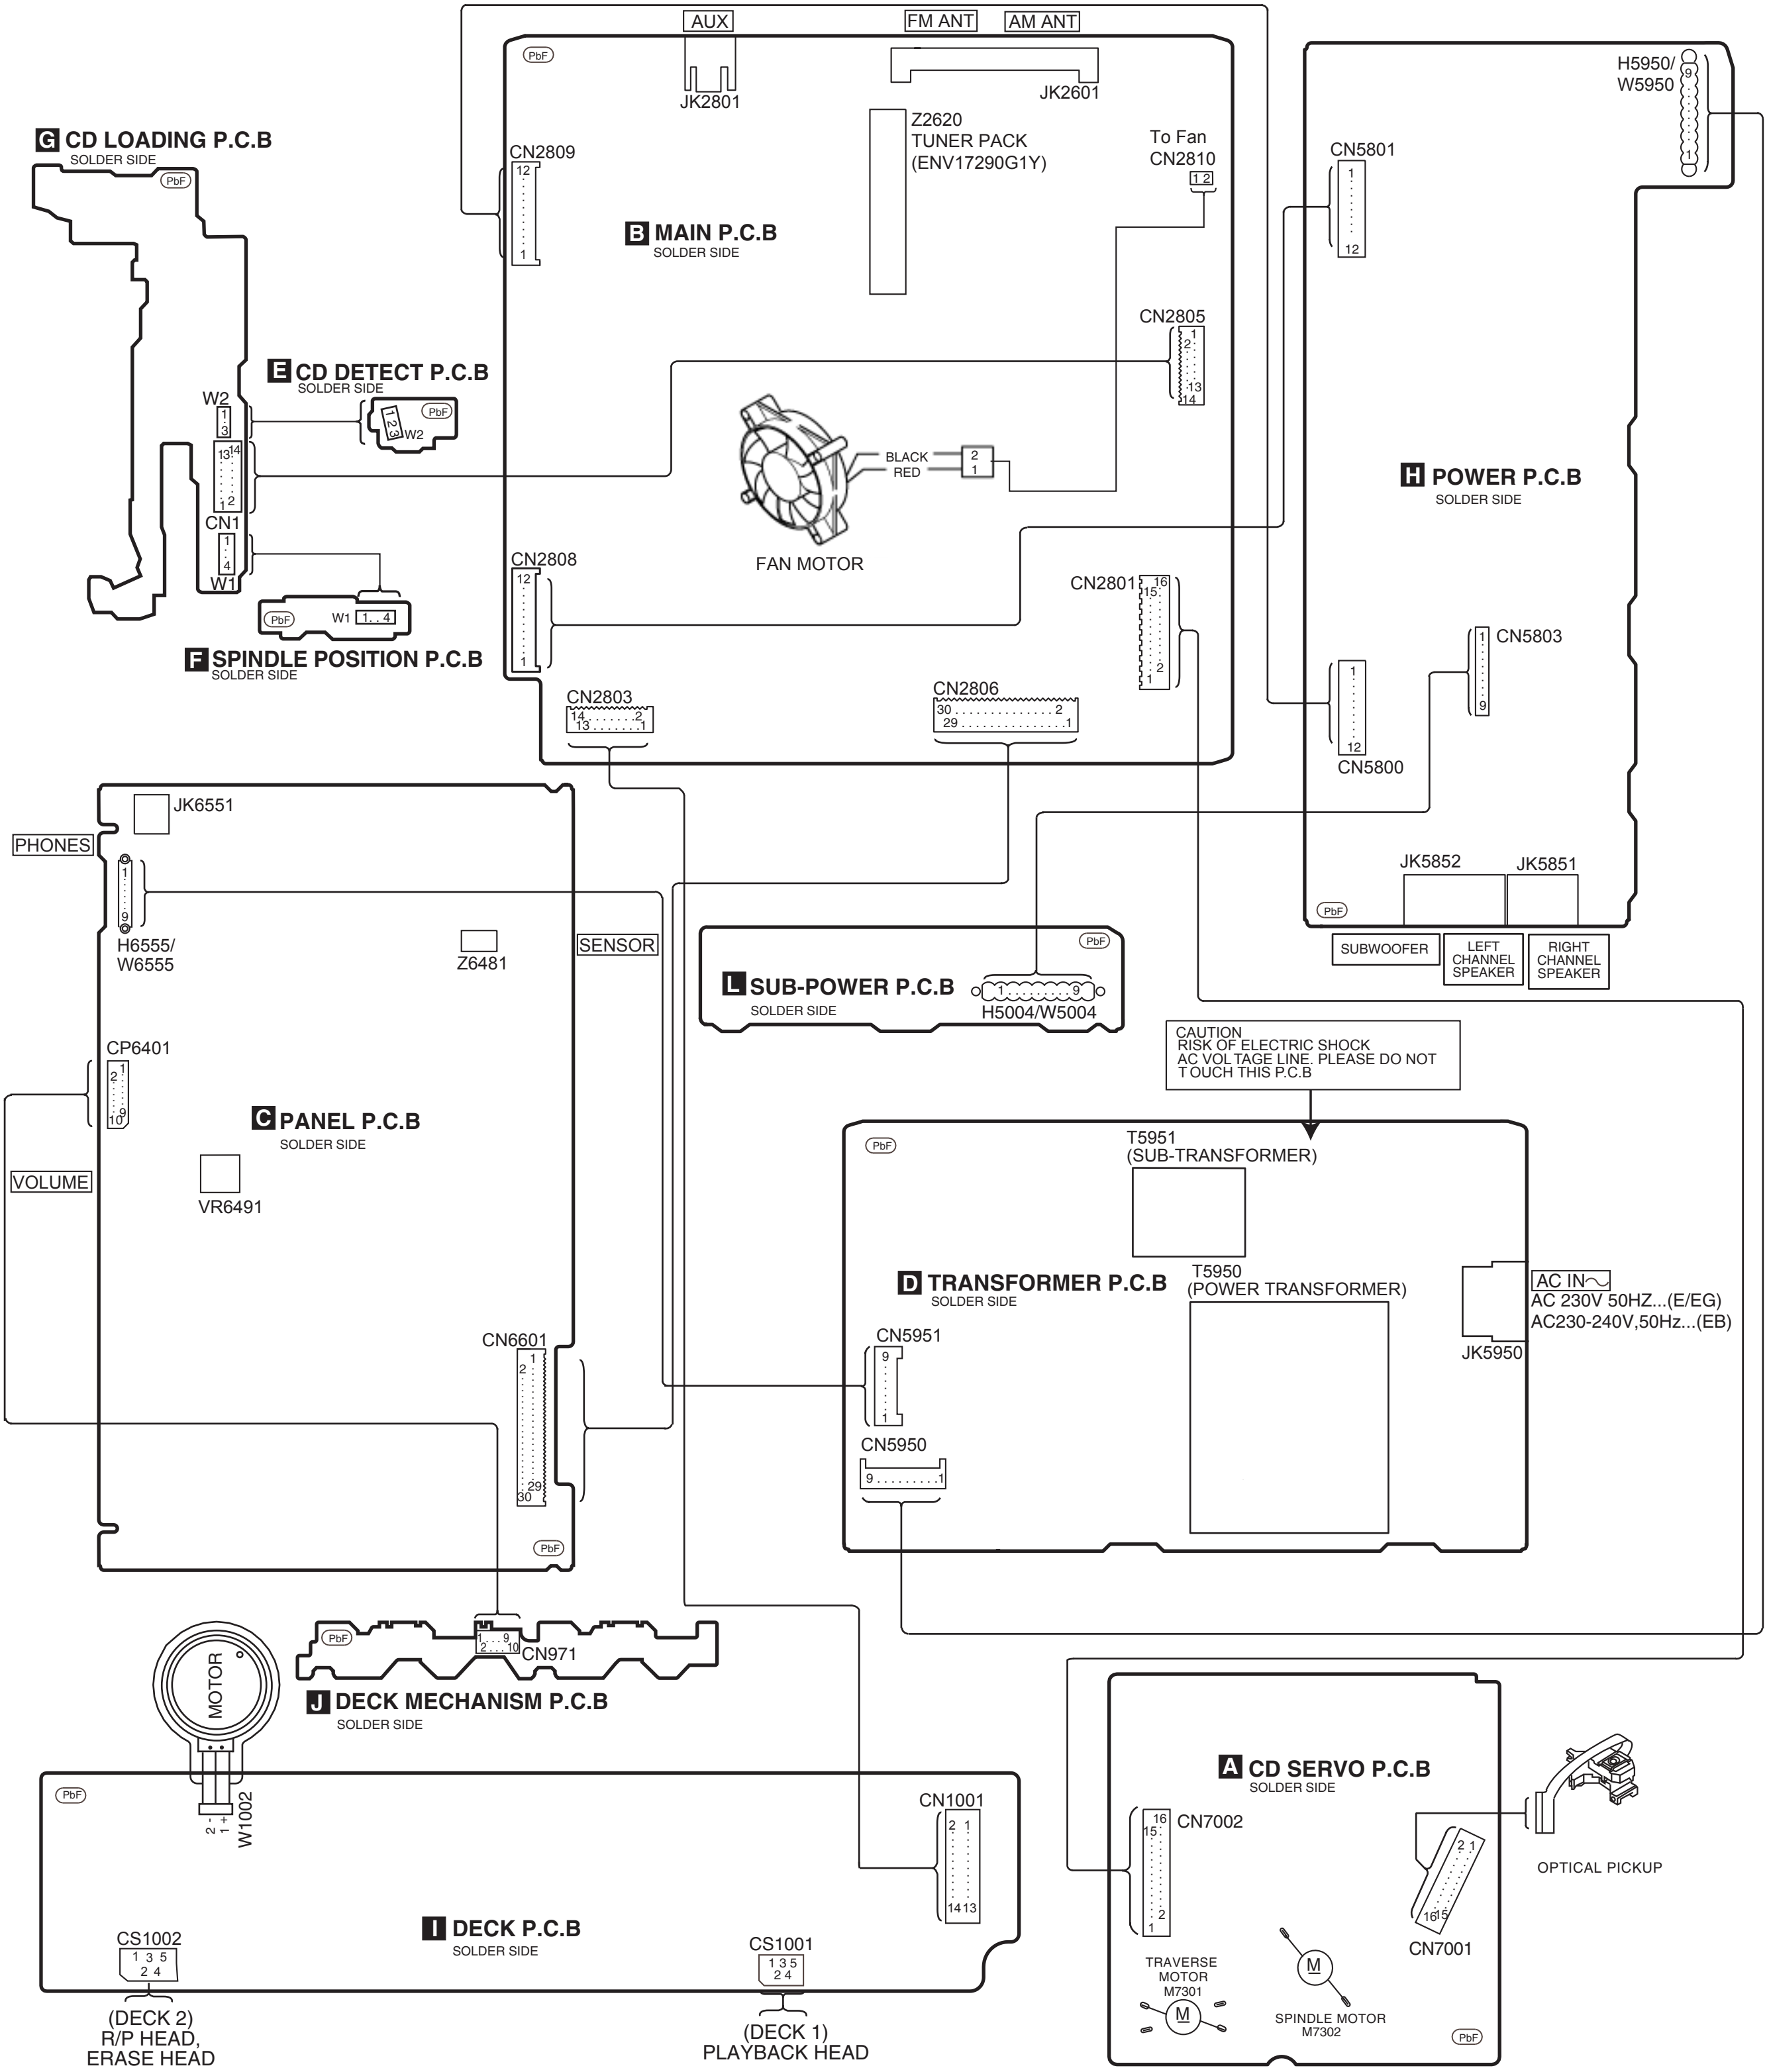
AUX
FM ANT
AM ANT
PbF
JK2801
JK2601
Z2620
TUNER PACK
(ENV17290G1Y)
To Fan
CN2810
1 2
CN2809
12
1
B MAIN P.C.B
SOLDER SIDE
G CD LOADING P.C.B
SOLDER SIDE
H5950/
W5950
9
1
CN5801
1
12
CN2805
1
2
13
14
E CD DETECT P.C.B
SOLDER SIDE
W2
1
3
1 2 3
W2
13 14
1 2
CN1
1
4
W1
W1 1 .. 4
F SPINDLE POSITION P.C.B
SOLDER SIDE
BLACK
RED
2
1
FAN MOTOR
H POWER P.C.B
SOLDER SIDE
CN2808
12
1
CN2801
16
15
2
1
CN5803
1
9
CN5800
1
12
CN2803
14 2
13 1
CN2806
30 2
29 1
JK6551
PHONES
H6555/
W6555
1
9
Z6481
SENSOR
JK5852
JK5851
SUBWOOFER
LEFT
CHANNEL
SPEAKER
RIGHT
CHANNEL
SPEAKER
L SUB-POWER P.C.B
SOLDER SIDE
H5004/W5004
1
9
CAUTION
RISK OF ELECTRIC SHOCK
AC VOLTAGE LINE. PLEASE DO NOT
TOUCH THIS P.C.B
CP6401
2 1
9
10
C PANEL P.C.B
SOLDER SIDE
VOLUME
VR6491
T5951
(SUB-TRANSFORMER)
D TRANSFORMER P.C.B
SOLDER SIDE
T5950
(POWER TRANSFORMER)
AC IN~
AC 230V 50HZ...(E/EG)
AC230-240V,50Hz...(EB)
JK5950
CN5951
9
1
CN5950
9 1
CN6601
1
2
29
30
CN971
1 9
2 10
MOTOR
J DECK MECHANISM P.C.B
SOLDER SIDE
2 -
1 +
W1002
A CD SERVO P.C.B
SOLDER SIDE
CN1001
2 1
14 13
CN7002
16
15
2
1
2 1
16 15
CN7001
OPTICAL PICKUP
I DECK P.C.B
SOLDER SIDE
CS1002
1 3 5
2 4
CS1001
1 3 5
2 4
(DECK 2)
R/P HEAD,
ERASE HEAD
(DECK 1)
PLAYBACK HEAD
TRAVERSE
MOTOR
M7301
M
M
SPINDLE MOTOR
M7302

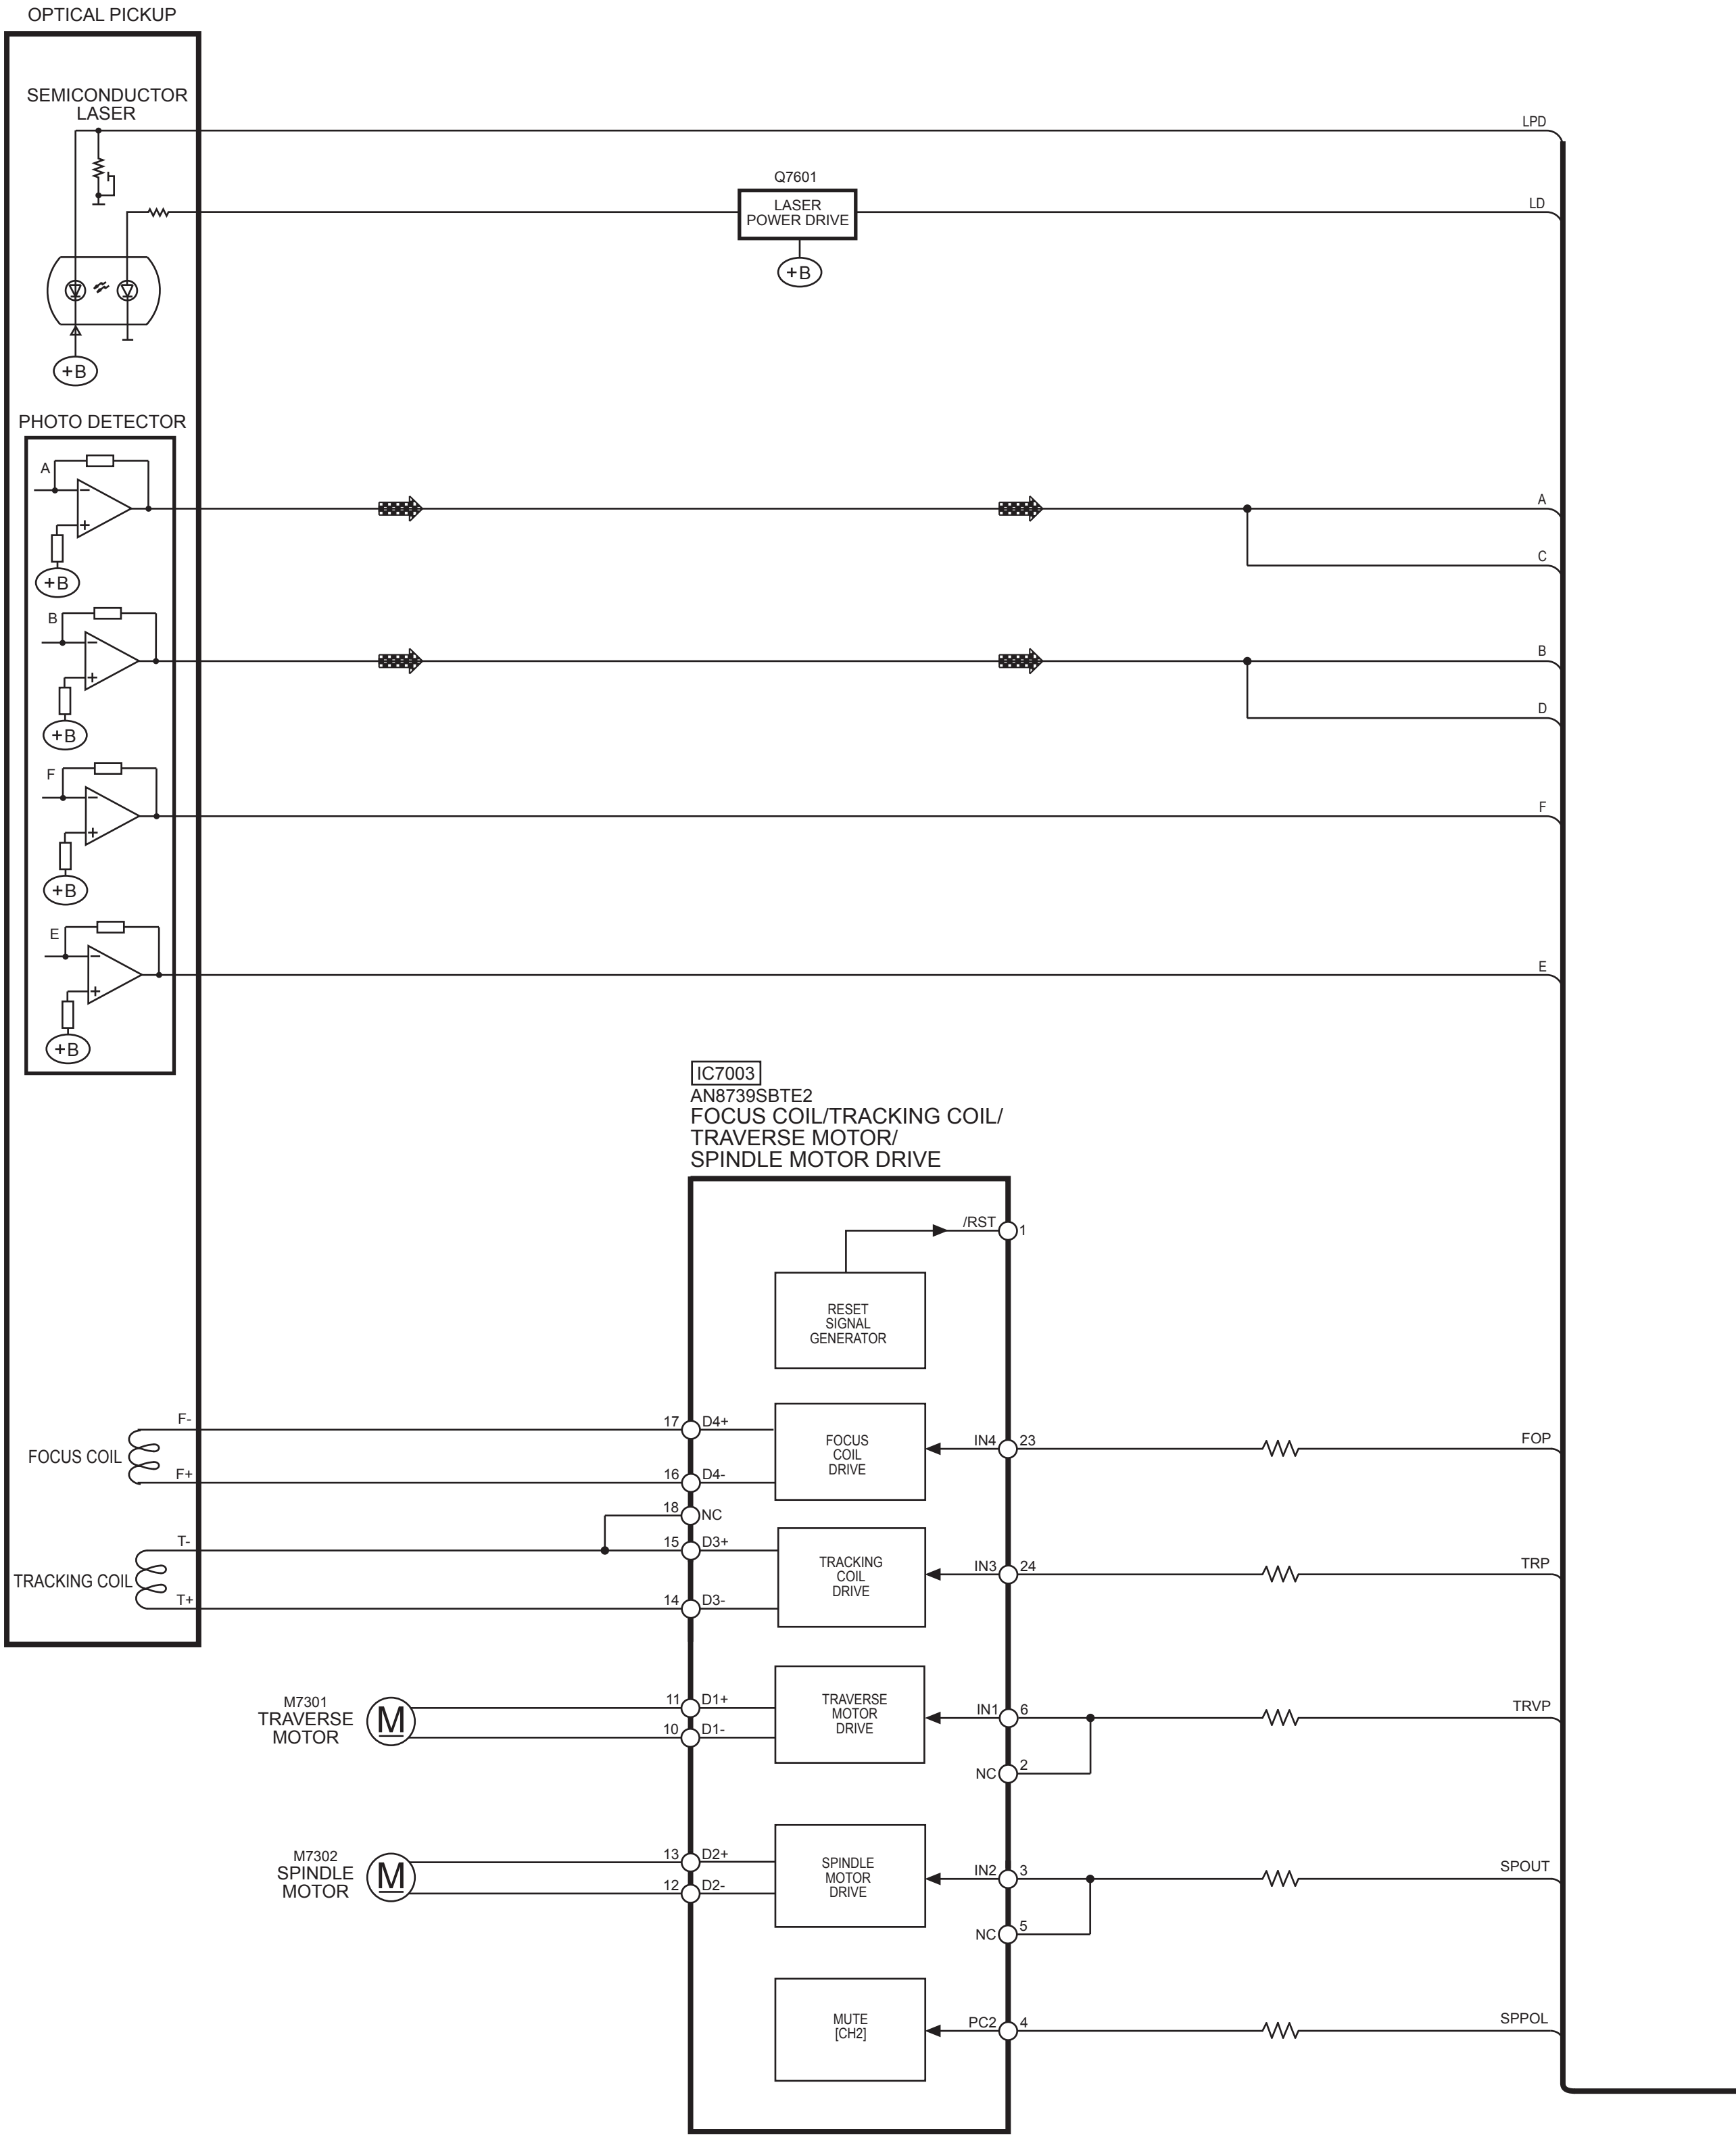
OPTICAL PICKUP
SEMICONDUCTOR LASER
+B
PHOTO DETECTOR
A
B
F
E
+B
Q7601
LASER POWER DRIVE
+B
LPD
LD
A
C
B
D
F
E
IC7003
AN8739SBTE2
FOCUS COIL/TRACKING COIL/
TRAVERSE MOTOR/
SPINDLE MOTOR DRIVE
/RST
1
RESET SIGNAL GENERATOR
FOCUS COIL
F-
F+
17
D4+
16
D4-
FOCUS COIL DRIVE
IN4
23
FOP
18
NC
TRACKING COIL
T-
T+
15
D3+
14
D3-
TRACKING COIL DRIVE
IN3
24
TRP
M7301
TRAVERSE MOTOR
M
11
D1+
10
D1-
TRAVERSE MOTOR DRIVE
IN1
6
NC
2
TRVP
M7302
SPINDLE MOTOR
M
13
D2+
12
D2-
SPINDLE MOTOR DRIVE
IN2
3
NC
5
SPOUT
MUTE [CH2]
PC2
4
SPPOL

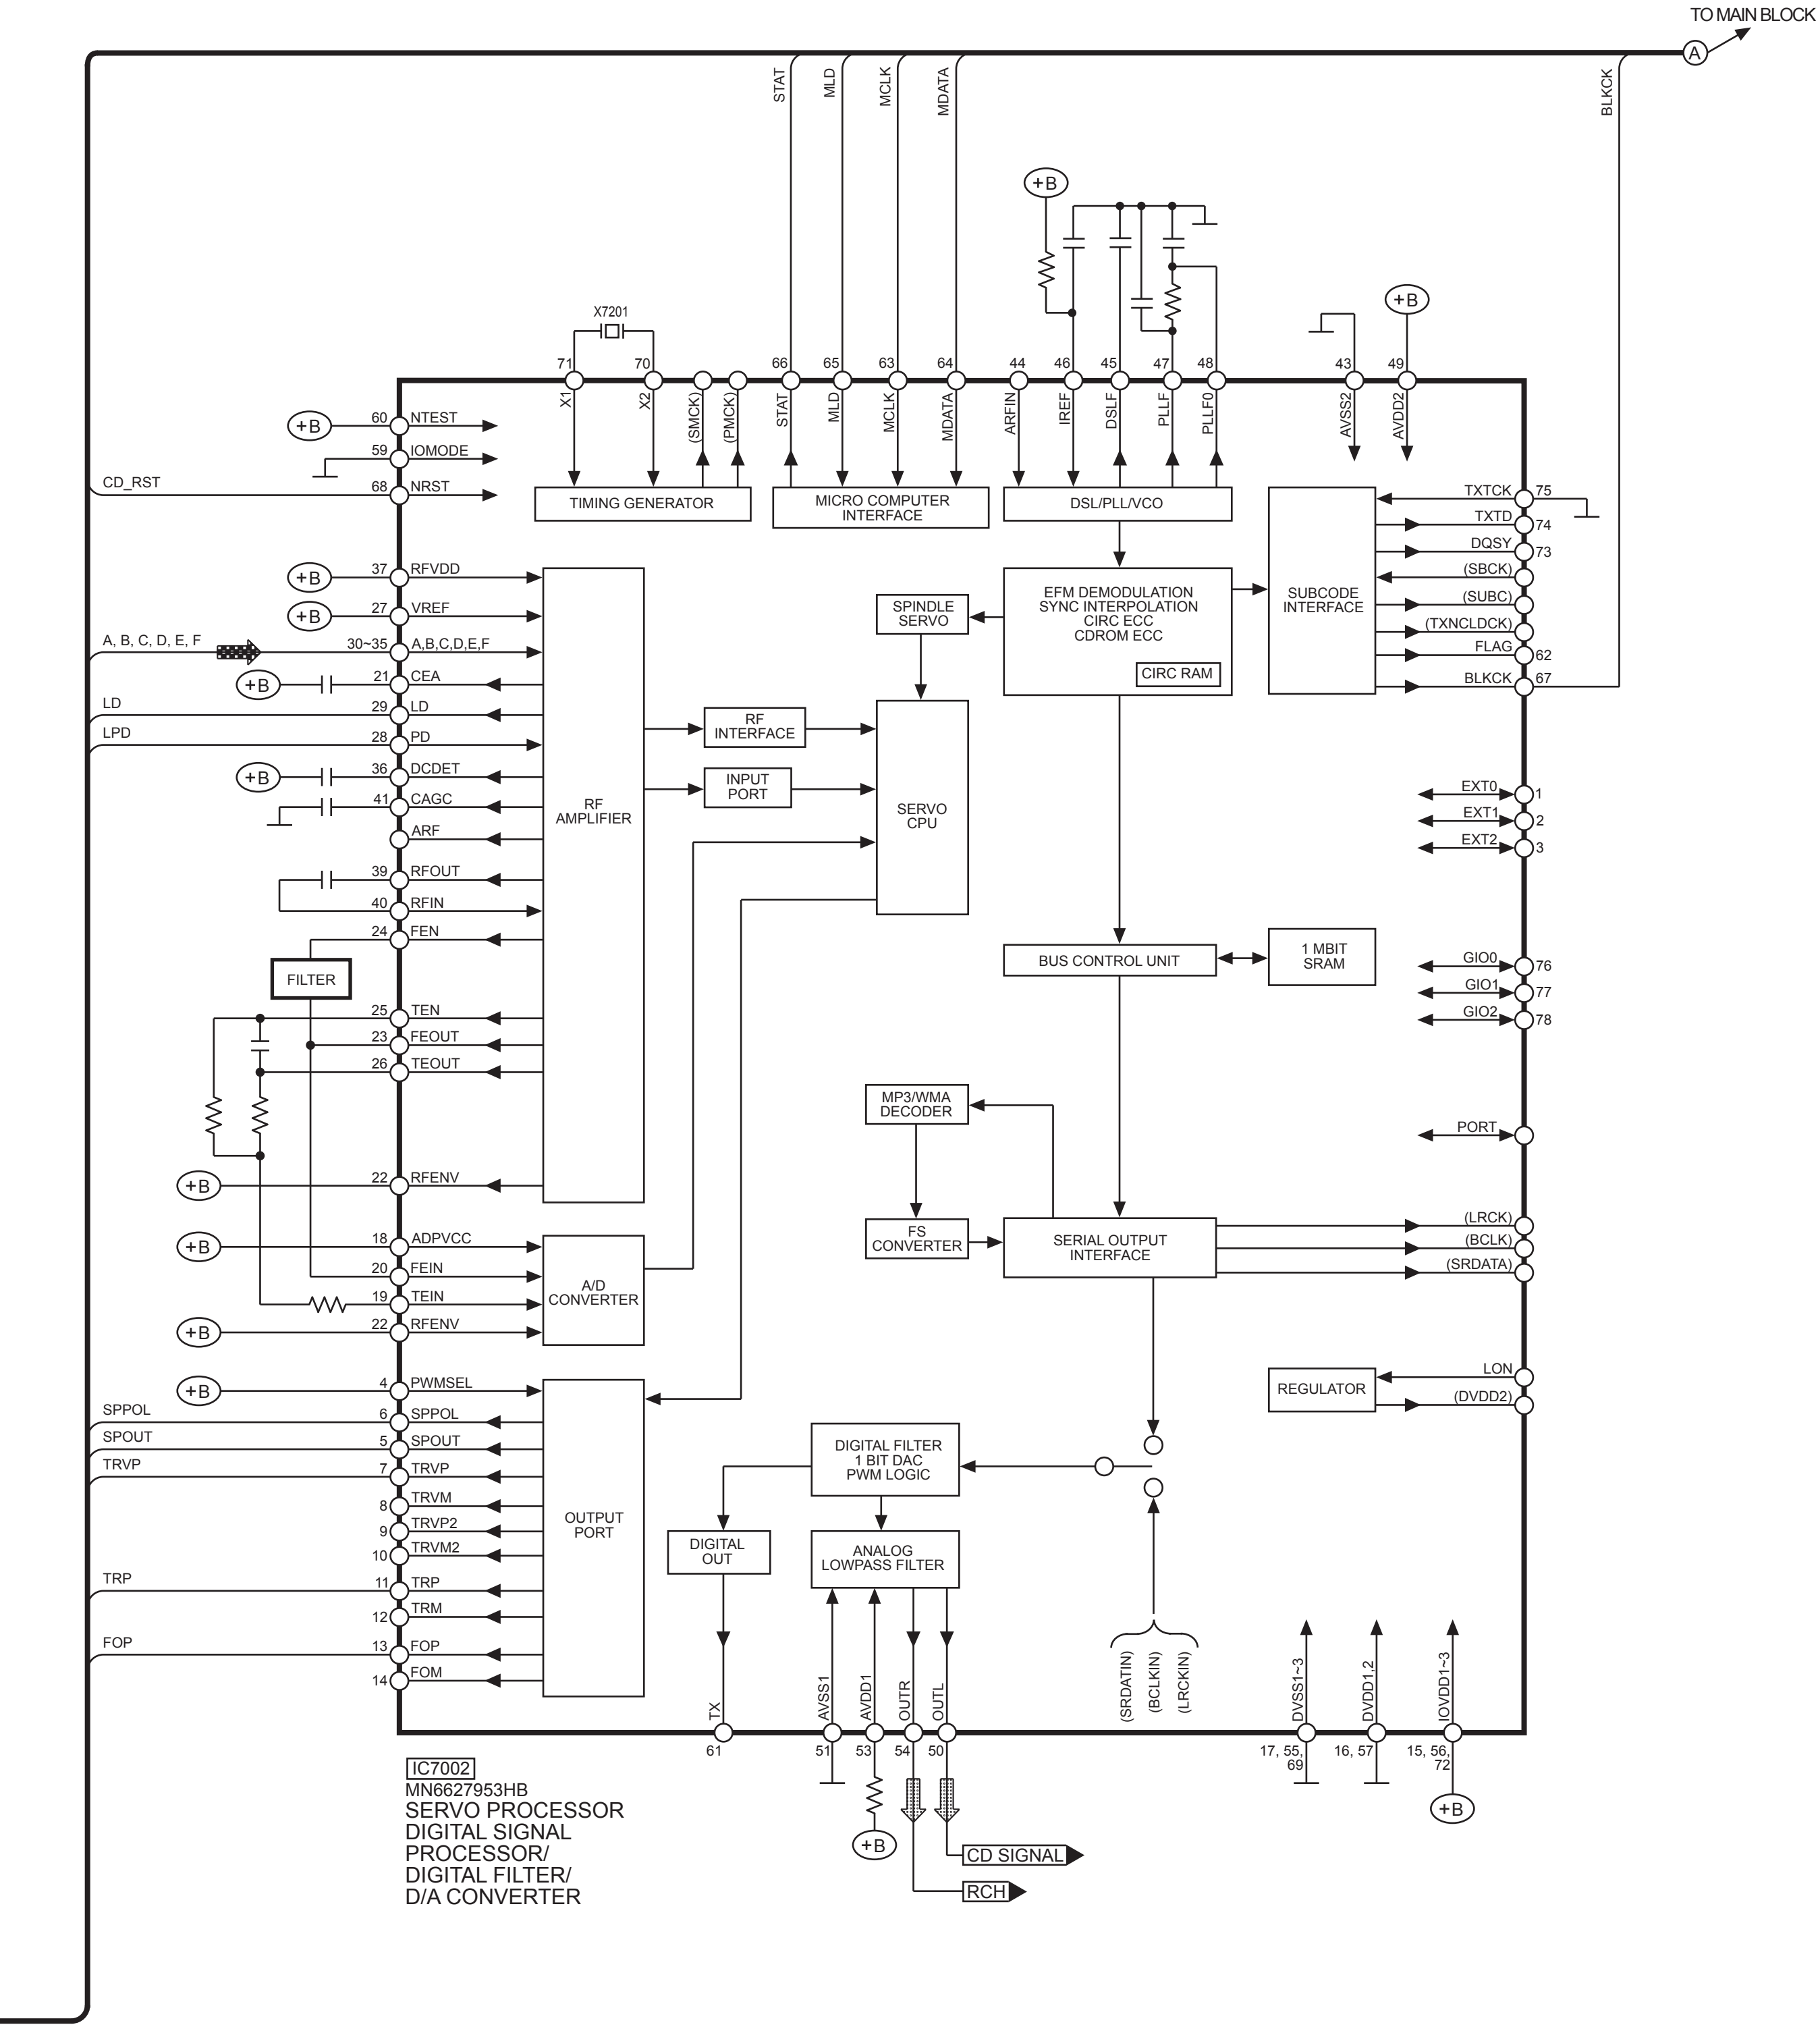
TO MAIN BLOCK
A
STAT
MLD
MCLK
MDATA
BLKCK
+B
X7201
71
70
66
65
63
64
44
46
45
47
48
43
49
X1
X2
(SMCK)
(PMCK)
STAT
MLD
MCLK
MDATA
ARFIN
IREF
DSLF
PLLF
PLLF0
AVSS2
AVDD2
60 NTEST
59 IOMODE
CD_RST
68 NRST
TIMING GENERATOR
MICRO COMPUTER INTERFACE
DSL/PLL/VCO
SUBCODE INTERFACE
TXTCK 75
TXTD 74
DQSY 73
(SBCK)
(SUBC)
(TXNCLDCK)
FLAG 62
BLKCK 67
37 RFVDD
27 VREF
A, B, C, D, E, F
30~35 A,B,C,D,E,F
21 CEA
LD
29 LD
LPD
28 PD
36 DCDET
41 CAGC
ARF
39 RFOUT
40 RFIN
24 FEN
FILTER
25 TEN
23 FEOUT
26 TEOUT
22 RFENV
RF AMPLIFIER
SPINDLE SERVO
EFM DEMODULATION
SYNC INTERPOLATION
CIRC ECC
CDROM ECC
CIRC RAM
RF INTERFACE
INPUT PORT
SERVO CPU
EXT0 1
EXT1 2
EXT2 3
BUS CONTROL UNIT
1 MBIT SRAM
GIO0 76
GIO1 77
GIO2 78
MP3/WMA DECODER
PORT
FS CONVERTER
SERIAL OUTPUT INTERFACE
(LRCK)
(BCLK)
(SRDATA)
18 ADPVCC
20 FEIN
19 TEIN
22 RFENV
A/D CONVERTER
REGULATOR
LON
(DVDD2)
4 PWMSEL
SPPOL
6 SPPOL
SPOUT
5 SPOUT
TRVP
7 TRVP
8 TRVM
9 TRVP2
10 TRVM2
TRP
11 TRP
12 TRM
FOP
13 FOP
14 FOM
OUTPUT PORT
DIGITAL FILTER
1 BIT DAC
PWM LOGIC
DIGITAL OUT
ANALOG LOWPASS FILTER
(SRDATIN)
(BCLKIN)
(LRCKIN)
TX
61
AVSS1
51
AVDD1
53
OUTR
54
OUTL
50
DVSS1~3
17, 55, 69
DVDD1,2
16, 57
IOVDD1~3
15, 56, 72
CD SIGNAL
RCH

IC7002
MN6627953HB
SERVO PROCESSOR
DIGITAL SIGNAL
PROCESSOR/
DIGITAL FILTER/
D/A CONVERTER

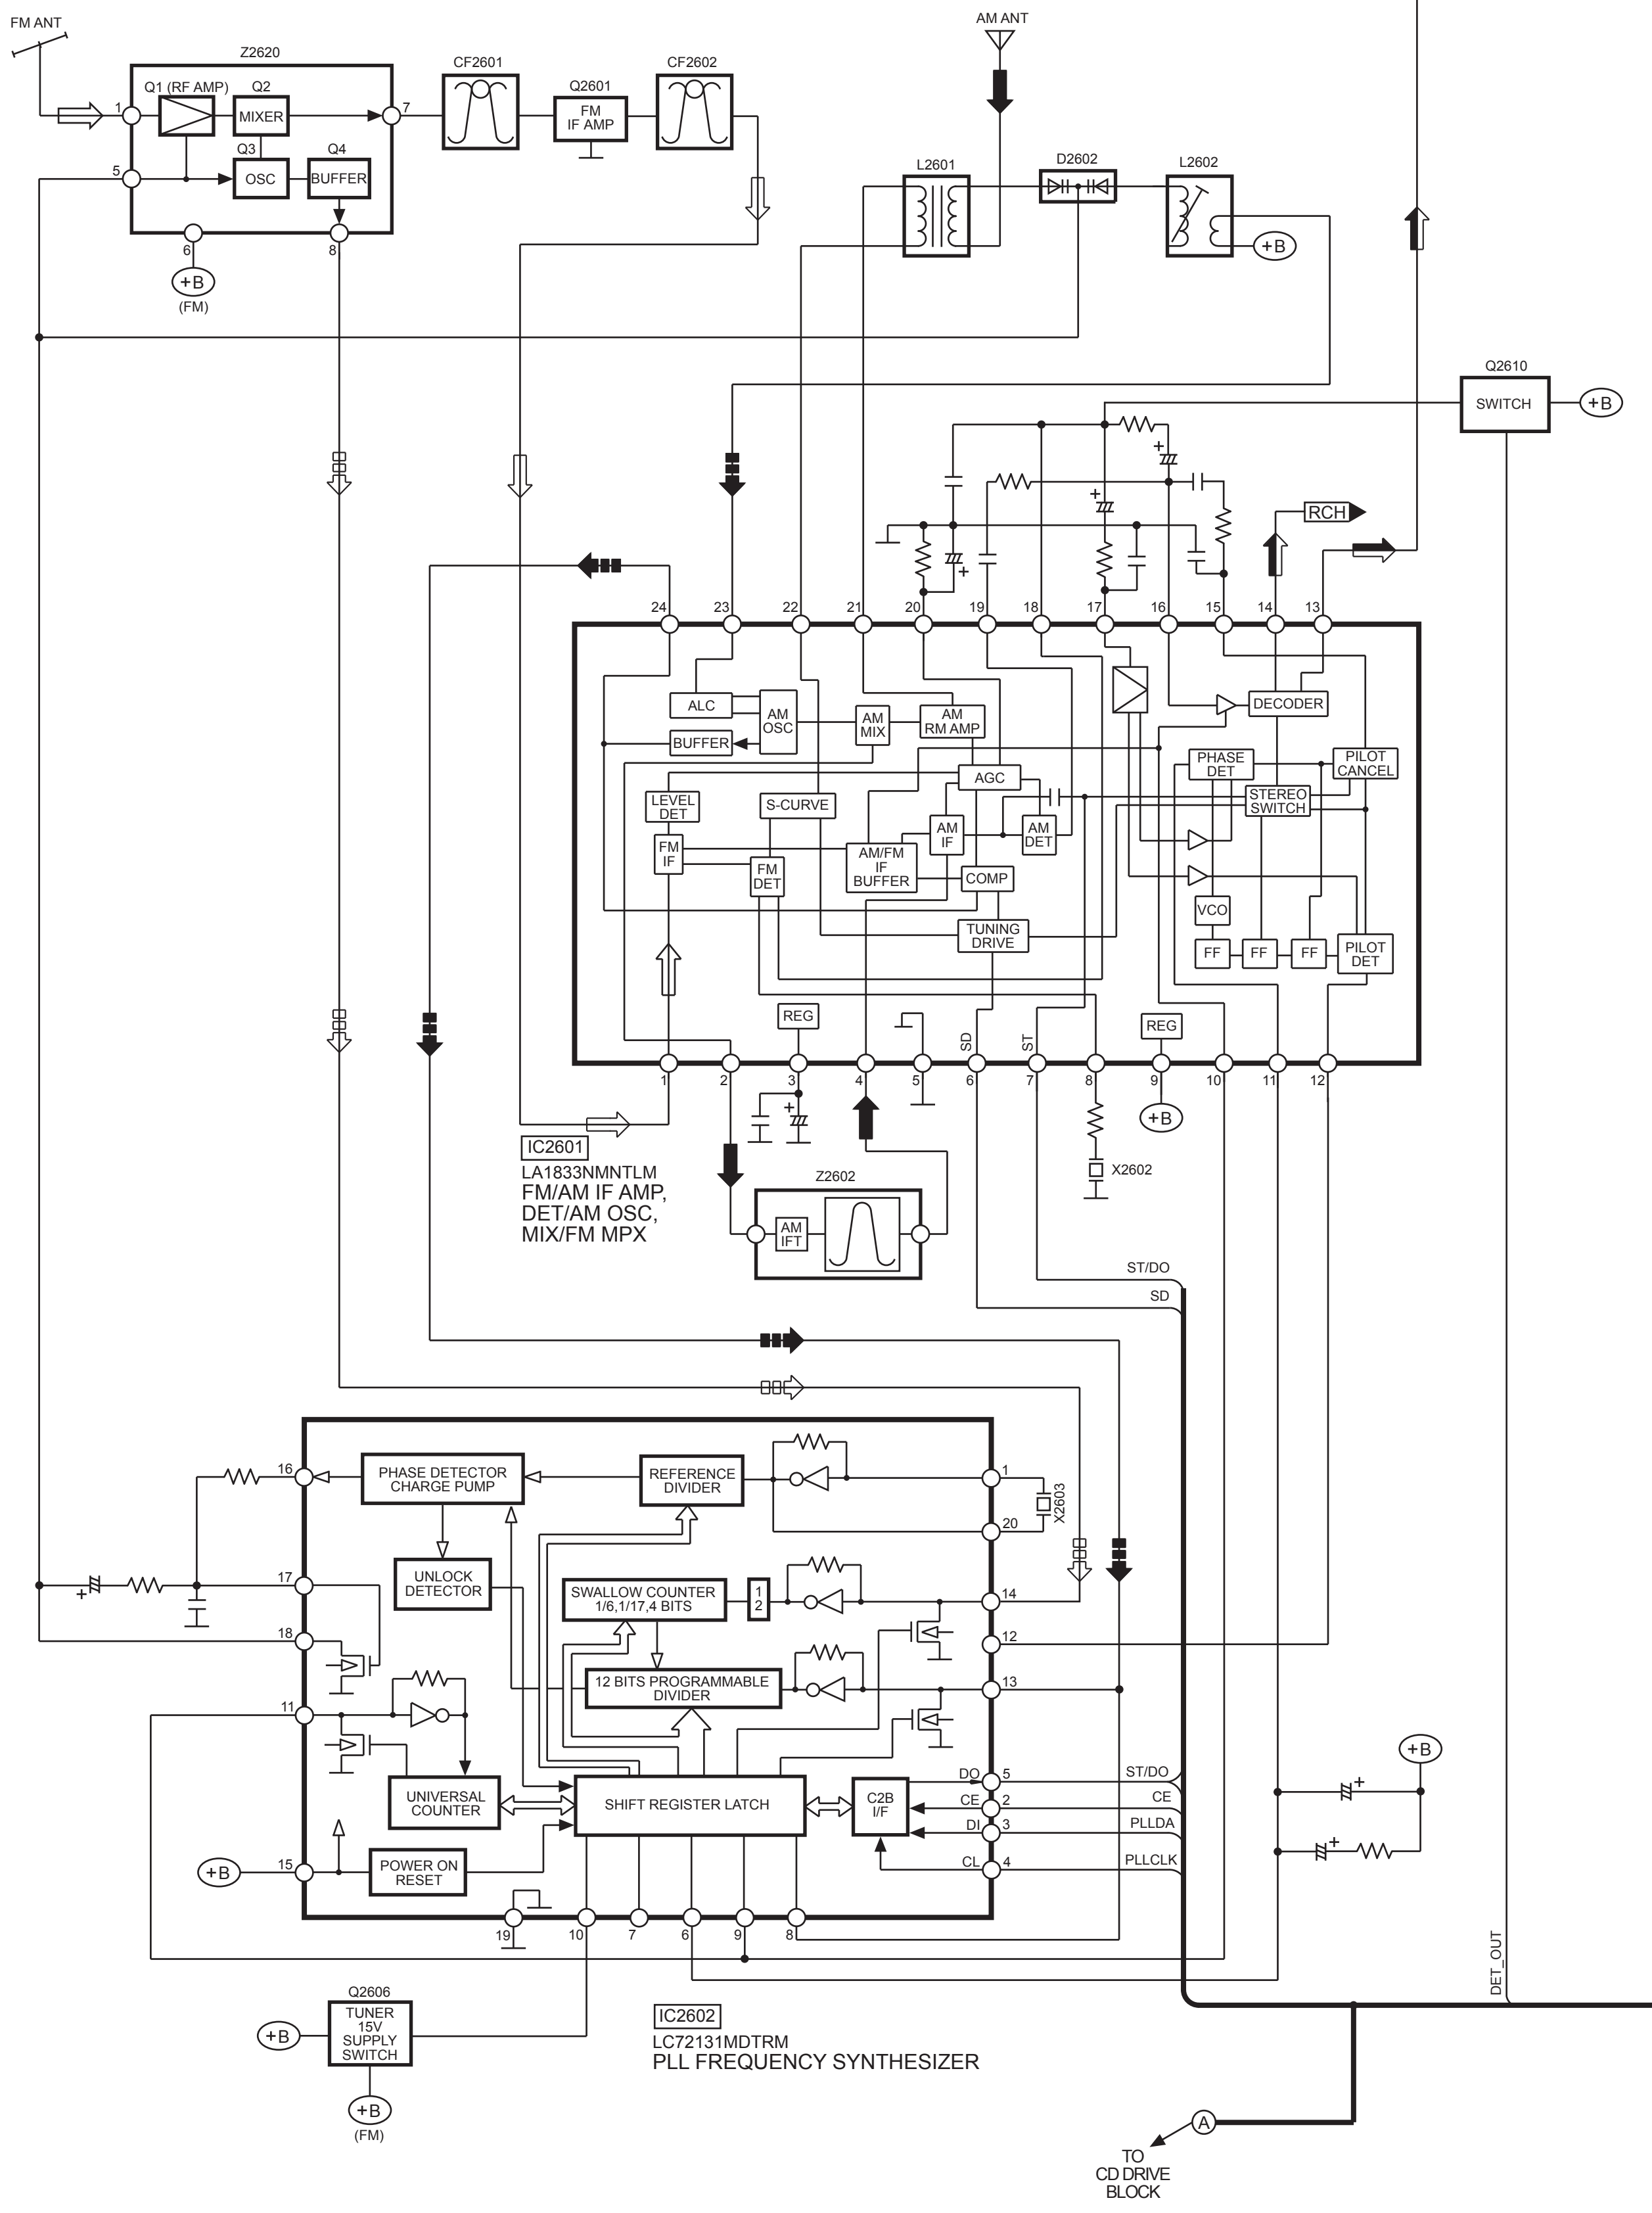
FM ANT
Z2620
Q1 (RF AMP)
Q2
MIXER
Q3
OSC
Q4
BUFFER
+B
(FM)
CF2601
Q2601
FM IF AMP
CF2602
AM ANT
L2601
D2602
L2602
+B
Q2610
SWITCH
+B
RCH
ALC
AM OSC
BUFFER
AM MIX
AM RM AMP
AGC
LEVEL DET
S-CURVE
FM IF
FM DET
AM/FM IF BUFFER
AM IF
AM DET
COMP
TUNING DRIVE
DECODER
PHASE DET
PILOT CANCEL
STEREO SWITCH
VCO
FF
FF
FF
PILOT DET
REG
REG
SD
ST
+B
X2602
IC2601
LA1833NMNTLM
FM/AM IF AMP,
DET/AM OSC,
MIX/FM MPX
Z2602
AM IFT
ST/DO
SD
PHASE DETECTOR CHARGE PUMP
REFERENCE DIVIDER
X2603
UNLOCK DETECTOR
SWALLOW COUNTER 1/6,1/17,4 BITS
1 2
12 BITS PROGRAMMABLE DIVIDER
UNIVERSAL COUNTER
SHIFT REGISTER LATCH
C2B I/F
POWER ON RESET
+B
DO
CE
DI
CL
ST/DO
CE
PLLDA
PLLCLK
+B
DET_OUT
Q2606
TUNER 15V SUPPLY SWITCH
+B
+B
(FM)
IC2602
LC72131MDTRM
PLL FREQUENCY SYNTHESIZER
A
TO CD DRIVE BLOCK

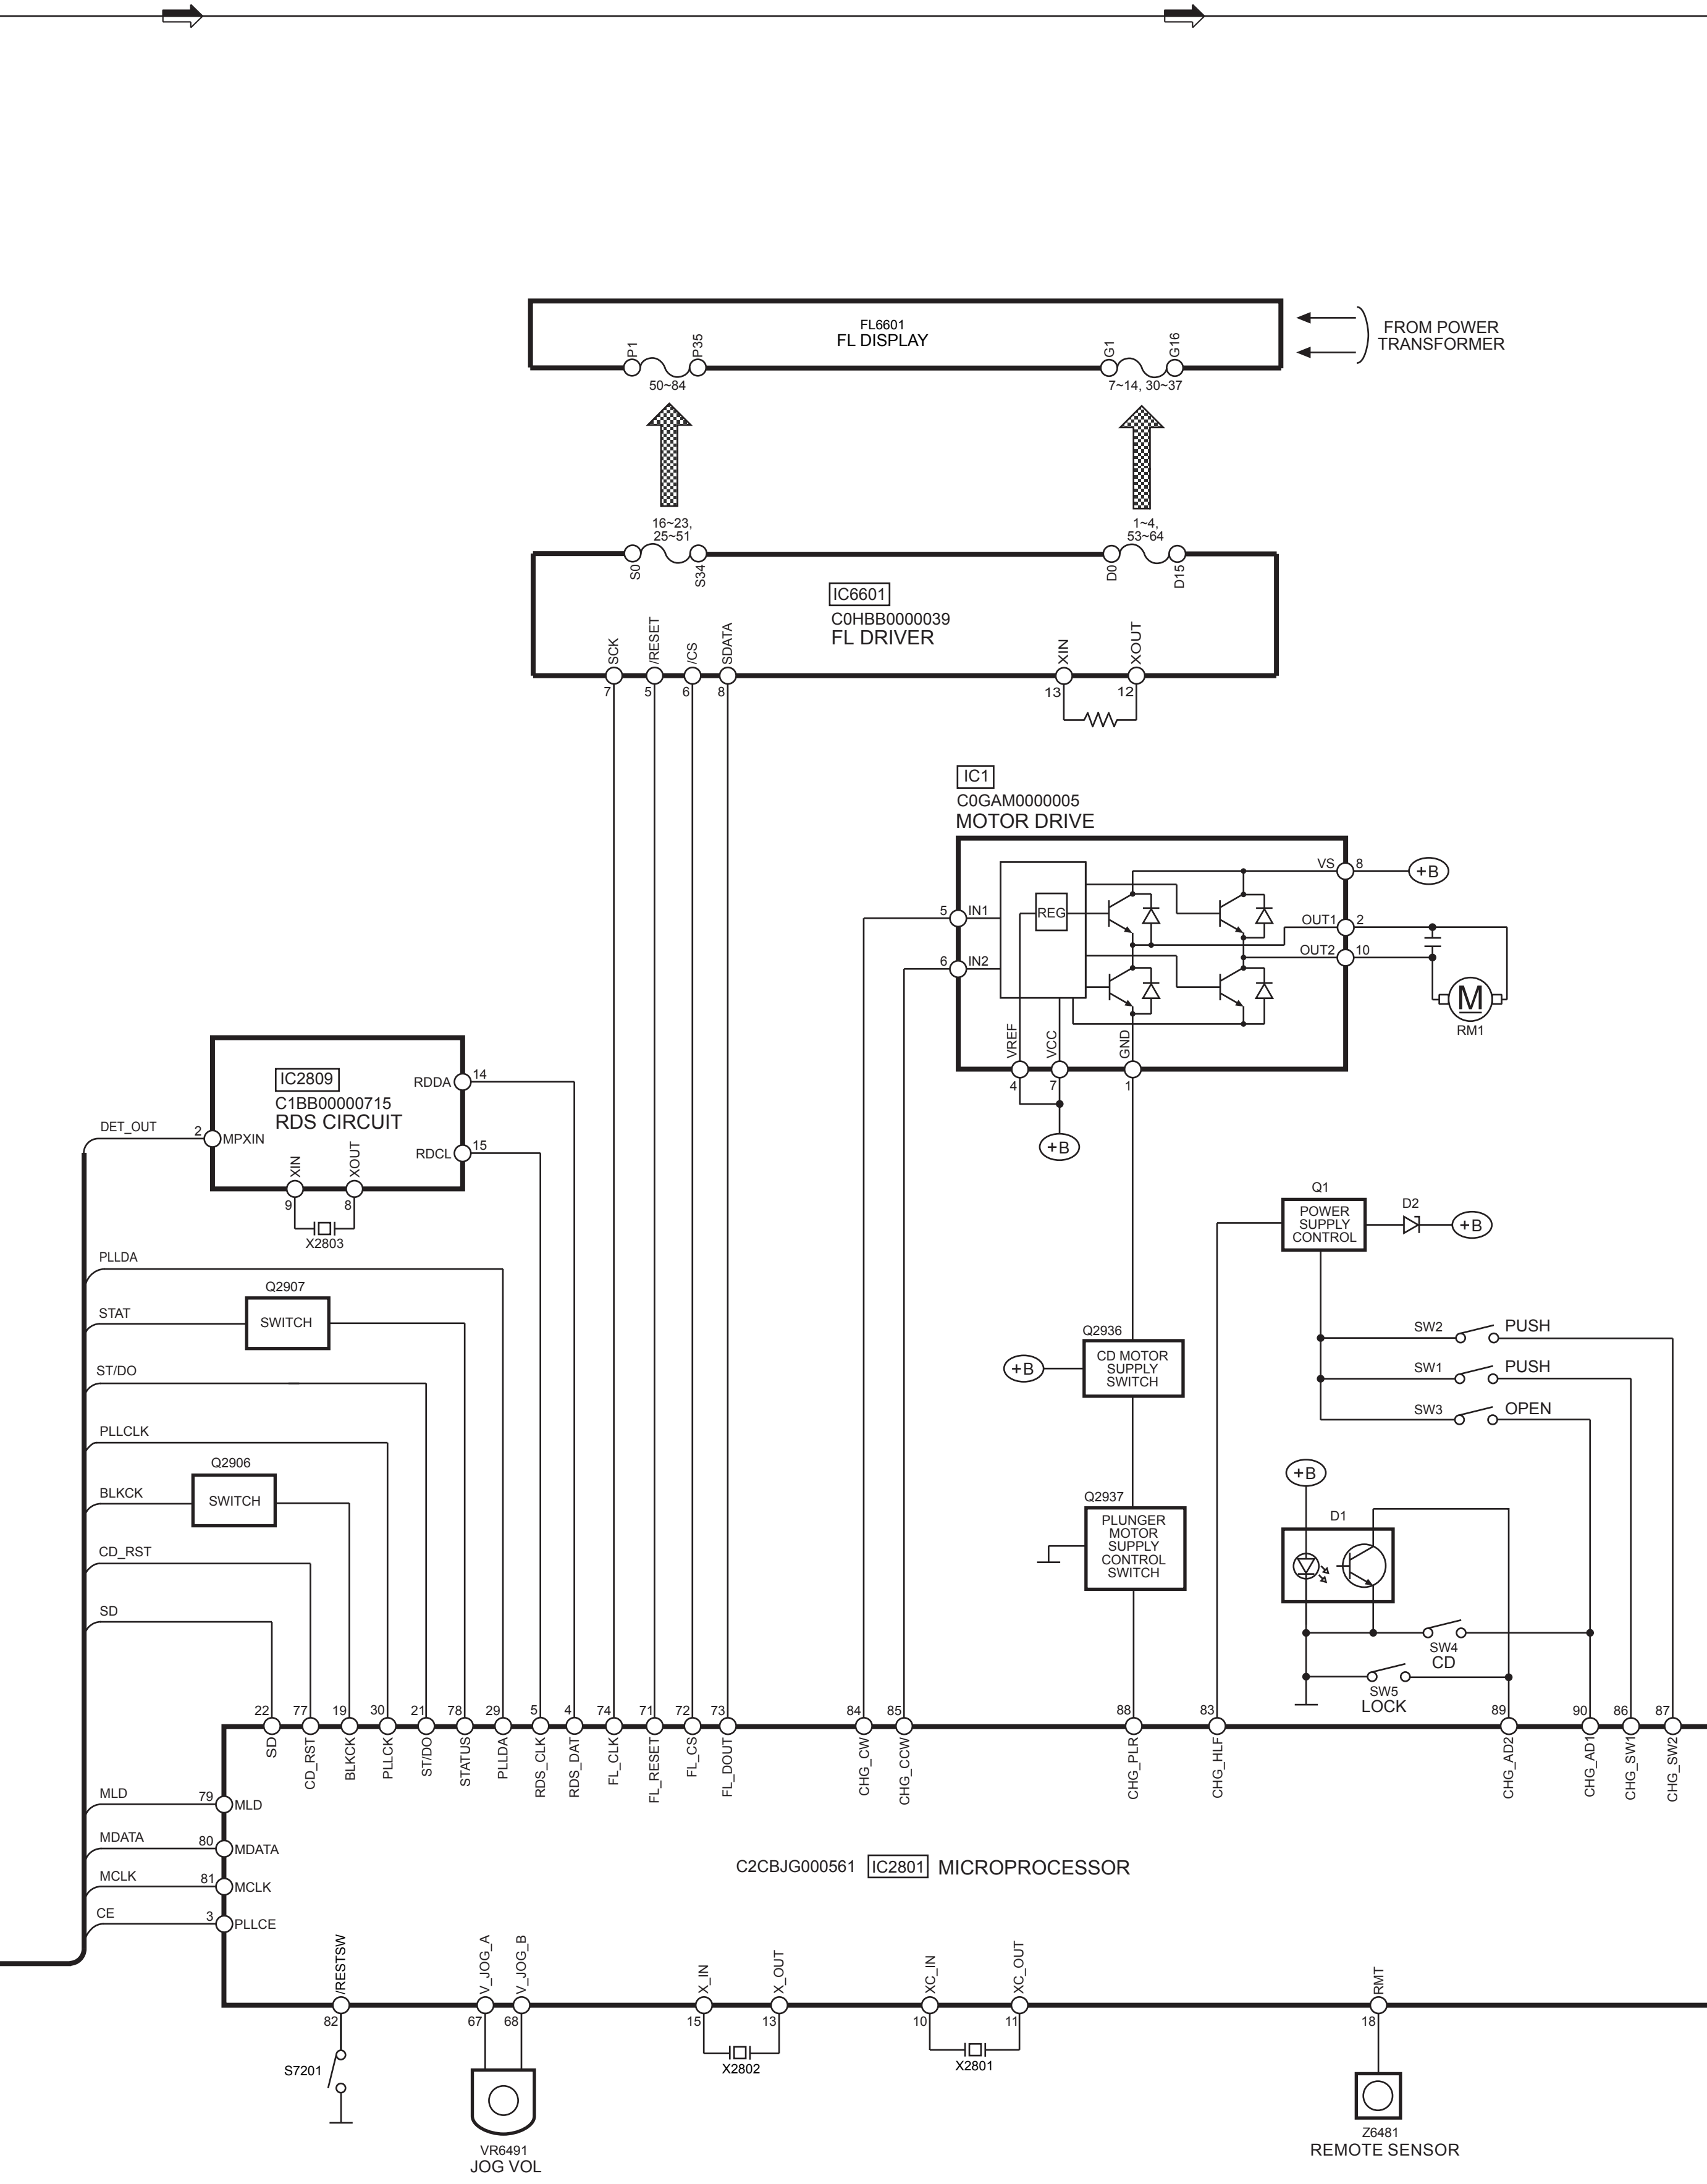
FL6601
FL DISPLAY
P1
P35
50~84
G1
G16
7~14, 30~37
FROM POWER TRANSFORMER
16~23, 25~51
1~4, 53~64
S0
S34
D0
D15
IC6601
C0HBB0000039
FL DRIVER
SCK
/RESET
/CS
SDATA
XIN
XOUT
7
5
6
8
13
12
IC1
C0GAM0000005
MOTOR DRIVE
IN1
IN2
REG
VS
OUT1
OUT2
VREF
VCC
GND
5
6
8
2
10
4
7
1
+B
+B
M
RM1
IC2809
C1BB00000715
RDS CIRCUIT
MPXIN
RDDA
RDCL
XIN
XOUT
14
15
2
9
8
X2803
DET_OUT
PLLDA
STAT
Q2907
SWITCH
ST/DO
PLLCLK
Q2906
SWITCH
BLKCK
CD_RST
SD
Q1
POWER SUPPLY CONTROL
D2
+B
Q2936
CD MOTOR SUPPLY SWITCH
+B
Q2937
PLUNGER MOTOR SUPPLY CONTROL SWITCH
SW2
PUSH
SW1
PUSH
SW3
OPEN
+B
D1
SW4
CD
SW5
LOCK
22
77
19
30
21
78
29
5
4
74
71
72
73
84
85
88
83
89
90
86
87
SD
CD_RST
BLKCK
PLLCK
ST/DO
STATUS
PLLDA
RDS_CLK
RDS_DAT
FL_CLK
FL_RESET
FL_CS
FL_DOUT
CHG_CW
CHG_CCW
CHG_PLR
CHG_HLF
CHG_AD2
CHG_AD1
CHG_SW1
CHG_SW2
MLD
MDATA
MCLK
CE
79
80
81
3
MLD
MDATA
MCLK
PLLCE
C2CBJG000561
IC2801
MICROPROCESSOR
/RESTSW
V_JOG_A
V_JOG_B
X_IN
X_OUT
XC_IN
XC_OUT
RMT
82
67
68
15
13
10
11
18
S7201
X2802
X2801
VR6491
JOG VOL
Z6481
REMOTE SENSOR

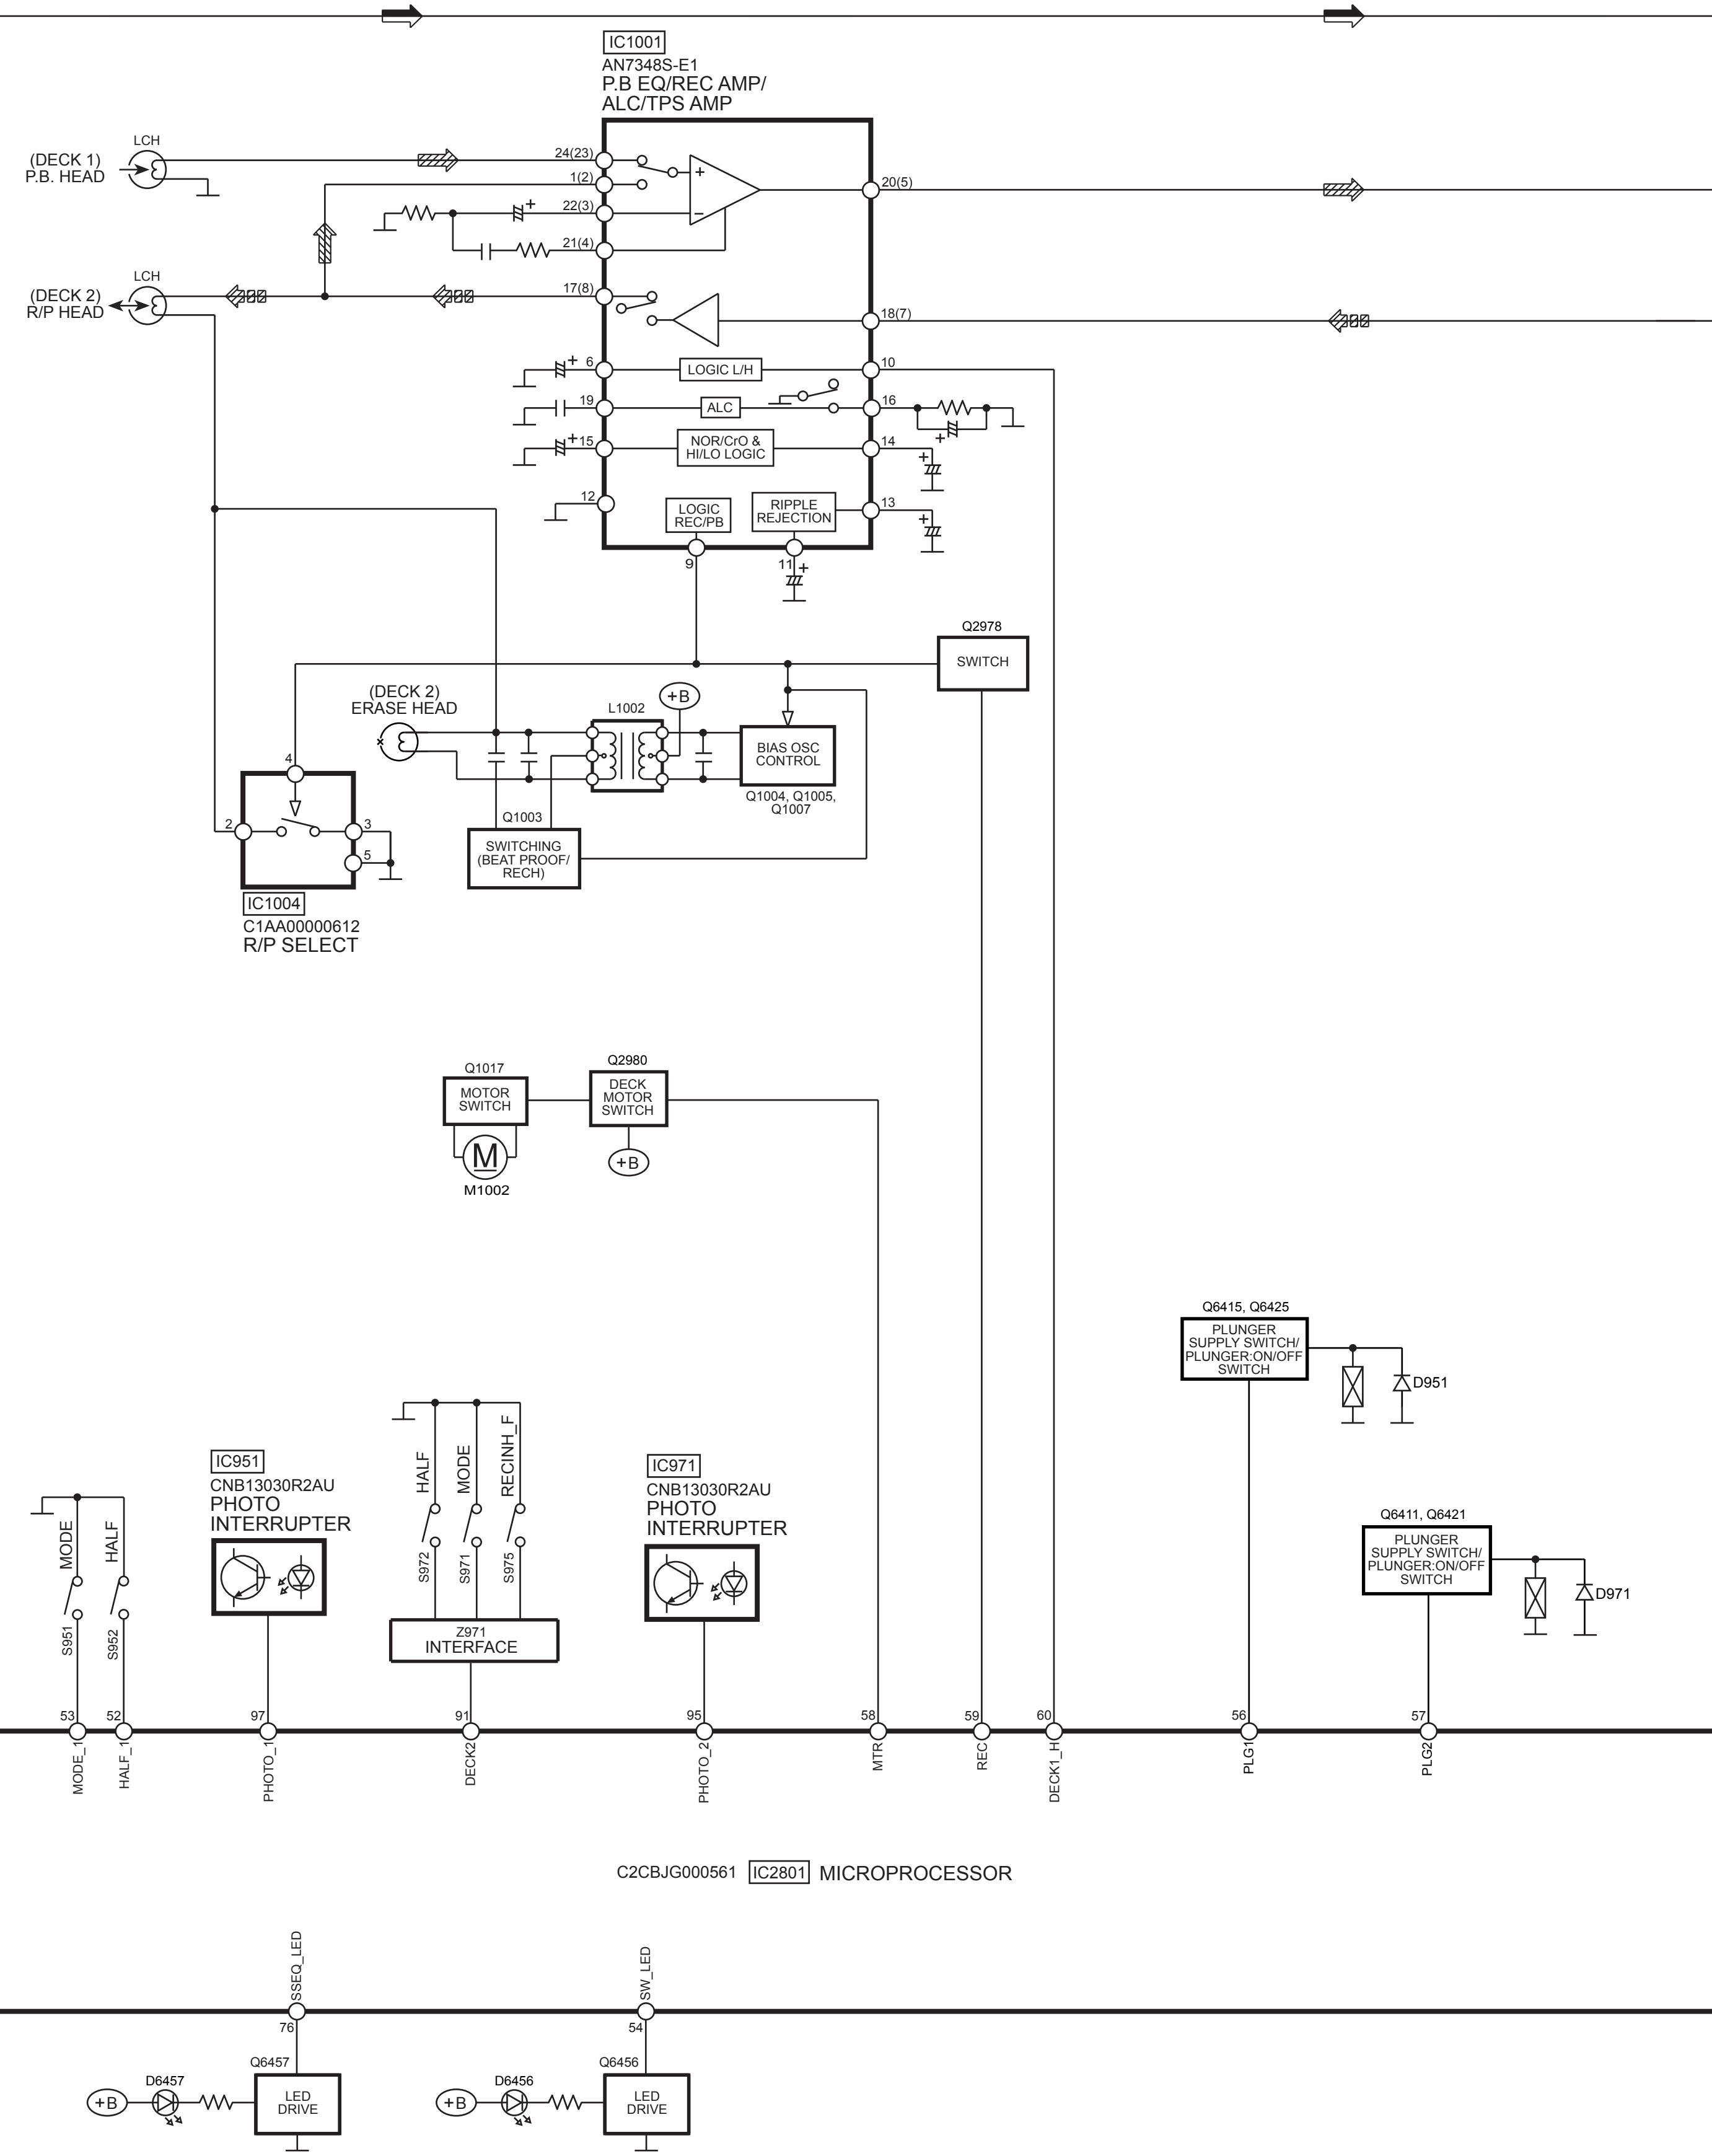
IC1001
AN7348S-E1
P.B EQ/REC AMP/
ALC/TPS AMP
(DECK 1)
P.B. HEAD
LCH
24(23)
1(2)
22(3)
21(4)
20(5)
(DECK 2)
R/P HEAD
LCH
17(8)
18(7)
6
LOGIC L/H
10
19
ALC
16
15
NOR/CrO &
HI/LO LOGIC
14
12
LOGIC
REC/PB
RIPPLE
REJECTION
13
9
11
Q2978
SWITCH
(DECK 2)
ERASE HEAD
L1002
+B
BIAS OSC
CONTROL
Q1004, Q1005,
Q1007
4
2
3
5
Q1003
SWITCHING
(BEAT PROOF/
RECH)
IC1004
C1AA00000612
R/P SELECT
Q1017
MOTOR
SWITCH
M
M1002
Q2980
DECK
MOTOR
SWITCH
+B
Q6415, Q6425
PLUNGER
SUPPLY SWITCH/
PLUNGER:ON/OFF
SWITCH
D951
HALF
MODE
RECINH_F
S972
S971
S975
Z971
INTERFACE
IC951
CNB13030R2AU
PHOTO
INTERRUPTER
IC971
CNB13030R2AU
PHOTO
INTERRUPTER
Q6411, Q6421
PLUNGER
SUPPLY SWITCH/
PLUNGER:ON/OFF
SWITCH
D971
MODE
HALF
S951
S952
53
52
97
91
95
58
59
60
56
57
MODE_1
HALF_1
PHOTO_1
DECK2
PHOTO_2
MTR
REC
DECK1_H
PLG1
PLG2
C2CBJG000561
IC2801
MICROPROCESSOR
SSEQ_LED
SW_LED
76
54
Q6457
Q6456
D6457
D6456
+B
+B
LED
DRIVE
LED
DRIVE

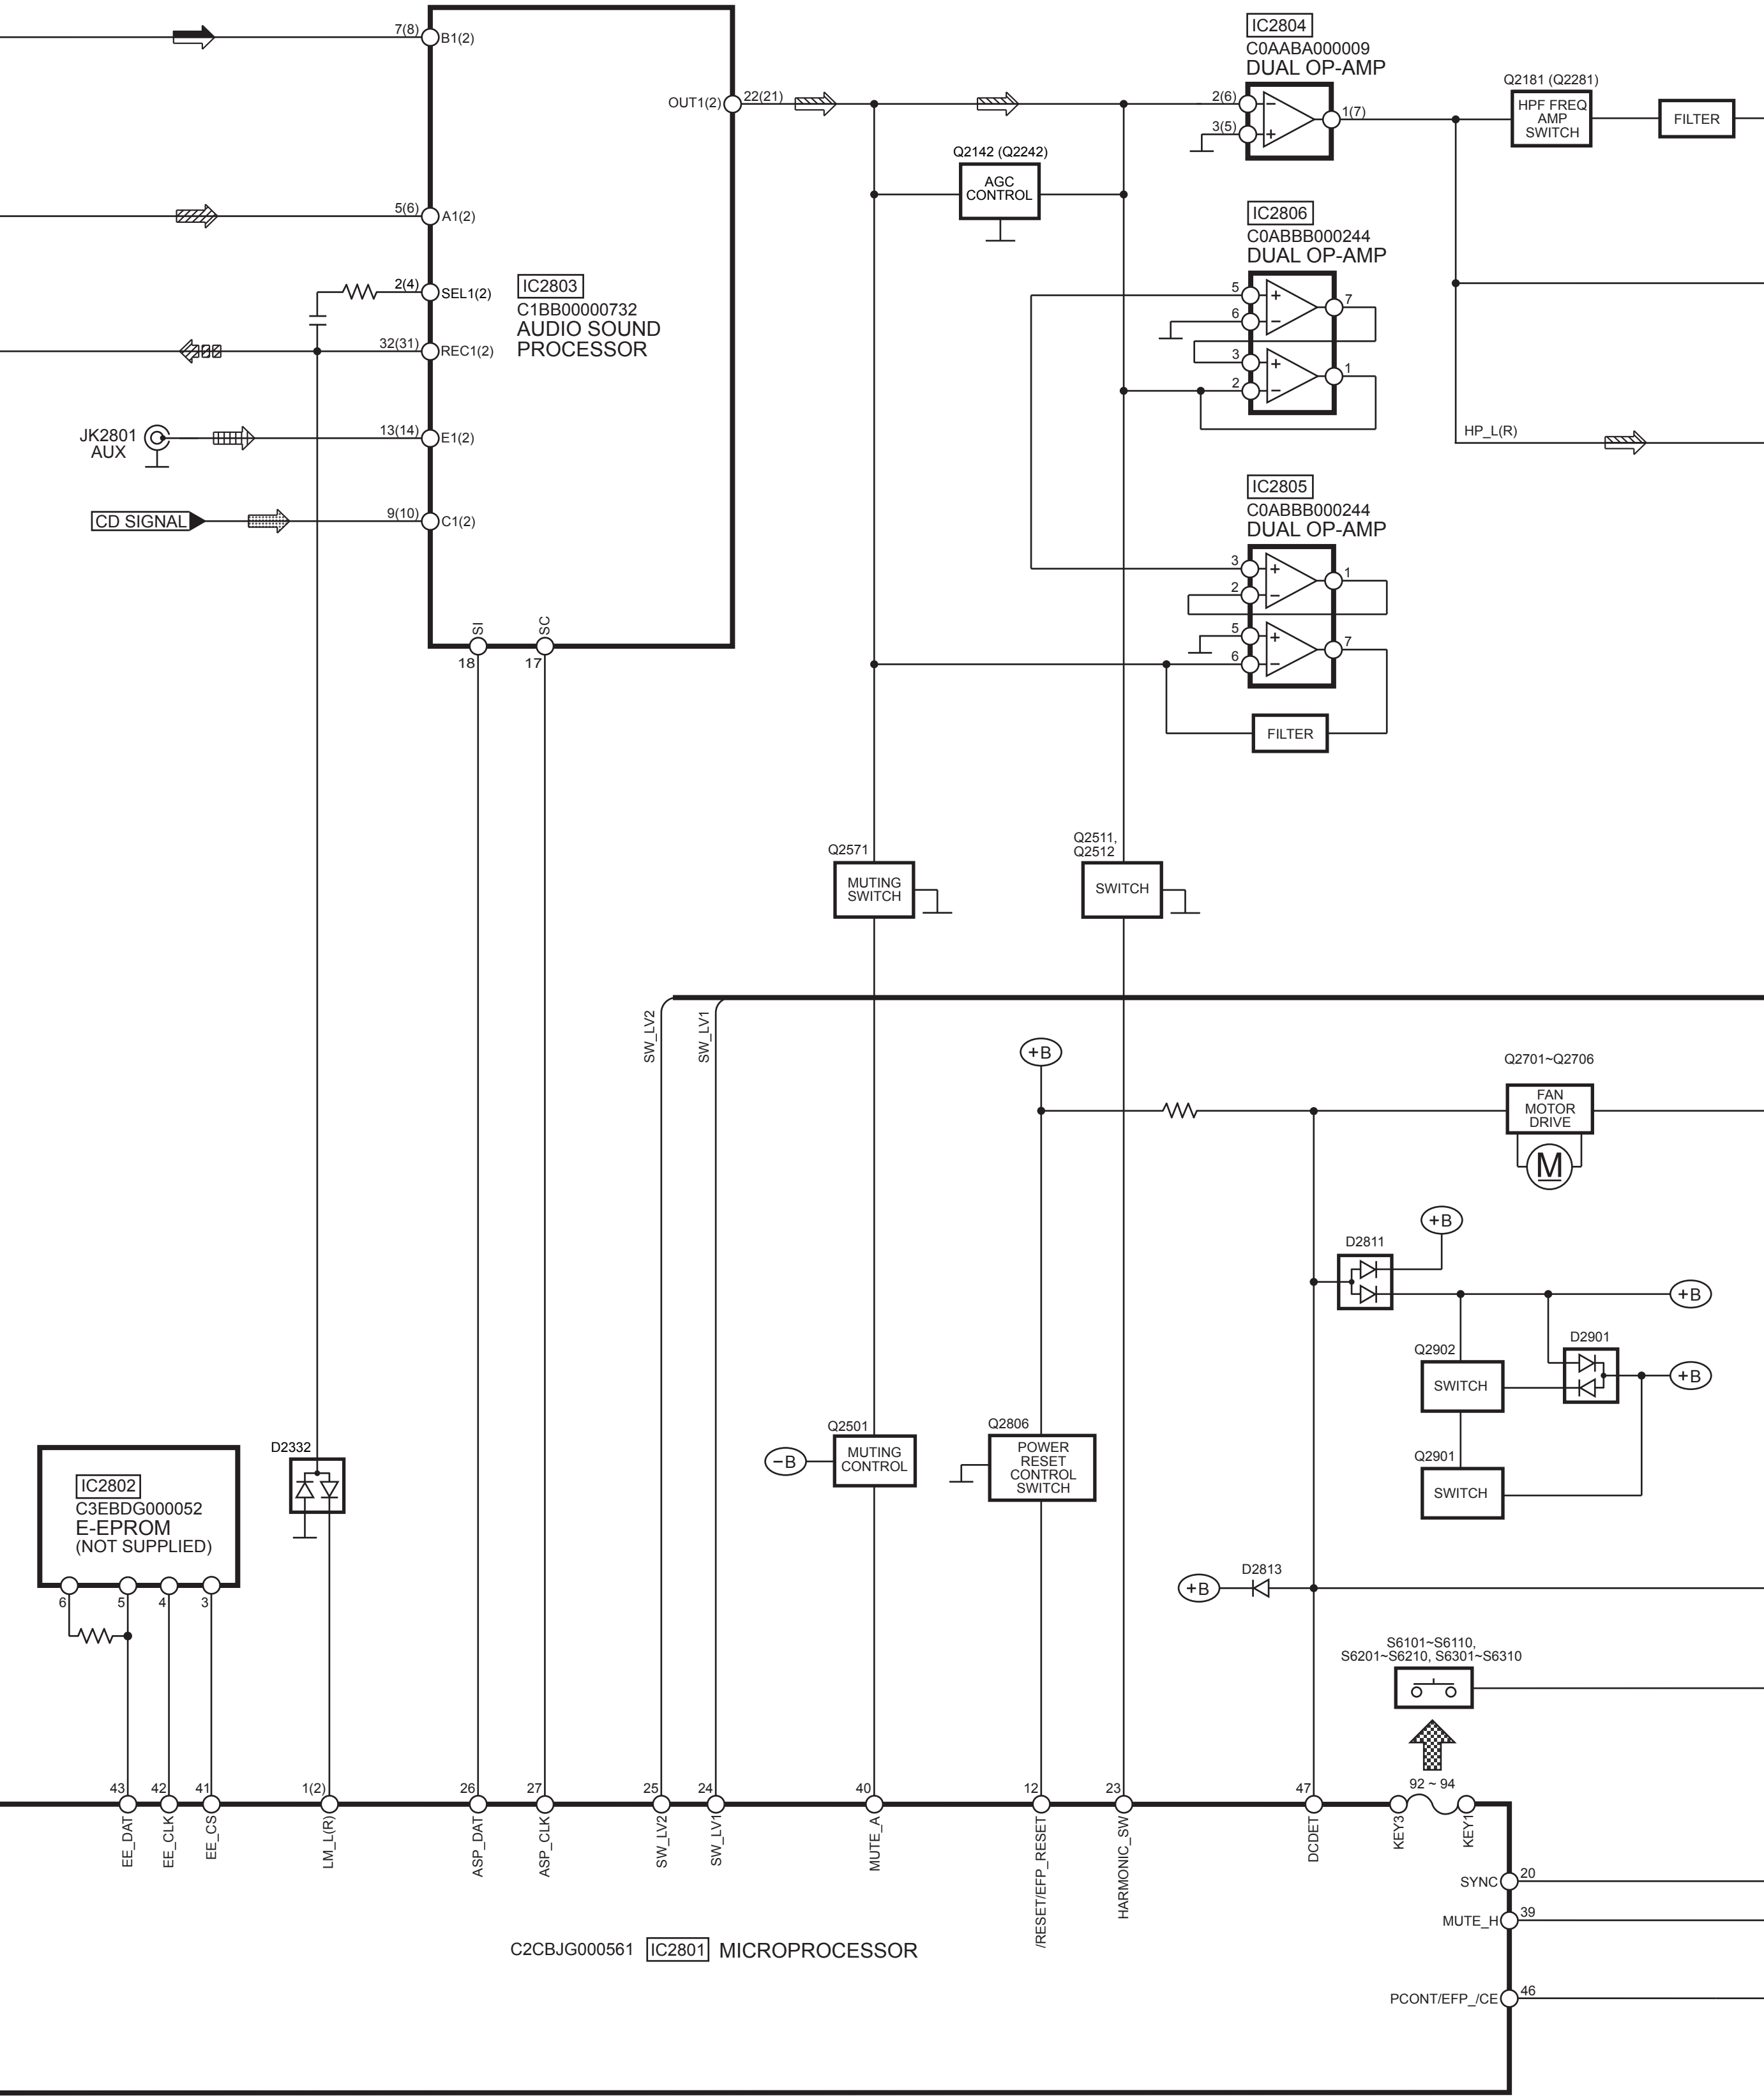
IC2803
C1BB00000732
AUDIO SOUND
PROCESSOR
7(8) B1(2)
5(6) A1(2)
2(4) SEL1(2)
32(31) REC1(2)
13(14) E1(2)
9(10) C1(2)
JK2801
AUX
CD SIGNAL
OUT1(2) 22(21)
SI 18
SC 17
IC2804
C0AABA000009
DUAL OP-AMP
2(6)
3(5)
1(7)
Q2181 (Q2281)
HPF FREQ AMP SWITCH
FILTER
Q2142 (Q2242)
AGC CONTROL
IC2806
C0ABBB000244
DUAL OP-AMP
HP_L(R)
IC2805
C0ABBB000244
DUAL OP-AMP
FILTER
Q2571
MUTING SWITCH
Q2511, Q2512
SWITCH
SW_LV2
SW_LV1
+B
Q2701~Q2706
FAN MOTOR DRIVE
M
D2811
+B
+B
Q2902
SWITCH
D2901
+B
Q2901
SWITCH
IC2802
C3EBDG000052
E-EPROM
(NOT SUPPLIED)
6 5 4 3
D2332
Q2501
−B
MUTING CONTROL
Q2806
POWER RESET CONTROL SWITCH
+B
D2813
S6101~S6110,
S6201~S6210, S6301~S6310
92 ~ 94
43 EE_DAT
42 EE_CLK
41 EE_CS
1(2) LM_L(R)
26 ASP_DAT
27 ASP_CLK
25 SW_LV2
24 SW_LV1
40 MUTE_A
12 /RESET/EFP_RESET
23 HARMONIC_SW
47 DCDET
KEY3
KEY1
SYNC 20
MUTE_H 39
PCONT/EFP_/CE 46
C2CBJG000561 IC2801 MICROPROCESSOR

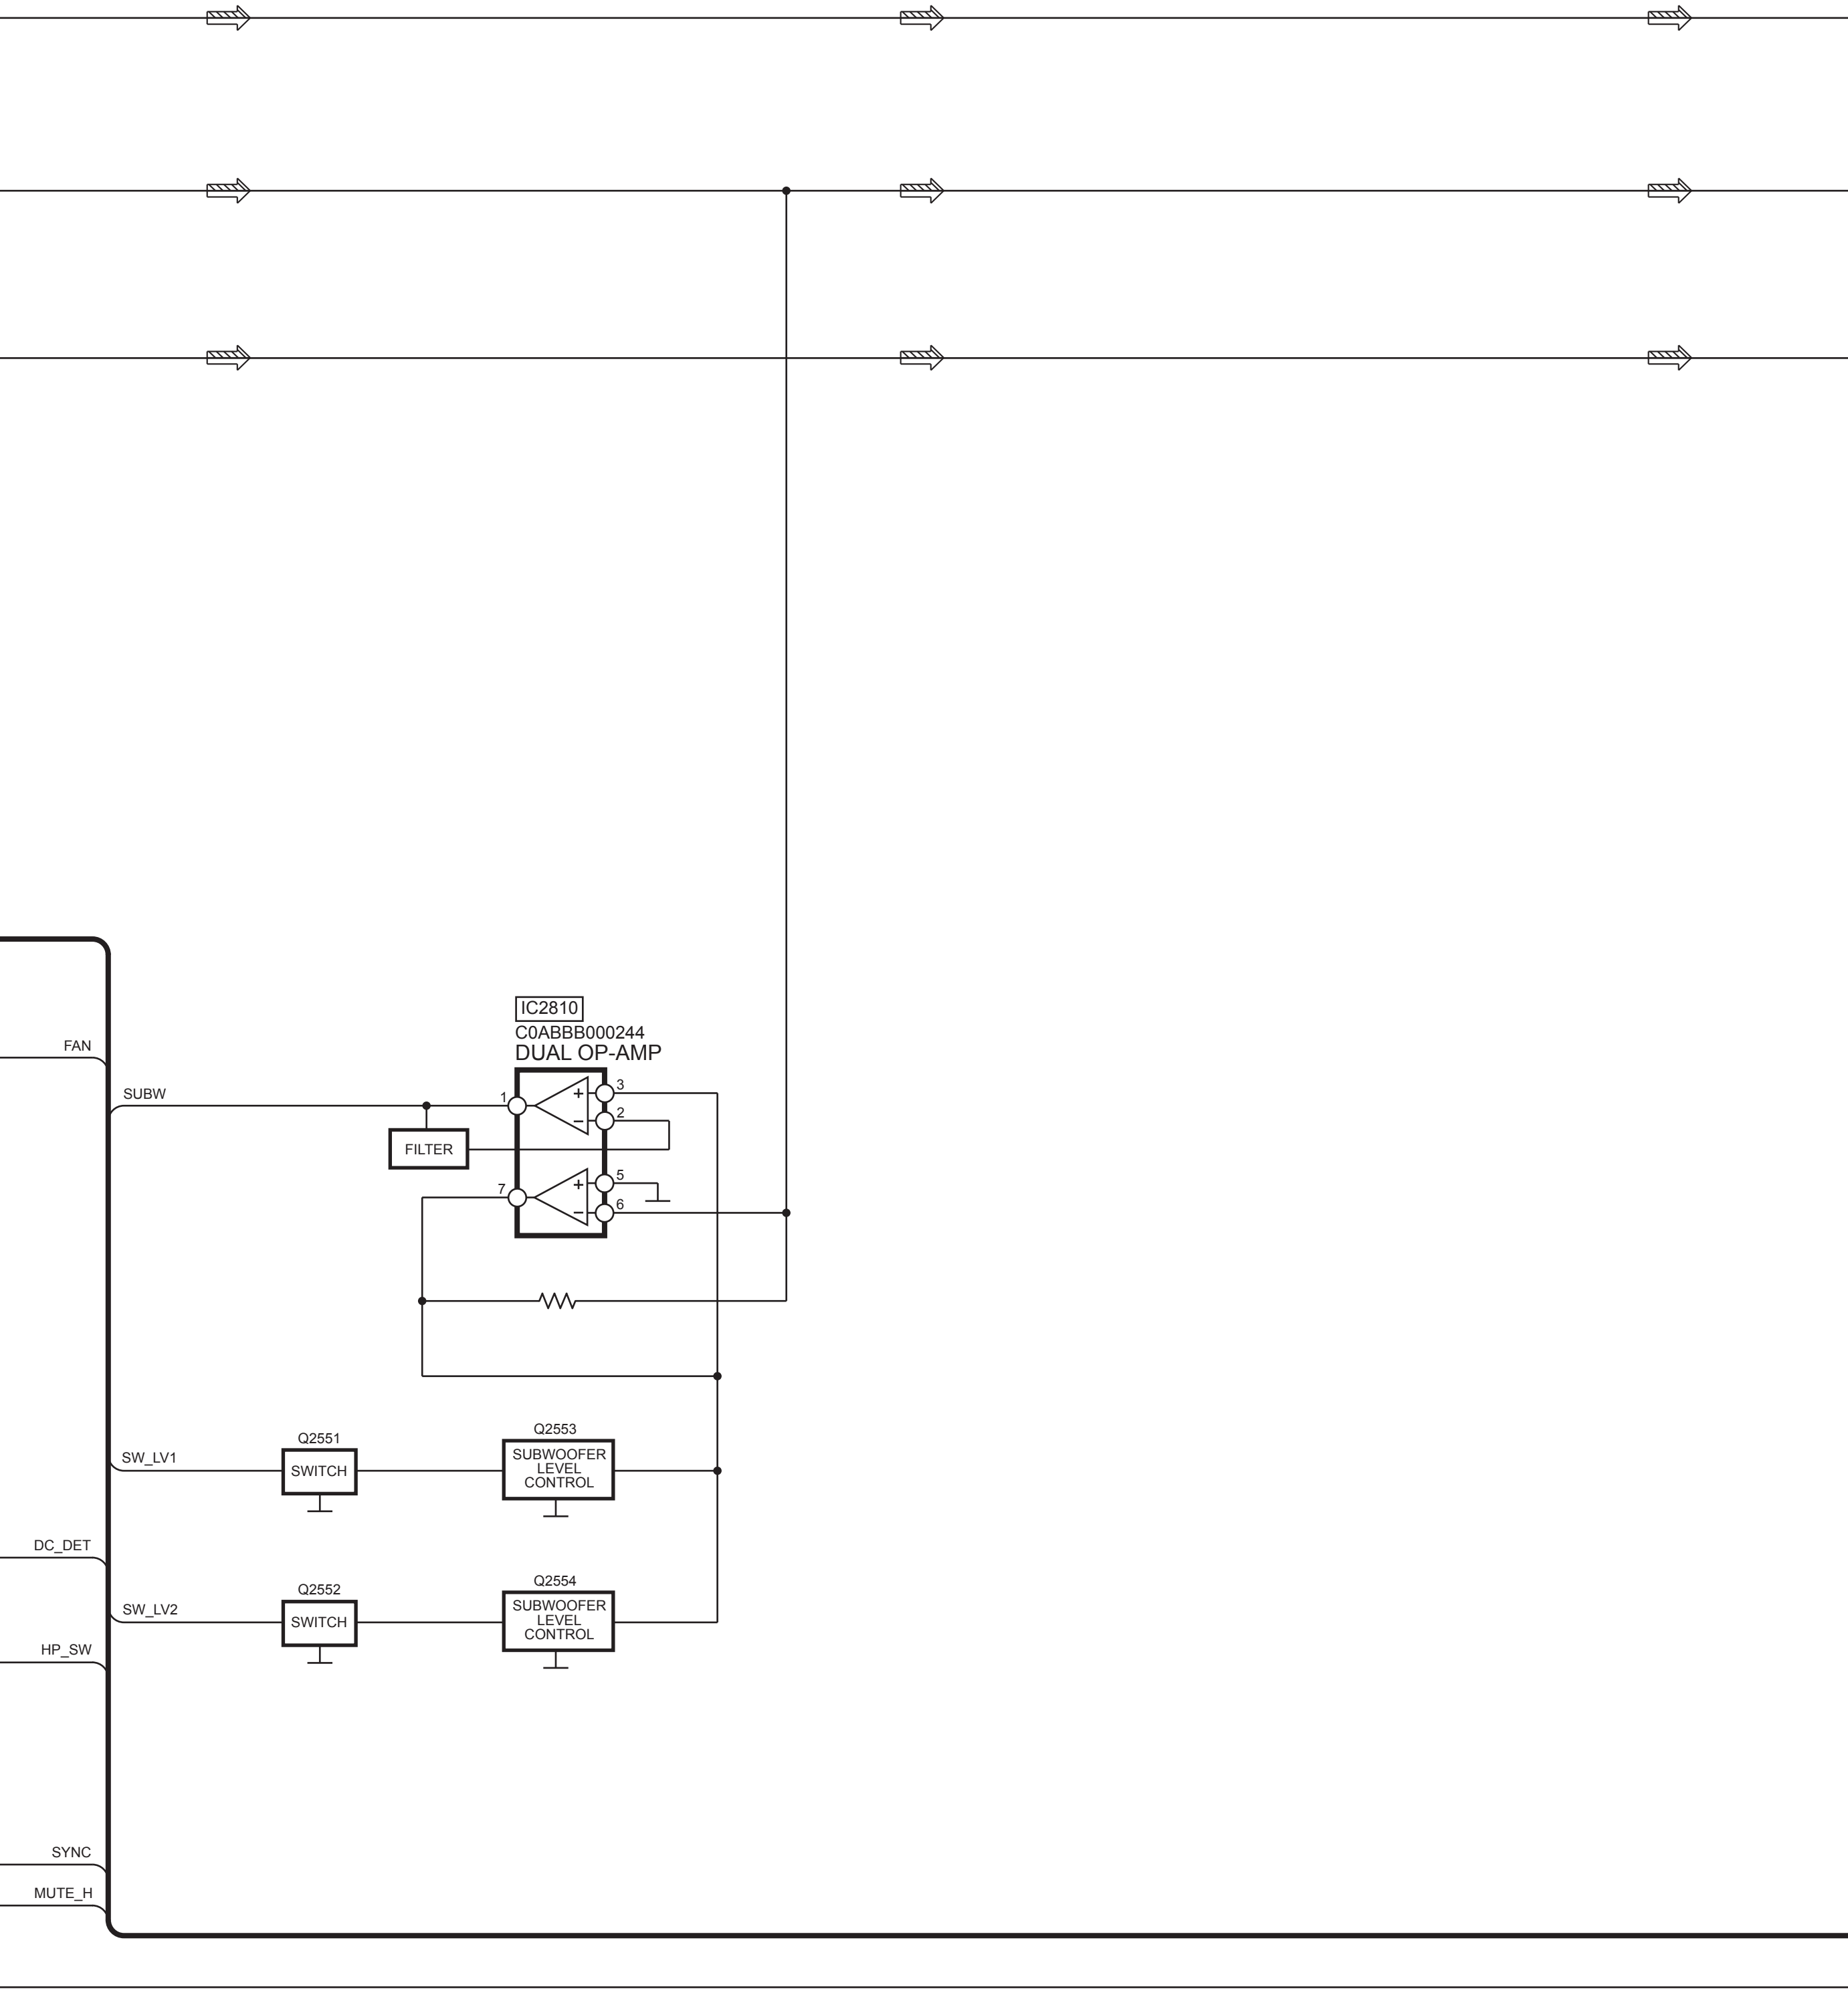
FAN
SUBW
IC2810
C0ABBB000244
DUAL OP-AMP
1
3
2
5
6
7
FILTER
SW_LV1
Q2551
SWITCH
Q2553
SUBWOOFER LEVEL CONTROL
DC_DET
SW_LV2
Q2552
SWITCH
Q2554
SUBWOOFER LEVEL CONTROL
HP_SW
SYNC
MUTE_H

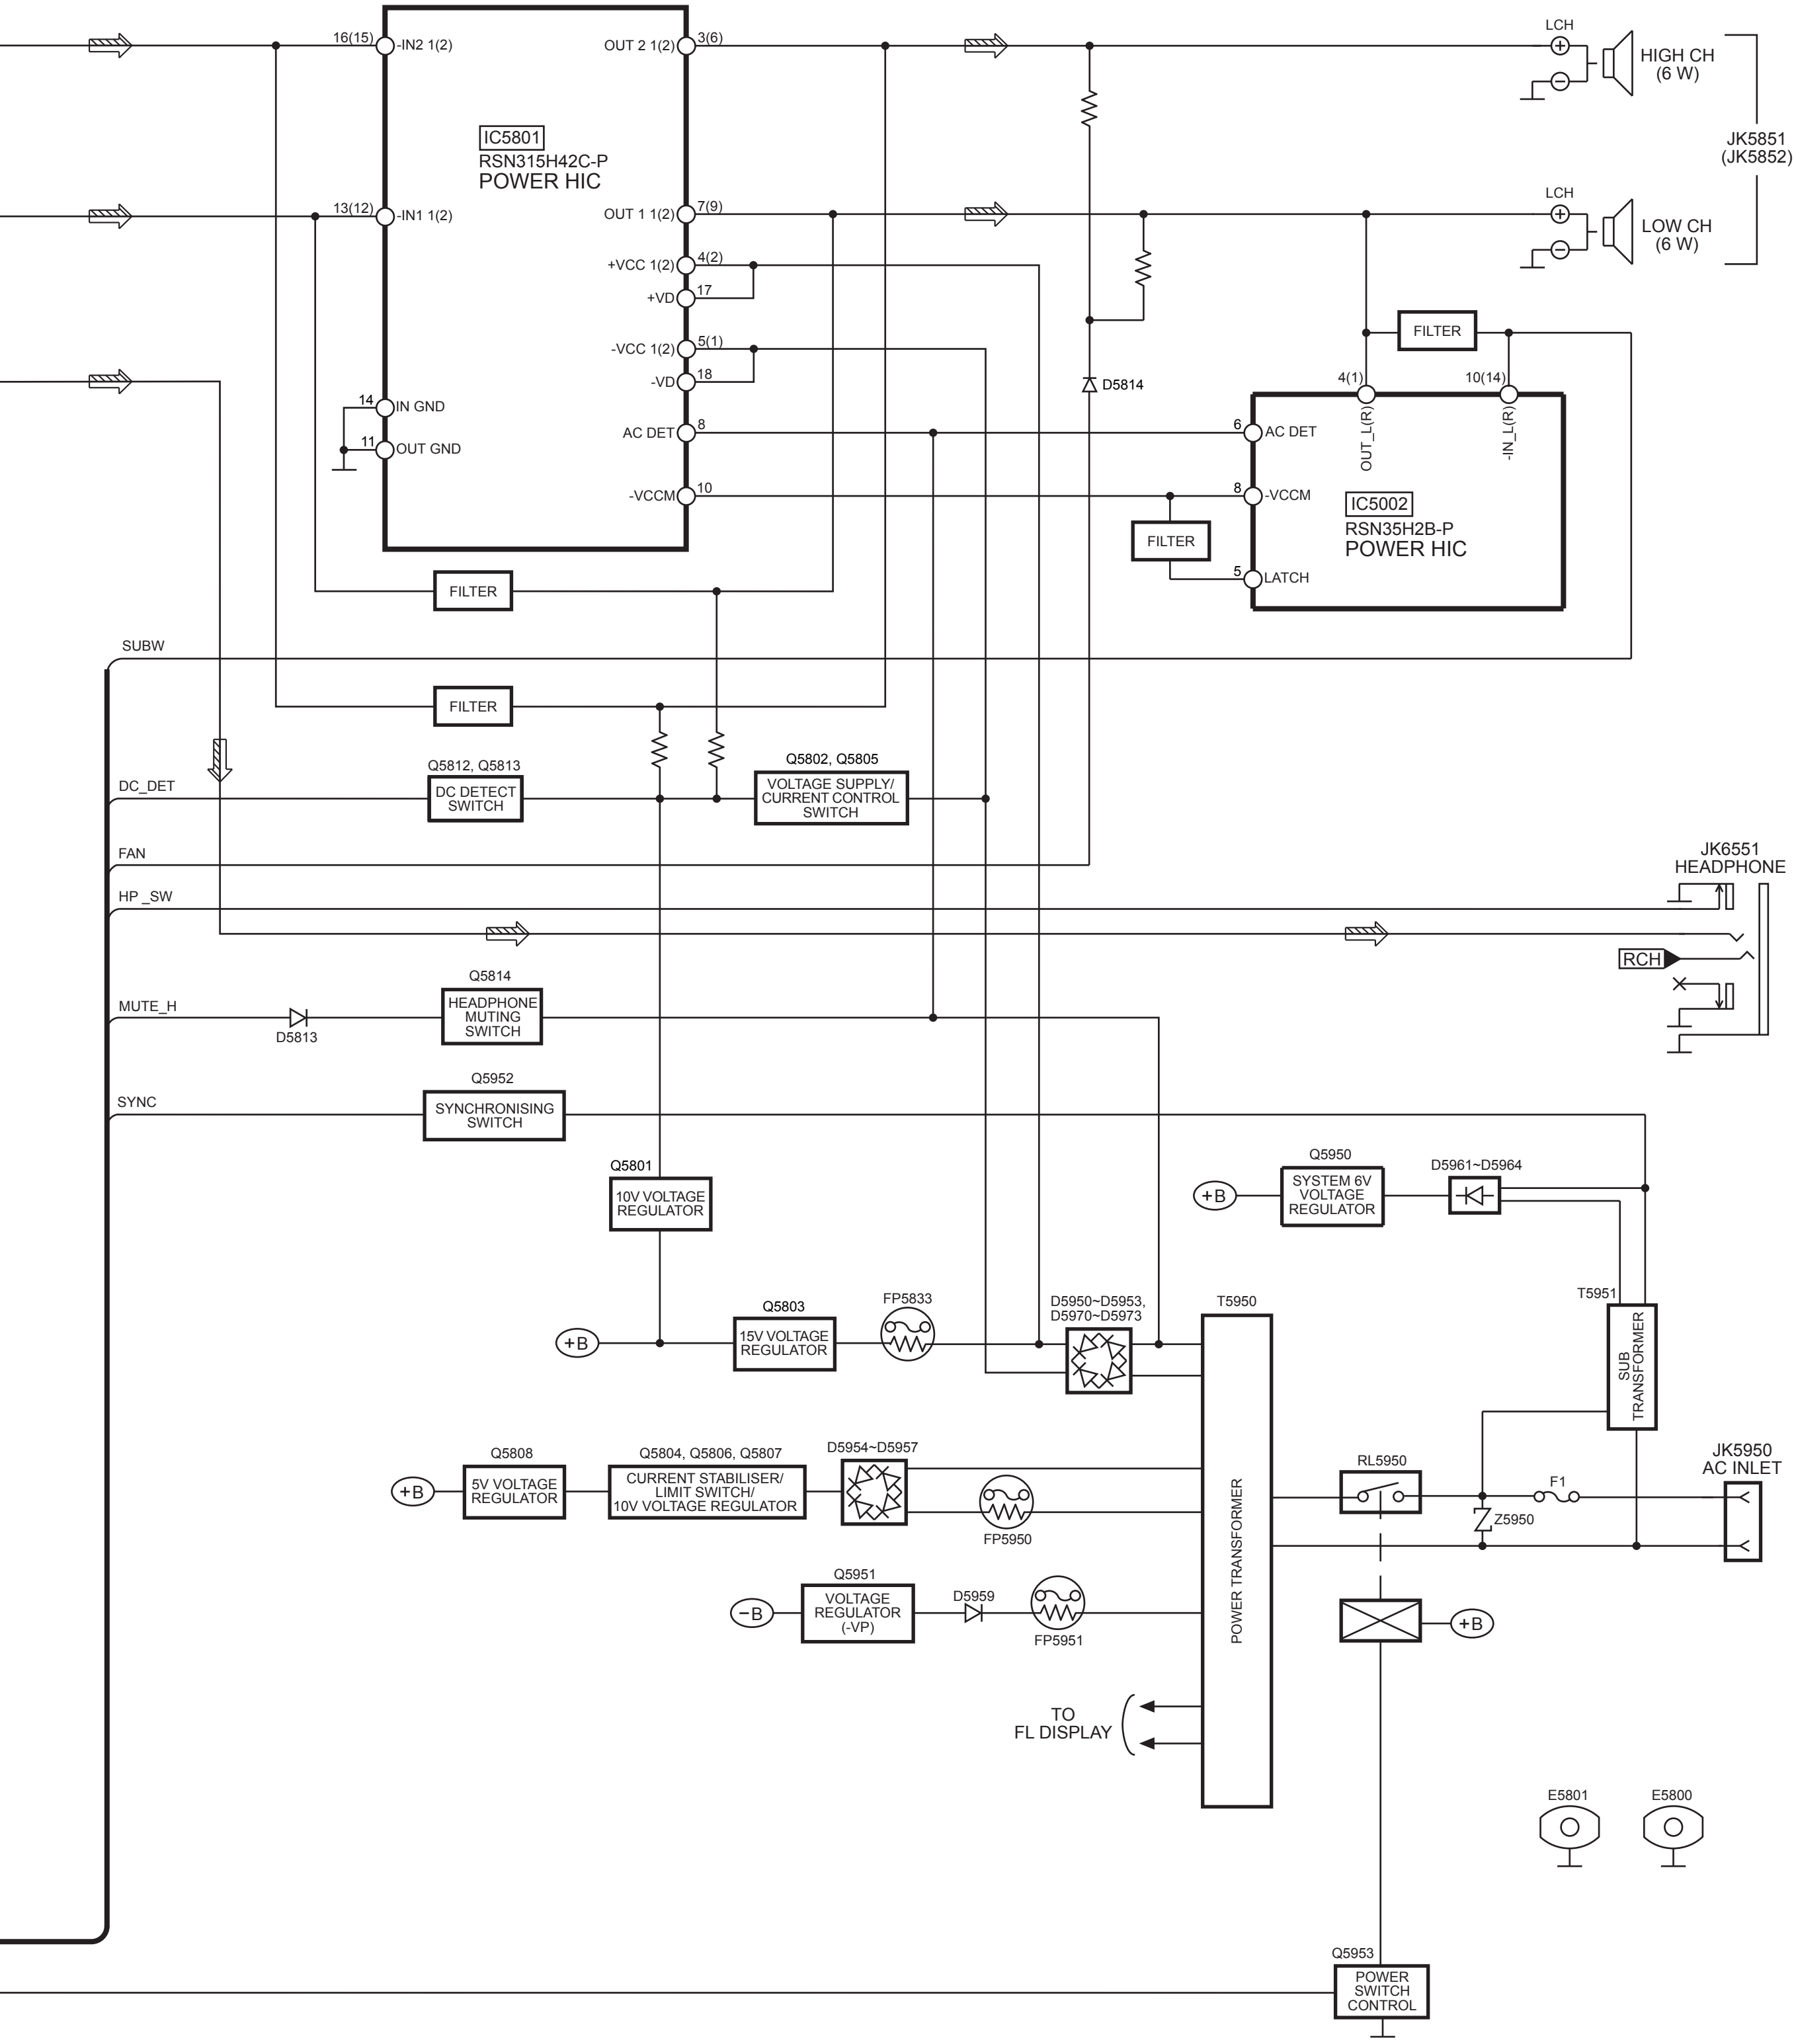
16(15)
-IN2 1(2)
OUT 2 1(2)
3(6)
IC5801
RSN315H42C-P
POWER HIC
13(12)
-IN1 1(2)
OUT 1 1(2)
7(9)
+VCC 1(2)
4(2)
+VD
17
-VCC 1(2)
5(1)
-VD
18
14
IN GND
11
OUT GND
AC DET
8
-VCCM
10
LCH
HIGH CH
(6 W)
JK5851
(JK5852)
LCH
LOW CH
(6 W)
D5814
FILTER
4(1)
10(14)
OUT_L(R)
-IN_L(R)
6
AC DET
8
-VCCM
IC5002
RSN35H2B-P
POWER HIC
FILTER
5
LATCH
FILTER
SUBW
FILTER
Q5812, Q5813
DC DETECT SWITCH
Q5802, Q5805
VOLTAGE SUPPLY/ CURRENT CONTROL SWITCH
DC_DET
FAN
HP _SW
JK6551
HEADPHONE
RCH
Q5814
HEADPHONE MUTING SWITCH
MUTE_H
D5813
Q5952
SYNCHRONISING SWITCH
SYNC
Q5801
10V VOLTAGE REGULATOR
Q5950
SYSTEM 6V VOLTAGE REGULATOR
D5961~D5964
+B
+B
Q5803
15V VOLTAGE REGULATOR
FP5833
D5950~D5953,
D5970~D5973
T5950
T5951
SUB TRANSFORMER
Q5808
5V VOLTAGE REGULATOR
+B
Q5804, Q5806, Q5807
CURRENT STABILISER/ LIMIT SWITCH/ 10V VOLTAGE REGULATOR
D5954~D5957
FP5950
POWER TRANSFORMER
RL5950
F1
Z5950
JK5950
AC INLET
Q5951
VOLTAGE REGULATOR (-VP)
-B
D5959
FP5951
+B
TO
FL DISPLAY
E5801
E5800
Q5953
POWER SWITCH CONTROL

SIGNAL LINES

▨⇨ : MAIN SIGNAL LINE
▯▯⇨ : FM OSC SIGNAL LINE
⇨ : FM SIGNAL LINE

⇨ : CD SIGNAL LINE
■■➡ : AM OSC SIGNAL LINE
▥⇨ : AUX SIGNAL LINE

➡ : AM SIGNAL LINE
➡ : FM/AM SIGNAL LINE
➡ : CD-DA (AUDIO/VIDEO) SIGNAL LINE

▨⇨ : PLAYBACK SIGNAL LINE
▨⇨ : RECORD SIGNAL LINE

( ) Indicates the Pin No. of Right Channel.

NOTE : Signal Lines are applicable to the Left Channel only.

Disc information

Disc selection

This unit can play MP3 and CD-DA (digital audio) format audio CD-R and CD-RW that have been finalized (a process that enables CD-R/CD-RW players to play audio CD-R and CD-RW) upon completion of recording.
It may not be able to play some CD-R or CD-RW due to the condition of the recording.

Disc type	Logo	Indication used in instructions
Audio CD	COMPACT disc DIGITAL AUDIO	CD
CD-R/RW	–	CD MP3 (Depending on the recording format ➡ see above)

Do not:
- use irregularly shaped discs.
- attach extra labels and stickers.
- use discs with labels and stickers that are coming off or with adhesive exuding from under labels and stickers.
- attach scratch proof covers or any other kind of accessory.
- write anything on the disc.
- clean discs with liquids. (Wipe with a soft, dry cloth.)
- use discs printed with label printers available on the market.



To prevent damage

Always observe the following points:
- Load only 1 disc on the tray.
- Always stop the changer before loading or changing discs. Do not change discs while a disc is playing.
- Set the system on a flat, level surface.
- Always unload all discs before moving the unit.

Do not:
- set the unit on top of magazines, inclined surfaces, etc.
- move the unit while a tray is opening/closing, or when loaded.
- put anything except a disc in the tray.
- use cleaning discs or discs which are badly warped or cracked.
- disconnect the AC power supply cord from the household AC outlet during disc changing operation.

MP3 information

This unit can play MP3 files recorded on CD-R/RW with a computer.
Files are treated as tracks and folders are treated as albums.
This unit can access up to 999 tracks, 255 albums and 20 sessions.

When making MP3 files to play on this unit

Disc format
Discs must conform to ISO9660 level 1 or 2 (except for extended formats).

File format
MP3 files must have the extension ".MP3" or ".mp3".

To play in a certain order
Prefix the folder and file names with 3-digit numbers in the order you want to play them.
Files may not be recorded in numbered order if the prefixes have different numbers of digits. For example: 1track.mp3, 2track.mp3, 10track.mp3.
However, some writing software may also cause recording to occur in a different order.

Example:

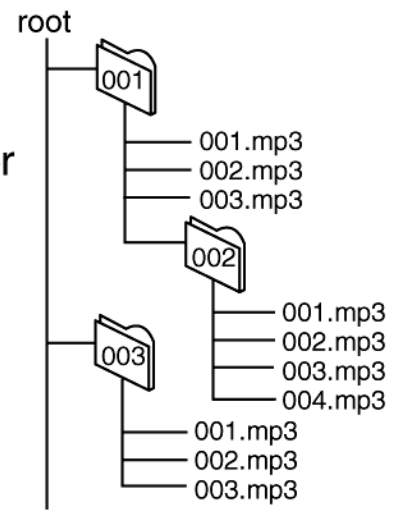

MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

Limitations on MP3 play

- This unit is not compatible with packet-write format.
- When both MP3 and CD-DA data is recorded on the disc over a number of sessions:
  - If the first session contains MP3 recordings, the unit will play from the MP3 made in that session till the session before the first CD-DA recordings.
  - If the first session contains CD-DA recordings, the unit will play only the recordings made in that session. The subsequent sessions will be ignored.
- Some MP3 may not be played due to the condition of the disc or recording.
- Recordings will not necessarily be played in the order you recorded them.
- Lower case letters will be displayed as upper case.

Front panel controls

Main unit

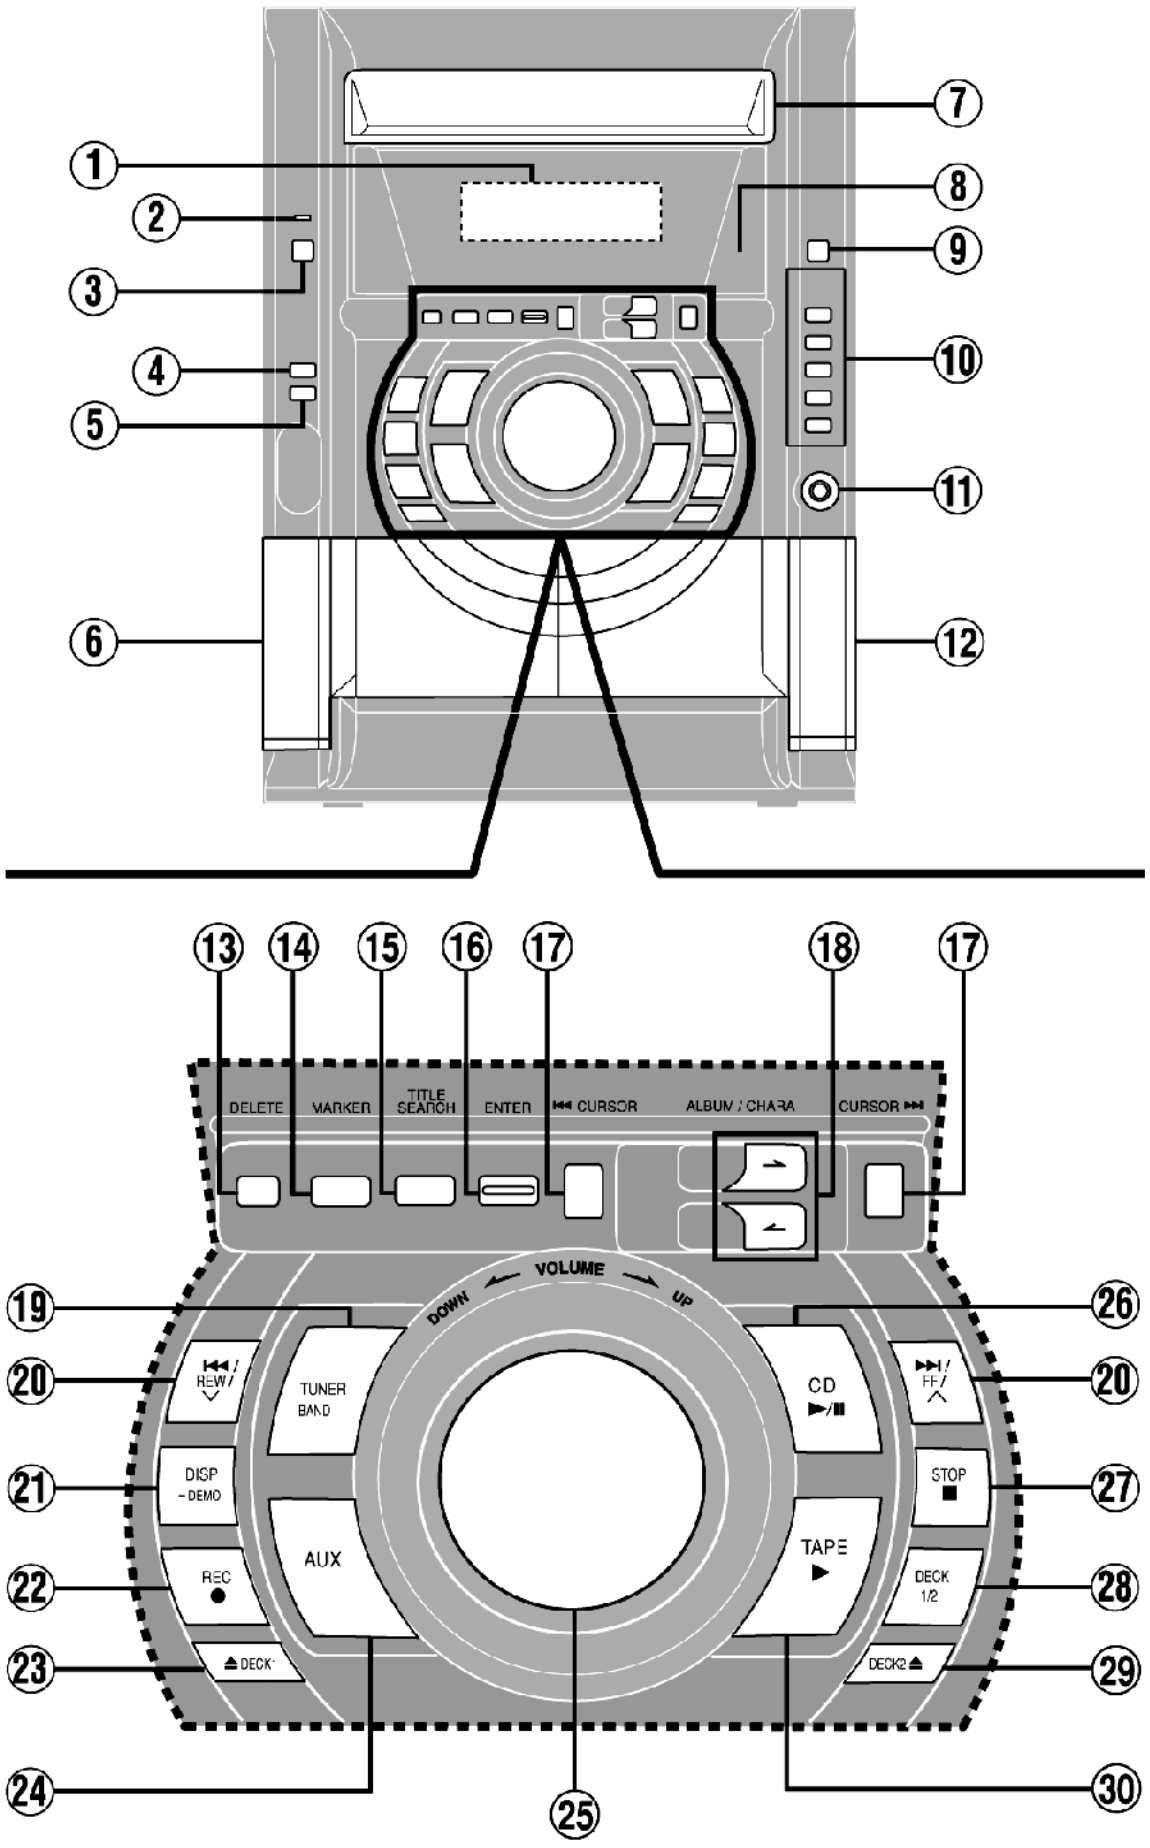

①
②
③
④
⑤
⑥
⑦
⑧
⑨
⑩
⑪
⑫
⑬ ⑭ ⑮ ⑯ ⑰ ⑱ ⑰
DELETE
MARKER
TITLE SEARCH
ENTER
⏮ CURSOR
ALBUM / CHARA
CURSOR ⏭
VOLUME
DOWN
UP
⑲
⑳
㉑
㉒
㉓
㉔
㉕
㉖
⑳
㉗
㉘
㉙
㉚
⏮/REW/∨
TUNER BAND
DISP –DEMO
REC ●
⏏DECK1
AUX
CD ▶/■
⏭/FF/∧
STOP ■
TAPE ▶
DECK 1/2
DECK2⏏

① **Display**

② **AC supply indicator [AC IN]**
This indicator lights when the unit is connected to the AC mains supply.

③ **Standby/on switch [⏻/I]**
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

④ **H.BASS button [H.BASS]**

⑤ **Subwoofer button [SUBWOOFER]**

⑥ **Deck 1 cassette holder**

⑦ **Disc tray**

⑧ **Remote control signal sensor**

⑨ **CD tray open/close button [⏏, OPEN/CLOSE]**

⑩ **CD direct play buttons [1 – 5]**

⑪ **Headphone jack [PHONES]**

⑫ **Deck 2 cassette holder**

Center console

⑬ **Delete button [DELETE]**

⑭ **Marker memory/recall button [MARKER]**

⑮ **Title search mode select button [TITLE SEARCH]**

⑯ **Enter button [ENTER]**

⑰ **Cursor buttons [⏮ CURSOR, CURSOR ⏭]**

⑱ **Album skip, character buttons**
[⌐, ALBUM/CHARA, ⌙, ALBUM/CHARA]

⑲ **Tuner/band select button [TUNER, BAND]**

⑳ **CD skip/search, tape fast-forward/rewind, tune/preset channel select, time adjust buttons**
[⏮/REW/∨, ⏭/FF/∧]

㉑ **Display, demonstration button [DISP, –DEMO]**

㉒ **Record button [●, REC]**

㉓ **Deck 1 open button [⏏ DECK1]**

㉔ **AUX button [AUX]**

㉕ **Volume control [VOLUME DOWN, UP]**

㉖ **CD play/pause button [▶/⏸, CD]**

㉗ **Stop/program clear button [■, STOP]**

㉘ **Deck select button [DECK 1/2]**

㉙ **Deck 2 open button [DECK2 ⏏]**

㉚ **Tape play button [▶, TAPE]**

Remote control

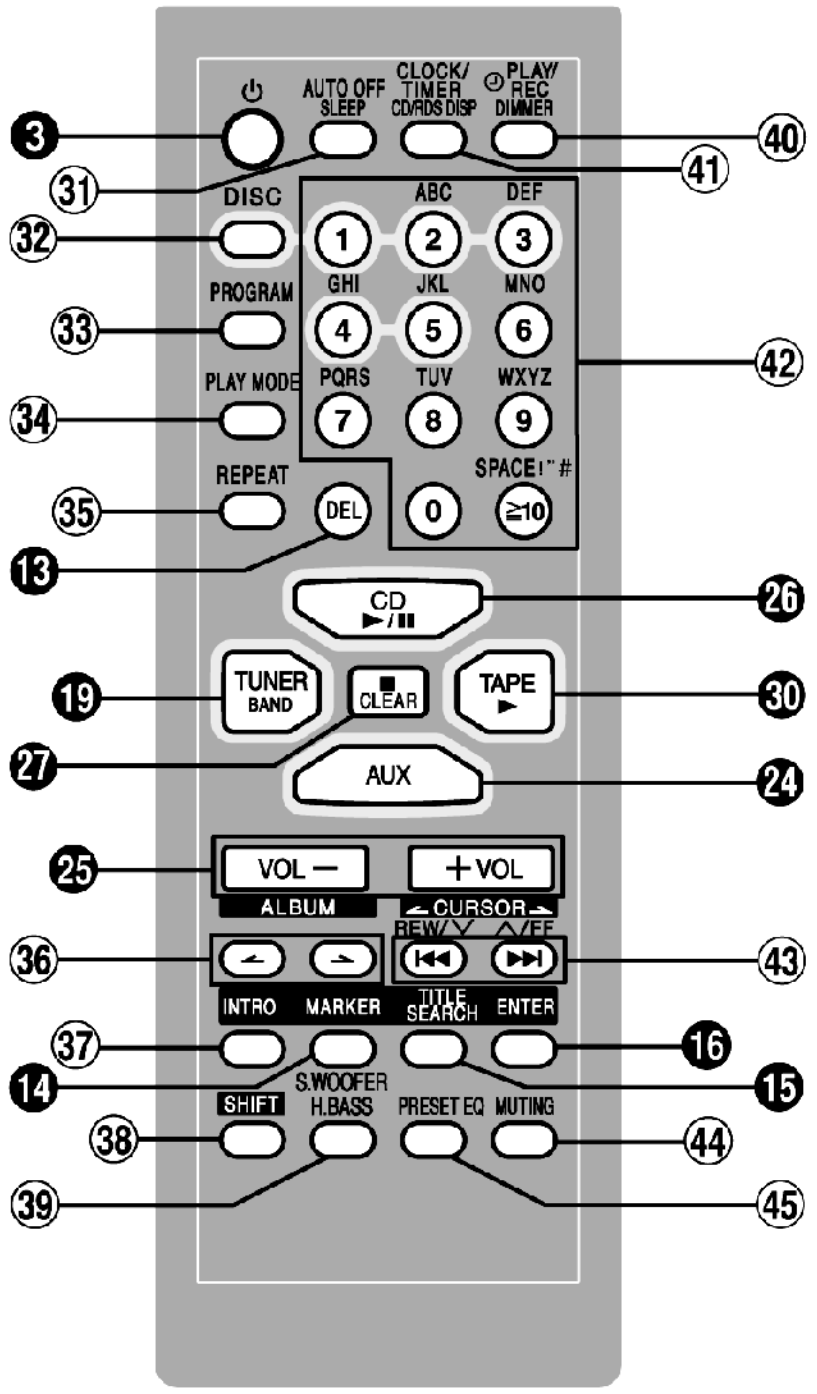

❸
⏻
AUTO OFF SLEEP
CLOCK/TIMER CD/RDS DISP
⏲PLAY/REC DIMMER
DISC
PROGRAM
PLAY MODE
REPEAT
ABC
DEF
GHI
JKL
MNO
PQRS
TUV
WXYZ
SPACE!"#
1
2
3
4
5
6
7
8
9
0
≧10
DEL
CD ▶/⏸
TUNER BAND
■ CLEAR
TAPE ▶
AUX
VOL –
+ VOL
ALBUM
CURSOR
REW/∨
∧/FF
INTRO
MARKER
TITLE SEARCH
ENTER
S.WOOFER
SHIFT
H.BASS
PRESET EQ
MUTING
㉛
㉜
㉝
㉞
㉟
⓭
⓳
⓴
㉗
㉕
㊱
㊲
⓮
㊳
㊴
㊵
㊶
㊷
㉖
㉚
㉔
㊸
⓰
⓯
㊹
㊺

Buttons such as ❸ function in exactly the same way as the buttons on the main unit.

㉛ **Sleep timer + Auto off button [SLEEP, AUTO OFF]**

㉜ **Disc button [DISC]**

㉝ **Program button [PROGRAM]**

㉞ **Play mode select button [PLAY MODE]**
Use this for selecting CD play mode, tune mode, FM mode and deck select.

㉟ **Repeat button [REPEAT]**

㊱ **Album skip buttons [⌙, ⌐, ALBUM]**

㊲ **Intro button [INTRO]**

㊳ **Shift button [SHIFT]**
To use functions labeled in orange ※:
While pressing [SHIFT], press the corresponding button.
※ For buttons [AUTO OFF], [CLOCK/TIMER], [⏲PLAY/REC] and [S.WOOFER]

㊴ **H.BASS + Subwoofer button**
[H.BASS, S.WOOFER]

㊵ **Dimmer + Play timer/record timer button**
[DIMMER, ⏲PLAY/REC]

㊶ **CD display/RDS display + Clock/timer button**
[CD/RDS DISP, CLOCK/TIMER]

㊷ **Numbered, character buttons**
[≧10, 1–9, 0, A–Z, SPACE!"#]

㊸ **CD skip/search, tape fast-forward/rewind, tune/preset channel select, [⏭, ∧/FF, CURSOR ⌐]**
[⏮, REW/∨, ⌙ CURSOR,

㊹ **Muting button [MUTING]**

㊺ **Preset EQ select button [PRESET EQ]**

C2CBJG000572 (100P)
C0HBBB0000039 (64P)
MN6627953HB (80P)



AN7348S-E1 (24P)
LA1833NMNTLM (24P)
LC72131MDTRM (20P)
C1BB00000732 (32P)
C1BB00000715 (16P)

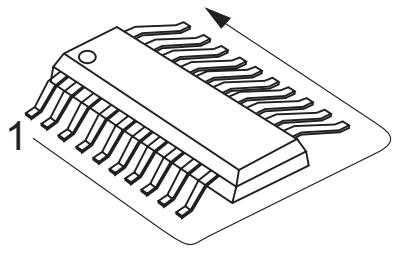

C1AA00000612



C0AABA000009

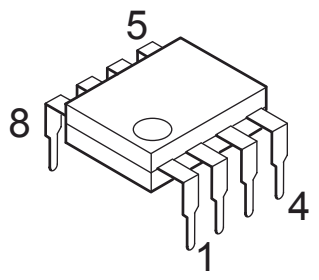

RSN315H42C-P (18P)

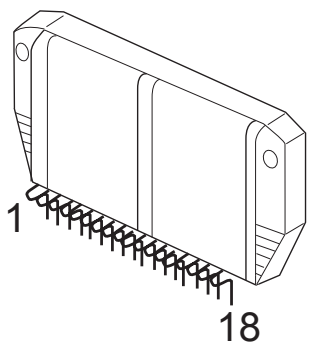

CNB13030R2AU



AN8739SBTE2

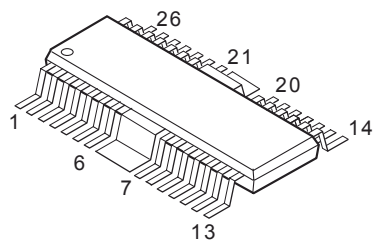
26
21
20
1
14
6
7
13

C0GAM0000005



C0ABBB000244

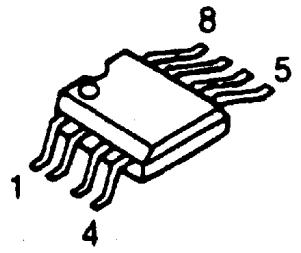

RSN35H2B-P (14P)

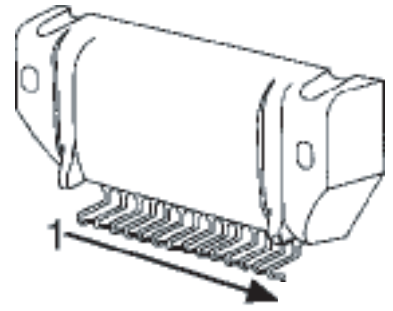

B1BACG000023
B1BCCG000002



2SB0709AHL
2SD0601AHL
B1ADCF000001
B1ABCE000016
B1GBCFJJ0051
B1GDCFJJ0047
B1GDCFGA0018

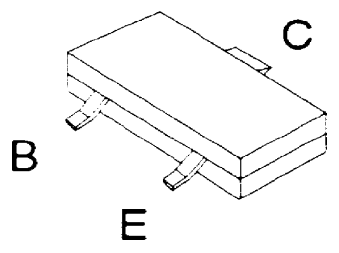

B1ACKD000005
B1AARC000003
B1GCCFJJ0016

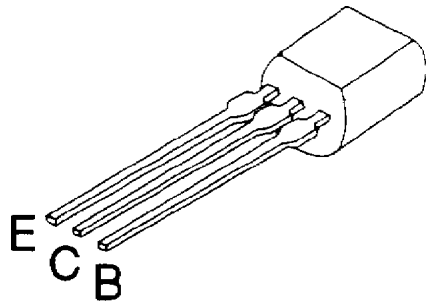

B1GACFLL0008
B1GACFJJ0018

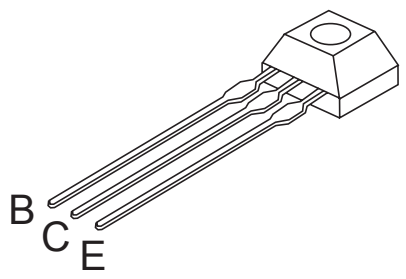

B1ACCF000094

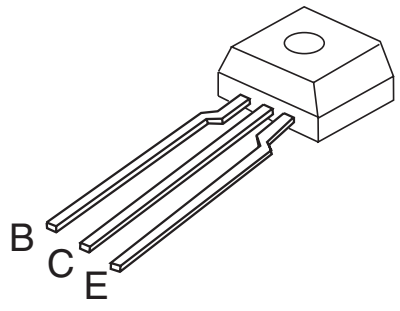

2SB0621AHA
2SD0592ARA

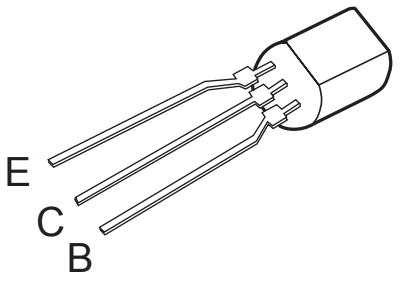

B1AABC000003

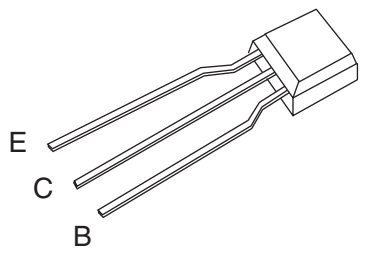

B1AACF000064

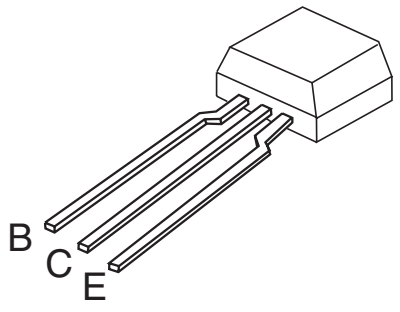

B1BACD000018



2SC3311ARA

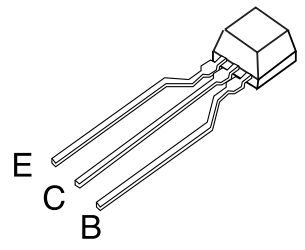

B1GFGCAA0001



B1AAGC000007
B1GACFGG0004

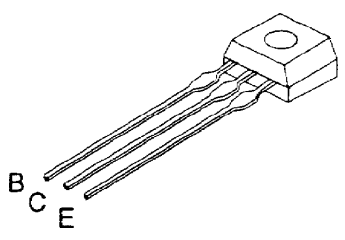

B3NAA0000096

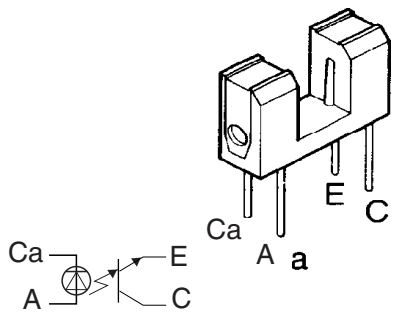
E
C
Ca
A
a
Ca
E
A
C

B3AAA0000583


Anode
Cathode
A
Ca

B0BA03100002
B0BA4R600003
B0BA7R000005

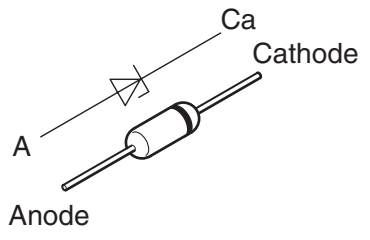
Ca
Cathode
A
Anode

B0AACK000004
MA2C16500E


Ca
Cathode
A
Anode

RB751V-40

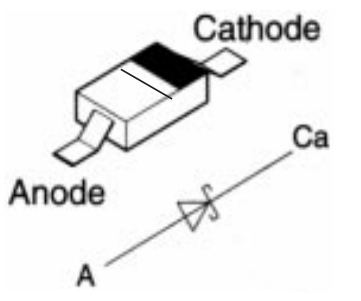
Cathode
Ca
Anode
A

B0EAMM000038
B0EAKM000117

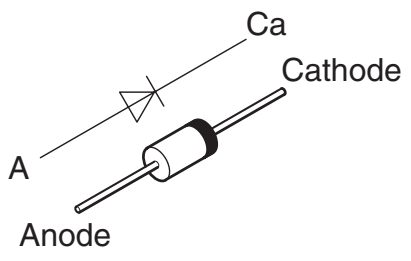
Ca
Cathode
A
Anode

B0BA6R600008
B0BC3R700004
B0BC5R000009
B0BC7R500001
B0BC01500006
B0BC01000014

B0BC2R4A0006
B0BC5R600003

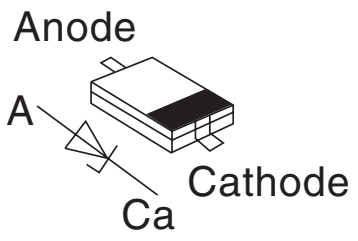
Anode
A
Cathode
Ca

B0ADCC000002


Anode
Cathode

B0CDBB000015

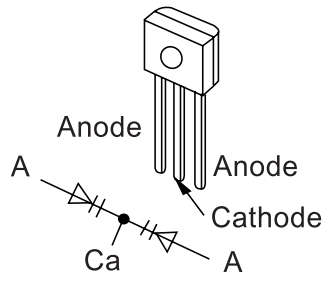
Anode
A
Anode
Cathode
Ca
A

B0ADCJ000020

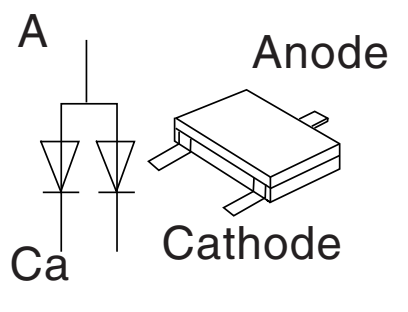
A
Anode
Ca
Cathode

B0ACCK000005

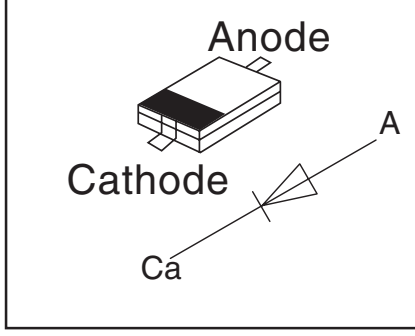
Anode
Cathode
A
Ca

A B C D E F G

1 2 3 4 5 6 7 8 9

E CD DETECT P.C.B (REP2578A-N)

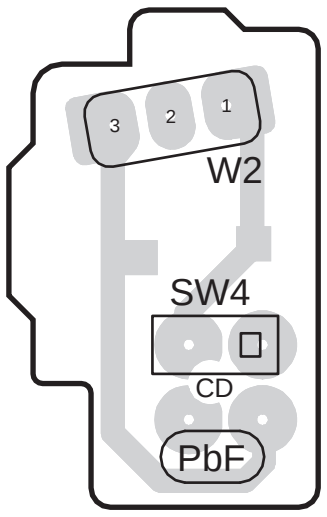
3
2
1
W2
SW4
CD
PbF

F SPINDLE POSITION P.C.B (REP2578A-N)

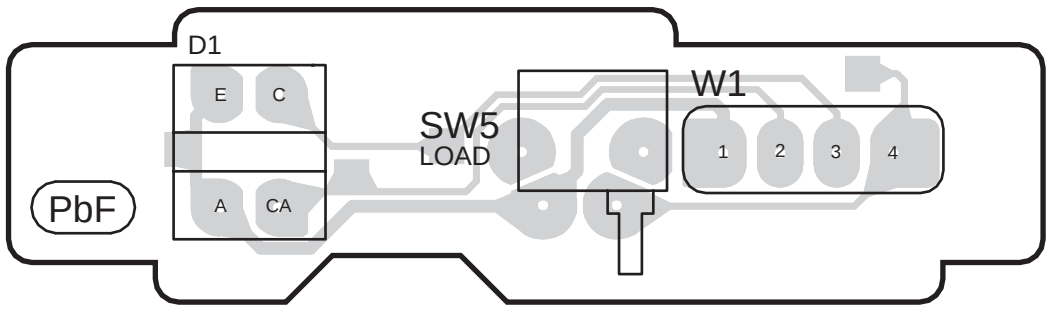
D1
E
C
A
CA
SW5
LOAD
W1
1
2
3
4
PbF

G CD LOADING P.C.B (REP2578A-N)

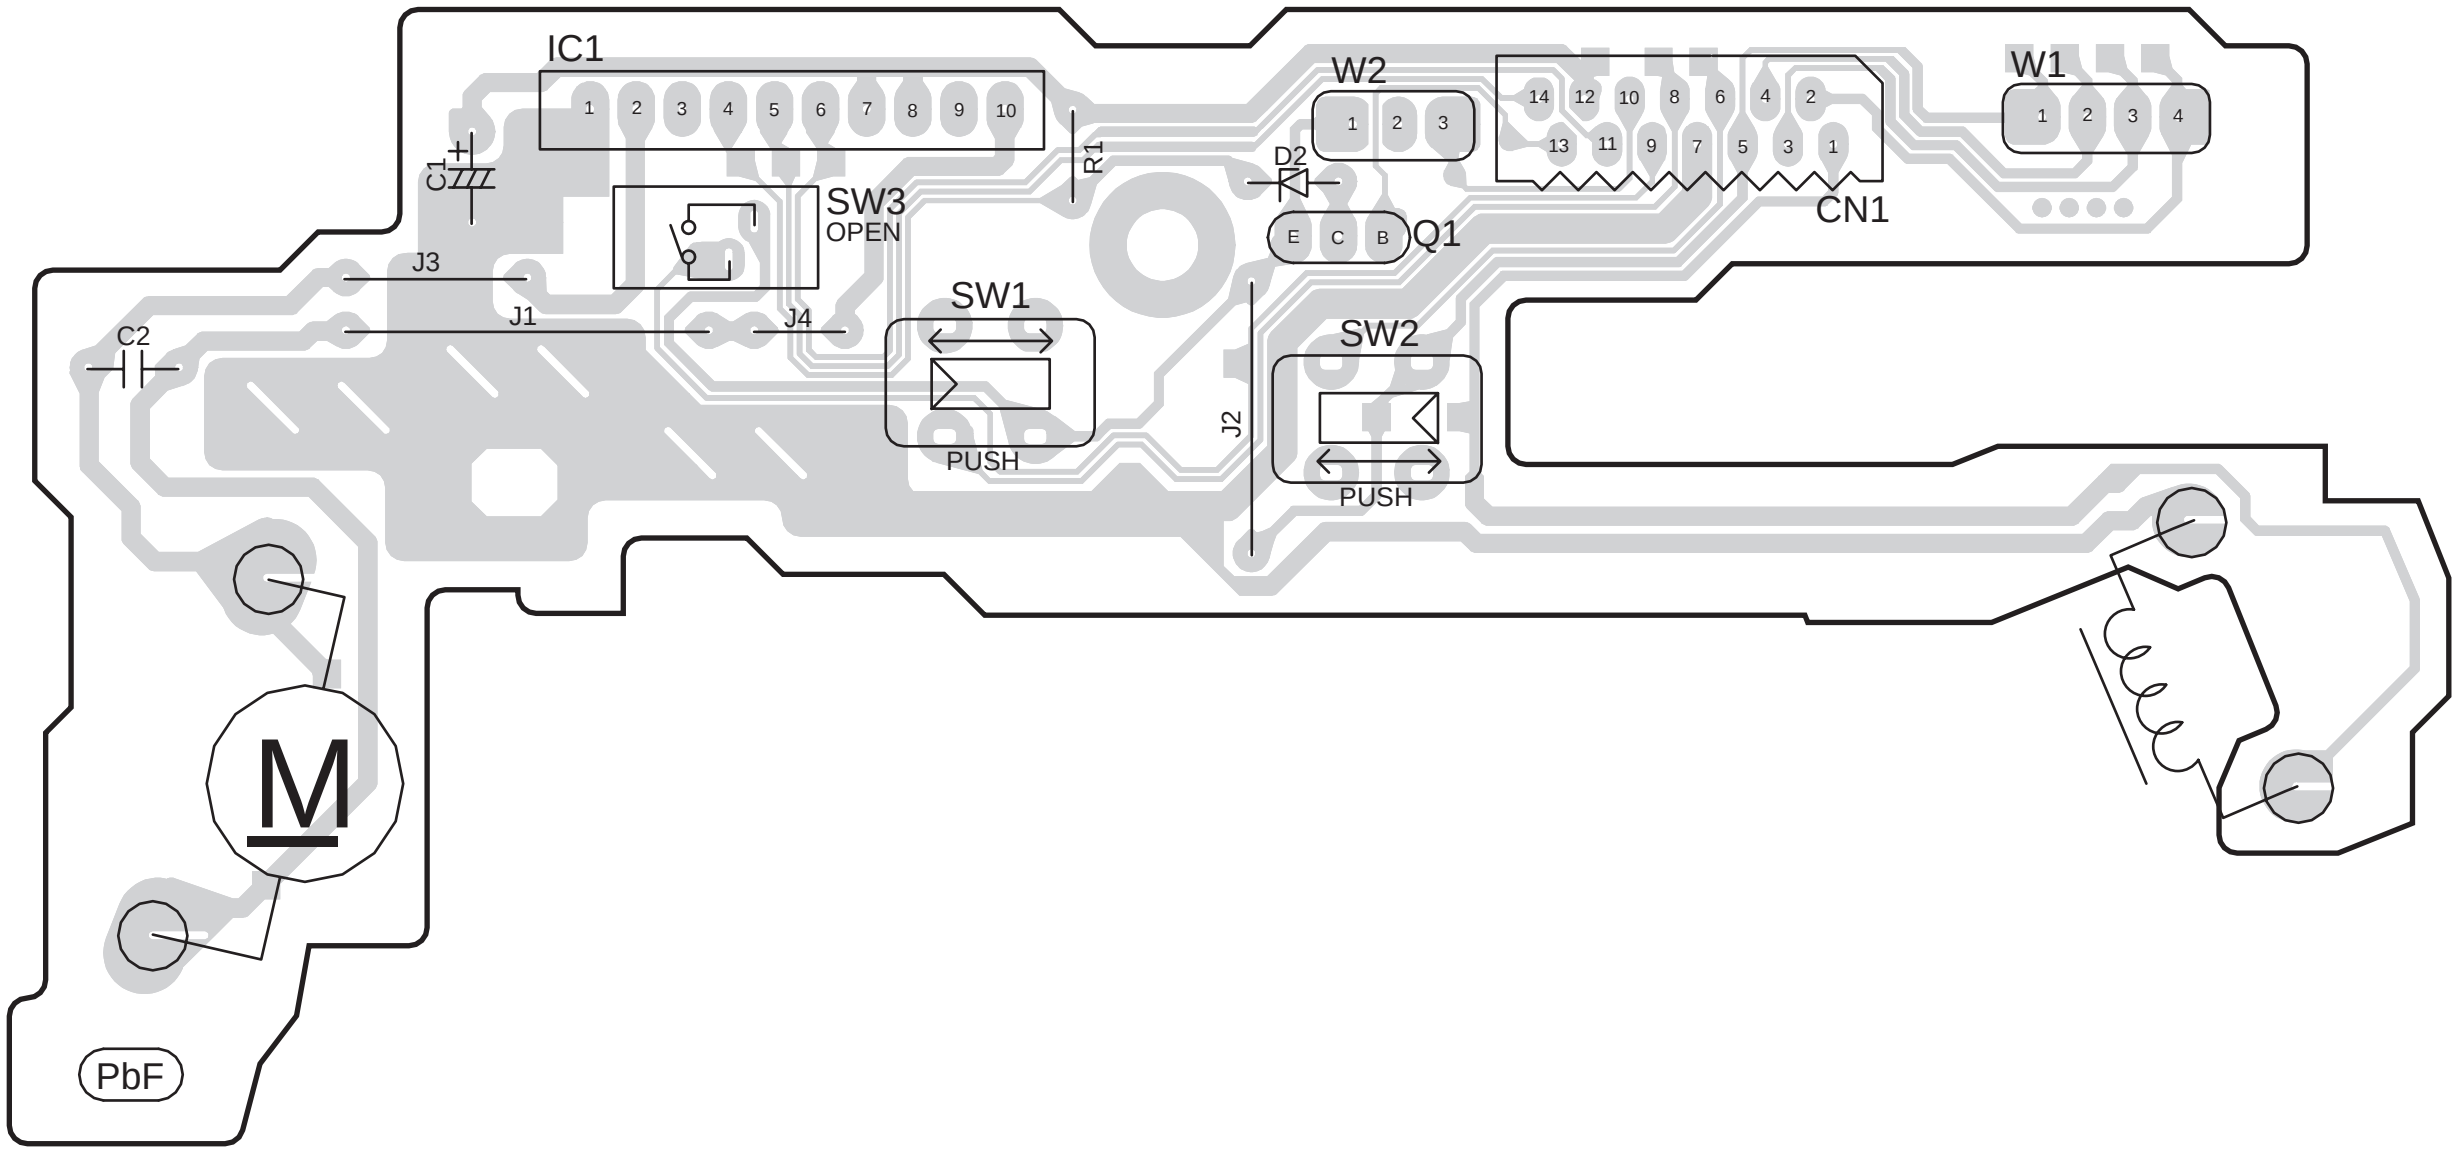
IC1
1 2 3 4 5 6 7 8 9 10
C1
R1
W2
1 2 3
D2
14 12 10 8 6 4 2
13 11 9 7 5 3 1
CN1
W1
1 2 3 4
SW3
OPEN
E C B
Q1
J3
J1
J4
SW1
PUSH
C2
J2
SW2
PUSH
M
PbF

A
B
C
D
E
F
G
1
2
3
4
5
6
7
8
9

I DECK P.C.B (REPX0331D)

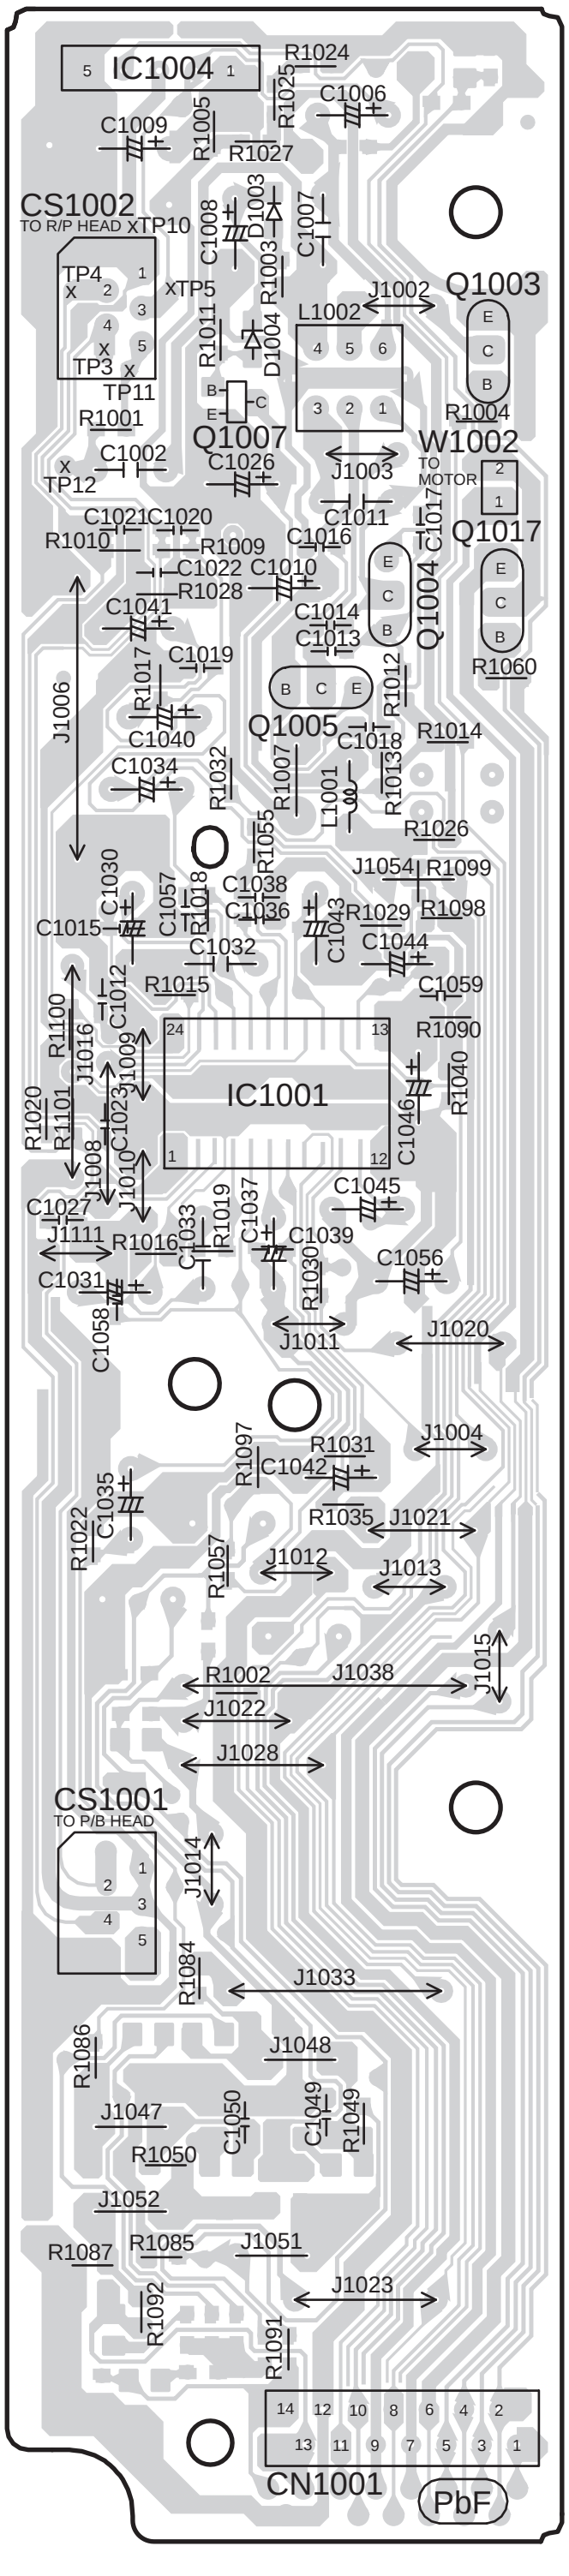
IC1004
R1024
R1025
C1006
C1009
R1005
R1027
CS1002
TO R/P HEAD
TP10
C1008
D1003
C1007
R1003
TP4
TP5
TP3
TP11
R1011
D1004
L1002
J1002
Q1003
R1001
Q1007
R1004
W1002
TO MOTOR
TP12
C1002
C1026
J1003
C1021
C1020
R1010
R1009
C1016
C1011
C1017
Q1017
C1022
R1028
C1010
C1041
C1014
C1013
Q1004
R1060
J1006
R1017
C1019
C1040
Q1005
R1012
C1018
R1014
C1034
R1032
R1007
L1001
R1013
R1026
R1055
J1054
R1099
C1030
C1057
R1018
C1038
C1036
C1043
R1029
R1098
C1015
C1032
C1044
R1015
C1012
C1059
R1100
R1090
IC1001
J1016
J1009
R1040
R1020
R1101
J1023
C1046
J1008
J1010
C1027
C1033
R1019
C1037
C1045
J1111
R1016
C1039
C1056
C1031
R1030
C1058
J1011
J1020
R1097
R1031
J1004
C1042
C1035
R1022
R1035
J1021
R1057
J1012
J1013
R1002
J1038
J1015
J1022
J1028
CS1001
TO P/B HEAD
J1014
R1084
J1033
R1086
J1048
J1047
C1050
C1049
R1049
R1050
J1052
R1087
R1085
J1051
J1023
R1092
R1091
CN1001
PbF

J DECK MECHANISM P.C.B (REPX0321A)

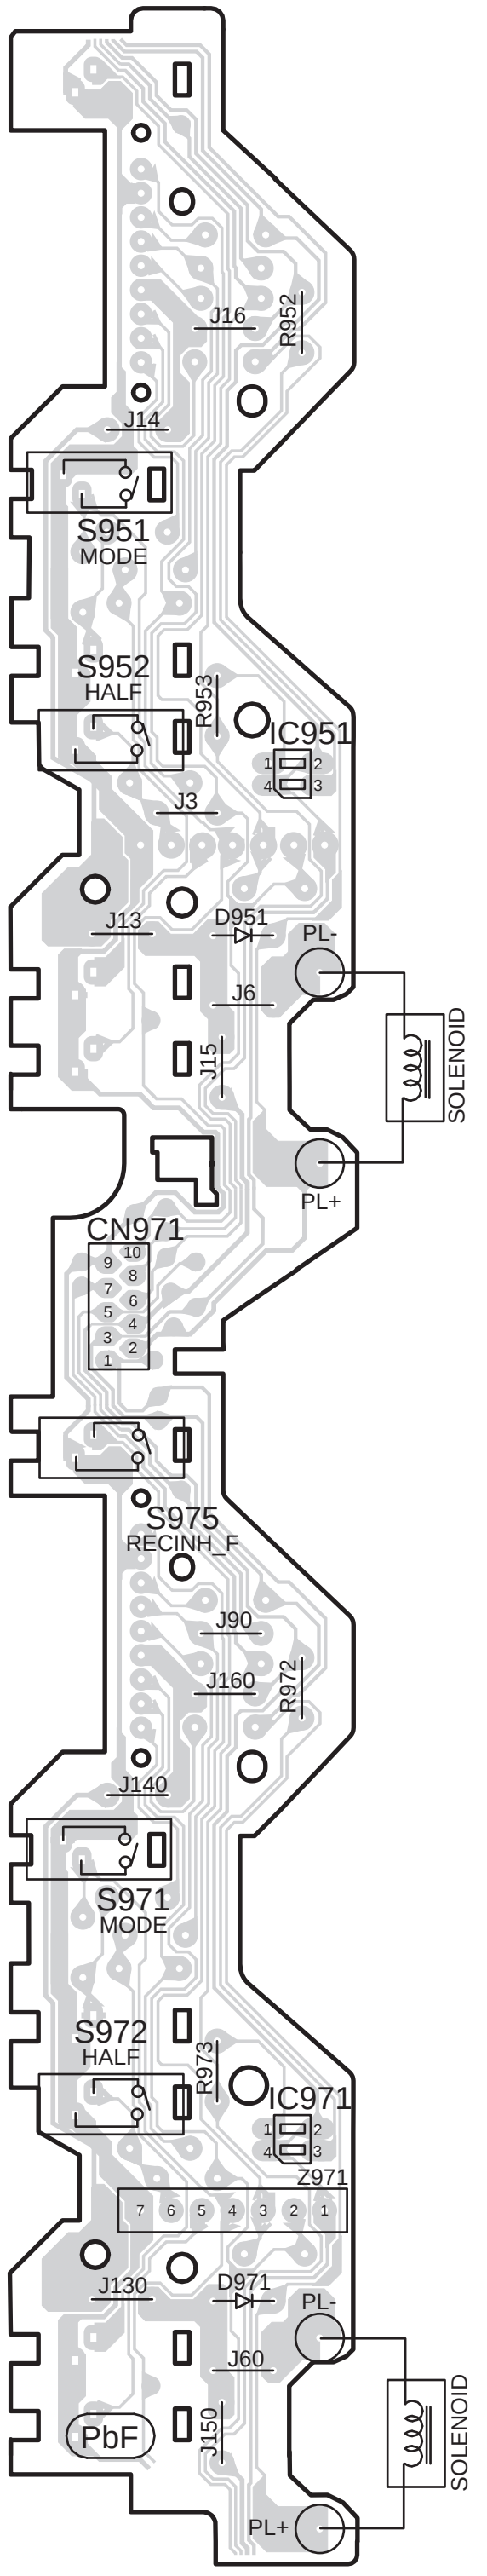
J16
R952
J14
S951
MODE
S952
HALF
R953
IC951
J3
J13
D951
PL-
J6
J15
SOLENOID
PL+
CN971
S975
RECINH_F
J90
J160
R972
J140
S971
MODE
S972
HALF
R973
IC971
Z971
J130
D971
PL-
J60
J150
SOLENOID
PL+
PbF